As you read this manual, you will find Information that is preceded by a symbol NOTICE. This information is intended to help you avoid damage to your vehicle, other property, or the environment.

Symbols A A III on labels attached to your vehicle are to remind you to read this owner's manual for proper and safe operation of your vehicle.

 \triangle is colour-coded to indicate "danger" (red), "warning" (orange), or "caution" (amber).

Safety Labels P. 138

A Few Words About Safety

Your safety, and the safety of others, is very important. And operating this vehicle safely is an important responsibility.

To help you make informed decisions about safety, we have provided operating procedures and other information on labels and in this manual. This information alerts you to potential hazards that could hurt you or others.

Of course, it is not practical or possible to warn you about all the hazards associated with operating or maintaining your vehicle. You must use your own good judgement.

You will find this important safety information in a variety of forms, including:

- Safety Labels on the vehicle.
- Safety Messages preceded by a safety alert symbol and one of three signal words: DANGER, WARNING, or CAUTION.
 These signal words mean:

A DANGER

You WILL be KILLED or SERIOUSLY HURT if you don't follow instructions.

AWARNING

You CAN be KILLED or SERIOUSLY HURT if you don't follow instructions.

A AWARNING

You CAN be KILLED or SERIOUSLY HURT if you don't follow instructions.

ACAUTION

You CAN be HURT if you don't follow instructions.

- Safety Headings such as Important Safety Precautions.
- Safety Section such as Safe Driving.
- **Instructions** how to use this vehicle correctly and safely.

This entire book is filled with important safety information - please read it carefully.

Event Data Recorders

Your vehicle is equipped with several devices commonly referred to as Event Data Recorders. They record various types of real time vehicle data such as SRS airbag deployment and SRS system components failure.

This data belongs to the vehicle owner and may not be accessed by anyone else except as legally required or with the permission of the vehicle owner.

However this data may be accessed by Honda, its authorised dealers and authorised repairers, employees, representatives and contractors only for the purpose of the technical diagnosis, research and development of the vehicle.

Service Diagnostic Recorders

Your vehicle is equipped with service-related devices that record information about powertrain performance and driving conditions. The data can be used to help technicians diagnose, repair and maintain the vehicle. This data may not be accessed by anyone else except as legally required or with the permission of the vehicle owner.

However this data may be accessed by Honda, its authorised dealers and authorised repairers, employees, representatives and contractors only for the purpose of the technical diagnosis, research and development of the vehicle.

Owner's Manual Application Terms and Conditions*

General

This application allows your Display Audio to automatically search for owner's manual updates that are specific to your vehicle and Display Audio every time the power mode of the vehicle is set to ON. This application periodically transmits a limited amount of vehicle and device information to our servers: Vehicle Identification Number (VIN), Display Audio hardware serial number, preferred language, Internet Protocol (IP) address, transaction log (alerts for or views of updates, update downloads and installation, usage of the owner's manual application), etc. When the application finds an update from the server, it prompts you to download and install.

When your Display Audio searches our servers for updates, we will automatically provide you with the opportunity to update the owner's manual. We will also maintain a log of the updates that are installed on our servers.

Your Personal Data

Should the aforementioned information transmitted to Honda constitute personal information in your region, please note that this information will be treated in strict accordance with the rules and regulations outlined in this notice as well as applicable data protection law.

The terms of our privacy policy are incorporated into these terms by reference and your use of system updates will be subject to the privacy policy. Our privacy policy sets out information about how we and any named third parties will process any personal data we collect from you or that you provide to us, via the utility. (See the Honda website for further details.)

Honda collects, uses, and stores your personal data for the reasons set out below:

Where necessary for Honda's legitimate interests, as listed below, and where our interests are not overridden by your data protection rights.

to deliver owner's manual updates to you;

to allow us to improve and optimize the owner's manual application and services;

to respond to user questions and complaints; and for internal record keeping.

Protecting our legitimate business interests and legal rights. This includes, but is not limited to, use in connection with compliance, regulatory, auditing, legal claims (including disclosure of such information in connection with legal process or litigation) and other ethics and compliance reporting requirements.

Honda will also convert personal data into anonymous data and use it (normally on an aggregated statistical basis) for uses such as market research and analysis, to improve the owner's manual, to analyze trends, and to assess the success of software update releases. Aggregated personal information does not personally identify you or any other use of the owner's manual.

Honda may share this data with Honda's world wide support organization or affiliated Honda companies or other third parties engaged by Honda for the purposes of rendering support services in connection with system support.

* Not available on all models

System Updates Terms and Conditions*

General

Your vehicle has an application that allows your Display Audio to automatically search for Honda software updates that are specific to your Display Audio and its connected devices (initially every one (1) week via Wi-Fi or every four (4) weeks via Telematics Control Unit (TCU)*, queries may occur more or less frequently due to internet outages, retries, direct user action, WAP push from the server or a change in query policy on the Honda servers). This application periodically transmits to our servers a limited amount of vehicle and device information (Vehicle Identification Number (VIN), the Model Type (MT) Identification Number, Hardware and Software Part Number, Serial Number, Software Version, preferred language, Internet Protocol (IP) address, Transaction Log (alert or update viewing, update download and installation, software status), etc.). When the application finds an update from the server, the application initially asks permission to download and install the update. Where available, in your settings menu you may elect to automatically download and install these updates or you may elect to manually update the system.

When your Display Audio searches our servers for updates or alerts, we will automatically provide you with the opportunity to update your devices or transmit the update or alert directly to your Display Audio. We will also maintain on our servers a log of the updates or alerts that are installed.

Your Personal Data

Should the aforementioned information transmitted to Honda constitute personal information in your region, please note that this information will be treated in strict accordance with the rules and regulations outlined in this notice as well as applicable data protection law.

The terms of our privacy notice are incorporated into these terms by reference and your use of system updates will be subject to the privacy notice. Our privacy notice sets out information about how we and any named third parties will process any personal data we collect from you or that you provide to us, via the application. See the Honda website for further details.

Honda collects, uses and stores your personal data for the reasons set out below:

- to deliver the system updates and related services to you;
- to allow us to improve and optimize the system updates products and services;
- to respond to user questions and complaints; and for internal record keeping.
- where necessary for Honda's legitimate interests, as listed below, and where our interests are not overridden by your data protection rights.

Protecting our legitimate business interests and legal rights includes, but is not limited to, use in connection with compliance, regulatory, auditing, legal claims (including disclosure of such information in connection with legal process or litigation) and other ethics and compliance reporting requirements.

Honda will also convert personal data into anonymous data and use it (normally on an aggregated statistical basis) for uses such as market research and analysis, to improve the system updates, to analyze trends, and to assess the success of software update releases. Aggregated personal information does not personally identify you or any other use of the system updates.

Honda may share this data with Honda's worldwide support organization or affiliated Honda companies or other third parties engaged by Honda for the purposes of rendering support services in connection with system support.

* Not available on all models

This owner's manual should be considered a permanent part of the vehicle and should remain with the vehicle when it is sold

This owner's manual covers all models of your vehicle. You may find descriptions of equipment and features that are not on your particular model.

The images throughout this owner's manual (including the front cover) that depict features, equipment, and Audio/Information screen, Meter screens are only examples and may not be representative of your particular model.

The information and specifications included in this publication were in effect at the time of approval for printing. Honda Motor Co., Ltd. reserves the right, however, to discontinue or change specifications or design at any time without notice and without incurring any obligation.

Although this manual is applicable to both right-hand and left-hand drive models, the illustrations contained in this manual mainly refer to the right-hand drive models.

Safe Driving P. 41

For Safe Driving P. 42

Seat Belts P. 47

Airbags P. 62

▶ Instrument Panel P. 139

Indicators P 140

Gauges and Displays P. 164

Controls P. 219

Clock P. 220

Locking and Unlocking the Doors P. 221

Operating the Switches Around the Steering Wheel P. 259 Interior Convenience Items P. 307

Features P. 337

Audio System P. 338

Colour Audio P. 341

General Information on the Audio System P. 502

Driving P. 513

Before Driving P. 514 Towi

Towing a Trailer P. 518 Off-road Guidelines P. 526 708 Multi-View Camera* P. 710

Oil Monitor System P. 735

Maintenance P. 731

Before Performing Maintenance P. 732

Checking and Maintaining Wiper Blades P. 763

Climate Control System Maintenance P. 780 Cleaning P. 783

Handling the Unexpected P. 791

Tools* P. 792

If a Tyre Goes Flat P. 793

Shift Lever Does Not Move P. 827 Overheating P. 829

If You Cannot Unlock the Fuel Fill Door P. 849

▶ Information P. 859

Specifications P. 860

Identification Numbers P. 863

Open Source Licence P. 880

| | | F | 10.427 | 6 () | | Quick Reference |
|---|------------------------------|---|---|--|------|------------------|
| Child Safety P. 80 | | Exhaust Gas H | Hazard P. 137 | Safety Labels P. 138 | | |
| | | | | | | Safe |
| | | | | | | |
| Tailgate P. 238 Mirrors P. 282 Climate Control System P. 3 | Security Syste | em P. 249 Seats P. 286 | Windows P. 251 | Panoramic Roof* P. 255 | | Instrume |
| | | | | | | |
| Display Audio P. 400 | | | Audio Error Messages* P. 5 | 500 | | |
| | | | | | | |
| When Driving P. 528 Refueling P. 724 | Honda Sensir Fuel Economy | ig P. 593 / and CO ₂ Emis | Braking P. 686 ssions P. 728 | Parking Your Vehicle P. 696 Turbo Engine Vehicle P. 729 | | |
| | | | | | | Main |
| Maintenance Schedule P. 74 Checking and Maintaining T Accessories and Modificatio | Tyres P. 767 | Maintenance | Under the Bonnet P. 747 Battery P. 773 | Replacing Light Bulbs P. 760 Remote Transmitter Care P. 777 | 44 | Main |
| | | | | | | Handling the Une |
| Handling of the Jack P. 817 | D 024 | Engine Does I | Not Start P. 818 | If the Battery Is Dead P. 824 | 1112 | |
| Indicator Coming On/Blinkin If You Cannot Open the Tail | _ | | Fuses P. 838 | Emergency Towing P. 848 | 11 | Info |
| | | | | | | |
| Utility Compliance* P. 864 | | Devices that E | Emit Radio Waves* P. 865 | | | |
| | | | | | | |

Contents

Reference Guide P. 6

fe Driving P. 41

Instrument Panel P. 139

Controls P. 219

Features P. 337

Driving P. 513

Maintenance P. 731

dling the Unexpected P. 791

formation P. 859

Index P. 882

Visual Index

Left-hand Drive Type



- **1** System Indicators **►**P. 140 Gauges R 164

 Driver Information Interface →P. 169, 193, 196
- **② ENGINE START/STOP Button ←>**P.259
- **③** ₩ Front Seat Heater Buttons* ► 2.327
- 4 Hazard Warning Button
- **⑤** Audio System **←>**P. 338 Navigation System* See the Navigation System Manual
- 6 Climate Control System →P. 329
- Rear Demister P. 277
- (Vehicle Stability Assist (VSA) System OFF) Button P. 570 Headlight Adjuster* → P.269

 Power Tailgate Button* → P.244

Right-hand Drive Type



- **1** ₩ Front Seat Heater Buttons* → P. 327
- Audio System P.338
 Navigation System*
 - See the Navigation System Manual
- 3 Hazard Warning Button 🛕
- System Indicators → P.140
 Gauges → P.164
 Driver Information Interface → P.169, 193, 196
- **⑤** ENGINE START/STOP Button →P.259
- (3) (Vehicle Stability Assist (VSA) System OFF) Button → 2.570 Headlight Adjuster* → 2.269 → P.244
- 8 Climate Control System →P. 329


Visual Index



1 ₩ Wipers/Washers* ► P. 274 **■** Headlights/ → Turn Signals* P. 262, 264 Fog Lights* P. 266 LaneWatch* >P.588 ② Paddle Shifter (Shift down)* →P. 542 ⊕ Horn (Press the area around .) 4 LIM Button* P.554 **⑤** Adaptive Cruise Control (ACC) with Low Speed Follow Buttons C>P. 626 6 Paddle Shifter (Shift up)* →P.542 P. 262, 264 Wipers/Washers* ←>P. 274 Fog Lights* P. 266 LaneWatch* P. 588 Button C>P.652 Interval Button ← P. 643 Steering Wheel Adjustments
 → P. 281 Left Selector Wheel ← P. 169, 404 **B** Hands-Free Telephone System Button C>P. 479 Audio Remote Controls >P. 344, 404

(Home) Button* P. 169


Left-hand Drive Type

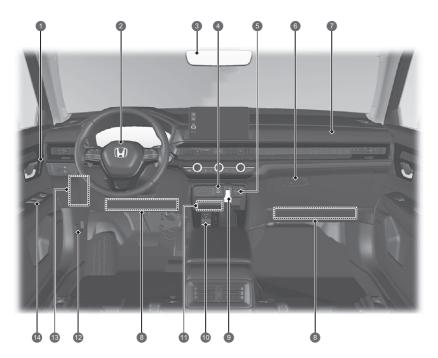


- 1 Memory Buttons* →P. 279 SET Button* →P. 279
- 2 Driver's Front Airbag P. 64
- 4 USB Port(s) > P. 343, 403
- **⑤** Accessory Power Socket **○**P.321
- 6 Glove Box **→**P.310
- Passenger's Front Airbag
 →P.64
- 8 Knee Airbags →P.67
- Shift Lever ← P. 537, 539
- **(1)** ECON Button **(□)** P. 544
 - (Hill Descent Control) Button → P.553
 - Auto Idle Stop OFF Button* P.547
 Electric Parking Brake Switch P.686
 Automatic Brake Hold Button P.690
- **11** Wireless Charger* **►** P. 323
- Bonnet Release Handle → P. 748

Visual Index

Right-hand Drive Type

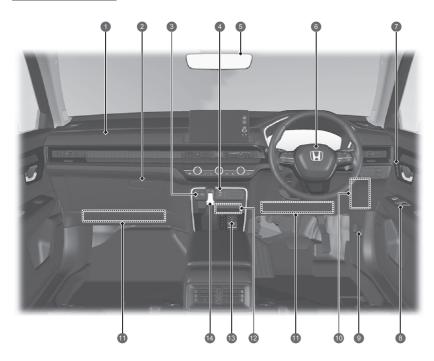

- **1** Passenger's Front Airbag **→**P.64
- 2 Glove Box P. 310
- 4 USB Port(s) > P. 343, 403
- **⑤** Rearview Mirror → P. 282
- 6 Driver's Front Airbag →P.64
- Memory Buttons* ←>P.279 SET Button* ←>P.279
- ③ Door Mirror Controls → R 284 Master Door Lock Switch → R 235 Power Window Switches → R 252
- **9** Bonnet Release Handle **→**P.748
- 10 Interior Fuse Box P. 842, 844
- **①** Knee Airbags **► ?** .67
- Wireless Charger* → P. 323

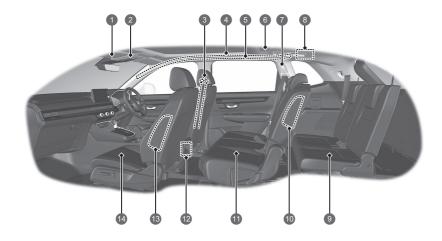

- 1 Sun Visors →P. 328 Vanity Mirrors
- ② Front Map Lights →P.308 Panoramic Roof Switch* →P.257 Sunglasses Holder →P.316
- 3 Seat Belts ← P. 47
- 4 Side Curtain Airbags →P.76
- Grab Handle
 Coat Hook ► P.314
- 6 Second Row Map Lights >P.308
- ✓ Seat Belt (Installing a Child Restraint System) →P.126
 Seat Belt to Secure a Child Restraint System
 →P.126
- Seat Belt with Detachable Anchorage* →P.56
- Third Row Seats* → R 296
- ① Second Row Seats → P.291 Lower Anchorage Points to Secure a Child Restraint Systems → P.119
- USB Ports → P. 343, 403
- 14 Front Seat ►>P. 286

Visual Index





- **1** Maintenance Under the Bonnet **►>**P.747
- ② Windscreen Wipers →P. 274, 763
- 3 Power Door Mirrors →P.284 Side Turn Signal Lights →P.264,760
- 4 Door Lock/Unlock Control →P. 225
- **⑤** Tyres **◯** P.767,769
- 6 Fog Lights* → P. 266, 760
- Peadlights →P. 262, 760
 Position/Daytime Running Lights
 →P. 262, 268, 760
 Front Turn Signal Lights →P. 264, 760
- **1** High-Mount Brake Light **→**P.761
- **②** Rear Wiper **→**P.765
- **③** Opening/Closing the Tailgate →P.239
- ④ Rear Licence Plate Light → P. 262, 761
- Multi-View Rear Camera* → P.708
 Multi-View Camera* ← P.710
- 6 Taillights →P. 262, 761 Back-Up Lights →P. 761 Rear Fog Light* →P. 761
- 7 Taillights P. 262, 760

 Brake Lights P. 262, 760

 Rear Turn Signal Lights P. 264, 760
- 8 How to Refuel ► P. 726

Auto Idle Stop Function*


To improve fuel economy, the engine stops and then restarts as detailed below. When Auto Idle Stop is on, the Auto Idle Stop indicator (green) comes on.

| At | Continuously | Engine status | | |
|--------------|---|--|------------|--|
| Deceleration | Automatic Brake Hold Off P. 691 Depress the | Automatic Brake Hold On P. 691 BRAKE HOLD brake pedal. | On | |
| Stop | Keep the brake pedal depressed. | With the automatic brake hold system activated, you can release the brake pedal when the (A) indicator (green) comes on. | Off | |
| Start-up | Release the brake pedal. | With the automatic brake hold system activated, depress the accelerator pedal. | Restarting | |

Safe Driving

Before Driving Checklist P.46


 Before driving, check that the front seats, head restraints, steering wheel, and mirrors have been properly adjusted.

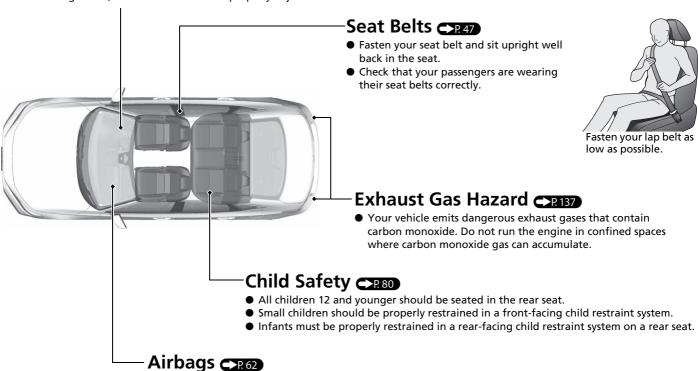

 Your vehicle is fitted with airbags to help to protect you and your passengers during a moderate-to-severe collision.

Instrument Panel


Indicators CR.140 / Gauges CR.164 / Driver Information Interface CR.169,193,196 / Head-Up Display* CR.213

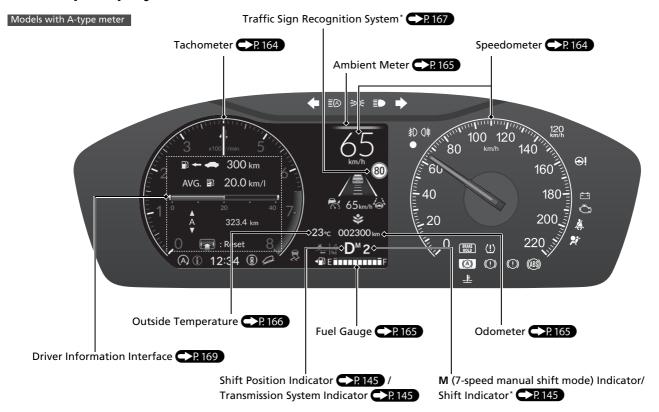

Models with B-type meter

You can change the gauge design.
 Change gauge design P. 194



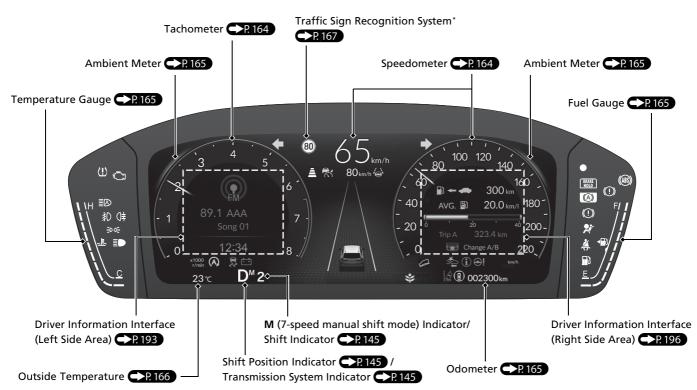

Controls CREED

Clock CR220

Models with Display Audio

You can adjust the clock and customize the clock display.

C>P.416

Models with colour audio system

Left-hand Drive Type



MENU Button

Right-hand Drive Type



- 1 Press the MENU button.
- 2 Select Clock Settings.
- 3 Select Automatic Time, then select OFF.
- 4 Select Set Time.
- 5 Select 12H(12-H)/24H(24-H) to change 12 or 24 hour clock.
- 6 Select ▲ or ▼.
- 7 Select **Set** to set the time.

ENGINE START/STOP Button (\$\infty\$259)

Press the button to change the vehicle's power mode.



Turn Signals P. 264

Turn Signal Control Lever



Lights P. 262

Light Control Switches



Wipers and Washers

○ P. 274

Wiper/Washer Control Lever


Adjustment Ring

-: Low sensitivity*1

Lower speed, fewer sweeps*2

+: High sensitivity*1

: Higher speed, more sweeps*2

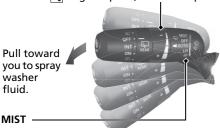

MIST OFF

washer fluid.

AUTO*1: Wiper speed varies automatically INT*2: Low speed with intermittent LO: Low speed wipe

HI: High speed wipe

- *1:Models with automatic intermittent wipers
- *2 Models with manual intermittent operation


Models with automatic intermittent wipers

AUTO should always be turned **OFF** before the following situations in order to prevent severe damage to the wiper system:

- Cleaning the windshield
- Driving through a car wash
- No rain present

Steering Wheel (\$\)

• To adjust, push the adjustment lever down, adjust to the desired position, then lock the lever back in place.

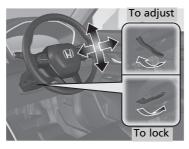

Unlocking the Front Doors from the Inside

◯ P. 235

Middle Eastern except Egyptian, Jordanian, and Lebanese models

 Pull either front door inner handle to unlock and open it at the same time. Models for other countries

 Pull the driver's door inner handle to unlock and open it at the same time.



Tailgate P238

 Press the tailgate outer handle to unlock and open the tailgate when you carry the keyless remote on you.

Models with power tailgate


- Press the tailgate outer handle to unlock and open the tailgate when you carry the keyless remote on you.
- Press the power tailgate button on the driver side control panel.
- Press the power tailgate button on the keyless remote.



Models with hands free access

With the keyless remote on you, raise and lower your foot (in a kicking motion) under the centre of the rear bumper to open or close the tailgate.



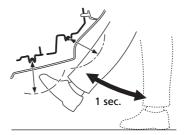


Power Door Mirrors

○P. 284

- With the power mode in ON, move the selector switch to L or R.
- Push the appropriate edge of the adjustment switch to adjust the mirror.
- Press the folding button to fold in and out the door mirrors.


Folding Button Selector Switch

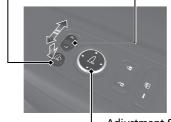

Power Windows (\$225)

- With the power mode in ON, open and close the power windows.
- If the power window lock button is in the off position, each passenger's window can be opened and closed with its own switch.
- If the power window lock button is in the ON position (indicator on), each passenger's window switch is disabled.

Power Window Lock Button

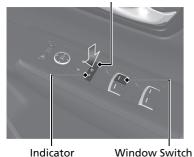


Indicator


Climate Control System R329

- Press the **AUTO** button to activate the climate control system.
- Press the sold button to turn the system on or off.
- Press the button to defrost the windscreen.

Models with MAX COOL button

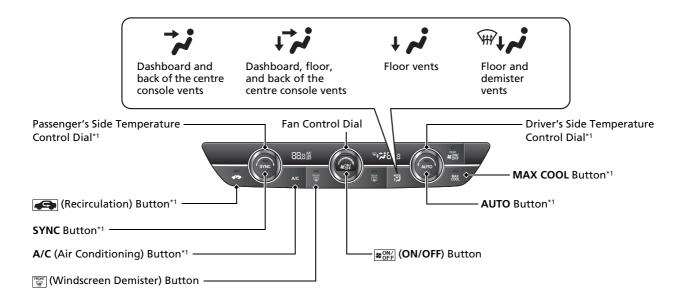


^{*1:}Right-hand drive types shown. For the left-hand drive types, these buttons are located at the symmetrically opposite to the right-hand drive type.

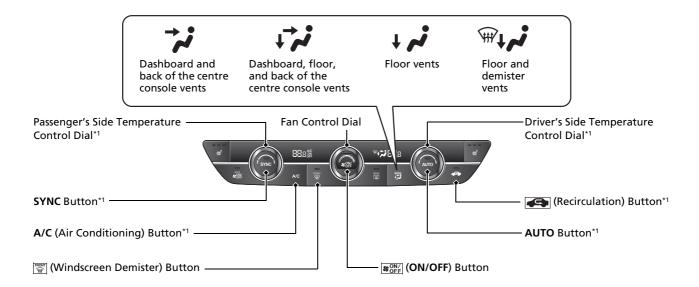

*1:Right-hand drive types shown. For the left-hand drive types, these buttons are located at the symmetrically opposite to the right-hand drive type.

Rear Cooling* P.334

The rear cooler can be used when the **REAR** $\mathfrak{S}_{OFF}^{ON/}$ (Rear On/Off) button on the front control panel is ON. Adjust the fan speed by sliding the fan control lever on the ceiling above the second row seat position.

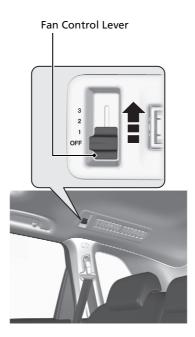

Features CZR3337


Audio System P.338

Models with colour audio system → P. 341





For navigation system operation See the Navigation System Manual

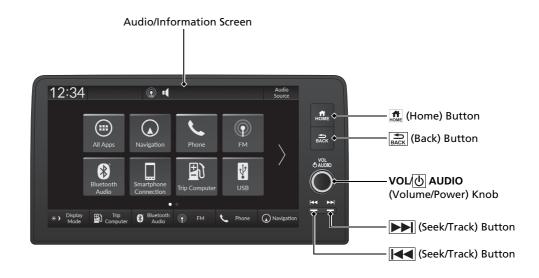

Audio Remote Controls

Models with colour audio system P. 344

[Seek/Skip) Buttons

SOURCE Button

VOL → /VOL → (Volume) Switch

SOURCE Button

Press to cycle through the audio modes as follows:

FM→DAB*→AM→USB/iPod/Apple CarPlay/Android Auto→Bluetooth® Audio

- VOL → / VOL → (Volume) Switch Press to adjust the volume up/down.
- [/ Electric | Seek/Skip) Buttons Radio:

Press \delta / \delta \text{to skip to the beginning of the next song or return to the beginning of the current song.


USB flash drive or Bluetooth® Audio:

Press and hold \delta / \delta \text{to change a folder/group.}


Models with Display Audio

P. 404

Models with A-type meter

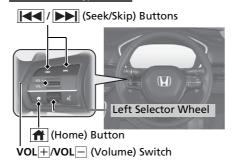

Models with B-type meter

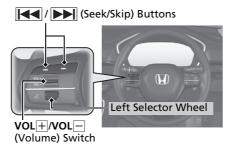

- VOL+ / VOL- (Volume) Switch Press to adjust the volume up/down.
- [/ Electric | Seek/Skip) Buttons Radio:

iPod, USB flash drive, *Bluetooth*® Audio, or Smartphone Connection:

Press \[\] to skip to the beginning of the next song or return to the beginning of the current song.

USB flash drive:

Press and hold [| to change a folder.

Models with A-type meter


Left Selector Wheel

When selecting the audio mode Press the (home) button, then roll up or down to select Audio on the driver

information interface, and then press the left selector wheel.

Roll up or down:

To cycle through the audio modes, roll up or down and then press the left selector wheel:

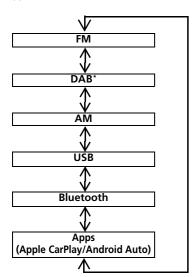


Models with B-type meter

Left Selector Wheel

Roll up or down:

To cycle through the audio modes, roll up or down and then press the left selector wheel:

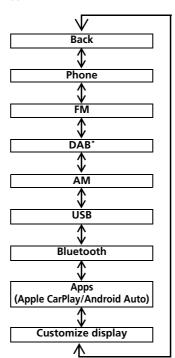


Driving CEESTS

Continuously Variable Transmission >P.536

• Shift to P and depress the brake pedal when starting the engine.

Release Button

Shifting

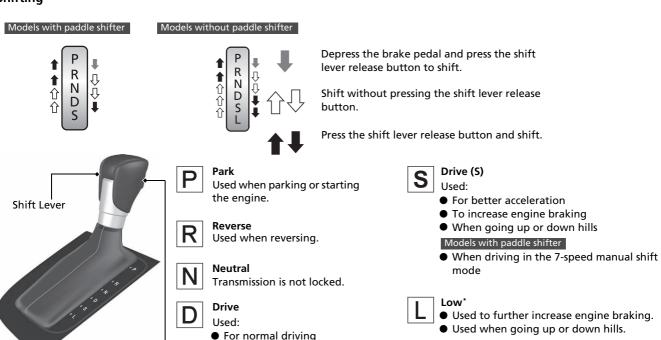

Models with paddle shifter

 When temporarily driving in the 7-speed manual shift mode

7-Speed Manual Shift Mode* ► P.542

Allows you to manually shift the transmission up or down without removing your hands from the steering wheel.

When the transmission is in S

- Pulling a paddle shifter changes the mode from continuously variable transmission to 7-speed manual shift mode.
- The M indicator and the selected speed number are displayed in the shift indicator.

When the transmission is in D


 Pulling a paddle shifter temporarily changes the mode from continuously variable transmission to 7-speed manual shift mode. The selected speed number is displayed in the shift indicator.









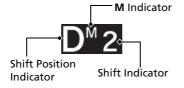



VSA On and Off **→P.570**

- The Vehicle Stability Assist (VSA) system helps to stabilise the vehicle during cornering and helps to maintain traction while accelerating on loose or slippery road surfaces.
- VSA comes on automatically every time you start the engine.
- To partially disable or fully restore VSA function, press and hold the (CVSA OFF) button until you hear a beep.

Adjustable Speed Limiter*

This system enables you to set a maximum speed that cannot be exceeded even if you are depressing the accelerator pedal.

- To use the adjustable speed limiter, press the button. Select the adjustable speed limiter by pressing the LIM button, then press the RES/+/SET/- switch up or down when your vehicle reaches the desired speed.
- The vehicle speed limit can be set from 30 km/h to 250 km/h.

Taiwanese models

Tyre Pressure Monitoring System (TPMS) (TPMS)

- Detects a change in tyre conditions and overall dimensions due to decrease in tyre pressures.
- The TPMS is turned on automatically every time you start the engine.
- A calibration procedure must be performed when certain conditions arise.

Except Taiwanese models

Deflation Warning System* CR.578

- Detects a change in tyre conditions and overall dimensions due to decrease in tyre pressures.
- The deflation warning system is turned on automatically every time you start the engine.
- A calibration procedure must be performed when certain conditions arise.

CMBS On and Off (>P.601)

- When a possible frontal collision is likely unavoidable, the CMBS can reduce the vehicle speed and the severity of the collision.
- The CMBS is turned on every time you start the engine.
- To turn the CMBS on or off, use the safety support of the driver information interface.

Refueling >P.724

Fuel recommendation: Thai models

> Unleaded petrol/gasohol up to E85 (15% petrol and 85% ethanol), research octane number 91 or higher

Pakistani models

EURO V/5 Unleaded petrol, manganese: maximum 2mg/ Litre, research octane number 91 or higher

Hong Kong, Macao and Singaporean models

Unleaded premium petrol, research octane number 95 or higher

Taiwanese models

Unleaded petrol, research octane number 92 or higher


Models for other countries

Unleaded petrol, research octane number 91 or higher

Fuel tank capacity: 57 L

- 1 Unlock the driver's door. -P.234
- Press and release the area indicated by the arrow to release the fuel fill door. You will hear a click and the lid will open slightly.
- 3 Turn the fuel fill cap slowly to remove the cap.

- 4 Place the cap in the holder on the fuel fill door.
- After refueling, screw the cap back on until it clicks at least once.

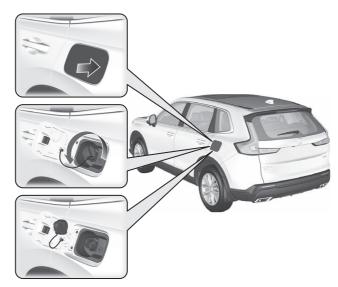

Honda Sensing

Assists with functions such as acceleration, braking, and steering in order to reduce the burden on the driver, as well as avoid or reduce the severity of collisions.

Honda Sensing has the following functions.

Collision Mitigation Braking System (CMBS)

→P. 596

The system can assist you when it determines there is a possibility of your vehicle colliding with a vehicle (including motorcycles) ahead from behind, an oncoming vehicle in front, a vehicle approaching from the side*1, a pedestrian, or someone riding a bicycle (moving bicycle). The CMBS is designed to alert you when the potential for a collision is determined, as well as assist in reducing speed, avoiding collisions, and reducing collision severity.

Low Speed Braking Control*

Using sonar sensors located on the front and rear bumpers, this system can detect if there is danger of a potential collision with a wall or other obstacle during normal driving or when the accelerator pedal is depressed with too much force. The system then assists in avoiding collisions and reducing damage from impact through Low Speed Brake function and/or Collision Mitigation Throttle Control and Rear Collision Mitigation Throttle Control.

Road Departure Mitigation System ←>R616

Oceanian, Hong Kong, Macao and Singaporean models

Alerts and helps to assist you when the system detects a possibility of your vehicle crossing over detected lane markings, or approaching the outer edge of the pavement (into grass or gravel border) or a detected oncoming vehicle.

Except Oceanian, Hong Kong, Macao and Singaporean models

Alerts and helps to assist you when the system detects a possibility of your vehicle unintentionally crossing over detected lane markings and/or leaving the roadway altogether.

Adaptive Cruise Control (ACC) with Low Speed Follow (\$\infty\$1626)

Helps to maintain a constant vehicle speed and a set following-interval behind a vehicle detected ahead of yours and, if the detected vehicle comes to a stop, can decelerate and stop your vehicle, without you having to keep your foot on the brake or the accelerator.

Intelligent Speed Limiter*

Automatically sets the speed limit that the traffic sign recognition system detects. And the speed limit cannot be exceeded even if you are depressing the accelerator pedal. If you fully depress the accelerator the speed limit can be exceeded.

Lane Keeping Assist System (LKAS) (27.648)

Provides steering input to help to keep the vehicle in the middle of a detected lane and provides tactile, audible and visual alerts if the vehicle is detected drifting out of its lane.

Traffic Jam Assist*

The Traffic Jam Assist system uses a camera mounted to the upper portion of the windscreen to detect and monitor left and right white (or yellow) traffic lane lines. Based on inputs from the camera, the system can apply steering torque to keep your yehicle in the centre of the detected lane.

Lead Car Departure Notification System*

→P. 670

Informs you with visual and audible alerts when your vehicle is stopped even though the vehicle ahead of you has started moving.

Traffic Sign Recognition System*

Reminds you of road sign information, such as the current speed limit your vehicle has just passed through, showing it on the gauge.

Auto High-Beam (\$\)271

The front sensor camera detects the light sources ahead of the vehicle such as the lights of a preceding or oncoming vehicle, or street lights.

When you are driving at night, the system automatically switches the headlights between low beam and high beam depending on the situation.

Blind Spot Information System* P584

When the system detects vehicles approaching from behind in adjacent lanes, the appropriate indicator comes on, providing assistance when you change lanes.

Cross Traffic Monitor*

○P. 704

Monitors the rear corner areas using the radar sensors when reversing, and alerts you if a vehicle approaching from a rear corner is detected.

The system is convenient when you are backing out of a parking space.

Parking Sensor System*

→P. 698

The corner and centre sensors monitor obstacles around your vehicle, and the beeper, driver information interface and audio/information screen let you know the approximate distance between your vehicle and the obstacle.

Driver Attention Monitor

P. 176, 203

The Driver Attention Monitor analyses steering inputs to determine if the vehicle is being driven in a manner consistent with drowsy or inattentive driving. If it determines that the vehicle is being driven in such a manner, it will display the degree of the driver's attention on the driver information interface.

Maintenance Cara

Under the Bonnet (>P.747)

- Check engine oil, engine coolant, and windscreen washer fluid. Add when necessary.
- Check brake fluid.
- Check the battery condition monthly.
- Pull the bonnet release handle under the driver's side lower outside corner of the dashboard.



2 Locate the bonnet latch lever, push it to the side, and then raise the bonnet. Once you have raised the bonnet slightly, you can release the lever.



When finished, close the bonnet and make sure it is firmly locked in place.

Wiper Blades ← P.763 — When lifting the front wiper arms, move them into the maintenance position before lifting them.

 Replace blades if they leave streaks across the windscreen or become noisy.



Tyres P.767

- Inspect tyres and wheels regularly.
- Check tyre pressures regularly.
- Install winter tyres for winter driving.

Inspect all lights regularly.

Handling the Unexpected C22793

Flat Tyre P. 793

Models with tyre repair kit

 Park in a safe location and repair the flat tyre using the tyre repair kit in the luggage area.

Models with spare tyre

 Park in a safe location and replace the flat tyre with the spare tyre in the luggage area.



Indicators Come On

○ P. 831

• Identify the indicator and consult the owner's manual.



Engine Won't Start


→P. 818

 If the battery is dead, jump start using a booster battery.



Blown Fuse R 838

 Check for a blown fuse if an electrical device does not operate.

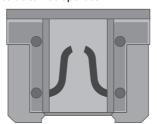

Overheating P. 829

 Park in a safe location. If you do not see steam under the bonnet, open the bonnet, and let the engine cool down.




Emergency Towing

◯ P. 848

 Call a professional towing service if you need to tow your vehicle.



What to Do If

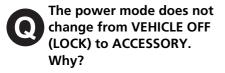



- The steering wheel may be locked.
- Move the steering wheel left and right after pressing the ENGINE START/STOP button.



The power mode does not change from ACCESSORY to VEHICLE OFF (LOCK). Why?



The shift lever should be moved to P.




Why does the brake pedal pulsate slightly when applying the brakes?



This can occur when the ABS activates and does not indicate a problem. Apply firm, steady pressure on the brake pedal. Never pump the brake pedal.

Anti-lock Brake System (ABS) P. 693



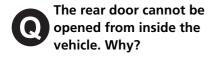



Check if the childproof lock is in the lock position. If so, open the rear door with the outside door handle. To cancel this function, slide the lever up to the unlock position.



Why do the doors lock after I unlocked the doors?



If you do not open the doors within 30 seconds, the doors are relocked automatically for security.

Why does the beeper sound when I open the driver's door?



The beeper sounds when:

- The power mode is in ACCESSORY.
- The exterior lights are left on.


Models with Auto Idle Stop


• The Auto Idle Stop is in operation.

Why does a beeper sound when I walk away from the vehicle after I close the door?




The beeper sounds if you move outside the walk away auto lock operating range before the door completely closes.

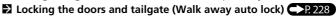

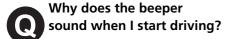



The beeper sounds when the driver and/or front passenger are not wearing their seat belts.

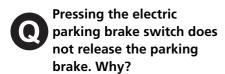



Press the electric parking brake switch with the brake pedal depressed.



Models with TPMS/deflation warning system

I'm seeing an amber indicator of a tyre with an exclamation point. What is that?



Taiwanese models


The Tyre Pressure Monitoring System (TPMS) needs attention. If you recently inflated or changed a tyre, you have to recalibrate the system.

→ Tyre Pressure Monitoring System (TPMS) → P. 573

Except Taiwanese, Indonesian, Malaysian models

The Deflation Warning System needs attention. If you recently inflated or changed a tyre, you have to recalibrate the system.

Deflation Warning System* ►P. 578

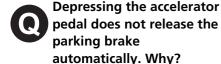



- · Fasten the driver's seat belt.
- Check if the transmission is in P or N. If so, select any other position.



Why do I hear a screeching sound when I apply the brake pedal?



The brake pads may need to be replaced. Have your vehicle inspected by a dealer.



Hong Kong, Macao and Singaporean models

Unleaded petrol with a Research Octane Number (RON) of 95 or higher is recommended. Is it possible to use unleaded petrol with a Research Octane Number (RON) of 92 or lower on this vehicle?



Use of lower octane petrol can cause occasional metallic knocking noise in the engine and will result in decreased engine performance.

Use of petrol with a research octane less than 92 can lead to engine damage.



Indonesian models

Unleaded petrol with a Research Octane Number (RON) of 91 or higher is recommended. Is it possible to use unleaded petrol with a Research Octane Number (RON) of 90 or lower on this vehicle?



Use of lower octane petrol can cause occasional metallic knocking noise in the engine and will result in decreased engine performance.

Use of petrol with a research octane less than 90 can lead to engine damage.



Pakistani models

Is it possible to use unleaded petrol with a Research Octane Number (RON) of 91 or higher on this vehicle?



Your vehicle is designed to operate on EURO V/5 unleaded petrol with a research octane of 91 or higher.

The use of regular unleaded petrol can cause metallic knocking noises in the engine and will result in decreased engine performance. The long-term use of regular-grade petrol can lead to engine damage.

Safe Driving

You can find many safety recommendations throughout this chapter, and throughout this manual.

| i or sare briving | |
|--------------------------------|---|
| Important Safety Precautions | 4 |
| Important Handling Information | 4 |
| Your Vehicle's Safety Features | 4 |
| Safety Checklist | 4 |
| Seat Belts | |
| About Your Seat Belts | 4 |
| Fastening a Seat Belt | 5 |
| Seat Belt Inspection | 5 |
| Anchorage Points | 6 |
| Airbags | |
| Airbag System Components | 6 |
| | |

| Types of Airbags | 64 |
|--------------------------------------|----|
| Front Airbags (SRS) | 64 |
| Knee Airbags | 6 |
| Centre Airbag * | 7 |
| Side Airbags | 73 |
| Side Curtain Airbags | 76 |
| Airbag System Indicators | 78 |
| Airbag Care | 79 |
| Child Safety | |
| Protecting Child Passengers | 80 |
| Safety of Infants and Small Children | 83 |
| Safety of Larger Children 1 | 34 |
| | |

| Exhaust Gas Hazard | |
|---------------------|-----|
| Carbon Monoxide Gas | 137 |
| Safety Labels | |
| Label Locations | 138 |

* Not available on all models

For Safe Driving

For Safe Driving

The following pages explain your vehicle's safety features and how to use them properly. The safety precautions below are ones that we consider to be among the most important.

Important Safety Precautions

■ Always wear your seat belt

A seat belt is your best protection in all types of collisions. Airbags are designed to supplement seat belts, not replace them. So even though your vehicle is equipped with airbags, make sure you and your passengers always wear your seat belts, and wear them properly.

■ Restrain all children

Children aged 12 and under should ride properly restrained in a back seat, not the front seat. Infants and small children should be restrained in a child restraint system. Larger children should use a booster seat and a lap/shoulder seat belt until they can use the belt properly without a booster seat.

■ Be aware of airbag hazards

While airbags can save lives, they can cause serious or fatal injuries to occupants who sit too close to them, or are not properly restrained. Infants, young children, and short adults are at the greatest risk. Be sure to follow all instructions and warnings in this manual.

■ Don't drink and drive

Alcohol and driving don't mix. Even one drink can reduce your ability to respond to changing conditions, and your reaction time gets worse with every additional drink. So don't drink and drive, and don't let your friends drink and drive, either.

Some countries prohibit the use of mobile phones other than hands-free devices by the driver while driving.

■ Pay appropriate attention to the task of driving safely

Engaging in mobile phone conversation or other activities that keep you from paying close attention to the road, other vehicles, and pedestrians could lead to a crash. Remember, situations can change quickly, and only you can decide when it is safe to divert some attention away from driving.

■ Control your speed

Excessive speed is a major factor in crash injuries and deaths. Generally, the higher the speed, the greater the risk, but serious injuries can also occur at lower speeds. Never drive faster than is safe for current conditions, regardless of the maximum speed posted.

■ Keep your vehicle in safe condition

Having a tyre blowout or a mechanical failure can be extremely hazardous. To reduce the possibility of such problems, check your tyre pressures and condition frequently, and perform all regularly scheduled maintenance.

■ Do not leave children unattended in the vehicle

Children, pets, and people needing assistance left unattended in the vehicle may be injured if they activate one or more of the vehicle controls. They may also cause the vehicle to move, resulting in a crash in which they and/or another person(s) can be injured or killed. Also, depending on the ambient temperature, the temperature of the interior may reach extreme levels, which can result in harm or death. Even if the climate control system is on, never leave them in the vehicle unattended as the climate control system can shut off at any time.

Important Handling Information

Your vehicle has higher ground clearance than a passenger vehicle designed for use only on pavement. Higher ground clearance has many advantages for off-road driving. It allows you to travel over bumps, obstacles, and rough terrain. It also provides good visibility so you can anticipate problems earlier.

These advantages come at some cost. Because your vehicle is taller and rides higher off the ground, it has a higher centre gravity making it more susceptible to tipping or rollover if you make abrupt turns. Utility vehicles have a significantly higher rollover rate than other types of vehicles. In a rollover crash, an unbelted person is significantly more likely to die than a person wearing a seat belt. As a reminder, make sure you and your passengers always wear seat belts.

For information on how to reduce the risk of rollover, read:


▶ Precautions While Driving P. 534

Off-road Guidelines P. 526

Failure to operate your vehicle correctly might result in a crash or a rollover.

In many countries, the law prohibits off-road driving, e.g., driving in forests, trailblazing, etc. Please check your local laws and regulations before commencing any off-road driving activity.

Your Vehicle's Safety Features

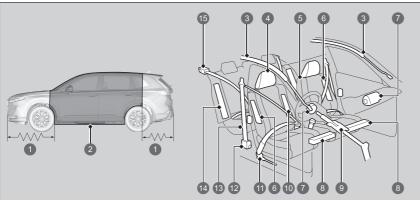

- Crush Zones
- Safety Cage
- Side Curtain Airbags
- 4 Head Restraints
- **5** Seats and Seat-Backs
- **6** Front Side Airbags
- Front Airbags
- 8 Knee Airbag

- Ocollapsible Steering Column
- Centre Airbag*
- Outer Lap Pretensioners
- Pront Seat Belt Tensioners
- B Seat Belts
- Second Row Side Airbags*
- Rear Seat Belt Tensioners*

∑Your Vehicle's Safety Features

Your vehicle is equipped with many features that work together to help to protect you and your passengers during a crash.

Some features do not require any action on your part. These include a strong steel framework that forms a safety cage around the passenger compartment, front and rear crush zones, a collapsible steering column, and tensioners that tighten the front and rear outer* seat belts in a sufficient crash.

However, you and your passengers cannot take full advantage of these features unless you remain seated in the correct position and always wear your seat belts. In fact, some safety features can contribute to injuries if they are not used properly.

The following checklist will help you take an active role in protecting yourself and your passengers.

Safety Checklist

For the safety of you and your passengers, make a habit of checking these items each time before you drive.

Adjust your seat to a position suitable for driving. Be sure the front seats are
adjusted as far to the rear as possible while allowing the driver to control the
vehicle. Sitting too close to a front airbag can result in serious or fatal injury in a
crash.

Seats P. 286

Adjust head restraints to the proper position. Head restraints are most effective
when the centre of the head restraint aligns with the centre of your head. Taller
persons should adjust their head restraint to the highest position.

Adjusting the Front Head Restraint Positions P. 301

Always wear your seat belt, and make sure you wear it properly. Confirm that any
passengers are properly belted as well.

Fastening a Seat Belt P. 53

 Protect children by using seat belts or child restraint systems according to a child's age, height, and weight.

Child Safety P. 80

Safety Checklist

If the door and/or tailgate open message appears on the driver information interface, a door and/or the tailgate is not completely closed. Close all doors and the tailgate tightly until the message disappears.



- African models
- Except African models

Seat Belts

About Your Seat Belts

Seat belts are the single most effective safety device because they keep you connected to the vehicle so that you can take advantage of many built-in safety features. They also help to keep you from being thrown against the inside of the vehicle, against any passengers, or out of the vehicle. When worn properly, seat belts also keep your body properly positioned in a crash so that you can take full advantage of the additional protection provided by the airbags.

In addition, seat belts help to protect you in almost every type of crash, including:

- frontal impacts
- side impacts
- rear impacts
- rollovers

■ About Your Seat Belts

AWARNING

Not wearing a seat belt properly increases the chance of serious injury or death in a crash, even though your vehicle has airbags.

Be sure you and your passengers always wear seat belts and wear them properly.

WARNING: Seat belts are designed to bear upon the bony structure of the body, and should be worn low across the front of the pelvis or the pelvis, chest and shoulders, as applicable; wearing the lap section of the belt across the abdominal area must be avoided.

WARNING: Seat belts should be adjusted as firmly as possible, consistent with comfort, to provide the protection for which they have been designed. A slack belt will greatly reduce the protection afforded to the wearer

WARNING: Belts should not be worn with straps twisted.

WARNING: Each belt assembly must only be used by one occupant; it is dangerous to put a belt around a child being carried on the occupant's lap.

Continued 47

■ Lap/shoulder seat belts

All five or seven seating positions are equipped with lap/shoulder seat belts with emergency locking retractors. In normal driving the retractor lets you move freely while keeping some tension on the belt. During a collision or sudden stop the retractor locks to restrain your body.

The seat belt must be properly secured when using a front-facing child restraint system.

▶ Installing a Child Restraint System with a Lap/Shoulder Seat Belt P. 126

About Your Seat Belts

If you extend the seat belt too quickly, it will lock in place. If this happens, slightly retract the seat belt, then extend it slowly.

Seat belts cannot completely protect you in every crash. But in most cases, seat belts can reduce your risk of serious injury.

Most countries require you to wear seat belts. Take time to familiarise with the legal requirements of the countries in which you will drive.

■ Proper use of seat belts

Follow these guidelines for proper use:

- All occupants should sit upright, well back in the seat, and remain in that position for the duration of the trip. Slouching and leaning reduce the effectiveness of the belt and can increase the chance of serious injury in a crash.
- Never place the shoulder part of a lap/shoulder seat belt under your arm or behind your back. This could cause very serious injuries in a crash.
- Two people should never use the same seat belt. If they do, they could be very seriously injured in a crash.
- Do not put any accessories on the seat belts. Devices intended to improve comfort or reposition the shoulder part of a seat belt can reduce the protective capability and increase the chance of serious injury in a crash.

Continued 49

Seat Belt Reminder



- African models
- 2 Except African models

■ Front seats

The seat belt system includes an indicator on the instrument panel to remind the driver or a front passenger or both to fasten their seat belts.

If you set the power mode to ON and a seat belt is not fastened, the indicator will come on. If the driver or front passenger does not fasten the belt, the indicator will remain on.

The beeper will periodically sound and the indicator will blink while the vehicle is moving until the seat belt is fastened.

Seat Belt Reminder

The indicator will also come on if a front passenger does not fasten their seat belt within six seconds after the power mode is set to ON.

When no one is sitting in the front passenger's seat, the indicator will not come on and the beeper will not sound.


If the indicator comes on or the beeper sounds with no one sitting in the front passenger's seat. Check if:

- There is nothing heavy placed on the front passenger seat.
- The driver's seat belt is fastened.


If the indicator does not light when the passenger is seated and is not fastened, something may be interfering with the occupant detection sensor. Check if:

- A cushion is placed on the seat.
- The front passenger is not sitting properly.

If none of these conditions exist, have your vehicle checked by a dealer.

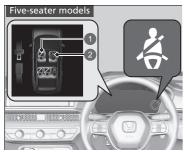

- Fastened
- 2 Unfastened

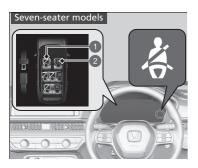

- Fastened
- 2 Unfastened

■ Rear seats

Your vehicle monitors rear seat belt use.

Oceanian models

The driver information interface notifies you if any of the rear seat belts are not used with a seating position occupied.

Except Oceanian models

The driver information interface notifies you if any of the rear seat belts are not used.

The display appears when:


- Any of the rear passenger seat belts are unfastened when the power mode is set to ON.
- A rear door is opened and then closed.
- Any of the rear passengers fasten or unfasten their seat belt.

The seat belt reminder indicator blinks and the beeper sounds if any rear passenger seat belt are unfastened while driving.

Automatic Seat Belt Tensioners

The front seats and the outer second row seats* are equipped with automatic seat belt tensioners to enhance safety.

The tensioners automatically tighten the front seat belts and the outer second row seat belts* during a moderate-to-severe frontal collision, sometimes even if the collision is not severe enough to inflate the front airbags or the front knee airbags.

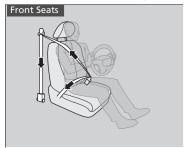



■ Automatic Seat Belt Tensioners

The seat belt tensioners can only operate once. If a tensioner is activated, the SRS indicator will come on. Have a dealer replace the tensioner and thoroughly inspect the seat belt system as it may not offer protection in a subsequent crash.

During a moderate-to-severe side impact, the tensioners on both sides of the vehicle also activate.


Fastening a Seat Belt

After adjusting a front seat to the proper position, and while sitting upright and well back in the seat (see illustrations for correct seating posture):

Seats P. 286



1. Pull the seat belt out slowly.

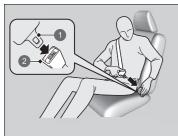

- **2.** Insert the latch plate into the buckle, then tug on the belt to make sure the buckle is secure.
 - ► Make sure that the belt is not twisted or caught on anything.

>> Fastening a Seat Belt

No one should sit in a seat with an inoperative seat belt or one that does not appear to be working correctly. Using a seat belt that is not working properly may not protect the occupant in a crash. Have a dealer check the belt as soon as possible.

If the seat belt appears to be locked in a fully retracted position, firmly pull out on the shoulder belt once, then push it back in.

Then, smoothly pull it out of the retractor and fasten. If you are unable to release the seat belt from a fully retracted position, do not allow anyone to sit in the seat, and take your vehicle to a dealer for repair.

- **About Your Seat Belts** P. 47
- **Seat Belt Inspection** P. 59

- 1 Latch Plate
- 2 Buckle



- **3.** Position the lap part of the belt as low as possible across your hips (see illustration), then pull up on the shoulder part of the belt so the lap part fits snugly. This lets your strong pelvic bones take the force of a crash and reduces the chance of internal injuries.
- **4.** If necessary, pull up on the belt again to remove any slack, then check that the belt rests across the centre of your chest and over your shoulder. This spreads the forces of a crash over the strongest bones in your upper body.

■ Fastening a Seat Belt

AWARNING

Improperly positioning the seat belts can cause serious injury or death in a crash.

Make sure all seat belts are properly positioned before driving.


To release the belt, push the red **PRESS** button and then guide the belt by hand until it has retracted completely.

When exiting the vehicle, be sure the belt is properly stowed so that it will not get caught in the closing door.

Never insert any foreign objects into the buckle or retractor mechanism.

Adjusting the Shoulder Anchorage

The front seats and second row seats have adjustable shoulder anchorages to accommodate taller and shorter occupants.

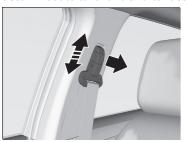

- **1.** Move the anchorage up and down while pulling the shoulder anchorage outward.
- **2.** Position the anchorage so that the belt rests across the centre of your chest and over your shoulder.

∑Adjusting the Shoulder Anchorage

After an adjustment, make sure that the shoulder anchorage position is secure.

The shoulder anchorage height can be adjusted to four levels. If the belt contacts your neck, lower the height one level at a time.


Continued 55

Seat Belt with Detachable Anchorage*



1. Pull out the seat belt's small latch plate and the latch plate from each holding slot in the ceiling.

- 1 Latch Plate
- 2 Small Latch Plate

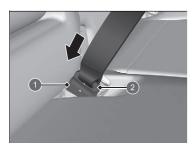

- Anchorage Buckle
- Small Latch Plate

2. Line up the triangle marks on the small latch plate and anchorage buckle. Make sure the seat belt is not twisted. Attach the

belt to the anchorage buckle.


Seat Belt with Detachable Anchorage[⋆]

AWARNING

Using the seat belt with the detachable anchorage unfastened increases the chance of serious injury or death in a crash.

Before using the seat belt, make sure the detachable anchorage is correctly latched.

To unlatch the detachable anchorage, insert the latch plate into the slot on the side of the anchorage buckle

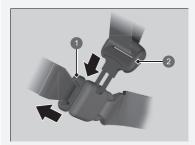

- Small Latch Plate
- 2 Latch Plate



- 1 Latch Plate
- 2 Buckle

3. Insert the latch plate into the buckle. Properly fasten the seat belt the same way you fasten the lap/shoulder seat belt.

Seat Belt with Detachable Anchorage *

Taiwanese models

When fastening a seatbelt in the centre seat, the seatbelt should pass over the bar.



Advice for Pregnant Women

Consider alternative:

If you are pregnant, the best way to protect yourself and your unborn child when driving or riding in a vehicle is to always wear a seat belt. When positioning the seat belt, wear the shoulder belt section across the chest, avoiding the abdomen, and keep the lap belt portion as low as possible across the hips. (See illustration.)



∑Advice for Pregnant Women

Each time you have a checkup, ask your doctor if it is okay for you to drive.

To reduce the risk of injuries to both you and your unborn child that can be caused by an inflating front airbag:

- When driving, sit upright and adjust the seat as far back as possible while allowing full control of the vehicle.
- When sitting in the front passenger's seat, adjust the seat as far back as possible.

Seat Belt Inspection

Regularly check the condition of your seat belts as follows:

- Pull each belt out fully, and look for frays, cuts, burns, and wear.
- Check that the latch plates and buckles work smoothly and the belts retract easily.
 - ▶ If a belt does not retract easily, cleaning the belt may correct the problem. Only use a mild soap and warm water. Do not use bleach or cleaning solvents. Make sure the belt is completely dry before allowing it to retract.

Any belt that is not in good condition or working properly will not provide proper protection and should be replaced as soon as possible.

A belt that has been worn during a crash may not provide the same level of protection in a subsequent crash. Have your seat belts inspected by a dealer after any collision.

Seat Belt Inspection

AWARNING

Not checking or maintaining seat belts can result in serious injury or death if the seat belts do not work properly when needed.


Check your seat belts regularly and have any problem corrected as soon as possible.

WARNING: No modifications or additions should be made by the user which will either prevent the seat belt adjusting devices from operating to remove slack, or prevent the seat belt assembly from being adjusted to remove slack.

WARNING: It is essential to replace the entire assembly after it has been worn in a severe impact even if damage to the assembly is not obvious.

WARNING: Care should be taken to avoid contamination of the webbing with polishes, oils and chemicals, and particularly battery acid. Cleaning may safely be carried out using mild soap and water. The belt should be replaced if webbing becomes frayed, contaminated or damaged.

Anchorage Points

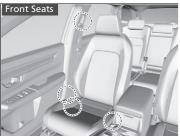


When replacing the seat belts, use the anchorage points shown in the images. The front seat has a lap/shoulder belt.




Five-seater models

The rear seat has three lap/shoulder belts.

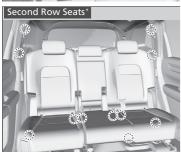

Seven-seater models

The second row seat has three lap/shoulder belts.

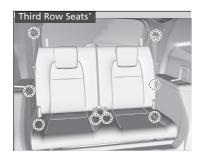

Seven-seater models

The third row seat has two lap/shoulder belts.

Airbags

Airbag System Components

The front, driver's knee, front passenger's knee, front side, second row side*, front centre* and side curtain airbags are deployed according to the direction and severity of impact. The airbag system includes:

- Two SRS (Supplemental Restraint System) front airbags. The driver's airbag is stored in the centre of the steering wheel; the front passenger's airbag is stored in the dashboard. Both are marked SRS AIRBAG
- Two knee airbags. The driver's knee airbag is stored under the steering column; the front passenger's knee airbag is stored under the glove box.
 Both are marked SRS AIRBAG
- Four side airbags. One for the driver, one for the front passenger, and two for the second row outboard* seating positions. The airbags are stored in the outer edges of the seat-backs.
 All are marked SIDE AIRBAG.

 Two side curtain airbags, one for each side of the vehicle. The airbags are stored in the ceiling, above the side windows. The front and rear pillars are marked SIDE CURTAIN AIRBAG.

Oceanian models

- One centre airbag. The airbag is stored in the centre side of driver's seat-back.
 It is marked CENTER AIRBAG.
- An electronic control unit that, when the power mode is in ON, continually monitors information about the various impact sensors, seat and buckle sensors, airbag activators, seat belt tensioners, and other vehicle information. During a crash event, the unit can record such information
- Automatic seat belt tensioners for the front seats and outer second row seats*.
- Impact sensors that can detect a moderate-to-severe front or side impact.
- An indicator on the instrument panel that alerts you to a possible problem with your airbag system or seat belt tensioners.

Oceanian models

 Pressure sensors that can detect a moderate-to-severe side impact.

Important Facts About Your Airbags

Airbags can pose serious hazards. To do their job, airbags must inflate with tremendous force. So, while airbags help to save lives, they can cause burns, bruises, and other minor injuries, sometimes even fatal ones if occupants are not wearing their seat belts properly and sitting correctly.

What you should do: Always wear your seat belt properly and sit upright and as far back from the steering wheel as possible while allowing full control of the vehicle. A front passenger should move their seat as far back from the dashboard as possible.

Remember, however, that no safety system can prevent all injuries or deaths that can occur in a severe crash, even when seat belts are properly worn and the airbags deploy.

Do not place hard or sharp objects between yourself and a front airbag. Carrying hard or sharp objects on your lap, or driving with a pipe or other sharp object in your mouth, can result in injuries if your front airbag inflates.

Do not attach or place objects on the front, driver's knee, and front passenger's knee airbag covers. Objects on the covers marked SRS AIRBAG could interfere with the proper operation of the airbags or be propelled inside the vehicle and hurt someone if the airbags inflate.

Do not attempt to deactivate your airbags. Together, airbags and seat belts provide the best protection.

When driving, keep hands and arms out of the deployment path of the front airbag by holding each side of the steering wheel. Do not cross an arm over the airbag cover.

Types of Airbags

Your vehicle is equipped with five types of airbags:

- Front airbags: Airbags in front of the driver's and front passenger's seats.
- Knee airbags: Airbags under the steering column and under the glove box.
- **Centre airbags*:** Airbag in the centre side of driver's seat-back.
- **Side airbags:** Airbags in the driver's, front passenger's, and second row outer passenger's* seat-backs.
- **Side curtain airbags:** Airbags above the side windows.

Each is discussed in the following pages.

Front Airbags (SRS)

The front SRS airbags inflate in a moderate-to-severe frontal collision to help to protect the head and chest of the driver and/or front passenger.

SRS (Supplemental Restraint System) indicates that the airbags are designed to supplement seat belts, not replace them. Seat belts are the occupant's primary restraint system.

Housing Locations

The front airbags are housed in the centre of the steering wheel for the driver, and in the dashboard for the front passenger. Both airbags are marked **SRS AIRBAG**.

∑Types of Airbags

The airbags can inflate whenever the power mode is in ON.

After an airbag inflates in a crash, you may see a small amount of smoke. This is from the combustion process of the inflator material and is not harmful. People with respiratory problems may experience some temporary discomfort. If this occurs, get out of the vehicle as soon as it is safe to do so.

Operation

Front airbags are designed to inflate during moderate-to-severe frontal collisions. When the vehicle decelerates suddenly, the sensors send information to the control unit which signals one or both front airbags to inflate.

A frontal collision can be either head-on or angled between two vehicles, or when a vehicle crashes into a stationary object, such as a concrete wall.

■ How the Front Airbags Work



While your seat belt restrains your torso, the front airbag provides supplemental protection for your head and chest.

The front airbags deflate immediately so that they won't interfere with the driver's visibility or the ability to steer or operate other controls.

The total time for inflation and deflation is so fast that most occupants are not aware that the airbags deployed until they see them lying in front of them.

■ When front airbags should not deploy

Minor frontal crashes: Front airbags were designed to supplement seat belts and help to save lives, not to prevent minor scrapes, or even broken bones that might occur during a less than moderate-to-severe frontal crash.

Side impacts: Front airbags can provide protection when a sudden deceleration causes a driver or front passenger to move towards the front of the vehicle. Side airbags and side curtain airbags have been specifically designed to help to reduce the severity of injuries that can occur during a moderate-to-severe side impact which can cause the driver or passenger to move towards the side of the vehicle.

Rear impacts: Head restraints and seat belts are your best protection during a rear impact. Front airbags cannot provide any significant protection and are not designed to deploy in such collisions.

Rollovers: Seat belts and side curtain airbags offer the best protection in a rollover. Because front airbags could provide little if any protection, they are not designed to deploy during a rollover.

■ When front airbags deploy with little or no visible damage

Because the airbag system senses sudden deceleration, a strong impact to the vehicle framework or suspension might cause one or more of the airbags to deploy. Examples include running into a curb, the edge of a hole, or other low fixed object that causes a sudden deceleration in the vehicle chassis. Since the impact is underneath the vehicle, damage may not be readily apparent.

■ When front airbags may not deploy, even though exterior damage appears severe


Since crushable body parts absorb crash energy during an impact, the amount of visible damage does not always indicate proper airbag operation. In fact, some collisions can result in severe damage but no airbag deployment because the airbags would not have been needed or would not have provided protection even if they had deployed.

Knee Airbags

The knee SRS airbags inflate in a moderate-to-severe frontal collision to help to keep the driver and/or front passenger in the proper position and to help to maximise the benefit provided by the vehicle's other safety features.

SRS (Supplemental Restraint System) indicates that the airbag is designed to supplement seat belts, not replace them. Seat belts are the occupant's primary restraint system.

Housing Locations

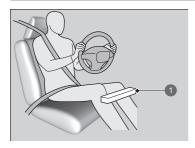

Driver's Knee Airbag Location

The knee airbag for the driver and the one for the front passenger are housed under the steering column and the glove box respectively.

Both are marked SRS AIRBAG.

Do not attach accessories on or near a knee airbag as they can interfere with the proper operation of the airbag, or even hurt someone if the airbag inflates.

The driver and front passenger should not store any items under the seat or behind their feet. The items can interfere with proper airbag deployment in the event of a moderate to severe frontal collision and may result in inadequate protection.

Continued 67



 Passenger's Knee Airbag Location

Operation



Deployed Driver's Knee Airbag

The driver's and front passenger's knee airbag deploy at the same time as the driver's and front passenger's airbag respectively.

Even if the collision is not severe enough to deploy the front airbag, the knee airbag may inflate alone.



Deployed Passenger's Knee Airbag

Continued 69

■ When knee airbags deploy with little or no visible damage

Because the airbag system senses sudden deceleration, a strong impact to the vehicle framework or suspension might cause one or more of the airbags to deploy. Examples include running into a curb, the edge of a hole, or other low fixed objects that cause a sudden deceleration in the vehicle chassis. Since the impact is underneath the vehicle, damage may not be readily apparent.


■ When knee airbags may not deploy, even though exterior damage appears severe

Since crushable body parts absorb crash energy during an impact, the amount of visible damage does not always indicate proper airbag operation. In fact, some collisions can result in severe damage but no airbag deployment because the airbags would not have been needed or would not have provided protection even if they had deployed.

Centre Airbag*

The centre airbag is designed to help to protect the heads of the driver and front passenger during a moderate-to-severe side impact.

■ Housing Location

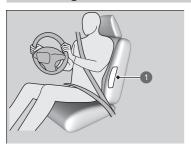


The centre airbag is housed in the centre side of the driver's seat-back.

It is marked **CENTER AIRBAG**.

Centre Airbag Location

Operation

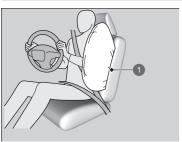

When the sensors detect a moderate-tosevere side impact, the control unit signals the centre airbag to deploy.

○ Centre Airbag*

Make sure you and any front seat passenger always sit upright. Leaning into the path of the centre airbag can prevent the airbag from deploying properly and increases your risk of serious injury.

Do not attach accessories on or near the centre airbag. They can interfere with the proper operation of the airbag, or hurt someone if an airbag inflate.

Do not open the lid of the console compartment while driving.

Do not cover or replace the driver's seat-back cover without consulting a dealer.

Improperly replacing or covering driver's seat-back covers can prevent your centre airbag from properly deploying during a side impact.

Centre Airbag

■ When the centre airbag deploy with little or no visible damage

Because the airbag system senses sudden acceleration, a strong impact to the side of the vehicle's framework can cause the centre airbag to deploy. In such cases, there may be little or no damage, but the side impact sensors detected a severe enough impact to deploy the airbag.

■ When the centre airbag may not deploy, even though visible damage appears severe

It is possible for the centre airbag to not deploy during an impact that results in apparently severe damage. This can occur when the point of impact was towards the far front or rear of the vehicle, or when the vehicle's crushable body parts absorbed most of the crash energy. In either case, the centre airbag would not have been needed nor provided protection even if it had deployed.

Side Airbags

The side airbags help to protect the torso and pelvis of the driver, front passenger, or an outer second row seat occupant* during a moderate-to-severe side impact.

Housing Locations



The side airbags are housed in the outside edge of the driver's, passenger's, and second row outer passenger's* seat-backs.

Each is marked SIDE AIRBAG.

Side Airbag Location




Side Airbag Location

Side Airbags


Do not attach accessories on or near the side airbags. They can interfere with the proper operation of the airbags, or hurt someone if an airbag inflates.

Operation

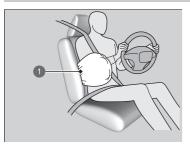

When the sensors detect a moderate-tosevere side impact, the control unit signals the side airbag on the impact side to immediately inflate.

Deployed Side Airbag

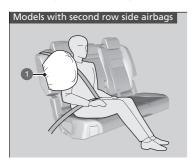

Deployed Side Airbag

Side Airbags

Do not cover or replace the front and second row* seat-back covers without consulting a dealer. Improperly replacing or covering front and second row* seat-back covers can prevent your side airbags from properly deploying during a side impact.

Do not let the front and rear passengers lean sideways with their head in the deployment path of the side airbag. An inflating side airbag can strike with strong force and seriously injure the passenger.

Oceanian models

Side airbag deployment is controlled by a pressure sensor inside each front door. Damage or changes to the inside or outside of the doors may negatively affect side airbag deployment. Contact an authorized dealer before changing or repairing a front door.

■ When a side airbag deploys with little or no visible damage

Because the airbag system senses sudden acceleration, a strong impact to the side of the vehicle's framework can cause a side airbag to deploy. In such cases, there may be little or no damage, but the side impact sensors detected a severe enough impact to deploy the airbag.


■ When a side airbag may not deploy, even though visible damage appears severe

It is possible for a side airbag not to deploy during an impact that results in apparently severe damage. This can occur when the point of impact was towards the far front or rear of the vehicle, or when the vehicle's crushable body parts absorbed most of the crash energy. In either case, the side airbag would not have been needed nor provided protection even if it had deployed.

Side Curtain Airbags


The side curtain airbags help to protect the heads of the driver and passengers in outer seating positions during a moderate-to-severe side impact.

■ Housing Locations

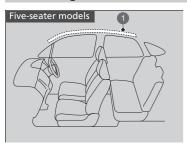

The side curtain airbags are located in the ceiling above the side windows on both sides of the vehicle

Side Curtain Airbag Location

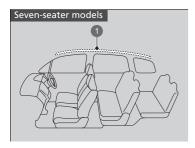

Side Curtain Airbag Location


Side Curtain Airbags

The side curtain airbags are most effective when an occupant is wearing their seat belt properly and sitting upright, well back in their seat.

Do not attach any objects to the side windows or roof pillars as they can interfere with the proper operation of the side curtain airbags.


Do not put a coat hanger or hard objects on a coat hook. This could result in injuries if your side curtain airbag inflates.

Operation

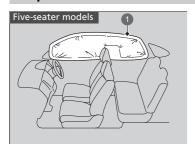

The side curtain airbag is designed to deploy in a moderate-to-severe side impact.

Deployed Side Curtain Airbag

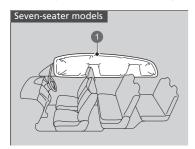

Deployed Side Curtain Airbag

■ When side curtain airbags deploy in a frontal collision

One or both side curtain airbags may also inflate in a moderate-to-severe angled frontal collision.

Airbag System Indicators

If a problem occurs in the airbag system, the SRS indicator will come on and a message appears on the driver information interface.

Supplemental Restraint System (SRS) Indicator



■ When the power mode is set to ON The indicator comes on for a few seconds, then goes off. This tells you the system is working properly.

- African models
- 2 Except African models

If the indicator comes on at any other time, or does not come on at all, have the system checked by a dealer as soon as possible. If you don't, your airbags and seat belt tensioners may not work properly when they are needed.

Supplemental Restraint System (SRS) Indicator

AWARNING

Ignoring the SRS indicator can result in serious injury or death if the airbag systems or tensioners do not work properly.

Have your vehicle checked by a dealer as soon as possible if the SRS indicator alerts you to a possible problem.

Airbag Care

You do not need to, and should not, perform any maintenance on or replace any airbag system components yourself. However, you should have your vehicle inspected by a dealer in the following situations:

■ When the airbags have deployed

If an airbag has inflated, the control unit and other related parts must be replaced. Similarly, once an automatic seat belt tensioner has been activated, it must be replaced.

■ When the vehicle has been in a moderate-to-severe collision

Even if the airbags did not inflate, have your dealer inspect the following: the seat belt tensioners for the front seats and outer second row seats*, and each seat belt that was worn during the crash.

The removal of airbag components from the vehicle is prohibited.

In case of malfunction, or shutdown, or after the airbag inflation/seat belt tensioner operation, ask a qualified personnel for handling.

We recommend against the use of salvaged airbag system components, including the airbag, tensioners, sensors, and control unit.

Child Safety

Protecting Child Passengers

Each year, many children are injured or killed in vehicle crashes because they are either unrestrained or not properly restrained. In fact, vehicle crashes are the number one cause of death of children aged 12 and under.

To reduce the number of child deaths and injuries, infants and children should be properly restrained when they ride in a vehicle.



Children should sit properly restrained in a rear seat. This is because:

- An inflating front airbag can injure or kill a child sitting in the front seat.
- A child in the front seat is more likely to interfere with the driver's ability to safely control the vehicle.
- Statistics show that children of all sizes and ages are safer when they are properly restrained in a rear seat.

Front Passenger's Sun Visor

Except Taiwanese models

AWARNING



NEVER use a rearward facing child restraint on a seat protected by an ACTIVE AIRBAG in front of it, DEATH or SERIOUS INJURY to the CHILD can occur.

Taiwanese models



- Never hold a child on your lap because it is impossible to protect them in the event of a collision.
- Never put a seat belt over yourself and a child. During a crash, the belt would likely press deep into the child and cause serious or fatal injuries.
- Never let two children use the same seat belt. Both children could be very seriously injured in a crash.
- Any child who is too small to wear a seat belt must be properly restrained in an approved child restraint system that is properly secured to the vehicle using the seat belt or the child restraint anchorage system.

▶ Protecting Child Passengers

AWARNING

Children who are unrestrained or improperly restrained can be seriously injured or killed in a crash.

Any child too small for a seat belt should be properly restrained in an approved child restraint system. A larger child should be properly restrained with a seat belt, using a booster seat if necessary.

In many countries, the law requires all children aged 12 and under, and whose height are shorter than 150 cm be properly restrained in a rear seat.

In many countries, it is required to use an officially approved and suitable child restraint system for transporting a child on any passenger seat. Check your local legal requirement.

We recommend a child restraint system compliant with UN Regulation No. 44 or No. 129, or the regulations of the subject countries.

Selecting a Child Restraint System P. 86

- Do not allow children to operate the doors, windows, or seat adjustments.
- Do not leave children in the vehicle unattended, especially in hot weather when the inside of the vehicle can get hot enough to kill them. They could also activate vehicle controls causing it to move unexpectedly.

WARNING: Use the power window lock button to prevent children from opening the windows. Using this feature will prevent children from playing with the windows, which could expose them to hazards or distract the driver.

Opening/Closing the Power Windows
P 251

WARNING: Always take the ignition key with you whenever you leave the vehicle alone or with other occupants.

To remind you of the passenger's front airbag hazard and child safety, your vehicle has the warning label on the passenger's side sun visor.

Please read and follow the instructions on this label.

Safety Labels P. 138

Safety of Infants and Small Children

■ Protecting Infants

An infant must be properly restrained in a rear-facing child restraint system until the infant reaches the child restraint system manufacturer's weight or height limit for the seat.



■ Positioning a rear-facing child restraint system

Child restraint system must be placed and secured in a rear seating position.

- ➤ We recommend that you install the child restraint system directly behind the front passenger's seat, move the seat as far forward as needed, and leave it unoccupied.
- Make sure that there is no contact between the child restraint system and the seat in front of it. If there is, you may wish to get a smaller rear-facing child restraint system.

▶ Protecting Infants

AWARNING

Placing a rear-facing child restraint system in the front seat can result in serious injury or death if the passenger's front airbag inflates.

Always place a rear-facing child restraint system in the back seat, not the front.

When properly installed, a rear-facing child restraint system may prevent the driver or a front passenger from moving their seat all the way back, or from locking their seat-back in the desired position.

Many experts recommend use of a rear-facing child restraint system for a child up to two years old if the child's height and weight are appropriate for a rearfacing child restraint system.


Rear-facing child restraint systems should never be installed in a front-facing position.

Always refer to the child restraint system manufacturer's instructions before installation.

If the passenger's front airbag inflates, it can hit the rear-facing child restraint system with great force, which can dislodge or strike the system, and seriously injure the child.

Protecting Smaller Children

If a child has exceeded the weight and height limitations of a rear-facing child restraint system, the child should be properly restrained in a firmly secured front-facing child restraint system until they exceed the weight and height limitations for the front-facing child restraint system.

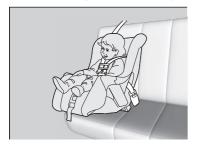

■ Front-facing child restraint system placement

We strongly recommend placing a frontfacing child restraint system in a rear seating position.

Placing a front-facing child restraint system in the front seat can be hazardous. A rear seat is the safest place for a child.

AWARNING

Placing a front-facing child restraint system in the front seat can result in serious injury or death if the front airbag inflates.

If you must place a front-facing child restraint system in front, move the vehicle seat as far back as possible, and properly restrain the child.

Educate yourself about the laws and regulations regarding child restraint system use where you are driving, and follow the child restraint system manufacturer's instructions.

Selecting a Child Restraint System

Some child restraint systems are lower anchorage compatible. Some have a rigid-type connector while others have a flexible-type connector. Both are equally easy to use. Some existing and previously owned child restraint systems can only be installed using the seat belt. Whichever type you choose, follow the child restraint system manufacturer's use and care instructions including recommended expiration dates as well as the instructions in this manual. Proper installation is key to maximising your child's safety.

The flexible type may not be available in your country.

In seating positions and vehicles not equipped with lower anchorages, install a child restraint system using the seat belt and a top tether for added security. This is because all child restraint systems must be secured with the seat belt when the lower anchorage system is not in use. In addition, the child restraint system manufacturer may advise that a seat belt be used to attach an ISOFIX restraint system once a child reaches a specified weight. Please read the child restraint system owner's manual for proper installation instructions.

■ Important consideration when selecting a child restraint system

Make sure the child restraint system meets the following three requirements:

- The child restraint system is the correct type and size for the child.
- The child restraint system is the correct type for the seating position.
- The child restraint system is compliant with safety standards. We recommend a child restraint system compliant with UN Regulation No. 44 or No. 129, or the regulations of the subject countries. Look for the approval mark on the system and the manufacturer's statement of compliance on the box.

Selecting a Child Restraint System

Installation of a lower anchorage-compatible child restraint system is simple.

Lower anchorage-compatible child restraint systems have been developed to simplify the installation process and reduce the likelihood of injuries caused by incorrect installation.


We recommend a rear-facing or a front-facing Honda genuine ISOFIX child restraint system for infants or small children, respectively. Ask your dealer.

■ Child Restraint Systems Standards

If a child restraint system (whether an i-Size/ISOFIX type or one that is fitted with a seat belt) meets the relevant UN Regulation, it will be affixed with an approval label as shown in the adjacent table. Before purchasing or using any child restraint system, make sure to check the approval label and ensure that it is compatible with your vehicle and the child, and that it complies with the relevant UN Regulation.

Selecting a Child Restraint System


Example of UN Regulation No. 44 approval label

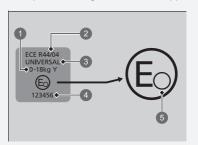

- 1 "Mass group"
- Regulation number
- Category
- 4 Approval number
- 6 Country code

Selecting a Child Restraint System

Example of UN Regulation No. 129 approval label

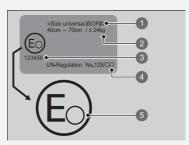


- Category
- 2 Size and weight indication
- 3 Approval number
- 4 Regulation number
- **6** Country code

Oceanian models

Five-seater models

■ Locations for Child Restraint System Installation

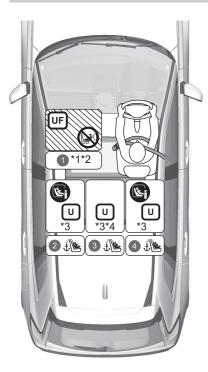

| 9 | Suitable for universal restraint systems installed with vehicle safety belts. |
|----|--|
| UF | Suitable for forward facing universal restraint systems installed with vehicle safety belts. |
| | Suitable for i-Size and ISOFIX child restraints systems. |
| | Suitable for forward facing restraint systems only. |
| | Never use a rearward facing child restraint system. |
| Ť. | Seat position equipped with Top Tether anchorages. |

- *1:Adjust the seat slide to the most rear position.
- *2:For installing the universal belted type, adjust the seat back to the most front lock position.
- *3:Adjust the 2nd row seat slide to the rearmost position.
- *4:If you attach a child restraint system to the rear centre seat may make the left side seat belt unusable.
- If the child restraint system interferes with the head restraint and cannot be installed stably, raise the head restraint to the highest position. If this interference is unavoidable even after raising, remove the head restraint. Please note that the removed head restraint should be stored in the luggage compartment so that it will not fly during sudden braking or collision.
 - Also, if you remove the child restraint system, attach the head restraint to the original seat and make sure it is locked.
 - However, when using the booster cushion only, do not remove the head restraint.
- If you cannot fix the booster child restraint system stably, adjust the seat-back angle to be parallel with the back still keeping it forward of the seat belt shoulder anchorage.
- Child restraint systems with support leg can be installed in seating position where i-Size cannot be installed.

Detail information for CRS installation

| | | Seating pos | ition and Seat p | osition nu | umber | | |
|---|----------------------------------|-------------|-------------------|-----------------------|----------|-------|--|
| | Size groups Weight Stature | | 0 | 2 | 3 | 4 | |
| | | | Front | 2nd row ^{*3} | | | |
| | | | passenger*1 | Left | Centre*4 | Right | |
| | Group 0 | Up to 10kg | No | Yes | Yes | Yes | |
| Seating position suitable | Group 0+ | Up to 13kg | NO | res | res | | |
| for universal belted (yes/ | Group I | 9-18kg | | | | Yes | |
| no) | Group II | 15-25kg | Yes ^{*2} | Yes | Yes | | |
| | Group III | 22-36kg | | | | | |
| i-Size seating position (yes/no) | ≤ 150cm | | No | Yes | No | Yes | |
| Seating position suitable for recommended genuine CRS | Refer to genuine CRS list | | No | No | No | No | |
| Seating position suitable for lateral fixture (L1/L2) | | _ | No | No | No | No | |
| Largest suitable | Group 0 | Up to 10kg | | | | R3 | |
| rearward facing fixture | Group 0+ | Up to 13kg | No | R3 | No | | |
| (R1/R2X/R2/R3) | Group I | 9-18kg | | | | | |
| Largest suitable forward facing fixture (F2X/F2/F3) | Group I 9-18kg | | No | F3 | No | F3 | |
| Largest suitable booster fixture (B2/B3) | ≤ 150cm | | В3 | В3 | В3 | В3 | |

≥ Locations for Child Restraint System Installation

When purchasing a child restraint systems, make sure to check the ISOFIX size class or the fixture to ensure that the seat is compatible with your vehicle.


| Fixture (CRF) | Description |
|------------------|---|
| ISO/L1 | Left lateral-facing (carrycot) infant seat |
| ISO/L2 | Right lateral-facing (carrycot) infant seat |
| ISO/R1 | Rearward-facing infant seat |
| ISO/R2X | Reduced-size rearward-facing child restraint systems |
| ISO/R2 | Reduced-size rearward-facing child restraint systems |
| ISO/R3 | Full-size rearward-facing child restraint systems |
| ISO/F2X | Reduced-height forward-facing child restraint systems |
| ISO/F2 | Reduced-height forward-facing child restraint systems |
| ISO/F3 | Full-height, forward-facing child restraint systems |
| ISO/B2 | Reduced width forward-facing booster seat |
| ISO/B3 | Full width forward-facing booster seat |


- *1:Adjust the seat slide to the most rear position. Forward facing only.
- *2:For installing the universal belted type, adjust the seat back to the most front lock position.
- *3:Adjust the 2nd row seat slide to the rearmost position.
- *4:If you attach a child restraint system to the rear centre seat may make the left side seat belt unusable.
- If the child restraint system interferes with the head restraint and cannot be installed stably, raise the head restraint to the highest position. If this interference is unavoidable even after raising, remove the head restraint. Please note that the removed head restraint should be stored in the luggage compartment so that it will not fly during sudden braking or collision.
 - Also, if you remove the child restraint system, attach the head restraint to the original seat and make sure it is locked.
 - However, when using the booster cushion only, do not remove the head restraint.
- If you cannot fix the booster child restraint system stably, adjust the seat-back angle to be parallel with the back still keeping it forward of the seat belt shoulder anchorage.
- Child restraint systems with support leg can be installed in seating position where i-Size cannot be installed.

Oceanian models

Seven-seater models

■ Locations for Child Restraint System Installation

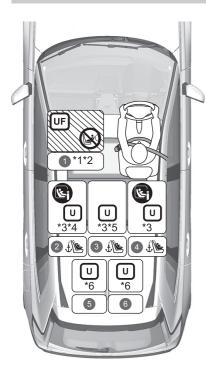

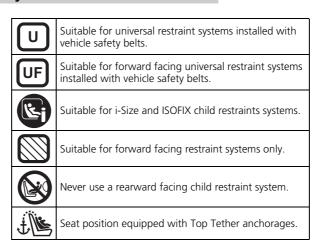

- *1:Adjust the seat slide to the most rear position.
- *2:For installing the universal belted type, adjust the seat back to the most front lock position.
- *3:When installing a child restraint system, adjust the 2nd row seat slide to the rearmost position.
- *4:If you attach a ISOFIX child restraint system to the rear left seat, the centre seat belt can not be used.
- *5:If you attach a child restraint system to the rear centre seat may make the left side seat belt unusable.
- *6:When installing a child restraint system, adjust the 2nd row seat slide to the front most position and adjust the seat back to the most front lock position. If it still interferes with the second row seats, fold down the seat back.
- If the child restraint system interferes with the head restraint and cannot be installed stably, raise the head restraint to the highest position. If this interference is unavoidable even after raising, remove the head restraint. Please note that the removed head restraint should be stored in the luggage compartment so that it will not fly during sudden braking or collision.
 - Also, if you remove the child restraint system, attach the head restraint to the original seat and make sure it is locked.
- However, when using the booster cushion only, do not remove the head restraint.
- If you cannot fix the booster child restraint system stably, adjust the seat-back angle to be parallel with the back still keeping it forward of the seat belt shoulder anchorage.
- Child restraint systems with support leg can be installed in seating position where i-Size cannot be installed. However, the 3rd row seat is excluded.


Detail information for CRS installation


| | Seating position and Seat position number | | | | | | | |
|---|---|------------|-------------------|-----------|----------|-------|-----------|-------|
| | Size groups Weight Stature | | 0 | 2 | 3 | 4 | 6 | 6 |
| | | | Front | 2nd row*3 | | | 3rd row*6 | |
| | | | passenger*1 | Left*4 | Centre*5 | Right | Left | Right |
| | Group 0 | Up to 10kg | No | Yes | Ves | Yes | Vas | Yes |
| Seating position suitable | Group 0+ | Up to 13kg | INO | res | Yes | res | Yes | res |
| for universal belted (yes/ | Group I | 9-18kg | | | | | | |
| no) | Group II | 15-25kg | Yes ^{*2} | Yes | Yes | Yes | Yes | Yes |
| | Group III | 22-36kg | | | | | | |
| i-Size seating position (yes/no) | ≤ 150cm | | No | Yes | No | Yes | No | No |
| Seating position suitable for recommended genuine CRS | Refer to genuine CRS list | | No | No | No | No | No | No |
| Seating position suitable for lateral fixture (L1/L2) | _ | | No | No | No | No | No | No |
| Largest suitable | Group 0 | Up to 10kg | | | | | | |
| rearward facing fixture | Group 0+ | Up to 13kg | No | R3 | No | R3 | No | No |
| (R1/R2X/R2/R3) | Group I | 9-18kg | | | | | | |
| Largest suitable forward facing fixture (F2X/F2/F3) | Group I | 9-18kg | No | F3 | No | F3 | No | No |
| Largest suitable booster fixture (B2/B3) | ≤ 150cm | | В3 | В3 | No | В3 | В3 | В3 |

- *1:Adjust the seat slide to the most rear position. Forward facing only.
- *2:For installing the universal belted type, adjust the seat back to the most front lock position.
- *3:When installing a child restraint system, adjust the 2nd row seat slide to the rearmost position.
- *4:If you attach a ISOFIX child restraint system to the rear left seat, the centre seat belt can not be used.
- *5:If you attach a child restraint system to the rear centre seat may make the left side seat belt unusable.
- *6:When installing a child restraint system, adjust the 2nd row seat slide to the front most position and adjust the seat back to the most front lock position. If it still interferes with the second row seats, fold down the seat back.
- If the child restraint system interferes with the head restraint and cannot be installed stably, raise the head restraint to the highest position. If this interference is unavoidable even after raising, remove the head restraint. Please note that the removed head restraint should be stored in the luggage compartment so that it will not fly during sudden braking or collision.
 - Also, if you remove the child restraint system, attach the head restraint to the original seat and make sure it is locked.
 - However, when using the booster cushion only, do not remove the head restraint.
- If you cannot fix the booster child restraint system stably, adjust the seat-back angle to be parallel with the back still keeping it forward of the seat belt shoulder anchorage.
- Child restraint systems with support leg can be installed in seating position where i-Size cannot be installed. However, the 3rd row seat is excluded.

African models with Right-hand Drive Type

■ Locations for Child Restraint System Installation

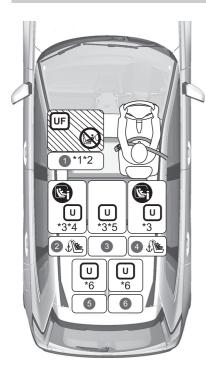

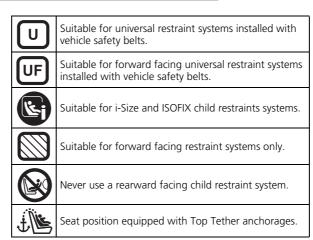

- *1:Adjust the seat slide to the most rear position.
- *2:For installing the universal belted type, adjust the seat back to the most front lock position.
- *3:When installing a child restraint system, adjust the 2nd row seat slide to the rearmost position.
- *4:If you attach a ISOFIX child restraint system to the rear left seat, the centre seat belt can not be used.
- *5:If you attach a child restraint system to the rear centre seat may make the left side seat belt unusable.
- *6:When installing a child restraint system, adjust the 2nd row seat slide to the front most position and adjust the seat back to the most front lock position. If it still interferes with the second row seats, fold down the seat back.
- If the child restraint system interferes with the head restraint and cannot be installed stably, raise the head restraint to the highest position. If this interference is unavoidable even after raising, remove the head restraint. Please note that the removed head restraint should be stored in the luggage compartment so that it will not fly during sudden braking or collision.
 - Also, if you remove the child restraint system, attach the head restraint to the original seat and make sure it is locked.
 - However, when using the booster cushion only, do not remove the head restraint.
- If you cannot fix the booster child restraint system stably, adjust the seat-back angle to be parallel with the back still keeping it forward of the seat belt shoulder anchorage.
- Child restraint systems with support leg can be installed in seating position where i-Size cannot be installed. However, the 3rd row seat is excluded.

Detail information for CRS installation


| | Seating position and Seat position number | | | | | | | |
|---|---|------------|-------------------|-----------|----------|-------|-----------|-------|
| | Size groups Weight Stature | | 0 | 2 | 3 | 4 | 6 | 6 |
| | | | Front | 2nd row*3 | | | 3rd row*6 | |
| | | | passenger*1 | Left*4 | Centre*5 | Right | Left | Right |
| | Group 0 | Up to 10kg | Ne | Yes | Ves | Yes | Ves | Vas |
| Seating position suitable | Group 0+ | Up to 13kg | No | res | Yes | res | Yes | Yes |
| for universal belted (yes/ | Group I | 9-18kg | | | | | | |
| no) | Group II | 15-25kg | Yes ^{*2} | Yes | Yes | Yes | Yes | Yes |
| | Group III | 22-36kg | | | | | | |
| i-Size seating position | ≤ 150cm | | No | Yes | No | Yes | No | No |
| (yes/no) | | | | , es | | | | |
| Seating position suitable for recommended genuine CRS*7 | Refer to genuine CRS list | | Yes | Yes | Yes | Yes | Yes | Yes |
| Seating position suitable for lateral fixture (L1/L2) | | _ | No | No | No | No | No | No |
| Largest suitable | Group 0 | Up to 10kg | | | | | | |
| rearward facing fixture | Group 0+ | Up to 13kg | No | R3 | No | R3 | No | No |
| (R1/R2X/R2/R3) | Group I | 9-18kg | | | | | | |
| Largest suitable forward facing fixture (F2X/F2/F3) | Group I | 9-18kg | No | F3 | No | F3 | No | No |
| Largest suitable booster fixture (B2/B3) | ≤ 150cm | | В3 | В3 | No | В3 | В3 | В3 |

- *1:Adjust the seat slide to the most rear position. Forward facing only.
- *2:For installing the universal belted type, adjust the seat back to the most front lock position.
- *3:When installing a child restraint system, adjust the 2nd row seat slide to the rearmost position.
- *4:If you attach a ISOFIX child restraint system to the rear left seat, the centre seat belt can not be used.
- *5:If you attach a child restraint system to the rear centre seat may make the left side seat belt unusable.
- *6:When installing a child restraint system, adjust the 2nd row seat slide to the front most position and adjust the seat back to the most front lock position. If it still interferes with the second row seats, fold down the seat back.
- *7:The named Child Restraint Systems (CRS) reflect Honda's recommendations at the date of publication. You should speak to an authorised dealer for up to date details relating to our recommended CRSs. Other CRS may also be suitable please consult CRS manufacturers for recommended vehicle lists.
- If the child restraint system interferes with the head restraint and cannot be installed stably, raise the head restraint to the highest position. If this interference is unavoidable even after raising, remove the head restraint. Please note that the removed head restraint should be stored in the luggage compartment so that it will not fly during sudden braking or collision.
 - Also, if you remove the child restraint system, attach the head restraint to the original seat and make sure it is locked.
 - However, when using the booster cushion only, do not remove the head restraint.
- If you cannot fix the booster child restraint system stably, adjust the seat-back angle to be parallel with the back still keeping it forward of the seat belt shoulder anchorage.
- Child restraint systems with support leg can be installed in seating position where i-Size cannot be installed. However, the 3rd row seat is excluded.

Except African, Middle Eastern, Oceanian and Taiwanese models

Five-seater models

■ Locations for Child Restraint System Installation

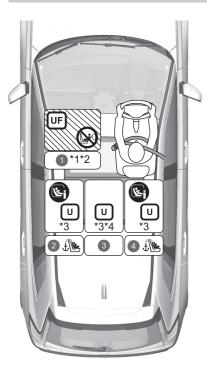

| - | Suitable for universal restraint systems installed with vehicle safety belts. |
|----------|--|
| UF | Suitable for forward facing universal restraint systems installed with vehicle safety belts. |
| | Suitable for i-Size and ISOFIX child restraints systems. |
| | Suitable for forward facing restraint systems only. |
| | Never use a rearward facing child restraint system. |
| £1115 | Seat position equipped with Top Tether anchorages. |

- *1:Adjust the seat slide to the most rear position.
- *2:For installing the universal belted type, adjust the seat back to the most front lock position.
- *3:Adjust the 2nd row seat slide to the rearmost position.
- *4:If you attach a child restraint system to the rear centre seat may make the left side seat belt unusable.
- If the child restraint system interferes with the head restraint and cannot be installed stably, raise the head restraint to the highest position. If this interference is unavoidable even after raising, remove the head restraint. Please note that the removed head restraint should be stored in the luggage compartment so that it will not fly during sudden braking or collision.
 - Also, if you remove the child restraint system, attach the head restraint to the original seat and make sure it is locked.
 - However, when using the booster cushion only, do not remove the head restraint.
- If you cannot fix the booster child restraint system stably, adjust the seat-back angle to be parallel with the back still keeping it forward of the seat belt shoulder anchorage.
- Child restraint systems with support leg can be installed in seating position where i-Size cannot be installed.

Detail information for CRS installation

| | | Seating pos | oosition nu | umber | | | |
|---|---------------------------|-------------|-------------------|-----------------------|----------|-------|--|
| | Size groups Weight | | 0 | 2 | 3 | 4 | |
| | | | Front passenger*1 | 2nd row ^{*3} | | | |
| | Sta | Stature | | Left | Centre*4 | Right | |
| | Group 0 | Up to 10kg | No | Yes | Yes | Yes | |
| Seating position suitable | Group 0+ | Up to 13kg | NO | res | | 162 | |
| for universal belted (yes/ | Group I | 9-18kg | | | Yes | Yes | |
| no) | Group II | 15-25kg | Yes ^{*2} | Yes | | | |
| | Group III | 22-36kg | | | | | |
| i-Size seating position (yes/no) | ≤ 1 | 50cm | No | Yes | No | Yes | |
| Seating position suitable for recommended genuine CRS*5 | Refer to genuine CRS list | | No | Yes | No | Yes | |
| Seating position suitable for lateral fixture (L1/L2) | | _ | No | No | No | No | |
| Largest suitable | Group 0 | Up to 10kg | | | No | | |
| rearward facing fixture | Group 0+ | Up to 13kg | No | R3 | | R3 | |
| (R1/R2X/R2/R3) | Group I | 9-18kg | | | | | |
| Largest suitable forward facing fixture (F2X/F2/F3) | Group I 9-18kg | | No | F3 | No | F3 | |
| Largest suitable booster fixture (B2/B3) | ≤ 150cm | | В3 | В3 | В3 | В3 | |

- *1:Adjust the seat slide to the most rear position. Forward facing only.
- *2: For installing the universal belted type, adjust the seat back to the most front lock position.
- *3:Adjust the 2nd row seat slide to the rearmost position.
- *4:If you attach a child restraint system to the rear centre seat may make the left side seat belt unusable.
- *5:The named Child Restraint Systems (CRS) reflect Honda's recommendations at the date of publication. You should speak to an authorised dealer for up to date details relating to our recommended CRSs. Other CRS may also be suitable please consult CRS manufacturers for recommended vehicle lists.
- If the child restraint system interferes with the head restraint and cannot be installed stably, raise the head restraint to the highest position. If this interference is unavoidable even after raising, remove the head restraint. Please note that the removed head restraint should be stored in the luggage compartment so that it will not fly during sudden braking or collision.
 - Also, if you remove the child restraint system, attach the head restraint to the original seat and make sure it is locked.

Except Malaysian models

However, when using the booster cushion only, do not remove the head restraint.


All models


- If you cannot fix the booster child restraint system stably, adjust the seat-back angle to be parallel with the back still keeping it forward of the seat belt shoulder anchorage.
- Child restraint systems with support leg can be installed in seating position where i-Size cannot be installed.

Except African, Middle Eastern, Oceanian and Taiwanese models


Seven-seater models


■ Locations for Child Restraint System Installation

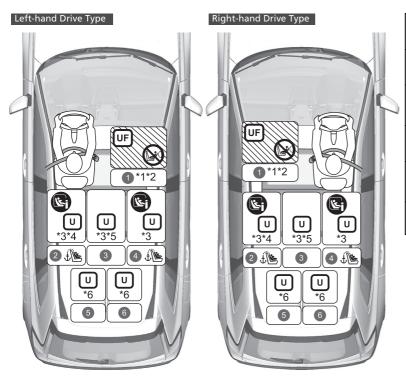


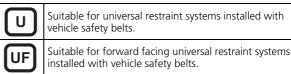



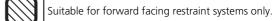

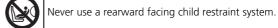

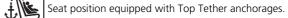

- *1:Adjust the seat slide to the most rear position.
- *2:For installing the universal belted type, adjust the seat back to the most front lock position.
- *3:When installing a child restraint system, adjust the 2nd row seat slide to the rearmost position.
- *4:If you attach a ISOFIX child restraint system to the rear left seat, the centre seat belt can not be used.
- *5:If you attach a child restraint system to the rear centre seat may make the left side seat belt unusable.
- *6:When installing a child restraint system, adjust the 2nd row seat slide to the front most position and adjust the seat back to the most front lock position. If it still interferes with the second row seats, fold down the seat back.
- If the child restraint system interferes with the head restraint and cannot be installed stably, raise the head restraint to the highest position. If this interference is unavoidable even after raising, remove the head restraint. Please note that the removed head restraint should be stored in the luggage compartment so that it will not fly during sudden braking or collision.
 - Also, if you remove the child restraint system, attach the head restraint to the original seat and make sure it is locked.
 - However, when using the booster cushion only, do not remove the head restraint.
- If you cannot fix the booster child restraint system stably, adjust the seat-back angle to be parallel with the back still keeping it forward of the seat belt shoulder anchorage.
- Child restraint systems with support leg can be installed in seating position where i-Size cannot be installed. However, the 3rd row seat is excluded.

Detail information for CRS installation

| | Seating position and Seat position number | | | | | | | |
|---|---|------------|-------------------|-----------|----------|-------|-----------|-------|
| | Size groups Weight Stature | | 0 | 2 | 3 | 4 | 6 | 6 |
| | | | Front | 2nd row*3 | | | 3rd row*6 | |
| | | | passenger*1 | Left*4 | Centre*5 | Right | Left | Right |
| | Group 0 | Up to 10kg | No | Yes | Ves | Yes | Ves | Yes |
| Seating position suitable | Group 0+ | Up to 13kg | INO | res | Yes | res | Yes | res |
| for universal belted (yes/ | Group I | 9-18kg | | | | | | |
| no) | Group II | 15-25kg | Yes ^{*2} | Yes | Yes | Yes | Yes | Yes |
| | Group III | 22-36kg | | | | | | |
| i-Size seating position (yes/no) | ≤ 150cm | | No | Yes | No | Yes | No | No |
| Seating position suitable for recommended genuine CRS*7 | Refer to genuine CRS list | | No | Yes | No | Yes | No | No |
| Seating position suitable for lateral fixture (L1/L2) | _ | | No | No | No | No | No | No |
| Largest suitable | Group 0 | Up to 10kg | | | | | | |
| rearward facing fixture | Group 0+ | Up to 13kg | No | R3 | No | R3 | No | No |
| (R1/R2X/R2/R3) | Group I | 9-18kg | | | | | | |
| Largest suitable forward facing fixture (F2X/F2/F3) | Group I | 9-18kg | No | F3 | No | F3 | No | No |
| Largest suitable booster fixture (B2/B3) | ≤ 150cm | | В3 | В3 | No | В3 | В3 | В3 |

- *1:Adjust the seat slide to the most rear position. Forward facing only.
- *2:For installing the universal belted type, adjust the seat back to the most front lock position.
- *3:When installing a child restraint system, adjust the 2nd row seat slide to the rearmost position.
- *4:If you attach a ISOFIX child restraint system to the rear left seat, the centre seat belt can not be used.
- *5:If you attach a child restraint system to the rear centre seat may make the left side seat belt unusable.
- *6:When installing a child restraint system, adjust the 2nd row seat slide to the front most position and adjust the seat back to the most front lock position. If it still interferes with the second row seats, fold down the seat back.
- *7:The named Child Restraint Systems (CRS) reflect Honda's recommendations at the date of publication. You should speak to an authorised dealer for up to date details relating to our recommended CRSs. Other CRS may also be suitable please consult CRS manufacturers for recommended vehicle lists.
- If the child restraint system interferes with the head restraint and cannot be installed stably, raise the head restraint to the highest position. If this interference is unavoidable even after raising, remove the head restraint. Please note that the removed head restraint should be stored in the luggage compartment so that it will not fly during sudden braking or collision.
 - Also, if you remove the child restraint system, attach the head restraint to the original seat and make sure it is locked.
 - However, when using the booster cushion only, do not remove the head restraint.
- If you cannot fix the booster child restraint system stably, adjust the seat-back angle to be parallel with the back still keeping it forward of the seat belt shoulder anchorage.
- Child restraint systems with support leg can be installed in seating position where i-Size cannot be installed. However, the 3rd row seat is excluded.

African models with Left-hand Drive Type and Middle Eastern models

■ Locations for Child Restraint System Installation



| <u>_</u> | Suitable for universal restraint systems installed with vehicle safety belts. |
|----------|--|
| UF | Suitable for forward facing universal restraint systems installed with vehicle safety belts. |
| | Suitable for i-Size and ISOFIX child restraints systems. |
| | Suitable for forward facing restraint systems only. |
| | Never use a rearward facing child restraint system. |
| Ť. | Seat position equipped with Top Tether anchorages. |

- *1:Adjust the seat slide to the most rear position.
- *2:For installing the universal belted type, adjust the seat back to the most front lock position.
- *3:When installing a child restraint system, adjust the 2nd row seat slide to the rearmost position.
- *4:If you attach a ISOFIX child restraint system to the rear left seat, the centre seat belt can not be used.
- *5:If you attach a child restraint system to the rear centre seat may make the left side seat belt unusable.
- *6:When installing a child restraint system, adjust the 2nd row seat slide to the front most position and adjust the seat back to the most front lock position. If it still interferes with the second row seats, fold down the seat back.
- If the child restraint system interferes with the head restraint and cannot be installed stably, raise the head restraint to the highest position. If this interference is unavoidable even after raising, remove the head restraint. Please note that the removed head restraint should be stored in the luggage compartment so that it will not fly during sudden braking or collision.
 - Also, if you remove the child restraint system, attach the head restraint to the original seat and make sure it is locked.
 - However, when using the booster cushion only, do not remove the head restraint.
- If you cannot fix the booster child restraint system stably, adjust the seat-back angle to be parallel with the back still keeping it forward of the seat belt shoulder anchorage.
- Child restraint systems with support leg can be installed in seating position where i-Size cannot be installed. However, the 3rd row seat is excluded.


Detail information for CRS installation


| | Seating position and Seat position number | | | | | | | |
|---|---|------------|-------------------|--------|-----------|-------|-----------|-------|
| | Size groups Weight | | 0 | 2 | 3 | 4 | 6 | 6 |
| | | | Front | | 2nd row*3 | | 3rd row*6 | |
| | Sta | nture | passenger*1 | Left*4 | Centre*5 | Right | Left | Right |
| | Group 0 | Up to 10kg | No | Vas | Ves | Yes | Vas | Vas |
| Seating position suitable | Group 0+ | Up to 13kg | INO | Yes | Yes | res | Yes | Yes |
| for universal belted (yes/ | Group I | 9-18kg | | | | | | Yes |
| no) | Group II | 15-25kg | Yes ^{*2} | Yes | Yes | Yes | Yes | |
| | Group III | 22-36kg | | | | | | |
| i-Size seating position (yes/no) | ≤ 150cm | | No | Yes | No | Yes | No | No |
| Seating position suitable for recommended genuine CRS | Refer to genuine CRS list | | No | No | No | No | No | No |
| Seating position suitable for lateral fixture (L1/L2) | _ | | No | No | No | No | No | No |
| Largest suitable | Group 0 | Up to 10kg | | | | | | |
| rearward facing fixture | Group 0+ | Up to 13kg | No | R3 | R3 No | R3 | No | No |
| (R1/R2X/R2/R3) | Group I | 9-18kg | | | | | | |
| Largest suitable forward facing fixture (F2X/F2/F3) | Group I | 9-18kg | No | F3 | No | F3 | No | No |
| Largest suitable booster fixture (B2/B3) | ≤ 1 | 50cm | В3 | В3 | No | В3 | В3 | В3 |

- *1:Adjust the seat slide to the most rear position. Forward facing only.
- *2:For installing the universal belted type, adjust the seat back to the most front lock position.
- *3:When installing a child restraint system, adjust the 2nd row seat slide to the rearmost position.
- *4:If you attach a ISOFIX child restraint system to the rear left seat, the centre seat belt can not be used.
- *5:If you attach a child restraint system to the rear centre seat may make the left side seat belt unusable.
- *6:When installing a child restraint system, adjust the 2nd row seat slide to the front most position and adjust the seat back to the most front lock position. If it still interferes with the second row seats, fold down the seat back.
- If the child restraint system interferes with the head restraint and cannot be installed stably, raise the head restraint to the highest position. If this interference is unavoidable even after raising, remove the head restraint. Please note that the removed head restraint should be stored in the luggage compartment so that it will not fly during sudden braking or collision.
 - Also, if you remove the child restraint system, attach the head restraint to the original seat and make sure it is locked.
- If you cannot fix the booster child restraint system stably, adjust the seat-back angle to be parallel with the back still keeping it forward of the seat belt shoulder anchorage.
- Child restraint systems with support leg can be installed in seating position where i-Size cannot be installed. However, the 3rd row seat is excluded.

Taiwanese models

■ Locations for Child Restraint System Installation

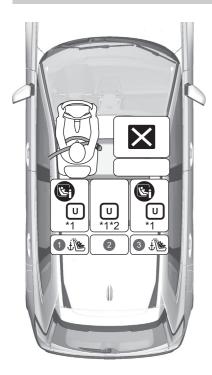

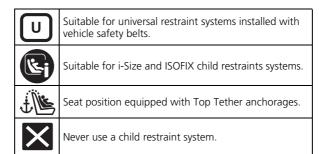

- *1:Adjust the 2nd row seat slide to the rearmost position.
- *2:If you attach a child restraint system to the rear centre seat may make the left side seat belt unusable.
- If the child restraint system interferes with the head restraint and cannot be installed stably, raise the head restraint to the highest position. If this interference is unavoidable even after raising, remove the head restraint. Please note that the removed head restraint should be stored in the luggage compartment so that it will not fly during sudden braking or collision.
 - Also, if you remove the child restraint system, attach the head restraint to the original seat and make sure it is locked.
 - However, when using the booster cushion only, do not remove the head restraint.
- If you cannot fix the booster child restraint system stably, adjust the seat-back angle to be parallel with the back still keeping it forward of the seat belt shoulder anchorage.
- Child restraint systems with support leg can be installed in seating position where i-Size cannot be installed.

Detail information for CRS installation

| | Size groups Weight Stature | | 0 | 2 | 3 | |
|---|----------------------------------|------------|-----------------------|----------|-------|--|
| | | | 2nd row ^{*1} | | | |
| | | | Left | Centre*2 | Right | |
| | Group 0 | Up to 10kg | V | Yes | Yes | |
| | Group 0+ | Up to 13kg | Yes | | | |
| Seating position suitable for universal belted (yes/no) | Group I | 9-18kg | | | Yes | |
| diliversal belieu (yesiilo) | Group II | 15-25kg | Yes | Yes | | |
| | Group III | 22-36kg | | | | |
| i-Size seating position (yes/no) | ≤ 1 | 50cm | Yes | No | Yes | |
| Seating position suitable for recommended genuine CRS*3 | Refer to genuine CRS list | | Yes | Yes | Yes | |
| Seating position suitable for lateral fixture (L1/L2) | _ | | No | No | No | |
| | Group 0 | Up to 10kg | | | | |
| Largest suitable rearward facing fixture (R1/R2X/R2/R3) | Group 0+ | Up to 13kg | R3 | No | R3 | |
| racing inteare (itimization) | Group I | 9-18kg | | | | |
| Largest suitable forward facing fixture (F2X/F2/F3) | | | F3 | No | F3 | |
| Largest suitable booster fixture (B2/B3) | ≤ 150cm | | В3 | В3 | В3 | |

- *1:Adjust the 2nd row seat slide to the rearmost position.
- *2:If you attach a child restraint system to the rear centre seat may make the left side seat belt unusable.
- *3:The named Child Restraint Systems (CRS) reflect Honda's recommendations at the date of publication. You should speak to an authorised dealer for up to date details relating to our recommended CRSs. Other CRS may also be suitable please consult CRS manufacturers for recommended vehicle lists.
- If the child restraint system interferes with the head restraint and cannot be
 installed stably, raise the head restraint to the highest position. If this interference
 is unavoidable even after raising, remove the head restraint. Please note that the
 removed head restraint should be stored in the luggage compartment so that it
 will not fly during sudden braking or collision.
 Also, if you remove the child restraint system, attach the head restraint to the
 original seat and make sure it is locked.
 - However, when using the booster cushion only, do not remove the head restraint.
- If you cannot fix the booster child restraint system stably, adjust the seat-back angle to be parallel with the back still keeping it forward of the seat belt shoulder anchorage.
- Child restraint systems with support leg can be installed in seating position where i-Size cannot be installed.

■ Genuine CRS List

Except African, Middle Eastern, Oceanian and Taiwanese models

UN R129

| Range of application | Child Restraint System | Category | |
|----------------------------------|--------------------------|--|--|
| Under 100cm | Honda Baby & Kids i-Size | i-Size Universal ISOFIX (Rearward facing) | |
| Over 71cm and 15 months to 100cm | Honda Baby & Kids i-Size | i-Size Universal ISOFIX | |

Taiwanese models

CNS11497

| Mass Group | Child Restraint System | Category |
|---------------------------------|------------------------|--|
| Group 0 up to 10kg | - | - |
| Group 0+ up to 13 kg | Joie Arc360 (C1416) | Semi-universal ISOFIX (Rearward facing) |
| Group I 9 kg to 18kg | Joie Arc360 (C1416) | Semi-universal ISOFIX |
| Group II, III 15 kg to 36 kg | Honda KIDFIX*1 | Universal Semi-universal |

^{*1:}Move the shoulder anchorage to its highest position when the child restraint system is placed on the rear outboard seating position.

African models

UN R44

| Mass Group | Child Restraint System | Category |
|---------------------------------|------------------------|-----------------------------|
| Group 0 up to 10kg | - | - |
| | | |
| Group 0+ up to 13 kg | STANDARD | Universal (Rearward facing) |
| Group I 9 kg to 18kg | STANDARD | Universal (Forward facing) |
| Group II, III 15 kg to 36 kg | - | - |

UN R129

| Range of application | Child Restraint System | Category | |
|----------------------------------|-----------------------------|--|--|
| Under 100cm | I Handa Dahu V. Kida i Ciza | i-Size Universal ISOFIX (Rearward facing) | |
| Over 71cm and 15 months to 100cm | Honda Baby & Kids i-Size | i-Size Universal ISOFIX | |

■ Installing a Lower Anchorage-Compatible Child Restraint System

A lower anchorage-compatible child restraint system can be installed in either of the two outer second row seats. A child restraint system is attached to the lower anchorages with either the rigid or flexible type of connectors (see illustrations).



- **1.** Locate the lower anchorages under the cover.
- 2. Move the seat to the most rear position.

Marks




3. Remove the anchorage covers with the marks* to expose the lower anchorages.

Installing a Lower Anchorage-Compatible Child Restraint System


AWARNING

Never attach two child restraint systems to the same anchorage. In a collision, one anchorage may not be strong enough to hold two child restraint system attachments and may break, causing serious injury or death.

Some child restraint systems come with optional guide-cups, which avoid possible damage to the seat surface. Follow the manufacturer's instructions when using the guide-cups, and attach them to the lower anchorages as shown in the image.

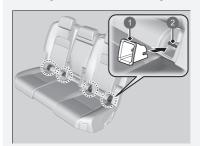

- Guide-cup
- 2 Lower Anchorage

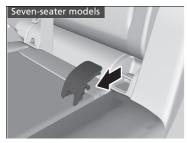




- 1 Lower Anchorages
- Rigid Type


- **4.** Place the child restraint system on the vehicle seat, then attach the child restraint system to the lower anchorages according to the instructions that came with the child restraint system.
 - ➤ When installing the child restraint system, make sure that the lower anchorages are not obstructed by the seat belt or any other object.



- 1 Lower Anchorages
- Plexible Type

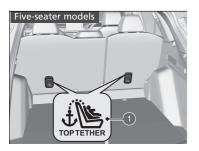

Top Tether Anchorage Symbol

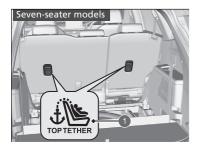

1 Top Tether Anchorage Symbol


≥ Installing a Lower Anchorage-Compatible Child Restraint System

WARNING: Never use a hook that does not come with a Top Tether Anchorage Symbol when securing an installed child restraint system.


For your child's safety, when using a child restraint system installed using the lower anchorage system, make sure that the child restraint system is properly secured to the vehicle.

A child restraint system that is not properly secured will not adequately protect a child in a crash and may cause injury to the child or other vehicle occupants.

The flexible type may not be available in your country.

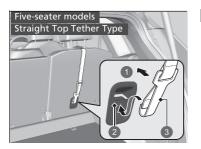


- 1 Ahead of the Vehicle
- 2 Anchorage
- 3 Tether Strap Hook

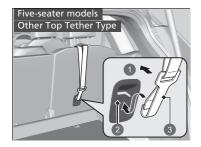


- Ahead of the Vehicle
- 2 Anchorage
- 3 Tether Strap Hook

Child restraint system with tether strap

- **5.** Raise the head restraint to its highest position.
 - ► Retract the luggage area cover*.
 - **Luggage Area Cover*** P. 319
- **6.** Route the tether strap through the head restraint legs.
 - Make sure the strap is not twisted.
- **7.** Secure the tether strap hook to the anchorage.
- **8.** Tighten the tether strap as instructed by the child restraint system manufacturer.
- **9.** Make sure the child restraint system is firmly secured by rocking it forward and back, and side to side; little movement should be felt.
- **10.** Make sure any unused seat belt that a child can reach is buckled.

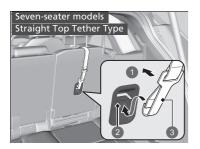

- Ahead of the Vehicle
- 2 Anchorage
- 3 Tether Strap Hook

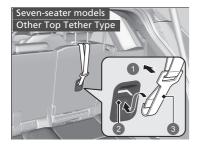

- 1 Ahead of the Vehicle
- 2 Anchorage
- 3 Tether Strap Hook



Support Leg

Child restraint system with support leg

- **5.** Extend the support leg until it touches the floor as instructed by the child restraint system manufacturer.
 - ➤ Confirm that the section of the floor on which the support leg rests is level. If the section is not level, the support leg will not provide adequate support. If this is the case, move the seat forward or back so that the support leg is resting on a level section.
 - ► Make sure that the support leg is not resting on the slide rail or cover.
 - ▶ Make sure that there is no contact between the child restraint system and the seat in front of it.

Installing a Child Restraint System with a Lap/Shoulder Seat Belt



When installing the child restraint system on the second row seat

1. Move the second row seat to the most rear position.

When installing the child restraint system on the third row seat*


1. Move the second row seat to the most front position.

Common procedure

- **2.** Place the child restraint system on the vehicle seat.
- **3.** Route the seat belt through the child restraint system according to the child restraint system manufacturer's instructions, and insert the latch plate into the buckle.
 - Insert the latch plate fully until it clicks.

≥ Installing a Child Restraint System with a Lap/Shoulder Seat Belt


A child restraint system that is not properly secured will not adequately protect a child in a crash and may cause injury to the child or other vehicle occupants.

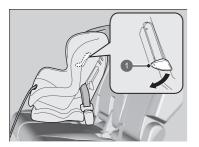

1 Tab



- Push down the tab. Route the shoulder part of the belt into the slit at the side of the restraint.
- **5.** Grab the shoulder part of the belt near the buckle, and pull up to remove any slack from the lap part of the belt.
 - When doing this, place your weight on the child restraint system and push it into the vehicle seat.
- **6.** Position the belt properly and push up the tab. Make sure the belt is not twisted.
 - ➤ When pushing up the tab, pull up the upper shoulder part of the belt to remove any slack from the belt.
- Make sure the child restraint system is firmly secured by rocking it forward and back, and side to side; little movement should be felt.
- **8.** Make sure any unused seat belt that a child can reach is buckled.

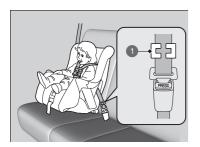


Locking Clip

If your child restraint system does not come with a mechanism that secures the belt, install a locking clip on the seat belt.

After going through the step 1 - 3, pull up the shoulder part of the belt and make sure there is no slack in the lap portion.


- **4.** Tightly grasp the belt near the latch plate. Pinch both parts of the belt together so they do not slip through the latch plate. Unbuckle the seat belt.
- **5.** Install the locking clip as shown in the image. Position the clip as close as possible to the latch plate.
- **6.** Insert the latch plate into the buckle. Go to step 7 and 8.

Adding Security with a Tether

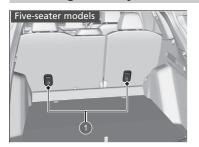

A tether anchorage point is provided behind each second row outer seating position and in the ceiling for the second row centre*. If you have a child restraint system that comes with a tether but can be installed with a seat belt, the tether may be used for additional security.

1 Tether Anchorage Points

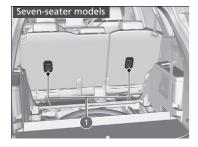

1 Tether Anchorage Points


■ Adding Security with a Tether

WARNING: Child restraint anchorages are designed to withstand only those loads imposed by correctly fitted child restraints. Under no circumstances are they to be used for adult seat belts, harnesses or for attaching other items or equipment to the vehicle.

Always use a tether for front-facing child restraint system whether using the seat belt or lower anchorages.




1 Tether Anchorage Points

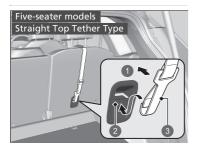

- Ahead of the Vehicle
- 2 Anchorage
- 3 Tether Strap Hook


■ Using an outer anchorage

- **1.** Raise the head restraint to its highest position.
 - ► Retract the luggage area cover*.
 - **▶ Luggage Area Cover*** P. 319
- **2.** Route the tether strap through the head restraint legs.
 - Make sure the strap is not twisted.
- **3.** Secure the tether strap hook to the anchorage.

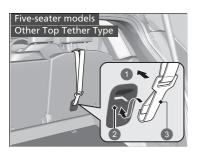


4. Tighten the tether strap as instructed by the child restraint system manufacturer.


- 1 Ahead of the Vehicle
- 2 Anchorage
- 3 Tether Strap Hook

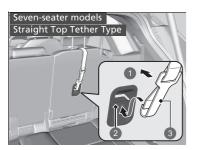


- 1 Ahead of the Vehicle
- 2 Anchorage
- 3 Tether Strap Hook

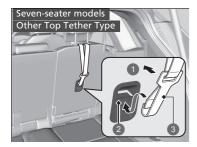

- 1 Ahead of the Vehicle
- 2 Anchorage
- 3 Tether Strap Hook

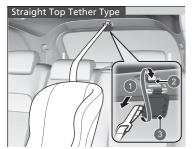

- 1 Ahead of the Vehicle
- 2 Anchorage
- 3 Anchorage Cover

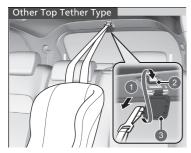

- 1 Ahead of the Vehicle
- 2 Anchorage
- 3 Anchorage Cover

■ Using the centre anchorage*

- **1.** Lower the head restraint to its lowest position.
- **2.** Open the anchorage cover.
- **3.** Route the tether strap over the head restraint.
 - Make sure the strap is not twisted.
- **4.** Secure the tether strap hook to the anchorage.
- **5.** Tighten the tether strap as instructed by the child restraint system manufacturer.

Safety of Larger Children

Protecting Larger Children

The following pages give instructions on how to check proper seat belt fit, what kind of booster seat to use if one is needed, and important precautions for a child who must sit in front.

■ Checking Seat Belt Fit

When a child is too big for a child restraint system, secure the child in a rear seat using the lap/shoulder seat belt. Have the child sit upright and all the way back, then answer the following questions.



■ Checklist

- Do the child's knees bend comfortably over the edge of the seat?
- Does the shoulder belt cross between the child's neck and arm?
- Is the lap part of the seat belt as low as possible, touching the child's thighs?
- Will the child be able to stay seated like this for the whole trip?

If you answer yes to all these questions, the child is ready to wear the lap/shoulder seat belt correctly. If you answer no to any question, the child needs to ride on a booster seat until the seat belt fits properly without a booster seat.

Safety of Larger Children

AWARNING

Allowing a child aged 12 or under to sit in front can result in injury or death if the passenger's front airbag inflates.

If a larger child must ride in front, move the vehicle seat as far to the rear as possible, have the child sit up properly and wear the seat belt properly, using a booster seat if needed.

Booster Seats



If a lap/shoulder seat belt cannot be used properly, position the child in a booster seat in the rear seat. For the child's safety, check that the child meets the booster seat manufacturer's recommendations.



1 Guide

A backrest is available for a specific booster seat. Install the backrest to the booster seat and adjust it to the vehicle seat according to the booster seat manufacturer's instructions. Make sure the seat belt is properly routed through the guide at the shoulder of the backrest and the belt does not touch and cross the child's neck.

≫Booster Seats

When installing a booster seat, make sure to read the instructions that came with it, and install the seat accordingly.

There are high- and low-type booster seats. Choose a booster seat that allows the child to wear the seat belt correctly.

We recommend a booster seat with a backrest as it is easier to adjust the shoulder belt.

Protecting Larger Children - Final Checks

Your vehicle has a rear seat where children can be properly restrained. If you ever have to carry a group of children, and a child must ride in front:

- Make sure you read and fully understand the instructions and safety information in this manual.
- Move the front passenger seat as far back as possible.
- Have the child sit upright and well back in the seat.
- Check that the seat belt is properly positioned so that the child is secure in the seat.

■ Monitoring child passengers

We strongly recommend that you keep an eye on child passengers. Even older, more mature children sometimes need to be reminded to fasten their seat belts and sit up properly.

Exhaust Gas Hazard

Carbon Monoxide Gas

The engine exhaust from this vehicle contains carbon monoxide, a colourless, odourless, and highly toxic gas. As long as you properly maintain your vehicle, carbon monoxide gas will not get into the interior.

■ Have the exhaust system inspected for leaks whenever

- The exhaust system is making an unusual noise.
- The exhaust system may have been damaged.
- The vehicle is raised for an oil change.

When you operate a vehicle with the tailgate open, airflow can pull exhaust gas into the interior and create a hazardous condition. If you must drive with the tailgate open, open all the windows and set the climate control system as shown below.

- **1.** Select the fresh air mode.
- 2. Select the mode.
- 3. Set the fan speed to high.
- **4.** Set the temperature control to a comfortable setting.

Adjust the climate control system in the same manner if you sit in your parked vehicle with the engine running.

AWARNING

Carbon monoxide gas is toxic.

Breathing it can cause unconsciousness and even kill you.

Avoid any enclosed areas or activities that expose you to carbon monoxide.

An enclosed area such as a garage can quickly fill up with carbon monoxide gas.


Do not run the engine with the garage door closed. Even when the garage door is open, drive out of the garage immediately after starting the engine.

Safety Labels

Label Locations

These labels are in the locations shown. They warn you of potential hazards that can cause serious injury or death. Read these labels carefully.

If a label comes off or becomes hard to read, contact a dealer for a replacement.

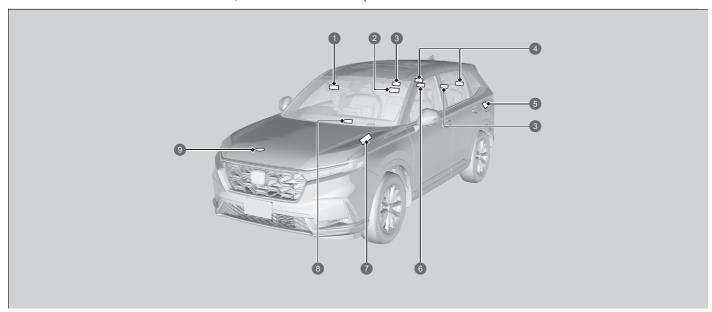

- Protecting Child Passenger (Left-hand drive type) P. 80
- 3 Second Row Outer Head Restraint* ▶ P. 303
- 4 Third Row Head Restraint* ≥ P. 303
- 5 Fuel
- * Not available on all models

- 6 Second Row Centre Head Restraint ≥ P. 303
- Battery*
- 8 Wireless Charger* → P. 323

Instrument Panel

This chapter describes the buttons, indicators, and gauges that are used while driving.

| Indicators 140 |
|--|
| Gauges and Displays |
| Gauges 164 |
| Driver Information Interface (A-type |
| Meter)169 |
| Driver Information Interface Left Side Are |
| (B-type Meter)193 |
| Driver Information Interface Right Side |
| Area (B-type Meter) 196 |
| Head-Up Display* 213 |

139

* Not available on all models

Indicators come on/blink depending on the condition of the vehicle. Messages may display on the Driver Information Interface at the same time. Please take the appropriate action outlined in the message, such as contacting a dealer.

African models with Right-hand Drive Type

Display messages by setting **Warning message** to ON.

You can also change the message language.

■ Customized Features P. 458

| (1) *1 | Parking Brake and Brake System Indicator (Red) | → P. 142 |
|-------------------|--|----------|
| (1) *1 | Parking Brake and Brake System Indicator (Amber) | → P. 144 |
| BRAKE *1 | Automatic Brake Hold System Indicator | → P. 144 |
| (A) *1 | Automatic Brake Hold Indicator | → P. 144 |
| 1 €5) *1 | Malfunction Indicator Lamp | → P. 145 |
| - + *1 | Charging System Indicator | → P. 145 |
| D | Shift Position Indicator | → P. 145 |
| ^M 2 | M (7-speed manual shift mode) Indicator/ Shift Indicator* | → P. 145 |

| | Transmission System Indicator | → P. 145 |
|---------------|--|----------|
| * | Seat Belt Reminder Indicator | → P. 146 |
| | Low Fuel Indicator (Amber) | → P. 146 |
| ≈ € *1 | Low Temperature Indicator* | → P. 147 |
| (ABS) *1 | Anti-lock Brake System (ABS) Indicator | → P. 147 |
| *1 | Supplemental Restraint System Indicator | → P. 147 |
| ⊕! *1 | Electric Power Steering (EPS) System Indicator | → P. 147 |
| 3 *1 | Vehicle Stability Assist (VSA) System Indicator | → P. 148 |
| | | |

| ÖFF | Vehicle Stability Assist (VSA) OFF Indicator | → P. 148 |
|---------------|--|----------|
| Taiwane | ese models | |
| (!) *1 | Low Tyre Pressure/TPMS Indicator | → P. 149 |
| Except T | aiwanese models | |
| <u>(!)</u> "1 | Low Tyre Pressure/ Deflation Warning System Indicator* | → P. 150 |
| + + | Turn Signal and Hazard Warning Indicators | → P. 151 |
| =00€ | Lights On Indicator | → P. 151 |
| | High Beam Indicator | → P. 151 |
| ■ A*1 | Auto High-Beam Indicator | → P. 151 |

^{*1:} When you set the power mode to ON, these indicators come on to indicate that system checks are being performed. They go off a few seconds later or after the engine has started. If an indicator does not come on or turn off, there may be a malfunction in the corresponding system. To resolve the issue, follow the instructions in the owner's manual.

| \$ 0 | Front Fog Light Indicator* | → P. 151 |
|---------------|---|----------|
| () ‡ | Rear Fog Light Indicator* | → P. 151 |
| * | ECON Mode Indicator | → P. 153 |
| <i>₽</i> *1 | Hill Descent Control System Indicator (White/Green) | → P. 153 |
| i | System Message Indicator | → P. 154 |
| 120*1 km/h | Speed Alarm Indicator* | → P. 154 |
| LIM | Adjustable Speed Limiter Indicator (White/Green)* | → P. 157 |
| PLIM | Intelligent Speed Limiter Indicator (White/Green)* | → P. 157 |
| Ā | Adaptive Cruise Control (ACC) with Low Speed Follow Interval Indicator* | → P. 158 |
| 0 | Immobilizer System Indicator | → P. 152 |
| 0 | Security System Alarm Indicator | → P. 153 |

| (A) OFF | Auto Idle Stop OFF Indicator* | → P. 155 |
|--------------|---|----------|
| (X) | Auto Idle Stop Suspend Indicator* | → P. 156 |
| (A) *1 | Auto Idle Stop System Indicator (Amber)* | → P. 155 |
| (A) | Auto Idle Stop Indicator (Green)* | → P. 155 |
| *1 | Adaptive Cruise Control (ACC) with Low Speed Follow Indicator (Amber) | → P. 157 |
| 7 | Adaptive Cruise Control (ACC) with Low Speed Follow Indicator (White/ Green) | → P. 157 |
| 1 1 | Lane Keeping Assist System (LKAS) Indicator (Amber) | → P. 158 |
| (<u>(</u>) | Lane Keeping Assist System (LKAS) Indicator (White/Green) | → P. 158 |

| *1 | Collision Mitigation Braking System (CMBS) Indicator (Amber) | > | Р. | 158 |
|------------|---|---------------|----|-----|
| 3 € | Collision Mitigation Braking System (CMBS) Indicator (Grey) | → | P. | 158 |
| *1 | Road Departure Mitigation Indicator (Amber) | \rightarrow | Р. | 159 |
| S | Road Departure Mitigation System Steering Assist Auto OFF Indicator | \rightarrow | P. | 159 |
| | Road Departure Mitigation Indicator (Grey) | \rightarrow | P. | 159 |
| *1 | Safety Support Indicator (Amber) | \rightarrow | Р. | 160 |
| | Safety Support Indicator (Green/Grey) | → | Р. | 163 |

^{*1:} When you set the power mode to ON, these indicators come on to indicate that system checks are being performed. They go off a few seconds later or after the engine has started. If an indicator does not come on or turn off, there may be a malfunction in the corresponding system. To resolve the issue, follow the instructions in the owner's manual.

* Not available on all models

| Indicator | Name | On/Blinking | Explanation |
|-----------|--|---|--|
| (Red) | Parking Brake and Brake System Indicator (Red) | Comes on when the parking brake is applied, and goes off when it is released. | The beeper sounds and the indicator comes on if you drive with the parking brake applied. Comes on for about 30 seconds when you apply the electric parking brake while the power mode is in ACCESSORY or VEHICLE OFF, then goes off. Stays on for about 30 seconds when you set the power mode to VEHICLE OFF while the electric parking brake is applied, then goes off. |
| | | Comes on when the brake fluid level is low. | Comes on while driving - Make sure the parking brake is released. Stop in a safe place and check the brake fluid level. What to do when the indicator comes on while driving P. 833 |

| Indicator | Name | On/Blinking | Explanation |
|-----------|--|---|--|
| (Ped) | Parking Brake and Brake System Indicator (Red) | Comes on if there is a problem with the brake system. | Comes on along with the Parking Brake and Brake System Indicator (amber) - Immediately stop in a safe place. Contact a dealer for repair. The brake pedal becomes harder to operate. Depress the pedal further than you normally do. ▶ If the Brake System Indicator (Red) Comes On or Blinks at the Same Time When the Brake System Indicator (Amber) Comes On P. 834 Comes on along with the ABS indicator - Have your vehicle checked by a dealer. ▶ If the Brake System Indicator (Red) Comes On or Blinks P. 833 Blinks and the Parking Brake and Brake System Indicator (amber) comes on at the same time - There is a problem with the electric parking brake system. The parking brake may not be set. Avoid using the parking brake and have your vehicle checked by a dealer immediately. ▶ If the Brake System Indicator (Red) Comes On or Blinks at the Same Time When the Brake System Indicator (Amber) Comes On P. 834 |

| Indicator | Name | On/Blinking | Explanation |
|---------------|--|---|---|
| | Parking Brake and Brake System Indicator (Amber) | • Comes on if there is a problem with a system related to braking other than the conventional brake system. | • Comes on while driving - Avoid high speeds and sudden braking. Take the vehicle to a dealer immediately. |
| | | Comes on if there is a problem with the electric parking brake system and/or the automatic brake hold system. | • Stays on constantly - Avoid using the parking brake and have your vehicle checked by a dealer immediately. |
| (Amber) | | Comes on if there is a problem with the radar sensor. Indicator may come on temporarily when the maximum permissible weight is exceeded. | Make sure the total load is within the maximum permissible weight. Load Limit P. 517 Stays on constantly - Have your vehicle checked by a dealer. |
| | | • Comes on if the brake system is deactivated temporarily after the battery has been disconnected, then reconnected. | • Drive a short distance at more than 20 km/h. The indicator should go off. If it does not, have your vehicle checked by a dealer. |
| BRAKE HOLD | Automatic Brake Hold System Indicator | Comes on when the automatic brake hold system is on. | ▶ Automatic Brake Hold P. 690 |
| (A) | Automatic Brake Hold Indicator | • Comes on when the automatic brake hold is activated. | ▶ Automatic Brake Hold P. 690 |

| Indicator | Name | On/Blinking | Explanation |
|----------------|---|--|---|
| H_J | Malfunction Indicator Lamp | Comes on if there is a problem with the emissions control systems. Blinks when a misfire in the engine's cylinders is detected. | If the Malfunction Indicator Lamp Comes On or Blinks P. 832 |
| == | Charging System Indicator | Comes on when there is a problem with the charging system. | Stop in a safe place and contact a dealer immediately. ➡ Checking the Battery P. 773 ➡ If the Charging System Indicator Comes On P. 832 |
| D | Shift Position Indicator | Indicates the current shift position. | ▶ Shifting P. 537, 539 |
| ^M 2 | M (7-speed manual shift mode) Indicator/ Shift Indicator* | Comes on when the 7-speed manual shift mode is applied. | ₽ 7-Speed Manual Shift Mode P. 542 |
| | Transmission System Indicator | Blinks if the transmission system has a problem. | Have your vehicle checked by a dealer immediately. |

* Not available on all models

| Indicator | Name | On/Blinking | Explanation |
|---------------------------|------------------------------------|---|---|
| | Seat Belt Reminder Indicator | Comes on if you are not wearing a seat belt when you set the power mode to ON. If the front passenger is not wearing a seat belt, the indicator comes on a few seconds later. Comes on for a while when the rear seat belt is unfastened while the power mode in ON. Blinks while driving if you and/or any passenger has not fastened a seat belt. The beeper sounds and the indicator blinks at regular intervals. | The beeper stops and the indicator goes off when you and the passengers fasten their seat belts. Stays on after you and/or the passengers have fastened the seat belt(s) - A detection error may have occurred in the sensor. Have your vehicle checked by a dealer. ▶ Seat Belt Reminder P. 50 |
| Low Fuel Indicato (Amber) | Low Fuel Indicator (Amber) | Comes on when the fuel reserve is running low (approximately 8.0 Liter left). Thai models Comes on when the fuel reserve is running low (approximately 10.9 Liter left). | Refuel your vehicle as soon as possible. |
| | | Blinks if there is a problem with the fuel gauge. | Have your vehicle checked by a dealer. |

| Indicator | Name | On/Blinking | Explanation |
|-----------|---|--|---|
| -E | Low Temperature Indicator* | Comes on when the engine coolant temperature is low. | • If the indicator stays on after the engine has reached normal operating temperature, there may be a problem with the temperature sensors. Have your vehicle inspected by a dealer. |
| (ABS) | Anti-lock Brake System (ABS) Indicator | Comes on if there is a problem with the ABS. | Stays on constantly - Have your vehicle checked by a dealer. With this indicator on, your vehicle still has normal braking ability but no anti-lock function. Anti-lock Brake System (ABS) P. 693 |
| | Supplemental Restraint System Indicator | Comes on if a problem with any of the following is detected: Supplemental Restraint System Side airbag system Side curtain airbag system Seat belt tensioner | Stays on constantly - Have your vehicle checked by a dealer. |
| ⊕! | Electric Power Steering (EPS) System Indicator | Comes on if there is a problem with the EPS system or Driver Attention Monitor System. | Stays on constantly - Have your vehicle checked by a dealer. Do not drive displays on the driver information interface - Immediately stop in a safe place and contact a dealer. If the Electric Power Steering (EPS) System Indicator Comes On P. 835 |

* Not available on all models

| Indicator | Name | On/Blinking | Explanation |
|------------|---|--|---|
| | Vehicle Stability Assist (VSA) System Indicator | • Blinks when VSA, or trailer stability assist* is active. | _ |
| | | Comes on if there is a problem with the VSA system, brake assist system, hill start assist system, starting assist brake function*, agile handling assist, or trailer stability assist*. | Stays on constantly - Have your vehicle checked by a dealer. Vehicle Stability Assist (VSA) System P. 569 Hill start assist system P. 533 Brake Assist System P. 694 Starting Assist Brake Function P. 551 Agile Handling Assist P. 571 Trailer Stability Assist * P. 523 Models with trailer stability assist When Trailer stability assist system problem is displayed on the driver information interface, the VSA does not activate. |
| | | Comes on if the VSA system is deactivated temporarily after the battery has been disconnected, then reconnected. | • Drive a short distance at more than 20 km/h. The indicator should go off. If it does not, have your vehicle checked by a dealer. |
| OFF | Vehicle Stability Assist (VSA) OFF Indicator | Comes on when you partially disable VSA. | ► VSA On and Off P. 570 |

| Indicator | Name | On/Blinking | Explanation |
|-----------|--|---|--|
| (!) | Taiwanese models Low Tyre Pressure/ TPMS Indicator | May come on briefly if the power mode is set to ON and the vehicle is not moved within 45 seconds, to indicate the calibration process is not yet complete. Comes on and stays on when: One or more tyres' pressures are determined to be significantly low. The system has not been calibrated. | Comes on while driving - Stop in a safe place, check tyre pressures, and inflate the tyre(s) if necessary. Stays on after the tyres are inflated to the recommended pressures - The system needs to be calibrated. ▶ TPMS Calibration P. 574 |
| | Tiws maleates | • Blinks for about one minute, and then stays on if there is a problem with the TPMS. | • Blinks and remains on - Have your vehicle checked by a dealer. |
| | | Comes on if the TPMS is deactivated temporarily after the battery has been disconnected, then reconnected. | Drive a short distance at more than 20 km/h. The indicator should go off. If it does not, have your vehicle checked by a dealer. |

| Indicator | Name | On/Blinking | Explanation |
|-----------|--|---|---|
| | Except Taiwanese models | May come on briefly if the power mode is set to ON and the vehicle is not moved within 45 seconds, to indicate the calibration process is not yet complete. Comes on and stays on when: One or more tyres' pressures are determined to be significantly low. The system has not been calibrated. | Comes on while driving - Stop in a safe place, check tyre pressures, and inflate the tyre(s) if necessary. Stays on after the tyres are inflated to the recommended pressures - The system needs to be calibrated. ▶ Deflation Warning System* P. 578 |
| | Low Tyre Pressure/ Deflation Warning System Indicator* | Blinks for about one minute, and then stays on if there is a problem with the deflation warning system, or when a compact spare tyre* is temporarily installed. | • Blinks and remains on - Have your vehicle checked by a dealer. If the vehicle is fitted with a compact spare tyre*, get your regular tyre repaired or replaced and put back on your vehicle as soon as you can. |
| | | • Comes on if the deflation warning system is deactivated temporarily after the battery has been disconnected, then reconnected. | Drive a short distance at more than 20 km/h. The indicator should go off. If it does not, have your vehicle checked by a dealer. |

| Indicator | Name | On/Blinking | Explanation |
|-------------------|-----------------------------------|--|---|
| 4 | Turn Signal and Hazard Warning | Blinks when you operate the turn signal lever. Blinks along with all turn signals when you press the hazard warning button. | Does not blink or blinks rapidly - Have your vehicle checked by a dealer. |
| | Indicators | Blinks along with all turn signals when you depress the brake pedal while the high speed driving. | ▶ Emergency Stop Signal P. 695 |
| ₹0 0 5 | Lights On Indicator | • Comes on when the position, tail, and other external lights are on. | ➡ Lights P. 262 |
| | High Beam Indicator | • Comes on when the high beam headlights are on. | _ |
| ≣ (A) | Auto High-Beam Indicator | • Comes on when all the operating conditions of the auto high-beam are met. | ■ Auto High-Beam P. 271 |
| Đ | Front Fog Light Indicator* | • Comes on when the front fog lights are on. | ₽ Fog Lights* P. 266 |
| () ‡ | Rear Fog Light Indicator* | Comes on when the rear fog light is on. | ₽ Fog Lights* P. 266 |

* Not available on all models

| Indicator Name | On/Blinking | Explanation |
|--|--|---|
| Models with A-type meter Indicator Models with B-type meter Indicator Immobilizer System Indicator | Blinks if the immobilizer system cannot recognise the key information. | Blinks - You cannot start the engine. Set the power mode to VEHICLE OFF, then select the ON mode again. Repeatedly blinks - The system may be malfunctioning. Have your vehicle checked by a dealer. Do not attempt to alter this system or add other devices to it. Electrical problems can occur. |

| Indicator | Name | On/Blinking | Explanation |
|-----------|---|---|---------------------------------------|
| | Security System Alarm Indicator | Blinks when the security system alarm has been set. | E Security System Alarm P. 250 |
| • | ECON Mode Indicator | Comes on when the ECON mode is on. | ■ ECON Mode P. 544 |
| | Hill Descent Control System Indicator (White/ Green) | Lights up in white when the Hill Descent Control System is on and ready to use. Lights up in green when the Hill Descent Control System is in operation. | Hill Descent Control System P. 552 |

| Indicator | Name | On/Blinking | Explanation |
|-----------------|-----------------------------|---|--|
| 120 km/h | Speed Alarm Indicator* | Blinks when your vehicle speed exceeds 120 km/h. A reminder tone sounds. | This indicator keeps blinking while your vehicle speed is faster than 120 km/h. |
| i | System Message Indicator | Comes on along with a beep when a problem is detected. A system message on the driver information interface appears at the same time. | Refer to the Indicators information in this chapter when a system message appears on the driver information interface. Take the appropriate action for the message. Models with A-type meter While the indicator is on, press the (home) button, and select Warnings to see the message again. Switching the Display P. 169 The driver information interface will not return to the normal screen unless the warning is cancelled, or the (home) button is pressed. Models with B-type meter While the indicator is on, roll the right selector wheel to see the message again. Switching the Display P. 196 The driver information interface will not return to the normal screen unless the warning is cancelled, or the right selector wheel is rolled. |

| Indicator | Name | On/Blinking | Explanation |
|------------|--|---|--|
| (A) OFF | Auto Idle Stop OFF Indicator* | Comes on when the Auto Idle Stop system has been turned off by the Auto Idle Stop OFF button. | ■ Auto Idle Stop System ON/OFF P. 547 |
| (A) | Auto Idle Stop System Indicator (Amber)* | Blinks if there is a problem with the Auto Idle Stop system. | Have your vehicle checked by a dealer. |
| (A) | Auto Idle Stop Indicator (Green)* | • Comes on when Auto Idle Stop is in operation. The engine automatically shuts off. | ■ Auto Idle Stop* P. 545 |

| Indicator | Name | On/Blinking | Explanation |
|-----------|--------------------------------------|---|---------------------------------|
| | Auto Idle Stop Suspend Indicator* | Comes on while Auto Idle Stop is temporarily suspended in the following situations. | _ |
| | | - Brake pedal is not fully pressed | Depress the brake pedal firmly. |
| | | - The transmission is in a position other than $\boxed{\textbf{D}}$ | |
| | | - System charging is prioritised | ■ Auto Idle Stop* P. 545 |
| | | - Climate control system is prioritised | |
| | | - $\stackrel{\text{\tiny{PROW}}}{\oplus}$ is ON (indicator on). | |
| | | - Engine coolant temperature is not in operating range | |
| | | - The battery temperature is too low. | |
| | | - Auto Idle Stop does not activate for some reason. | |

| Indicator | Name | On/Blinking | Explanation |
|-------------|---|--|---|
| | | • Comes on if there is a problem with ACC with Low Speed Follow. | • Comes on while driving - Have your vehicle checked by a dealer. |
| | Adaptive Cruise Control (ACC) with Low Speed Follow Indicator (Amber) | Indicator may come on temporarily when the maximum permissible weight is exceeded. ACC with Low Speed Follow has been automatically cancelled. | Make sure the total load is within the maximum permissible weight. ➡ Load Limit P. 517 Stays on constantly - Have your vehicle checked by a dealer. |
| | (e., | • Comes on if the ACC with Low Speed Follow is deactivated temporarily after the battery has been disconnected, then reconnected. | • Drive a short distance at more than 20 km/h. The indicator should go off. If it does not, have your vehicle checked by a dealer. |
| 3 | Adaptive Cruise Control (ACC) with Low Speed Follow Indicator (White/Green) | Lights up in white when you press the button. Oceanian models You can switch between indicators by pressing the LIM button. Lights up in green while the system is in operation. | Adaptive Cruise Control (ACC) with Low Speed Follow P. 626 |
| LIM | Adjustable Speed Limiter Indicator (White/Green)* | | ▶ Adjustable Speed Limiter* P. 554 |
| PLIM | Intelligent Speed Limiter Indicator (White/Green)* | | ▶ Intelligent Speed Limiter* P. 561 |

| Indicator | Name | On/Blinking | Explanation |
|---|---|---|---|
| Ā | Adaptive Cruise Control (ACC) with Low Speed Follow Interval Indicator* | Comes on when Adaptive Cruise Control (ACC) with Low Speed Follow indicator comes on. | ▶ To Set or Change Following-interval P. 643 |
| | Lane Keeping | Comes on if there is a problem with the LKAS. | • Stays on constantly - Have your vehicle checked by a dealer. |
| | Assist System (LKAS) Indicator (Amber) | Indicator may come on temporarily when the maximum permissible weight is exceeded. | Make sure the total load is within the maximum permissible weight. Load Limit P. 517 Stays on constantly - Have your vehicle checked by a dealer. |
| ** | Lane Keeping Assist System (LKAS) Indicator (White/Green) | Lights up in white when you press the LKAS button. Lights up in green when the LKAS is in operation. | ■ Lane Keeping Assist System (LKAS) P. 648 ■ Traffic Jam Assist* P. 661 |
| *************************************** | Collision Mitigation Braking System (CMBS) Indicator (Amber) | • Comes on if there is a problem with the CMBS or it cannot be used temporarily due to issues such as dirt on the windscreen near the camera. | The Safety Support Indicator (Amber) comes on at the same time. Safety Support Indicator (Amber) P. 160 |
| *************************************** | Collision Mitigation Braking System (CMBS) Indicator (Grey) | • Comes on when the CMBS is off. | ▶ Safety Support P. 181, 208 |

| Indicator | Name | On/Blinking | Explanation |
|-----------|--|---|--|
| | Road Departure Mitigation Indicator (Amber) | Comes on if there is a problem with the Road Departure Mitigation System or it cannot be used temporarily due to issues such as dirt on the windscreen near the camera. | The Safety Support Indicator (Amber) comes on at the same time. Safety Support Indicator (Amber) P. 160 |
| X | Road Departure Mitigation System Steering Assist Auto OFF Indicator | • Comes on when the Road Departure Mitigation System steering assist is automatically turned off. | ₽ Road Departure Mitigation System P. 616 |
| | Road Departure Mitigation Indicator (Grey) | Comes on when the Road Departure Mitigation System is off. | ► Safety Support P. 181, 208 |

| Indicator | Name | On/Blinking | Explanation |
|-----------|-------------------------------------|---|---|
| | Safety Support Indicator (Amber) | Comes on if there is a problem with the Road Departure Mitigation system, CMBS, Low Speed Braking Control*, or blind spot information system*. | Stays on constantly - Have your vehicle checked by a dealer. |
| | | Models with Parking Sensor System Comes on if there is a problem with the parking sensor. | • Check if the area around the sensor(s) is covered with mud, ice, snow, etc. If the indicator stays on even after you clean the area, have the system checked by a dealer. |
| (8) | | Indicator may come on temporarily when the maximum permissible weight is exceeded. | Make sure the total load is within the maximum permissible weight. Load Limit P. 517 Stays on constantly - Have your vehicle checked by a dealer. |
| | | • Comes on if the Road Departure Mitigation system, CMBS and Low Speed Braking Control* are deactivated temporarily after the battery has been disconnected and then reconnected. | Drive a short distance at more than 20 km/h. The indicator should go off. If it does not, have your vehicle checked by a dealer. |

| Indicator | Name | On/Blinking | Explanation |
|-----------|-------------------------------------|--|--|
| (8) | Safety Support Indicator (Amber) | Comes on when the Road Departure Mitigation system and/or CMBS shuts itself off. | Indicator may come on temporarily if the radar sensor cannot detect any objects when passing through an enclosed space such as a tunnel, or driving on an open road without any structures nearby. The area around the radar sensor is blocked by dirt, mud, etc. Stop your vehicle in a safe place and wipe the debris off with a soft cloth. Indicator may take some time to go off after the radar sensor is cleaned. Have your vehicle checked by a dealer if the indicator does not go off even after you have cleaned the radar sensor. Radar Sensor P. 684 |
| | | | Stays on - The temperature inside the camera is too high. Use the climate control system to cool down the camera. The system activates when the temperature inside the camera cools down. Front Sensor Camera P. 682 |

| Indicator | Name | On/Blinking | Explanation |
|-----------|-------------------------------------|---|--|
| | Safety Support Indicator (Amber) | Comes on when the Road Departure Mitigation system and/or CMBS shuts itself off. | Stays on - The area around the camera is blocked by dirt, mud, etc. Stop your vehicle in a safe place and wipe the debris off with a soft cloth. Have your vehicle checked by a dealer if the indicator and message are still displayed even after you have cleaned the area around the camera. ▶ Front Sensor Camera P. 682 It may come on when the ambient conditions are dark, such as when driving in a tunnel, or at night, dawn, or dusk. |
| | | Models with blind spot information system Comes on when mud, snow, or ice accumulates in the vicinity of the blind spot information system sensor. Comes on when the temperature of the blind spot information system sensor is high. | Comes on while driving - Something may be interfering with the blind spot information system sensor. Check the vicinity of the blind spot information system sensor and remove any obstacles. The system will return to normal when the temperature cools down. Blind Spot Information System* P. 584 |
| | | Models with Low Speed Braking Control Comes on when mud, snow, or ice accumulates in the vicinity of the sonar sensor. | Remove the obstacle in the vicinity of the sonar sensor. ▶ Low Speed Braking Control* P. 610 |

| Indicator | Name | On/Blinking | Explanation |
|-----------|--|---|--|
| (8) | Safety Support Indicator (Green/ Grey) | Lights up in green when the Road Departure Mitigation system, CMBS, Low Speed Braking Control*, blind spot information system*, and Parking Sensor System* are on. Lights up in green and grey when one or more of the systems above are off. Lights up in grey when all systems above are off. | Collision Mitigation Braking System (CMBS) P. 596 Road Departure Mitigation System P. 616 Low Speed Braking Control* P. 610 Blind Spot Information System* P. 584 Parking Sensor System* P. 698 |

Gauges and Displays

Gauges

Gauges include the speedometer, fuel gauge, and other related indicators. They are displayed when the power mode is in ON.

Speedometer

Displays your driving speed in km/h.

■ Tachometer

Shows the number of engine revolutions per minute.

∑Tachometer

Models with A-type meter

You can turn the tachometer display on or off.

- Settings* P. 185
- **Customized Features** P. 458

■ Fuel Gauge

Displays the amount of fuel left in the fuel tank.

Models with B-type meter

■ Temperature Gauge

Displays the temperature of the engine coolant.

Odometer

Shows the total number of kilometres that your vehicle has accumulated.

Ambient Meter

Changes to green to indicate that the vehicle is being driven in a fuel-efficient manner.

∑Fuel Gauge

NOTICE

You should refuel when the reading approaches \mathbb{E}^* or $\boxed{0}^*$.

Running out of fuel can cause the engine to misfire, damaging the catalytic converter.

The actual amount of remaining fuel may differ from the fuel gauge reading.

∑Temperature Gauge

NOTICE

Driving with the temperature gauge reading in the upper zone can cause serious engine damage. Pull safely to the side of the road and allow engine temperature to return to normal.

Overheating P. 829

Outside Temperature

Shows the outside temperature in Celsius.

If the outside temperature has been below 3°C at the time you set the power mode to ON, the **Outside temperature low** message appears on the driver information interface.

■ Adjusting the outside temperature display

Adjust the temperature reading by up to $\pm 3^{\circ}\text{C}$ if the temperature reading seems incorrect.

Outside Temperature ■

The temperature sensor is in the front bumper. Road heat and exhaust from another vehicle can affect the temperature reading when your vehicle speed is less than 30 km/h.

It may take several minutes for the display to be updated after the temperature reading has stabilised.

You can adjust the temperature reading.

Settings* P. 185


≧ Customized Features P. 458

■ Traffic Sign Recognition System*

Shows certain detected traffic signs while driving.

If speed limit warning is activated, the sign icon blinks when the maximum speed of the detected traffic sign is exceeded.

₹ Traffic Sign Recognition System* P. 675

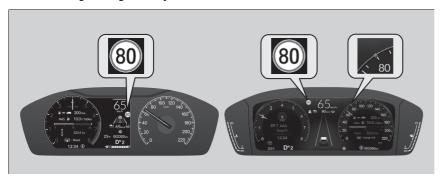

Current Mode for ACC with Low Speed Follow, the LKAS, and Traffic Jam Assist*

Shows the current mode for ACC with Low Speed Follow, LKAS, and Traffic Jam Assist*.

- **⚠** Adaptive Cruise Control (ACC) with Low Speed Follow P. 626
- **Lane Keeping Assist System (LKAS)** P. 648
- Traffic Jam Assist* P. 661

Models with A-type meter


■ Clock

Shows the clock.

■Current Mode for ACC with Low Speed Follow, the LKAS, and Traffic Jam Assist *

Models with B-type meter

When you set speed for ACC with Low Speed Follow, a set speed mark will be displayed on the speedometer.

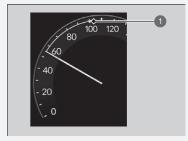

Set Speed

>> Clock

You can adjust the time manually and change the clock display to show the 12 hour clock or 24 hour clock.

Clock P. 220

Driver Information Interface (A-type Meter)

The driver information interface shows information such as the estimated travelable distance and fuel economy of the vehicle. It also displays messages such as warnings and other helpful information.

When a warning message displays, please check the message and contact a dealer to have the vehicle inspected if necessary. Please refer to the pages below if the **Engine oil pressure low** or **Engine temperature too hot** message is displayed.

If the Engine oil pressure low Warning Appears P. 831

⊇ Overheating P. 829

Switching the Display

Press the (home) button, then roll the left selector wheel to scroll to the content you want to see. Press the left selector wheel to see detailed information.

African models with Right-hand Drive Type

Display messages by setting **Warning message** to ON.

You can also change the message language.


■ Customized Features P. 458

Switching the Display

You can add or delete the meter contents.

Instrument Display Settings P. 184

Continued 169

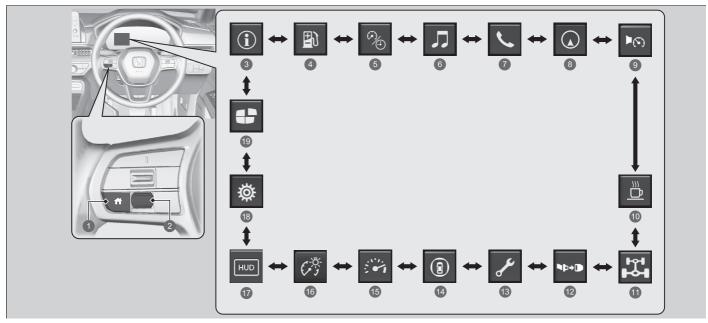


- 1 (home) Button
- 2 Left Selector Wheel
- **③ Information ⊇** P. 184
- **4 Range & fuel ≥** P. 171
- **5 Speed & time ≥** P. 173
- **6** Audio **≥** P. 174
- **? Phone ≥** P. 174

- **8 Navigation*** **₽** P. 174
- **9 Speed alarm*** **№** P. 175
- **(i)** Driver attention **≥** P. 176
- **① AWD torque distribution*** **№** P. 180
- **② Seat belts** → P. 180
- **(B)** Maintenance **≥** P. 180

- Safety support
 P. 181
- **(b)** No content **≥** P. 183
- **16** Brightness **≥** P. 183
- **(iii)** Head-Up Display settings* **≥** P. 214
- **18 Settings*** **№** P. 185
- **19** Instrument display settings **2** P. 184

■ Range / Fuel / Trip Meter

Roll the left selector wheel to switch between trip meter A and trip meter B.

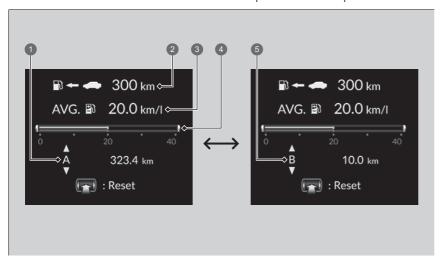

- 1 Trip Meter A
- 2 Range
- 3 Average Fuel Economy
- 4 Instant Fuel Economy
- **5** Trip Meter B

■ Trip meter

Shows the total number of kilometres driven since the last reset. Meters A and B can be used to measure two separate trips.

Resetting a trip meter

To reset the trip meter, display it, press the left selector wheel, and then select **Reset**

► The trip meter is reset to 0.0.

■ Average Fuel Economy

Shows the estimated average fuel economy of each trip meter in km/l* or l/100 km. The display is updated at set intervals. When a trip meter is reset, the average fuel economy is also reset.

■ Instant Fuel Economy

Shows the instant fuel economy as a bar graph in km/l* or l/100 km.

■ Range

Shows the estimated distance you can travel on the remaining fuel. This estimated distance is based on the vehicle's current fuel economy.

■Range / Fuel / Trip Meter

Except African, Middle Eastern and Oceanian models

You can change the unit of fuel consumption in either km/l and l/100km.

Settings* P. 185

≧ Customized Features P. 458

■ Average Fuel Economy

You can change when to reset the average fuel economy.

Settings* P. 185


■ Customized Features P. 458

≫Range

The driving range displayed is only an estimate and may differ from the actual distance the vehicle can travel.

■ Speed / Time / Trip Meter

Roll the left selector wheel to switch between trip meter A and trip meter B.

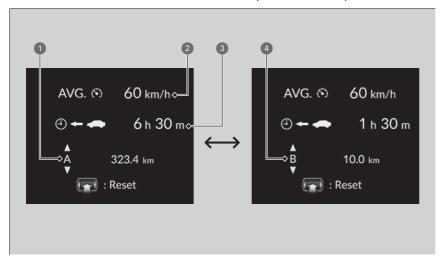

- 1 Trip Meter A
- 2 Average Speed
- 3 Elapsed Time
- 4 Trip Meter B

■ Trip meter

Trip meter P. 172

■ Elapsed time

Shows the time elapsed since Trip A or Trip B was reset.

■ Average speed

Shows the average speed in km/h since Trip A or Trip B was reset.

Audio

Shows the current audio information.

Basic Operation P. 401

Phone

Shows the current phone information.

▶ Hands-Free Telephone System P. 479

Navigation*

■ Compass

Shows the compass screen.

■ Turn-by-Turn Directions

When driving guidance is provided by the navigation system*, Android Auto* or Apple CarPlay, turn-by-turn directions to your destination appear.

Refer to the Navigation System Manual

■ Android Auto™* P 454

▶ Apple CarPlay P. 448

Elapsed time

You can change when to reset the elapsed time.

Settings* P. 185

≧ Customized Features P. 458

■ Average speed

You can change when to reset the average speed.

Settings* P. 185

Customized Features P. 458

Navigation *

You can select whether to have the turn-by-turn display come on or not during the route guidance.

Customized Features P. 458

Turn-by-turn directions may not be available for all apps.

Models with navigation system


You can control some navigation system functions on the driver information interface by rolling the left selector wheel.

Refer to the Navigation System Manual

■ Speed Alarm*

Sets the speed alarm on and changes the speed alarm setting.


Roll the left selector wheel, the speed alarm setting changes as follows:

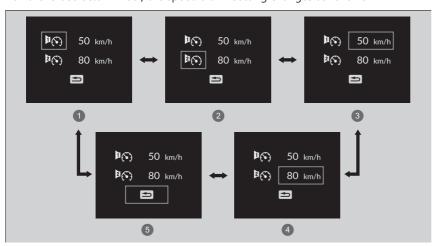

- Speed Alarm 1 On/Off*1
- 2 Speed Alarm 2 On/Off*1
- 3 Speed Alarm 1 Speed Setting (50 km/h*1)
- 4 Speed Alarm 2 Speed Setting (80 km/h*1)
- Back
- *1:Default Setting

■ Driver Attention Monitor

The Driver Attention Monitor analyses steering inputs to determine if the vehicle is being driven in a manner consistent with drowsy or inattentive driving. If it determines that the vehicle is being driven in such a manner, it will display the degree of the driver's attention on the driver information interface.

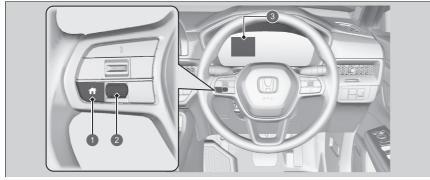

- 1 (home) Button
- 2 Left Selector Wheel
- B Driver Information Interface

Driver Attention Monitor

The Driver Attention Monitor cannot always detect if the driver is tired or inattentive.

Regardless of the system's feedback, if you are feeling tired, stop in a safe location and rest for as long as needed.



When you select **Driver attention** on the driver information interface, bars on it light up in white to indicate the degree of the driver's attention.


Switching the Display P. 169

Level



If two bars light up, the **Driver attention level low** message will appear.

Continued 177

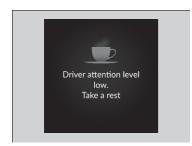

If one bar lights up, the **Driver attention level low. Take a rest** message will appear, a beep will sound, and the steering wheel will vibrate.

If this message appears, stop in a safe location and rest for as long as needed.

Except Oceanian models

If the driver does not take a break and the monitor continues to detect that the driver is very tired, the message will appear again after approximately 15 minutes, accompanied by a beep and steering wheel vibrations.

Oceanian models

Make sure to reset the system after you take a break.

The Driver Attention Monitor resets when: P. 179

Driver Attention Monitor

The message does not appear when the travelling time is 30 minutes or less.

Except Oceanian models

The message will disappear when the left selector wheel is pressed or when the system has determined that the driver is driving normally.

Oceanian models

The message will disappear when the left selector wheel is pressed.

If one bar lights up, the distance at which CMBS alerts may be set to Far, and the Road Departure Mitigation system may be set to Early.

- Collision Mitigation Braking System (CMBS) P. 596
- **▶ Road Departure Mitigation System** P. 616

If the system is not reset, the Driver Attention Monitor will continue to light up only one bar.

■ The Driver Attention Monitor resets when:

- The engine is turned off.
- The driver unfastens the seat belt and opens the door while the vehicle is stopped.

■ For the Driver Attention Monitor to function:

- The vehicle must be travelling above 40 km/h.
- The electric power steering (EPS) system indicator must be off.

■ Depending on driving conditions or other factors, the Driver Attention Monitor may not function in the following circumstances:

- The steering assist function of the Lane Keeping Assist System (LKAS) is active.
 ▶ Lane Keeping Assist System (LKAS) P. 648
- The condition of the road is poor; e.g., the surface is unpaved or bumpy.
- It is windy.
- The driver is frequently operating the vehicle in an assertive manner, such as changing lanes or accelerating.

■ Customizing

You can change the Driver Attention Monitor settings. Select **Tactile and audible alert, Tactile alert only** or **OFF**.

- Settings* P. 185
- Customized Features P. 458

Oceanian models

Tactile and audible alert is selected every time you set the power mode to ON, even if you changed the Driver Attention Monitor settings the last time you drove the vehicle.

▶ For the Driver Attention Monitor to function:

The bars on the driver information interface remain greyed-out unless the Driver Attention Monitor is functioning.

■ AWD Torque Distribution Monitor*



The indicators on the display show the amount of torque being transferred to the right front, left front, right rear, and left rear wheels.

■ Real Time AWD with Intelligent Control System* P. 572

Seat Belts

Occurs, under specified conditions, when seat belts are latched or unlatched.

Seat Belt Reminder P. 50

Maintenance

Show the oil monitor system.

⊇ Oil Monitor System P. 735

Safety Support

Indicates the status of the Road Departure Mitigation system, CMBS, Low Speed Braking Control*, Blind Spot Information System*, and Parking Sensor System*, such as On, Off, or Failure, by colour and letters.

The following colours indicate the status of any of the above-mentioned systems:

- Green: The system is on.
- Grey: The system is off.
- Amber: There is a problem with the system.

Safety Support


If a system is indicated by the colour amber, have your vehicle checked by a dealer immediately.

To turn each system on or off, first rotate the left selector wheel to switch displays. From the next display, you can select which system to turn on or off.

- Collision Mitigation Braking System (CMBS) P. 596
- **▶ Road Departure Mitigation System** P. 616
- **▶ Low Speed Braking Control*** P. 610
- Parking Sensor System * P. 698
- **Blind Spot Information System*** P. 584

You can also confirm the status of each function by the colour of the indicator

- **Safety Support Indicator (Amber)** P. 160
- Safety Support Indicator (Green/Grey)
 P. 163
- Collision Mitigation Braking System (CMBS) Indicator (Amber) P. 158
- Collision Mitigation Braking System (CMBS) Indicator (Grey) P. 158
- Road Departure Mitigation Indicator (Amber) P. 159
- Road Departure Mitigation System Steering Assist Auto OFF Indicator P. 159
- Road Departure Mitigation Indicator (Grey) P. 159

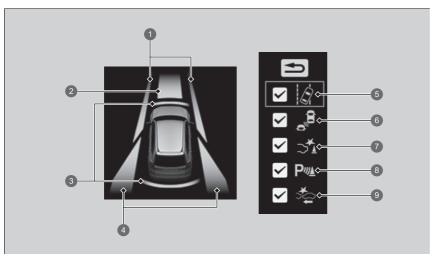

- Area Info for Road Departure Mitigation System
- Area Info for CMBS
- 3 Area Info for Low Speed Braking Control* and Parking Sensor System*
- Area Info for Blind Spot Information System*
- **S** Road Departure Mitigation System Icon and Status Info
- 6 Blind Spot Information System Icon and Status Info*
- Low Speed Braking Control Icon and Status Info*
- 8 Parking Sensor System Icon and Status Info*
- CMBS Icon and Status Info

Safety Support

Models with Low Speed Braking Control

Even when the Low Speed Braking Control icon is green, if the **Rear sensor setting** is turned off, the brake assist will not operate when reversing.

Customized Features P. 458

Models with Front Parking Sensor System

Even when the Parking Sensor System icon is green, if the **Rear Sensor Setting** is turned off, the rear parking sensor will not operate when reversing.

Customized Features P. 458

■ No Content

Tachometer P. 164

Brightness

Press the left selector wheel when the **Brightness** screen is displayed.

When the power mode is in ON, you can use the left selector wheel to adjust instrument panel brightness.

Brighten: Roll the left selector wheel up.

Dim: Roll the left selector wheel down.

Press the left selector wheel to exit.

≫No Content

The tachometer can be turned on and off using the driver information interface or audio/information screen.

Settings* P. 185

■ Customized Features P. 458

Even if you have turned off the tachometer on the driver information interface or audio/information screen, if **No content** is selected on the driver information interface, it will change to a tachometer-only display.

Switching the Display P. 169

■ Brightness


The brightness of the gauge is automatically adjusted depending on the ambient brightness.

- The brightness dims when the ambient light is dark.
- The brightness brightens when the ambient light is bright.


You can change the setting even when the ambient lighting is bright, but the brightness of the gauge won't change.

■ Instrument Display Settings

You can choose which icons to display on the home screen.

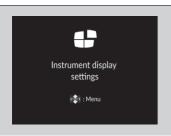

- **1.** Roll the left selector wheel until **Instrument display settings** is selected, then press the left selector wheel.
- **2.** Roll the left selector wheel.

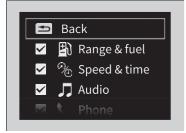

3. Roll the left selector wheel to scroll between icons, then press the left selector wheel to check or uncheck them.

Icons that are grey cannot be removed from the home screen.

When you customize settings, shift to P.

■ Information

You can check if there are any active warning messages.


Information

If there are multiple warnings or informations, you can roll the left selector wheel to see other warnings.

■ Settings*

Use the driver information interface to customize certain features.

■ How to customize

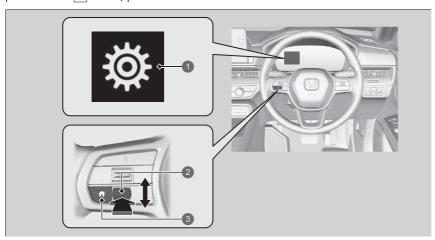

- Driver Information Interface
- 2 Left Selector Wheel
- (Home) Button

Settings *

To customize other features, roll the left selector wheel.

- List of customizable options P. 186
- **Example of customization settings** P. 190

When you customize settings, shift to P.

■ List of customizable options

| Setup Group | Customizable Features | Description | Selectable Settings |
|---------------------------------|--|---|---|
| Deflation warning system* | _ | Initialises the deflation warning system. | Cancel/Initialise |
| Driver assist system setup | Preceding vehicle proximity warning distance | Changes the distance at which Collision Mitigation Braking System (CMBS) alerts. | Far/Normal*1/Near |
| | ACC vehicle ahead detected beep | Causes the system to beep when a vehicle is detected or when the vehicle is out of ACC with Low Speed Follow range. | ON/OFF*1 |
| | Lead Car Departure Notification System* | Changes the setting for the lead car departure notification system. | Normal*1/Early/OFF |
| | Road departure mitigation setting | Changes the setting for the Road Departure Mitigation system. | Early/Normal*1/Delayed/ Warning only |
| | Lane keep assist beep | Causes the system to beep when the LKAS is suspended. | ON/OFF*1 |
| | Blind spot information* | Changes the setting for the blind spot information. | Audible and visual alert*1/Visual alert only |
| | Driver attention monitor | Changes the setting for the driver attention monitor. | Tactile and audible alert* ¹ / Tactile alert only/ OFF |

^{*1:}Default Setting

| Setup Group | Customizable Features | Description | Selectable Settings |
|-------------|---------------------------------|--|---|
| Meter setup | Language* | Changes the displayed language. | Arabic*1/English |
| | Adjust outside temp. display | Adjusts the temperature reading by a few degrees. | -3°C ~ ±0°C*1 ~ +3°C |
| | "Trip A" reset timing | Changes the setting of how to reset trip meter A, average fuel economy A, average speed A, and elapsed time A. | When fully refueled/ When ignition is turned OFF/Manual reset*1 |
| | "Trip B" reset timing | Changes the setting of how to reset trip meter B, average fuel economy B, average speed B, and elapsed time B. | When fully refueled/ When ignition is turned OFF/Manual reset*1 |
| | Alarm volume control | Changes the alarm volume, such as buzzers, warnings, turn signal sound, and so on. | Max/Mid* ¹ /Min |
| | Fuel efficiency backlight | Turns the ambient meter feature on and off. | ON*1/OFF |
| | Rear seat reminder | Turns the Rear Seat Reminder feature on and off. | ON*1/OFF |
| | Fuel economy unit* | Selects the fuel economy units. | Except Vietnamese models km/l*1/l/100km Vietnamese models km/l/l/100km*1 |
| | Tachometer | Selects whether the tachometer is displayed on the instrument panel. | ON*1/OFF |

^{*1:}Default Setting

* Not available on all models

| Setup Group | Customizable Features | Description | Selectable Settings |
|------------------------------|---|---|----------------------------------|
| Driving position setup | Memory position link | Turns the driving position memory system on and off. | ON*1/OFF |
| | Seat position movement at entry/ exit | Moves the seat rearward when you get in/get out of the vehicle. Changes the setting for this feature. | ON*1/OFF |
| Keyless access setup | Keyless access beep volume | Changes the beep tone that sounds when you have a keyless remote and grab a front door handle. | High* ¹ /Low |
| | Keyless access light flash | Causes some exterior lights to flash when you unlock/lock the doors. | ON*1/OFF |
| | Keyless access beep | Causes the beeper to sound when you unlock/lock the doors. | ON*1/OFF |
| | Remote start system ON/OFF* | Turns the remote engine start feature on and off. | ON*1/OFF |
| Lighting setup | Auto High-Beam | Turns the auto high-beam on and off. | ON*1/OFF |
| | Interior light dimmer duration | Changes the length of time the interior lights stay on after you close the doors. | 60sec/30sec* ¹ /15sec |
| | Headlight auto OFF timer | Changes the length of time the exterior lights stay on after you close the driver's door. | 60sec/30sec/15sec*1/0sec |
| | Headlight integration with wipers | Changes the settings for the wiper operation when the headlights automatically come on while the headlight switch is in the AUTO position. | ON*1/OFF |

^{*1:}Default Setting

^{*} Not available on all models


| Setup Group | Customizable Features | Description | Selectable Settings |
|-------------------|--------------------------------------|---|---|
| Door setup | Auto door lock* | Changes the setting for when the doors and the tailgate automatically lock. | With vehicle speed*1/ Shift from P/OFF |
| | Auto door unlock* | Changes the setting for when the doors and the tailgate automatically unlock. | Shift to P*1/IGN OFF/OFF |
| | Walk away lock | Changes the settings for the automatic locking the doors when you walk away from the vehicle while carrying the keyless remote. | ON/OFF*1 |
| | Keyless lock notification | LOCK/UNLOCK - The exterior lights flash. LOCK (2nd push) - The beeper sounds. | ON*1/OFF |
| | Keyless remote power window control* | Turns remote window control using the keyless remote on and off. | ON*1/OFF |
| | Auto folding door mirror* | Changes how you can fold the door mirrors. | Auto fold with keyless*1/ Manual only |
| | Lock presetting | Changes the settings for the lock presetting function. | ON*1/OFF |
| Maintenance reset | _ | Resets the oil monitor system information when you have performed the maintenance service. | Cancel/Reset |
| Default all | _ | Cancels customized changes you have made or restores them to their default setting. | Cancel/OK |


^{*1:}Default Setting

* Not available on all models


■ Example of customization settings

The steps for changing the **"Trip A" reset timing** setting to **When fully refueled** are shown below. The default setting for **"Trip A" reset timing** is **Manual reset**.

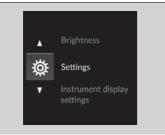

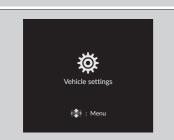

1. Press the (home) button and roll the left selector wheel to select screen, then press the left selector wheel.

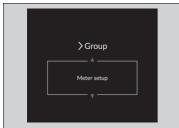





- **2.** Roll the left selector wheel until **Meter setup** appears on the display.
- **3.** Press the left selector wheel.

- **4.** Roll the left selector wheel until **"Trip A" reset timing** appears on the display, then press the left selector wheel.
 - ► The display switches to the customization setup screen, where you can select When fully refueled, When ignition is turned OFF, Manual reset or Back.
- **5.** Roll the left selector wheel and select **When fully refueled**, then press the left selector wheel.
 - ► The Selected appears, then the display returns to the customization menu screen.

Continued 191



- **6.** Press the left selector wheel after **Back** appears on the display.
- **7.** Repeat Step 6 until you return to the normal screen.

Driver Information Interface Left Side Area (B-type Meter)

Shows the current mode for audio and phone information, etc.

- Audio Remote Controls P. 404
- ▶ Playing Bluetooth® Audio P. 444

■ Clock

Shows the clock.

>> Clock

You can adjust the time manually and change the clock display to show the 12 hour clock or 24 hour clock.

⊇ Clock P. 220

You can choose whether the clock is displayed on the driver information interface.


► Customize Display P. 194

Continued 193


Customize Display

■ Arrange audio source on the left side area


You can choose which sources to display on the audio source screen.

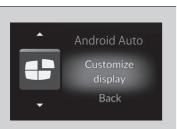

1. Roll the left selector wheel until **Customize display** is selected, then press the left selector wheel.

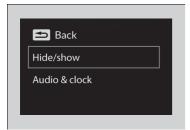

 Roll the left selector wheel to scroll to select Hide/show, then press the left selector wheel

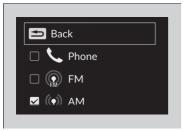

3. Roll the left selector wheel to scroll between audio sources, then press the left selector wheel to check or uncheck them.

○ Customize Display


When you customize settings, shift to P.

■ Turn the displaying on the left side area on and off


You can select whether the current audio information and clock appear on the left side area.



Roll the left selector wheel until **Customize** display is selected, then press the left
 selector wheel

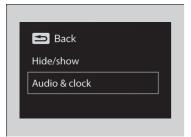

Roll the left selector wheel to scroll to select Audio & clock, then press the left selector wheel.

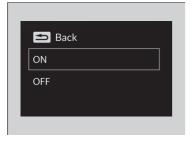

3. Roll the left selector wheel to scroll to select your desired settings, then press the left selector wheel.

Driver Information Interface Right Side Area (B-type Meter)

The driver information interface shows information such as the estimated travelable distance and fuel economy of the vehicle. It also displays messages such as warnings and other helpful information.

When a warning message displays, please check the message and contact a dealer to have the vehicle inspected if necessary. Please refer to the pages below if the

Engine oil pressure low or Engine temperature too hot message is displayed.

☑ If the Engine oil pressure low Warning Appears P. 831

Description ■ **Overheating** P. 829

Switching the Display

Roll the right selector wheel to view different types of content.

☑Driver Information Interface Right Side Area (B-type Meter)

African models with Right-hand Drive Type

Display messages by setting **Warning message** to ON.


You can also change the message language.

Customized Features P. 458

Switching the Display

You can add or delete the meter contents.

Instrument Display Settings P. 211

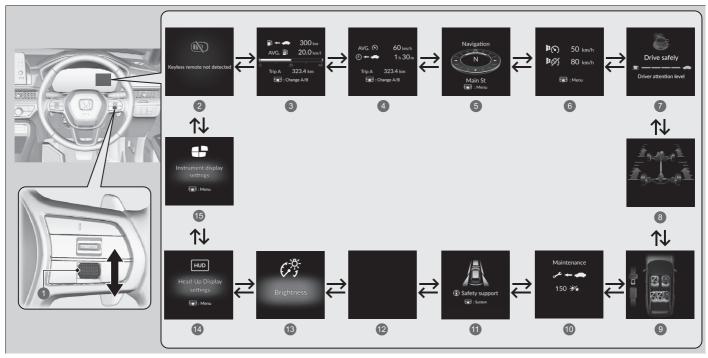


- Right Selector Wheel
- ② Warning Messages ⇒ P. 212
- 3 Range / Fuel / Trip Meter ▶ P. 198
- 4 Speed / Time / Trip Meter
 → P. 200
- **⑤** Navigation/Compass **→** P. 201

- 6 Speed Alarm* → P. 202
- Driver Attention Monitor
 P. 203
- Seat Belts
 P. 207
- Maintenance ≥ P. 207

- Safety Support
 P. 208
- No Content
- **1** Brightness **→** P. 210
- Head-Up Display Settings*
 P. 214
- ⑤ Instrument Display Settings → P. 211

■ Range / Fuel / Trip Meter

Press the right selector wheel to switch between trip meter A and trip meter B.

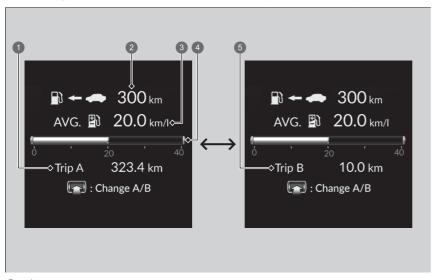

- 1 Trip Meter A
- 2 Range
- Average Fuel Economy
- 4 Instant Fuel Economy
- **5** Trip Meter B

■ Trip meter

Shows the total number of kilometres driven since the last reset. Meters A and B can be used to measure two separate trips.

Resetting a trip meter

To reset the trip meter, display it, press and hold the right selector wheel, and then select **Reset**.

▶ The trip meter is reset to 0.0.

■ Average fuel economy

Shows the estimated average fuel economy of each trip meter in km/l* or l/100 km. The display is updated at set intervals. When a trip meter is reset, the average fuel economy is also reset.

■ Instant fuel economy

Shows the instant fuel economy as a bar graph in km/l* or l/100 km.

■ Range

Shows the estimated distance you can travel on the remaining fuel. This estimated distance is based on the vehicle's current fuel economy.

Except Oceanian and African models with Right-hand Drive Type

You can change the unit of fuel consumption in either km/l and l/100km.

Customized Features P. 458

■ Average fuel economy


You can change when to reset the average fuel economy.

Customized Features P 458

The driving range displayed is only an estimate and may differ from the actual distance the vehicle can travel.

■ Speed / Time / Trip Meter

Press the right selector wheel to switch between trip meter A and trip meter B.

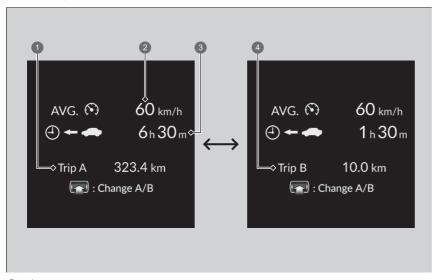

- 1 Trip meter A
- 2 Average Speed
- B Elapsed Time
- 4 Trip meter B

■ Trip meter

Trip meter P. 199

■ Elapsed time

Shows the time elapsed since Trip A or Trip B was reset.

■ Average speed

Shows the average speed in km/h since Trip A or Trip B was reset.

Navigation

■ Compass

Shows the compass screen.

■ Turn-by-Turn Directions

When driving guidance is provided by the navigation system*, Apple CarPlay or Android Auto*, turn-by-turn directions to your destination appear.

- Refer to the Navigation System Manual
- **Apple CarPlay** P. 448
- Android Auto™* P. 454

Elapsed time

You can change when to reset the elapsed time.

Customized Features P. 458

■ Average speed

You can change when to reset the average speed.

Customized Features P. 458

Navigation

You can select whether to have the turn-by-turn display come on or not during the route guidance.

Customized Features P 458

Turn-by-turn directions may not be available for all apps.

Models with navigation system


You can control some navigation system functions on the driver information interface by pressing the right selector wheel.

Refer to the Navigation System Manual

■ Speed Alarm*

Sets the speed alarm on and changes the speed alarm setting.


Press the right selector wheel to display the setting screen, then roll it, the speed alarm setting changes as follows:

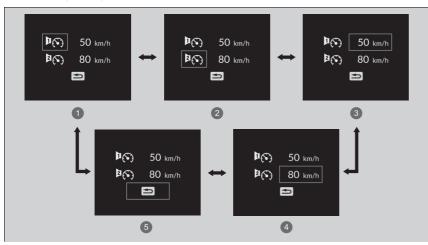

- 1 Speed Alarm 1 On/Off*1
- 2 Speed Alarm 2 On/Off*1
- 3 Speed Alarm 1 Speed Setting (50 km/h*1)
- 4 Speed Alarm 2 Speed Setting (80 km/h*1)
- Back
- *1:Default Setting

■ Driver Attention Monitor

The Driver Attention Monitor analyses steering inputs to determine if the vehicle is being driven in a manner consistent with drowsy or inattentive driving. If it determines that the vehicle is being driven in such a manner, it will display the degree of the driver's attention on the driver information interface.

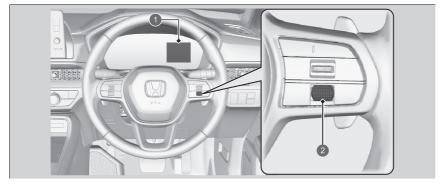

- Driver Information Interface
- Right Selector Wheel

Driver Attention Monitor

The Driver Attention Monitor cannot always detect if the driver is tired or inattentive.

Regardless of the system's feedback, if you are feeling tired, stop in a safe location and rest for as long as needed.

Continued 203




When you select Driver Attention Monitor on the driver information interface, bars on it light up in white to indicate the degree of the driver's attention.

Switching the Display P. 196





If two bars light up, the **Driver attention level low** message will appear.

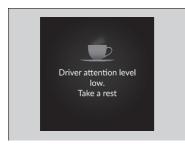

If one bar lights up, the **Driver attention level low. Take a rest** message will appear, a beep will sound, and the steering wheel will vibrate.

If this message appears, stop in a safe location and rest for as long as needed.

Except Oceanian models

If the driver does not take a break and the monitor continues to detect that the driver is very tired, the message will appear again after approximately 15 minutes, accompanied by a beep and steering wheel vibrations.

Oceanian models

Make sure to reset the system after you take a break.

▶ The Driver Attention Monitor resets when: P. 206

□ Driver Attention Monitor

The message does not appear when the travelling time is 30 minutes or less.

Except Oceanian models

The message will disappear when the right selector wheel is rolled or when the system has determined that the driver is driving normally.

Oceanian models

The message will disappear when the right selector wheel is rolled.

If one bar lights up, the distance at which CMBS alerts may be set to Far, and the Road Departure Mitigation system may be set to Early.

- Collision Mitigation Braking System (CMBS) P. 596
- **▶ Road Departure Mitigation System** P. 616

If the system is not reset, the Driver Attention Monitor will continue to light up only one bar.

Continued 205

■ The Driver Attention Monitor resets when:

- The engine is turned off.
- The driver unfastens the seat belt and opens the door while the vehicle is stopped.

■ For the Driver Attention Monitor to function:

- The vehicle must be travelling above 40 km/h.
- The electric power steering (EPS) system indicator must be off.

■ Depending on driving conditions or other factors, the Driver Attention Monitor may not function in the following circumstances:

- The steering assist function of the Lane Keeping Assist System (LKAS) is active.
 ▶ Lane Keeping Assist System (LKAS) P. 648
- The condition of the road is poor; e.g., the surface is unpaved or bumpy.
- It is windy.
- The driver is frequently operating the vehicle in an assertive manner, such as changing lanes or accelerating.

Customizing

You can change the Driver Attention Monitor settings. Select **Tactile and audible alert, Tactile alert only** or **OFF**.

■ Customized Features P. 458

Oceanian models

Tactile and audible alert is selected every time you set the power mode to ON, even if you changed the Driver Attention Monitor settings the last time you drove the vehicle.

For the Driver Attention Monitor to function:

The bars on the driver information interface remain greyed-out unless the Driver Attention Monitor is functioning.

■ AWD Torque Distribution Monitor*



The indicators on the display show the amount of torque being transferred to the right front, left front, right rear, and left rear wheels.

Real Time AWD with Intelligent Control System* P. 572

Seat Belts

Occurs, under specified conditions, when seat belts are latched or unlatched.

Seat Belt Reminder P. 50

Maintenance

Show the oil monitor system.

Oil Monitor System P. 735

Safety Support

Indicates the status of the Road Departure Mitigation system, CMBS, Low Speed Braking Control*, Blind Spot Information System*, and Parking Sensor System*, such as On, Off, or Failure, by colour and letters.

The following colours indicate the status of any of the above-mentioned systems:

- Green: The system is on.
- Grey: The system is off.
- Amber: There is a problem with the system.

Safety Support


If a system is indicated by the colour amber, have your vehicle checked by a dealer immediately.

To turn each system on or off, first press the right selector wheel to switch displays. From the next display, you can select which system to turn on or off.

- Collision Mitigation Braking System (CMBS) P. 596
- **▶ Road Departure Mitigation System** P. 616
- **▶ Low Speed Braking Control*** P. 610
- Parking Sensor System* P. 698
- **Blind Spot Information System*** P. 584

You can also confirm the status of each function by the colour of the indicator.

- Safety Support Indicator (Amber) P. 160
- Safety Support Indicator (Green/Grey)
 P. 163
- Collision Mitigation Braking System (CMBS) Indicator (Amber) P. 158
- Collision Mitigation Braking System (CMBS) Indicator (Grey) P. 158
- Road Departure Mitigation Indicator (Amber) P. 159
- Road Departure Mitigation System Steering Assist Auto OFF Indicator P. 159
- Road Departure Mitigation Indicator (Grey) P. 159

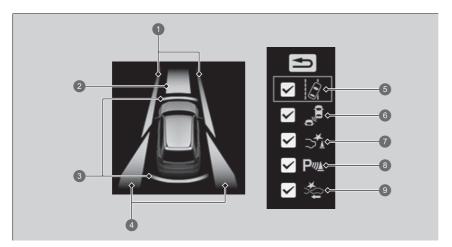

- Area Info for Road Departure Mitigation System
- Area Info for CMBS
- 3 Area Info for Low Speed Braking Control* and Parking Sensor System*
- 4 Area Info for Blind Spot Information System*
- **5** Road Departure Mitigation System Icon and Status Info
- 6 Blind Spot Information System Icon and Status Info*
- Low Speed Braking Control Icon and Status Info*
- 8 Parking Sensor System Icon and Status Info*
- CMBS Icon and Status Info

Safety Support

Models with Low Speed Braking Control

Even when the Low Speed Braking Control icon is green, if the **Rear sensor setting** is turned off, the brake assist will not operate when reversing.

■ Customized Features P. 458

Models with Front Parking Sensor System

Even when the Parking Sensor System icon is green, if the **Rear Sensor Setting** is turned off, the rear parking sensor will not operate when reversing.

Customized Features P. 458

Brightness

Press the right selector wheel when the **Brightness** screen is displayed.

When the power mode is in ON, you can use the right selector wheel to adjust instrument panel brightness.

Brighten: Roll the right selector wheel up.

Dim: Roll the right selector wheel down.

Press the right selector wheel to exit.

■ Brightness

The brightness of the gauge is automatically adjusted depending on the ambient brightness.


- The brightness dims when the ambient light is dark.
- The brightness brightens when the ambient light is bright.

You can change the setting even when the ambient lighting is bright, but the brightness of the gauge won't change.


Instrument Display Settings

■ Arrange content on the right side area

You can choose which contents to display on the right side area.

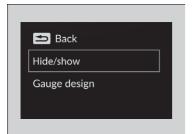

- **1.** Press the right selector wheel when you select the **Instrument display settings** on the driver information interface.
- 2. Roll the right selector wheel to scroll to select **Hide/show**, then press the right selector wheel.

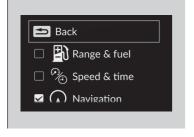

3. Roll the right selector wheel to scroll between contents, then press the right selector wheel to check or uncheck them.

■ Arrange content on the right side area


Contents that are grey cannot be removed from the right side area.

When you customize settings, shift to P.


Continued 211

■ Change gauge design

You can change the gauge design to a round or bar design.

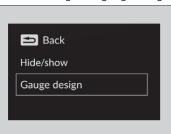

- **1.** Press the right selector wheel when you select the **Instrument display settings** on the driver information interface.
- **2.** Roll the right selector wheel to scroll to select **Gauge design**, then press the right selector wheel.

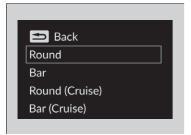

3. Roll the right selector wheel to scroll to select your desired settings, then press the right selector wheel.

When using the **Round (Cruise)** or **Bar (Cruise)** gauge design, a simplified display is used when ACC with Low Speed Follow is in operation.

Warnings

You can check if there are any active warning messages.


≫Warnings

If there are multiple warnings or informations, you can roll the right selector wheel to see other warnings.

Head-Up Display*

Shows the current mode for ACC with Low Speed Follow and LKAS; compass or turn-by-turn directions; and vehicle speed. You can choose which item to be displayed using the driver information interface. They are displayed when the power mode is in ON.

The display also shows the following messages.

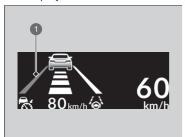

- Lane Departure Warning: When your vehicle is too close to the traffic lane lines, the lane departure warning appears.
 - Road Departure Mitigation System
 P 616
 - **Lane Keeping Assist System (LKAS)**P 648

Lane Departure Warning



- Head-up Warning Lights: Flash when the message appears on the driver information interface.
 - Collision Mitigation Braking System (CMBS) P. 596
 - Adaptive Cruise Control (ACC) with Low Speed Follow P. 626

Head-Up Display Settings

Shows the display for changing the head-up display settings on the driver information interface.

Roll the left*1/right*2 selector wheel to scroll to select **Head-Up Display settings**, then press the left*1/right*2 selector wheel.

Switching the Display P. 196

■ To change head-up display content

- 1. Roll the left*1/right*2 selector wheel to scroll to select **HUD content**, then press the left*1/right*2 selector wheel.
- **2.** Roll the left*1/right*2 selector wheel to scroll to select desired item, then press the left*1/right*2 selector wheel.
 - Speedometer
 - Speedometer P. 217
 - Navigation
 - Navigation P. 217
 - Driver assist
 - **☑** Current Mode for ACC with Low Speed Follow and the LKAS P. 217
 - OFF

HUD content

☑ To change head-up display content P. 214

HUD brightness


Adjusting the head-up display brightness P. 216

HUD height

Adjusting the head-up display height P. 216

^{*1:} Models with A-type meter

^{*2:} Models with B-type meter

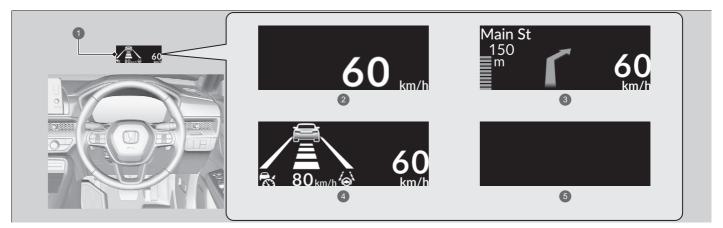

- 1 Head-Up Display
- Speedometer
- Navigation
- Oriver assist
- OFF

215

■ Adjusting the head-up display brightness

Roll the left *1 /right *2 selector wheel to scroll to select **HUD brightness**, then press the left *1 /right *2 selector wheel.

Brighten: Roll the left*1/right*2 selector wheel up. **Dim**: Roll the left*1/right*2 selector wheel down.

Press the left*1/right*2 selector wheel to exit.

■ Adjusting the head-up display height

Roll the left*1/right*2 selector wheel to scroll to select **HUD height**, then press the left*1/right*2 selector wheel.

Raise the head-up display: Roll the left*1/right*2 selector wheel up. **Lower the head-up display**: Roll the left*1/right*2 selector wheel down.

Press the left*1/right*2 selector wheel to exit.

∑Adjusting the head-up display height

When you unlock and open the driver's door with a remote transmitter or keyless access system, the head-up display adjusts automatically to one of the two preset positions.

^{*1:} Models with A-type meter

^{*2:} Models with B-type meter

Speedometer

Shows your driving speed in km/h.

■ Current Mode for ACC with Low Speed Follow and the LKAS

Shows the current mode for ACC with Low Speed Follow and LKAS.

- **⚠** Adaptive Cruise Control (ACC) with Low Speed Follow P. 626
- **► Lane Keeping Assist System (LKAS)** P. 648

Navigation

■ Compass

Shows the compass screen.

■ Turn-by-Turn Directions

When driving guidance is provided by the navigation system, Android Auto or Apple CarPlay, turn-by-turn directions to your destination appear.

- Refer to the Navigation System Manual
- Android Auto™* P. 454
- **Apple CarPlay** P. 448

You can select whether the turn-by-turn display comes on during the route guidance.

■ Customized Features P. 458

Turn-by-turn directions may not be available for all apps.

Controls

This chapter explains how to operate the various controls necessary for driving.

| Clock | 220 |
|-------------------------------------|-----|
| Locking and Unlocking the Doors | |
| Key | 221 |
| Low Keyless Remote/Card Key* Signal | |
| Strength | 224 |
| Locking/Unlocking the Doors from th | ie |
| Outside | 225 |
| Locking/Unlocking the Doors from th | ie |
| Inside | 234 |
| Childproof Door Locks | 236 |
| Auto Door Locking/Unlocking * | 237 |
| Tailgate | 238 |
| <u> </u> | |

| Security System | |
|--------------------------------------|-------------|
| Immobilizer System | 249 |
| Security System Alarm | 250 |
| Windows | 25 <i>°</i> |
| Panoramic Roof* | 255 |
| Operating the Switches Around | the |
| Steering Wheel | |
| ENGINE START/STOP Button | 259 |
| Lights | 262 |
| Headlight Adjuster* | 269 |
| Auto High-Beam | 27 |
| Wipers and Washers | 274 |

| Rear Demister Button | 27 |
|---------------------------------|-----|
| Driving Position Memory System* | 278 |
| Adjusting the Steering Wheel | 28 |
| Mirrors | |
| Interior Rearview Mirror | 282 |
| Power Door Mirrors | 284 |
| Seats | 286 |
| Interior Convenience Items | 307 |
| Climate Control System | 329 |

* Not available on all models

Adjusting the Clock

You can adjust the time in the clock display with the power mode in ON.

Models with colour audio system

Adjusting the Time



- 1. Press the **MENU** button.
- 2. Select Clock Settings.
- 3. Select Automatic Time, then select OFF.
- 4. Select Set Time.
- **5.** Select **12H(12-H)/24H(24-H)** to change 12 or 24 hour clock.
- **6.** Select **▲** or **▼**.
- 7. Select **Set** to set the time.

■ Adjusting the Clock

Models with Display Audio

You can adjust the clock and customize the clock display.

Clock Setup P. 416

■ Adjusting the Time

The clock is automatically updated through the audio system.

You can also select and enter with the **LIST / SELECT** (List / Selector) knob instead of the touch panel.

MENU Button




MENU Button

Locking and Unlocking the Doors

Key

This vehicle comes with the following keys:

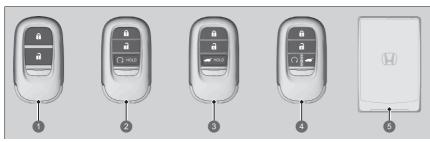

- 1 Keyless Remote*1
- 2 Keyless Remote*2
- Keyless Remote^{*3}
- 4 Keyless Remote*4
- 6 Card Key*

Use the keys to start and stop the engine, and lock and unlock all the doors, tailgate, and fuel fill door

≫Key

All the keys have an immobilizer system. The immobilizer system helps to protect against vehicle theft.

Immobilizer System P. 249

Follow the advice below to prevent damage to the keys:

- Do not leave the keys in direct sunlight, or in locations with high temperature or high humidity.
- Do not drop the keys or set heavy objects on them.
- Keep the keys away from liquids, dust, and sand.
- Do not take the keys apart except to replace the battery.

If the circuits in the keys are damaged, the engine may not start, and the remote transmitter may not work.

If the keys do not work properly, have them inspected by a dealer.

Models with remote engine starter


You can remotely start the engine using the remote engine start.

Remote Engine Start* P. 530

- *1: Models without remote engine starter and power tailgate
- *2: Models with remote engine starter
- *3: Models with power tailgate
- *4: Models with remote engine starter and power tailgate


■ Built-in Key

The built-in key can be used to unlock the doors when the keyless remote or card key* battery becomes weak and the power door unlock operation is disabled.

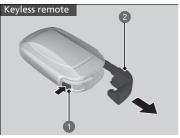

To remove the built-in key, push the release button and then pull out the key. To reinstall the built-in key, push the built-in key into the keyless remote until it clicks.


- Release Button
- 2 Built-in Key

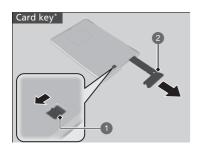

To remove the built-in key, slide the release knob and then pull out the key. To reinstall the built-in key, push the built-in key into the card key until it clicks.

- Release Knob
- 2 Built-in Key

Key Number Tag

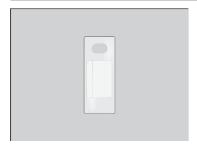

Contains a number that you will need if you purchase a replacement key.

Keep the key number tag separate from the key in a safe place outside of your vehicle.

If you wish to purchase an additional key, contact a dealer.

If you lose your key and you cannot start the engine, contact a dealer.

Low Keyless Remote/Card Key* Signal Strength

The vehicle transmits radio waves to locate the keyless remote or card key* to start the engine; and lock and unlock all the door, tailgate, and the fuel fill door.

In the following cases, starting the engine, locking/unlocking the doors/tailgate/fuel fill door may be inhibited, or operation may be unstable:

- Strong radio waves are being transmitted by nearby equipment.
- You are carrying the keyless remote or card key* together with telecommunications equipment, laptop computers, mobile phones, or wireless devices.
- A metallic object is touching or covering the keyless remote or card key*.
- The card key* is in a cover or case that blocks radio waves.

∑Low Keyless Remote/Card Key* Signal Strength

Communication between the keyless remote or card key* and the vehicle consumes the keyless remote or card key* battery.

Battery life is about 2^{*1} or 1.5^{*2} years, but this varies depending on regularity of use.

The battery is consumed whenever the keyless remote or card key* is receiving strong radio waves. Avoid placing it near electrical appliances such as televisions and personal computers.

Keyless remote


It is possible to reduce battery consumption by turning off radio wave reception. When you hold down the lock and unlock buttons at the same time for approximately three seconds, the LED will blink twice and radio wave reception will turn off. If you press any button on the keyless remote once, it will begin receiving radio waves again.

^{*1:} Keyless remote

^{*2:} Card key

Locking/Unlocking the Doors from the Outside

Using the Keyless Access System

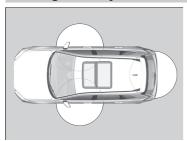

When you carry the keyless remote or card key*, you can lock/unlock the doors, tailgate, and fuel fill door.

You can lock/unlock the doors, tailgate, and fuel fill door within a radius of about 80 cm from the outside door handle or tailgate outer handle.

■Locking/Unlocking the Doors from the Outside

If the interior light switch is in the door activated position, the interior light comes on when you unlock the doors and tailgate.

No doors opened: The light fades out after 30 seconds.

Doors and tailgate relocked: The light goes off immediately.

Interior Lights P. 307

∑Using the Keyless Access System

If you do not open a door or the tailgate within 30 seconds of unlocking the vehicle with the keyless access system, the doors and tailgate will automatically relock.

You can lock or unlock doors using the keyless access system only when the power mode is in VEHICLE OFF.

■ Locking the doors and tailgate



Door Lock Sensor



1 Lock Button

Touch the door lock sensor on the front door or press the lock button on the tailgate.

- ► All the doors and tailgate lock and the security system sets.
- Some exterior lights flash once and the beeper sounds once.

- Do not leave the keyless remote or card key* in the vehicle when you get out. Carry it with you.
- Even if you are not carrying the keyless remote or card key*, you can lock/unlock the doors and the tailgate while someone else with the keyless remote or card key* is within range.
- The door may be locked or unlocked if the door handle is covered with water in heavy rain or in a car wash if the keyless remote or card key* is within range.
- If you grip a front door handle or touch a door lock sensor wearing gloves, the door sensor may be slow to respond or may not respond by locking or unlocking the doors.
- After locking the door, you have up to 2 seconds during which you can pull the door handle to confirm whether the door is locked. If you need to unlock the door immediately after locking it, wait at least 2 seconds before gripping the handle, otherwise the door will not unlock.
- The door may not open if you pull it immediately after gripping the door handle. Grip the handle again and confirm that the door is unlocked before pulling the handle.
- Even within the 80 cm radius, you may not be able to lock/unlock the doors and the tailgate with the keyless remote or card key* if it is above or below the outside handle.
- The keyless remote or card key* may not operate if it is too close to the door, door glass, and tailgate.

227

■ Unlocking the doors and tailgate



Right-hand Drive Type for African

Grab the driver's door handle:

- The driver's door and fuel fill door unlock
- Some exterior lights flash twice and the beeper sounds twice.

Grab the front passenger's door handle:

- ► All doors, tailgate, and fuel fill door unlock.
- ► Some exterior lights flash twice and the beeper sounds twice.

Except Right-hand Drive Type for African

Grab the front door handle.

- ► All doors, tailgate, and fuel fill door unlock.
- ► Some exterior lights flash twice and the beeper sounds twice.

Press the outer handle:



► The tailgate unlocks.

Except Right-hand Drive Type for African

The tailgate and all doors unlock.

All models

- ► Some exterior lights flash twice and the beeper sounds twice.
- **⊇** Opening/Closing the Tailgate P. 239





Outer Handle

* Not available on all models Continued

■Using the Keyless Access System

The light flash, beep, and door unlock mode* settings can be customized.

Models with colour audio system

Settings* P. 185


Models with Display Audio

How to Customize the Vehicle Settings P 467


Models with power tailgate

You can also unlock and open with the power tailgate.

Using the Tailgate Outer Handle P. 245

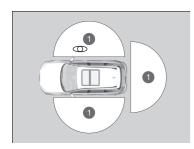

1 The activation range of the auto lock function is about 1.5 m.

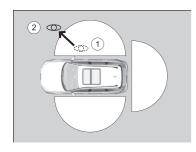

■ Locking the doors and tailgate (Walk away auto lock)

When you walk away from the vehicle with all doors and tailgate closed while carrying the keyless remote or card key*, the doors, tailgate, and fuel fill door will automatically lock.

The auto lock function activates when all doors and tailgate are closed, or all doors are closed and tailgate begins power close operation*, and the keyless remote or card key* is within about 1.5 m radius of the outside door handle or tailgate outer handle. Exit the vehicle while carrying keyless remote or card key* and close the door(s) and tailgate.

- **1.** While within about 1.5 m radius of the vehicle.
 - ➤ The beeper sounds; the auto lock function will be activated.
- **2.** Carry the keyless remote or card key* beyond about 1.5 m from the vehicle and remain outside this range for 2 or more seconds.
 - Some exterior lights flash; the beeper sounds; all doors, tailgate, and fuel fill door will then lock.

■ Locking the doors and tailgate (Walk away auto lock)

The auto lock function is set to OFF as the factory default setting. The auto lock function can be set to ON using the driver information interface or the audio/information screen.

If you set the auto lock function to ON using the driver information interface or the audio/information screen, only the remote transmitter that was used to unlock the driver's door prior to the setting change can activate auto lock.

Models with colour audio system

Settings* P. 185

Models with Display Audio

► How to Customize the Vehicle Settings P. 467

After the auto lock function has been activated, when you stay within the locking/unlocking operation range, the indicator on the keyless remote will continue to flash until the doors and tailgate are locked.

When you stay beside the vehicle within the operation range, the doors and tailgate will automatically lock approximately 30 seconds after the auto lock function activating beeper sounds.

When you open a door or tailgate after the auto lock function activating beeper sounds, the auto lock function will be delayed until all doors are closed.

To temporarily deactivate the function:

- 1. Set the power mode to OFF.
- 2. Open the driver's door.
- **3.** Using the master door lock switch, operate the lock as follows:

 $\mathsf{Lock} \to \mathsf{Unlock} \to \mathsf{Lock} \to \mathsf{Unlock}.$

▶ The beeper sounds, and the function is deactivated.

To restore the function:

- Set the power mode to ON.
- Lock the vehicle without using the auto lock function.
- With the keyless remote or card key* on you, move out of the auto lock function operation range.
- Open any door.

■ Locking the doors and tailgate (Walk away auto lock)

Under the following circumstances, the auto-lock function will not activate:

- The keyless remote or card key* is inside the vehicle.
- ▶The beeper will not sound.
- The keyless remote or card key* is taken out of its operational range before all the doors and tailgate are closed.
- ►The beeper will sound.

The auto lock function does not operate when any of the following conditions are met.

- The keyless remote or card key* is inside the vehicle.
- A door, tailgate, or the bonnet is not closed.
- The power mode is set to any mode other than OFF.
- The keyless remote or card key* is not located within a radius of about 1.5 m from the vehicle when you get out of the vehicle and close the doors and tailgate.


Auto lock function operation stop beeper

After the auto lock function has been activated, the auto lock operation stop beeper sounds for approximately two seconds in the following cases.


- The keyless remote or card key* is put inside the vehicle through a window.
- You are located too close to the vehicle.
- The keyless remote or card key* is put inside the tailgate.

If the warning beeper sounds, check that you are carrying the keyless remote or card key*. Then, open/close a door and confirm the auto lock activation beeper sounds once.

Lock Presetting

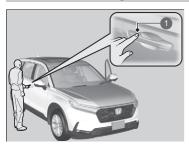

Door Lock Sensor

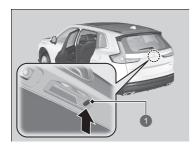

1 Lock Button

The vehicle will automatically lock after you lock the doors in advance then close the doors and tailgate.

Activate lock presetting after closing the driver's door.

- **1.** Touch the door lock sensor on the front door, press the lock button on the tailgate or press the lock button on the keyless remote.
 - ► Alert sounds and lock presetting is activated
- 2. Close all doors and the tailgate.
 - Some exterior lights flash and a beeper sounds when vehicle locks.

Make sure the doors and tailgate are locked before moving away from the vehicle.

∑Lock Presetting

AWARNING

Opening or closing the power tailgate* on someone's hands or fingers can cause serious injury. Make sure all hands and fingers, especially children's, are clear of the power tailgate*.

Lock presetting will be reset if a door or the tailgate is opened before the vehicle has locked completely.

Before locking a door, make sure that the key is not inside the vehicle.

You can turn this function on and off.


Models with colour audio system

Settings* P. 185

Models with Display Audio

Now to Customize the Vehicle Settings
P. 467

■ Using the Remote Transmitter

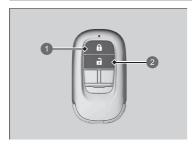

- 1 Lock Button
- 2 Unlock Button

■ Locking the doors and tailgate Press the lock button

Once:

Some exterior lights flash, all the doors, tailgate, and fuel fill door lock, and the security system sets.

Twice (within five seconds after the first push):

➤ Some exterior lights flash, the beeper sounds, and verifies the security system is set

■ Unlocking the doors and tailgate

Right-hand Drive Type for African

Press the unlock button.

Once:

Some exterior lights flash twice, and the driver's door and fuel fill door unlock.

Twice:

► The remaining doors and tailgate unlock.

Except Right-hand Drive Type for African

Press the unlock button.

Some exterior lights flash twice, and all the doors, tailgate, and fuel fill door unlock.

■ Using the Remote Transmitter

If you do not open a door or the tailgate within 30 seconds of unlocking the vehicle with the remote transmitter, the doors and tailgate will automatically relock.

You can lock or unlock doors using the remote transmitter only when the power mode is in VEHICLE OFF.

The remote transmitter uses low-power signals, so the operating range may vary depending on the surroundings.

If the distance at which the remote transmitter works varies, the battery is probably low.

If the LED does not come on when you press a button, the battery is dead.

Replacing the Remote Battery P. 777

You can customize the door unlock mode* setting.

► How to Customize the Vehicle Settings P. 467

Unlocking the Doors Using a Key

If the unlock function of the keyless remote or card key* does not work, use the built-in key instead. The keyhole is behind the door handle.



Pull and hold the outer handle. Insert the built-in key into the key cylinder from below the handle and then turn it.



∑Unlocking the Doors Using a Key

Right-hand Drive Type for African

When unlocking, the driver's door unlocks first. Turning the key a second time within a few seconds dose not unlock the remaining and the tailgate.

Except Right-hand Drive Type for African

When you unlock the driver's door with the key, all the other doors unlock at the same time.

Except Latin American with AWD for five-seater models Except Left-hand Drive Type for African models and Middle Eastern models

If you unlock a door with the built-in key while the security system is activated, the alarm will go off.

You can customize the door unlock mode* setting.

► How to Customize the Vehicle Settings
P. 467

If the lock function of the keyless remote or card key* does not work, refer to the following.

Locking a Door Without Using a Key P. 233

■ Locking a Door Without Using a Key

If you do not have the key on you, or if for some reason you cannot lock a door using the key, you can lock the door without it.



■ Locking the driver's door

Push the lock tab forward ① or push the master door lock switch in the lock direction ②, then pull and hold the outside door handle ③. Close the door, then release the handle.

■ Locking the passenger's doors

Push the lock tab forward and close the door.

■ Lockout prevention system

The doors and tailgate cannot be locked when the keyless remote or card key* is inside the vehicle.

■Locking a Door Without Using a Key

When you lock the driver's door, all the other doors and tailgate lock at the same time.

Before locking a door, make sure that the key is not inside the vehicle.

* Not available on all models

Locking/Unlocking the Doors from the Inside

Using the Lock Tab



- Locking a door
 Push the lock tab forward.
- Unlocking a door
 Pull the lock tab rearward.

1 To Lock2 To Unlock

≥Using the Lock Tab

Right-hand Drive Type for African

When you lock the door using the lock tab on the driver's door, all the other doors, the tailgate, and fuel fill door lock at the same time. When you unlock the door using the lock tab on the driver's door, only the driver's door and fuel fill door will unlock.

Except Right-hand Drive Type for African

When you lock/unlock the door using the lock tab on the driver's door, all the other doors, tailgate, and fuel fill door lock/unlock at the same time.

Unlocking Using the Front Door Inner Handle



Middle Eastern except Egyptian, Jordanian, and Lebanese models

Pull the front door inner handle.

▶ The door unlocks and opens in one motion.

Models for other countries

Pull the driver's door inner handle.

The door unlocks and opens in one motion.

Except Right-hand Drive Type for African

Unlocking and opening the driver's door from the inner handle unlocks all the other doors.

Using the Master Door Lock Switch



Press the master door lock switch in as shown to lock or unlock all the doors and the tailgate.

■Unlocking Using the Front Door Inner Handle

Middle Eastern except Egyptian, Jordanian, and Lebanese models

The front door inner handles are designed to allow front seat occupants to open the door in one motion. However, this feature requires that front seat occupants never pull a front door inner handle while the vehicle is in motion.

Models for other countries

The driver's door inner handle is designed to allow the driver to open the door in one motion. However, this feature requires that the driver never pull the door inner handle while the vehicle is in motion.

Children should always ride in a second row or third row* seat where childproof door locks are provided.

≧ Childproof Door Locks P. 236

■Using the Master Door Lock Switch


When you lock/unlock either of the front doors using the master door lock switch, all the other doors, tailgate, and fuel fill door lock/unlock at the same time

- 1 To Lock
- 2 To Unlock
- * Not available on all models

Childproof Door Locks

The childproof door locks prevent the rear doors from being opened from the inside regardless of the position of the lock tab.

■ Setting the Childproof Door Locks

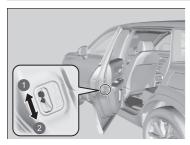

Slide the lever in the rear door to the lock position, and close the door.

■ When opening the door

Open the door using the outside door handle.

∑Childproof Door Locks

To open the door from the inside when the childproof door lock is on, put the lock tab in the unlock position, lower the rear window, put your hand out of the window, and pull the outside door handle.

1 Unlock

2 Lock

Auto Door Locking/Unlocking*

Your vehicle locks all doors or unlocks all doors/the driver's door automatically when a certain condition is met.

Auto Door Locking

■ Drive lock mode

All doors lock when the vehicle's speed reaches about 15 km/h.

Auto Door Unlocking

■ Park unlock mode

Right-hand Drive Type for African

The driver's door unlocks when the transmission is put into P with the brake pedal depressed.

The settings can be changed to unlock all doors.

Except Right-hand Drive Type for African

All doors unlock when the transmission is put into $\boxed{\mathbf{P}}$ with the brake pedal depressed.

You can turn off or change to another auto door locking/unlocking setting using the driver information interface or audio/information screen.

Models with colour audio system

Settings* P. 185

Models with Display Audio

► How to Customize the Vehicle Settings
P. 467

* Not available on all models

Tailgate

Precautions for Opening/Closing the Tailgate

Always make sure individuals and objects are clear of the tailgate before opening or closing it.

Models without power tailgate

- Open the tailgate all the way.
 - ▶ If it is not fully opened, the tailgate may begin to close under its own weight.
- Be careful when it is windy. The wind may cause the tailgate to close.

All models

Keep the tailgate closed while driving to:

- Avoid possible damage.
- ▶ Prevent exhaust gas from leaking into the vehicle.
- **≧ Carbon Monoxide Gas** P. 137

AWARNING

Anyone caught in the path of a tailgate that is being opened or closed can be seriously injured.


Make sure that all people are clear of the tailgate before opening or closing it.

Be careful not to hit your head on the tailgate or to put your hands between the tailgate and the luggage area when closing the tailgate.

When you are storing or picking up luggage from the luggage area or by using a forward and back kicking motion under the centre of the rear bumper for hands free access*, while the engine is idling, do not stand in front of the exhaust pipe. You may get burned.

Do not allow any passenger in the luggage space. They may get hurt during hard braking, a sudden acceleration, or a crash.

Opening/Closing the Tailgate

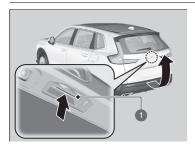

When all the doors are unlocked, the tailgate is unlocked.

Press the outer handle and lift open the tailgate.

If you are carrying the keyless remote or card key*, you do not have to unlock the tailgate before opening it.

Outer Handle



1 Inner Handle

To close the tailgate, grab the inner handle, pull the tailgate down, and push it closed from outside.

Right-hand Drive Type for African

If you close the tailgate when the driver's door is locked, the tailgate locks automatically.

► Some exterior lights flash.

▶ Precautions for Opening/Closing the Tailgate

Make sure luggage or other items do not touch the tailgate support struts.



Tailgate Support Struts

∑Opening/Closing the Tailgate

- Do not leave the keyless remote or card key* in the vehicle when you get out. Carry it with you.
- Even if you are not carrying the keyless remote or card key*, you can unlock the tailgate while someone else with the keyless remote or card key* is within range.

Right-hand Drive Type for African

 Do not leave the keyless remote or card key inside the luggage area and close the tailgate. The beeper sounds and the tailgate cannot be closed.

Opening/Closing the Power Tailgate*

The power tailgate can be operated by pressing the power tailgate button on the remote transmitter, pressing the power tailgate button on the driver side control panel, pressing the outer handle or inner button on the tailgate, or by raising and lowering your foot under the centre of the rear bumper for hands free access*.

The power tailgate can be opened/closed when the transmission is in P.

∑Opening/Closing the Power Tailgate *

AWARNING

Opening or closing a power tailgate while any part of a passenger is in the tailgate's operating path can cause serious injury.

Make sure all passengers or objects are clear of the tailgate operating range before opening or closing the tailgate.

WARNING: Always take the ignition key with you whenever you leave the vehicle alone or with other occupants.


NOTICE

Do not push or pull on the power tailgate when it is being automatically opened or closed. Forcibly opening or closing the power tailgate while in operation can deform the tailgate frame.

When operating the power tailgate, make sure there is enough space around your vehicle. People near the tailgate may be seriously hurt if the tailgate hits or closes on their heads. Be especially cautious if children are around.

■ Using the Hands Free Access*



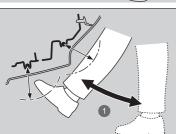

About 1 second

Use a forward and back kicking motion for about 1 second under the centre of the rear bumper to open or close the power tailgate while carrying the keyless remote or card key*.

Some exterior lights will flash and a beeper will sound, then the tailgate begins to move.

■Using the Hands Free Access*

During rain or in other instances when the vehicle becomes wet, the sensor may not properly detect your foot motion.

When performing work on or around the rear section of the vehicle, you may inadvertently open or close the tailgate.

To prevent this from happening, select Customized Features on the audio/information screen and then select OFF for the feature.


► How to Customize the Vehicle Settings P. 467

If you hold your foot under the bumper for too long or sweep your foot from side to side, the power tailgate does not open or close.

This function will not operate if you don't have the keyless remote or card key* on you. Please make sure you have the keyless remote or card key* on you.


■ Power Tailgate Walk Away Close

When you walk away from the vehicle while carrying the keyless remote or card key*, the power tailgate will automatically close.

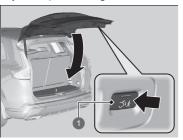

- **1.** Carry the keyless remote or card key*, and press the walk away close button.
 - ➤ The indicator on the walk away close button will turn green when the walk away close is activated.

Walk Away Close Button

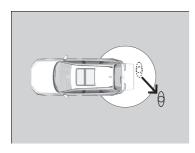


Walk at least 1.0 m away

- **2.** Walk at least 1.0 m away from the vehicle within 30 seconds of pressing the walk away close button.
 - Some exterior lights will flash and a beeper will sound, then the power tailgate begins to close.

When auto lock function is set to ON, the vehicle will automatically lock when all doors and the tailgate have closed.

■ Locking the doors and tailgate (Walk away auto lock) P. 228

■ Using the Remote Transmitter

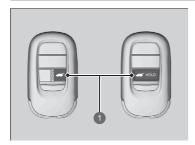

Power Tailgate Button

Press the power tailgate button for more than one second to operate when the power mode is in VEHICLE OFF.

Some exterior lights flash and the beeper sounds.

If you press the button again while the power tailgate is moving, it will stop.

Press the button for more than one second, and the power tailgate will reverse direction.

■ Customizing when to open the tailgate

Anytime: The power tailgate unlocks and opens at the same time. This is the default setting.

When Unlocked/When unlocked: The tailgate opens when all doors are unlocked.

▶ How to Customize the Vehicle Settings P. 467

■Opening/Closing the Power Tailgate*

The power tailgate may not open or close under the following conditions:

- You start the engine while the tailgate is automatically opening or closing.
- The vehicle is parked on a steep hill.
- The vehicle is swayed in a strong wind.
- The tailgate or the roof is covered with snow or ice.

Right-hand Drive Type for African

If you close the power tailgate when all the doors are locked, the power tailgate locks automatically and some exterior lights will flash.

If you replace the battery or the power tailgate fuse while the tailgate is open, the power tailgate may be disabled. The power tailgate resumes once you manually close the tailgate.

Installing aftermarket components other than Honda genuine accessories on the power tailgate may prevent it from fully opening or closing.

Make sure the power tailgate is fully open before you get your luggage in and out.

The beeper sounds when you start driving while the power tailgate is still open, or closing.

Using the Power Tailgate Button



To open or close the power tailgate, press the power tailgate button for about one second.

Some exterior lights flash and the beeper sounds.

If you press the button again while the power tailgate is moving, it will stop.

Press the button for about one second, and the power tailgate will reverse direction.

∑Opening/Closing the Power Tailgate *


If the power tailgate meets resistance while opening or closing, the auto reverse feature reverses the direction. The beeper sounds three times.

The auto reverse function stops sensing when the tailgate is almost closed to make sure that it fully closes.

Do not touch the sensors located on both sides of the tailgate. The power tailgate does not close if you touch either sensor when you are trying to close the tailgate.

Be careful not to scratch the sensors with a sharp object. If scratched, they can be damaged, and the power tailgate closing feature malfunctions.

Using the Tailgate Outer Handle

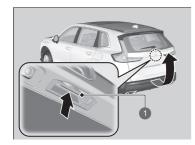

Outer Handle

If you press the outer handle of the tailgate for no longer than one second, the tailgate opens automatically.

- ► The beeper sounds.
- ▶ If you want to open the tailgate manually, press the outer handle for more than one second.
- **▶** Opening/Closing the Tailgate P. 239

If you are carrying the keyless remote, you do not have to unlock the tailgate before opening it.

If you press the outer handle again while the power tailgate is moving, it will stop. Press the outer handle, and the power tailgate will reverse direction.

■Using the Tailgate Outer Handle

- Do not leave the keyless remote or card key* in the vehicle when you get out. Carry it with you.
- Even if you are not carrying the keyless remote or card key*, you can unlock the tailgate while someone else with the keyless remote or card key* is within range.


Right-hand Drive Type for African

• Do not leave the keyless remote or card key inside the luggage area and close the tailgate. The beeper sounds and the tailgate cannot be closed.

You can change the power tailgate operation setting on and off.

▶ How to Customize the Vehicle Settings P. 467

■ Using the Tailgate Inner Button

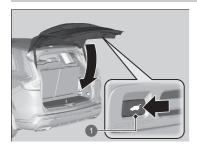

1 Tailgate Inner Button

Press the tailgate inner button on the tailgate to close the power tailgate.

► The beeper sounds.

If you press the tailgate inner button again while the power tailgate is moving, it will stop. Press and release the tailgate inner button again, and the power tailgate will reverse direction.

■ Programming Tailgate Position



The extent to which the power tailgate automatically opens can be programmed.

To program:

1. Open the tailgate to the desired position.



1 Tailgate Inner Button

2. Press and hold the tailgate inner button. You will hear one long beep, followed by two short beeps.

▶ Programming Tailgate Position

If the tailgate is only slightly opened, the position cannot be programmed, even if you push the tailgate inner button.

If you want to reprogram the power tailgate to open all the way, manually raise the tailgate to its upper most position and follow directions for step 2.

Continued 247

Auto-Closer

If you manually close the power tailgate, it latches automatically.

Power Tailgate Fall Detection

Automatically lowers the power tailgate when there is a possibility that the fully opened power tailgate can fall down by its own weight (for example, with snow on the tailgate). The beeper sounds while the power tailgate lowers.

>> Auto-Closer

The auto-closer feature does not activate if you push the tailgate outer handle while the power tailgate is closing.

NOTICE

Do not put any force on the tailgate while the power tailgate is latching.

Keep your hands away from the tailgate when you manually close the tailgate and let it latch automatically. It is dangerous to put your hands around the tailgate as it starts to latch itself.

If you try to manually close the power tailgate immediately after it fully opens, the power tailgate fall detection may activate.

Once the power tailgate fall detection activates, wait until the power tailgate fully closes. Keep away from the power tailgate when it is in motion.

If the power tailgate fall detection constantly activates, consult at a dealer.

Security System

Immobilizer System

This system prevents a key that has not been pre-registered from starting the engine.

Pay attention to the following when pressing the **ENGINE START/STOP** button:

- Do not allow objects that emit strong radio waves near the ENGINE START/ STOP button.
- Make sure the key is not covered by or touching a metal object.
- Do not bring a key from another vehicle's immobilizer system near the ENGINE START/STOP button.
- Do not put the key near magnetic items. Electronic devices, such as televisions and audio systems, emit strong magnetic fields. Note that even a key chain can become magnetic.

NOTICE

Leaving the key in the vehicle can result in theft or accidental movement of the vehicle.

Always take the key with you whenever you leave the vehicle unattended.

Do not alter the system or add other devices to it. Doing so may damage the system and make your vehicle inoperable.

If the system repeatedly does not recognise the coding of your key, contact a dealer. If you have lost your key and cannot start your vehicle, contact a dealer.

Security System Alarm

The security system alarm activates when the tailgate, bonnet, or doors are forcibly opened. The alarm does not activate if the tailgate or doors are opened with the key*, remote transmitter or keyless access system.

■ When the security system alarm activates

The horn sounds intermittently, and some exterior lights flash.

■ To deactivate the security system alarm

Unlock the vehicle using the key*, remote transmitter, or keyless access system, or turn the power mode to ON. The system, along with the horn and flashing lights, is deactivated

■ Setting the security system alarm

The security system alarm automatically sets when the following conditions have been met:

- The power mode is set to VEHICLE OFF.
- The bonnet is closed.
- All doors and the tailgate are locked from outside with the remote transmitter, or keyless access system.

■ When the security system alarm sets

The security system alarm indicator in the instrument panel blinks and the blinking interval changes after about 15 seconds.

■ To cancel the security system alarm

The security system alarm is cancelled when the vehicle is unlocked using the key*, remote transmitter or keyless access system, or when the power mode is set to ON. The security system alarm indicator goes off at the same time.

Security System Alarm

Do not alter the system or add other devices to it. Doing so may damage the system and make your vehicle inoperable.

The security system alarm will continue for approximately 5 minutes before the security system deactivates.

The system will go through ten 30-second cycles, during which the horn will sound and an emergency indicator will flash.

Depending on circumstances, the security system may continue operating for more than 5 minutes.

Do not set the security system alarm when someone is in the vehicle or a window is open. The system can accidentally activate when:

• Unlocking the door with the lock tab.

or keyless access system.

 Opening the bonnet with the bonnet release handle.

If the battery goes dead after you have set the security system alarm, the security alarm may go off once the battery is recharged or replaced.

If this occurs, deactivate the security system alarm by unlocking a door using the key*, remote transmitter

Except Latin American with AWD for five-seater models

Except Left-hand Drive Type for African models and

Middle Eastern models

If you unlock a door with the built-in key while the security system is activated, the alarm will go off.

Windows

Opening/Closing the Power Windows

The power windows can be opened and closed when the power mode is in ON, using the switches on the doors.

The driver's side switches can be used to open and close all the windows. The power window lock button on the driver's side must be switched off to open and close the windows from anywhere other than the driver's seat.

When the power window lock button is pushed in, the indicator comes on and you can only operate the driver's window. Turn the power window lock button on if a child is in the vehicle.

∑Opening/Closing the Power Windows

AWARNING

Closing a power window on someone's hands or fingers can cause serious injury.

Make sure your passengers are away from the windows before closing them.

WARNING: Always take the ignition key with you whenever you leave the vehicle alone or with other occupants.

Except Australian, Fijian, and New Zealand models

The power windows can be operated for up to 10 minutes after you set the power mode to VEHICLE OFF

Models with auto-open/close function on all windows

Closing driver's door cancels this function.

Models with auto-open/close function on driver's window

Opening either front door cancels this function.


Australian, Fijian, and New Zealand models

The power windows can be operated for up to 45 seconds after you set the power mode to VEHICLE OFF.

Opening either front door cancels this function.

Continued 251

Opening/Closing the Windows with Auto-Open/Close Function

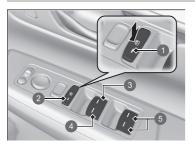

- 1 Indicator
- 2 Power Window Lock Button
- 3 Driver's Window Switch
- 4 Front Passenger's Window Switch*
- Switch*
 Switch*

■ Manual operation

To open: Push the switch down lightly, and hold it until the desired position is reached. **To close:** Pull the switch up lightly, and hold it until the desired position is reached.

■ Automatic operation

To open: Push the switch down firmly. **To close:** Pull the switch up firmly.

The window opens or closes completely. To stop the window at any time, push or pull the switch briefly.

∑Opening/Closing the Power Windows

Auto Reverse

If a power window senses resistance when closing automatically, it will stop closing and reverse direction.

The driver's window auto reverse function is disabled when you continuously pull up the switch.

The auto reverse function stops sensing when the window is almost closed to ensure that it fully closes.

■ Opening/Closing Windows without Auto-Open/Close Function*




To open: Push the switch down. **To close:** Pull the switch up.

Release the switch when the window reaches the desired position.

Close

Open

Opening/Closing the Windows with the Remote*

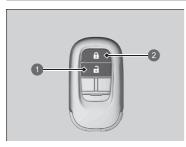

To open: Press the unlock button, and then within 10 seconds, press it again and hold it.

To close*: Press the lock button, and then within 10 seconds, press it again and hold it.

If the windows stop midway, repeat the procedure.

1 Unlock Button

2 Lock Button

■Opening/Closing the Windows with the Remote*

Models with panoramic roof

If you open/close* the windows with the remote, the panoramic roof will open/close* automatically along with them.

You can turn off or on to open the windows with the remote setting using the driver information interface or audio/information screen.

Models with colour audio system

Settings* P. 185

Models with Display Audio

▶ How to Customize the Vehicle Settings P. 467 Open

■ Opening the Windows with the Key*



Unlock the driver's door with the key. Within 10 seconds of returning the key to the central position, turn the key in the unlock direction and hold it there.

Release the key to stop the windows at the desired position. If you want further adjustment, repeat the same operation.

■ Opening the Windows with the Key*

If you open the windows with the key, the panoramic roof will open automatically along with them.

Opening/Closing the Panoramic Roof

You can operate the panoramic roof when the power mode is in ON. Use the switch in the front of the ceiling to open and close the panoramic roof.

∑Opening/Closing the Panoramic Roof

AWARNING

Opening or closing the panoramic roof or sunshade on someone's hands or fingers can cause serious injury.

Make sure all hands and fingers are clear of the panoramic roof and sunshade before opening or closing it.

WARNING: Always take the ignition key with you whenever you leave the vehicle alone or with other occupants.

WARNING: Extending the head, arms or other parts of the body through the panoramic roof while the vehicle is moving can cause serious injury or death.

NOTICE

Opening the panoramic roof in below freezing temperature or when it is covered with snow or ice can damage the panoramic roof panel or motor.

∑Opening/Closing the Panoramic Roof

Except Australian, Fijian, and New Zealand models

The panoramic roof can be operated for up to 10 minutes after you set the power mode to VEHICLE OFF.

Models with auto-open/close function on all windows

Closing driver's door cancels this function.

Models with auto-open/close function on driver's window

Opening either front door cancels this function.

Australian, Fijian, and New Zealand models

The panoramic roof can be operated for up to 45 seconds after you set the power mode to VEHICLE OFF.

Opening either front door cancels this function.

When resistance is detected, the auto reverse function causes the panoramic roof to change directions, then stop. Auto reverse stops sensing when the panoramic roof is almost closed to ensure that it fully closes.

You can use the remote transmitter or the key* to operate the panoramic roof.

- **D** Opening/Closing the Windows with the Remote* P. 253
- Opening the Windows with the Key*

Using the Panoramic Roof Switch



- Open
 Close
- **3** Tilt

■ Automatic operation

To open: Pull the switch back firmly. **To close:** Push the switch forward firmly.

The panoramic roof automatically opens or closes all the way. To stop the panoramic roof midway, pull or push the switch briefly.

■ Manual operation

To open: Pull the switch back lightly, and hold it until the desired position is reached. **To close:** Push the switch forward lightly, and hold it until the desired position is reached.

■ Tilting the panoramic roof up

To tilt: Push on the centre of the panoramic roof switch.

To close: Push the switch forward firmly.

■ Using the Panoramic Roof Switch



- Comfort Position
- Pull Open Position

The panoramic roof cannot be fully opened in a single operation. The panoramic roof has a "comfort" position or wind noise reduction position at which the roof first stops.

To open fully, pull the switch back again after the roof has stopped at this position.

Whenever the panoramic roof is opening, the sunshade moves along with it. However, when the panoramic roof is closing, the sunshade does not move.

When you tilt open the panoramic roof, the sunshade opens slightly to let in fresh air. When you close the panoramic roof from this position, the sunshade returns to its closed position.

Using the Sunshade Switch



- Open
- 2 Close

■ Automatic operation

To open: Pull the switch back firmly. **To close:** Push the switch forward firmly.

The sunshade automatically opens or closes all the way. To stop the sunshade midway, pull or push the switch briefly.

■ Manual operation

To open: Pull the switch back lightly, and hold it until the desired position is reached. **To close:** Push the switch forward lightly, and hold it until the desired position is reached.

Sunshade Switch Sunshade Switch

The sunshade can be opened or closed to adjust the amount of light that enters the cabin.

When you use the sunshade switch to open the sunshade, the panoramic roof does not move.

The sunshade cannot be fully closed if the panoramic roof is open. When you close the sunshade with the panoramic roof open, the sunshade stops slightly ahead of the panoramic roof glass. When you push the switch forward again, the sunshade and the panoramic roof close together.

Operating the Switches Around the Steering Wheel

ENGINE START/STOP Button

■ Changing the Power Mode



If you carry the keyless remote or card key* and press **ENGINE START/STOP** button without depressing the brake pedal, the power mode will change in this order: VEHICLE OFF→ACCESSORY→ON→VEHICLE OFF

VEHICLE OFF:

Vehicle power is turned OFF.

ACCESSORY:

The audio system and some accessories can be used.

ON:

All accessories can be used.

≥ENGINE START/STOP Button

If the keyless remote or card key* is set in a storage box or another place where its signal can be interrupted, the power mode may not change.

When the power mode is set to ON, the power mode will change to ACCESSORY if the **ENGINE START/STOP** button is pressed while the transmission is in a position other than \boxed{P} .

Automatic Power Off

If you leave the vehicle for 30 to 60 minutes with the transmission in $\boxed{\textbf{P}}$ and the power mode in ACCESSORY, the vehicle automatically goes into the mode similar to VEHICLE OFF (LOCK) to avoid draining the battery.

When in this mode: The steering wheel does not lock. You cannot lock or unlock doors with the remote transmitter or the keyless access system. Press the **ENGINE START/STOP** button twice to switch the mode to VEHICLE OFF (LOCK).

■ Power Mode Reminder

If you open the driver's door when the power mode is in ACCESSORY, a warning beep sounds.

Keyless Remote/Card Key* Reminder



When the power mode is set to any mode other than OFF and you remove the keyless remote or card key* from the vehicle and shut the door, an alarm will sound. If the alarm continues to sound, place the keyless remote or card key* in another location.

■ When the power mode is in ACCESSORY

The alarm will sound from outside the vehicle.

■ When the power mode is in ON

An alarm will sound both inside and outside the vehicle. In addition, a warning indicator will appear on the instrument panel.

■ Keyless Remote/Card Key * Reminder

When the keyless remote or card key* is within the system's operational range, and the driver's door is closed, the warning function cancels.

If the keyless remote or card key* is taken out of the vehicle after the engine has been started, you can no longer change the **ENGINE START/STOP** button mode or restart the engine. Always make sure that the keyless remote or card key* is in your vehicle when you operate the **ENGINE START/STOP** button.

Removing the keyless remote or card key* from the vehicle through a window does not activate the warning buzzer.


Do not put the keyless remote or card key* on the dashboard or in the glove box. It may cause the warning buzzer to go off. Under some other conditions that can prevent the vehicle from locating the keyless remote or card key*, the warning buzzer may also go off even if the keyless remote or card key* is within the system's operational range.

* Not available on all models

Lights

Headlights/Position Lights

The lights will turn on automatically depending on the ambient brightness. They can also be switched on and off manually.

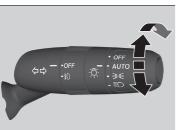

The exterior lights will switch on automatically when the light switch is set to **AUTO** while the power mode is in ON.

■ Manual operation Headlights/position lights:

Turn the light switch to **≣**○

Position lights:

Turn the light switch to 3005.

Headlight/position lights off:

Turn the light switch to **OFF** and release it while the shift lever is in **P** and the parking brake is applied.

- ► The lights will come back on automatically when:
- The light switch is turned to **OFF** again and released.
- The transmission is taken out of **P** and the parking brake is released.

∑Lights

When the lights are on, the lights on indicator in the instrument panel will be on.

Lights On Indicator P. 151

The headlights are suitable for only left-hand or only right-hand drive. When driving on roads with different traffic rules, the headlight beam must be adjusted.

Adjusting Headlight Distribution* P. 592


When the position lights are on, the tail, rear side marker, and rear license plate lights will also switch on.

When the light switch is turned to $\boxed{500}$ or $\boxed{50}$ and the power is turned to OFF, a beeper sounds when the driver's door is opened.

When the light switch is in **AUTO** and the ambient light levels are low, the headlights and position lights will switch on if you unlock a door. They will switch off when the door is locked.

The light sensor is in the location shown below. Do not cover this light sensor with anything; otherwise, the automatic lighting system may not work properly.




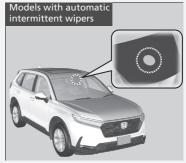

Continued 263

High Beams

When the headlights are on, push the lever forward. Pull the lever back to return to low beams.

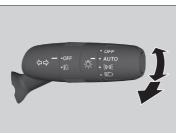


■ Flashing the high beams

Pull the lever back to switch on the high beams.

▶ Release the lever to return to low beams.

Do not leave the lights on when the engine is off because it will cause the battery to discharge.

■ Turn Signals

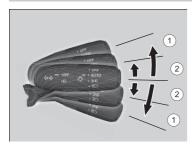

The turn signals can be used when the power mode is in ON.

■ ①: Turn signal

Push the lever up or down based on the direction you want to turn, and the turn signal will blink.

■ ②: One-touch turn signal

When you lightly push the lever up or down and release it, the turn signal will blink 3 times.

▶ If you lightly push the lever in the opposite direction while it is blinking, the blinking will stop.

∑Turn Signals

The turn signal indicator on the instrument panel will blink when the external turn signal blinks.

▶ Turn Signal and Hazard Warning IndicatorsP. 151

Headlight Integration with Wipers

The headlights automatically come on when the wipers are used several times within a certain number of intervals with the headlight switch in **AUTO**.

The headlights automatically go off a few minutes later if the wipers are stopped.

Automatic Lighting Off Feature

The headlights, all other exterior lights, and the instrument panel lights turn off 15 seconds after you set the power mode to VEHICLE OFF, take the keyless remote or card key* with you, and close the driver's door.

If you set the power mode to VEHICLE OFF with the headlight switch on, but do not open the door, the lights turn off after 10 minutes (3 minutes, if the switch is in the **AUTO** position).

The lights turn on again when you unlock or open the driver's door. If you unlock the door, but do not open it within 15 seconds, the lights go off. If you open the driver's door, you will hear a reminder chime alerting you that the lights are on.

This feature activates while the headlights are off in **AUTO**. The instrument panel brightness does not change when the headlights come on.

At dark ambient light levels, the automatic lighting control feature turns on the headlights, regardless of the number of wiper sweeps.

You can turn the headlight integration with wipers function on and off.

Models with colour audio system

Settings* P. 185

Models with Display Audio

► How to Customize the Vehicle Settings P. 467

∑Automatic Lighting Off Feature

You can change the headlight auto off timer setting.

Models with colour audio system

Settings* P. 185

Models with Display Audio

► How to Customize the Vehicle Settings P. 467

■ Fog Lights*

The fog lights can be used when the power mode is in ON.


■ Front fog lights*

Can be used when the position lights or the headlights are on.

■ Rear fog light*

Can be used when the position lights*, headlights, or the front fog lights* are on.

■ Front and rear fog light switch*

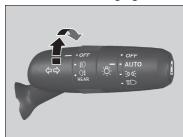

To turn the front fog lights on:

Rotate the switch up from the **OFF** position to the $\cancel{1}$ position. The $\cancel{1}$ indicator comes on.

To turn the front and rear fog lights on:


Rotate the switch one position up from the $\cancel{1}$ 0 position. The $\cancel{1}$ 1 and $\cancel{0}$ 4 indicators come on.

To turn the rear fog light on:

Rotate the switch one position up from the $\cancel{10}$ position and then rotate the switch one position down from the $\cancel{10}$ position. The $\cancel{0}$ indicator stays on.

To turn the rear fog light off, turn the headlight switch to the **OFF** position.

■ Front fog light switch*

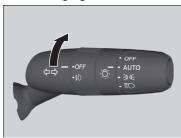

To turn the front fog lights on:

Rotate the switch to **(a)**. The **(b)** indicator comes on.

■ Rear fog light switch*



To turn the rear fog light on:

Rotate the switch to ()‡. The ()‡ indicator comes on.

Daytime Running Lights

The position/daytime running lights come on when the following conditions have been met:

- The power mode is in ON.
- The headlight switch is **AUTO** or 5005.
- The ambient light is bright.


While the vehicle is stopped, if you turn the light switch to **OFF** and release it, the daytime running lights will turn off. When the transmission is taken out of $\boxed{\textbf{P}}$ and the parking brake is released, the lights will come on again. Otherwise, if the light switch is once more turned to **OFF**, the lights will come on again.

≥ Daytime Running Lights

Daytime running lights and the position lights share the same light source.

Daytime running lights are brighter than the position lights.

Headlight Adjuster*

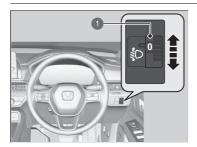

Adjustment Dial

You can adjust the vertical angle of the low beam headlights when the position lights or headlights are on.

Turn the adjustment dial to select an appropriate angle for the headlights.

The larger dial number indicates the lower angle.

Models without adjustment dial

Your vehicle is equipped with the automatic headlight adjusting system that automatically adjusts the vertical angle of the low beam headlights. If you find a significant change in the vertical angle of the headlights, there may be a problem with the system. Have your vehicle checked by a dealer.

■ To select the adjustment dial position

Refer to the below table for the appropriate dial position for your vehicle's riding and loading conditions.

| Condition | Dial position |
|--|---------------|
| A driver | . 0 |
| A driver and a front passenger | 0 |
| Five persons in the front and second row seats*1 | . 1 |
| Four persons in the front and third row seats*2 | ı |
| Five persons in the front and second row seats and luggage in the luggage area, within the limits of maximum permissible axle weight and maximum permissible vehicle weight*1 | |
| Seven persons in the front, second row, and third row seats*2 | 2 |
| Seven persons in the front, second row, and third row seats and luggage in the luggage area, within the limits of maximum permissible axle weight and maximum permissible vehicle weight* ² | |
| A driver and luggage in the luggage area, within the limits of maximum permissible axle weight and maximum permissible vehicle weight | 3 |

^{*1:} Five-seater models

^{*2:} Seven-seater models


Auto High-Beam

The front sensor camera detects the light sources ahead of the vehicle such as the lights of a preceding or oncoming vehicle, or street lights. When you are driving at night, the system automatically switches the headlights between low beam and high beam depending on the situation.

How to Use the Auto High-Beam

■ Activating the system

When all of the following conditions have been met, the auto high-beam indicator comes on and automatically switches between the high beam and low beam, depending on the situation.

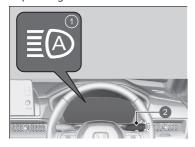

- Auto High-Beam Indicator
- 2 Light Switch

- The power mode is in ON.
- The light switch is in **AUTO**.
- The lever is in the low beam position.
- The headlights have been automatically activated.
- It is dark outside the vehicle

■ Auto High-Beam

The auto high-beam system does not always operate in every situation. This system is just for assisting the driver. Always observe your surroundings and manually switch the headlights between high beam and low beam if necessary.

The range and the distance at which the camera can recognise light sources varies depending on conditions surrounding your vehicle.

Regarding the handling of the camera mounted to the inside of the windscreen, refer to the following.

Front Sensor Camera P 682

For the auto high-beam to work properly:

- Do not place an object that reflects light on the dashboard.
- Keep the windscreen around the camera clean.
- When cleaning the windscreen, be careful not to apply the windscreen cleanser to the camera lens.
- Do not attach an object, sticker, or film to the area around the camera
- Do not touch the camera lens.

If the camera receives a strong impact, or repairing of the area near the camera is required, consult a dealer. If the auto high-beam indicator does not come on even when all the conditions have been met, carry out either of the procedures below and the indicator will come on.

- Pull the lever towards you and release it.
- Turn the light switch to Turn the light switch to **AUTO**.

■ Automatic switching between high-beam and low-beam

When the auto high-beam indicator comes on, the headlights switch between high beam and low beam based on the following conditions.

High beam

All of the following conditions must be met before the high beams turn on.

- Your vehicle speed is 30 km/h or more.
- There are no preceding or oncoming vehicles with headlights or taillights turned on.
- There are few street lights on the road ahead.

Low beam

One of the following conditions must be met before the low beams turn on.



- Your vehicle speed is 24 km/h or less.
- There is a preceding or oncoming vehicle with headlights or taillights turned on.
- There are many street lights on the road ahead.

Matter Automatic switching between high-beam and low-beam

In the following cases, the auto high-beam system may not switch the headlights properly or the switching timing may be changed. If the automatic switching operation does not fit for your driving habits, please switch the headlights manually.

- The brightness of the lights from a preceding or oncoming vehicle is intense or poor.
- Visibility is poor due to the weather (rain, snow, fog, windscreen frost, etc.).
- Surrounding light sources like street lights, electric billboards, and traffic lights are illuminating the road ahead.
- The brightness level of the road ahead constantly changes.
- The road is bumpy or has many curves.
- A vehicle suddenly appears in front of you, or a vehicle in front of you is not in the preceding or oncoming direction.
- Your vehicle is tilted with a heavy load in the rear.
- A traffic sign, mirror, or other reflective object ahead is reflecting strong light towards the vehicle.
- The oncoming vehicle frequently disappears under roadside trees or behind median barriers.
- The preceding or oncoming vehicle is a motorcycle, bicycle, mobility scooter, or other small vehicle.

The auto high-beam system keeps the headlight low beam on when:

- Windscreen wipers are operating at a high speed.
- The camera has detected a dense fog.

■ Manual switching between high-beam and low-beam

If you want to manually switch the headlights between high beam and low beam, follow either of the procedures below. Note that when you do this, the auto high-beam indicator will turn off and the auto high-beam will be deactivated.

Using the lever:

Pull the lever towards you for flashing the high beams then release it or push the lever forward to the high beam position.

- ➤ To reactivate the auto high-beam, follow either of the procedures below and the auto high-beam indicator will come on.
- Pull the lever towards you and release it.
- Turn the light switch to D and then to **AUTO** when the lever is in the low beam position.

Using the light switch:

Turn the light switch to EO.

➤ To reactivate the auto high-beam, turn the light switch to **AUTO** when the lever is in the low beam position, and the auto high-beam indicator will come on.

How to turn off the Auto High-Beam System

You can turn the auto high-beam system on and off.

Models with colour audio system

Settings* P. 185


Models with Display Audio

▶ How to Customize the Vehicle Settings P. 467

* Not available on all models

Wipers and Washers

Windscreen Wipers/Washers

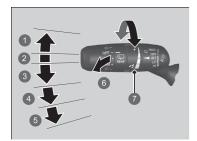

- MIST
- OFF.
- INT*1/AUTO*2
- 4 LO: Low speed wipe
- **6 HI**: High speed wipe
- 6 Washer
- Ring*
 - **d**:Lower speed, fewer sweeps
 - ♣:Higher speed, more sweeps

The windscreen wipers and washers can be used when the power mode is in ON.

■ MIST

The wipers run at high speed until you release the lever

■ Wiper switch (OFF, INT*1/AUTO*2, LO, HI) Move the lever up or down to change the wiper settings.

■ Adjusting wiper operation*

Turn the adjustment ring to adjust the wiper operation.

■ Washer

Sprays while you pull the lever toward you. When you release the lever for more than one second, the spray stops, the wipers sweep two or three more times to clear the windscreen. and then stop.

Wipers and Washers

NOTICE

When lifting the front wiper arms, move them into the maintenance position before lifting them.

Lifting the Front Wiper Arms P. 763

NOTICE

Do not use the wipers when the windscreen is dry. The windscreen will get scratched, or the rubber blades will get damaged.

NOTICE

Turn the washers off if no washer fluid comes out. The pump may get damaged.

The wiper motor may stop motor operation temporarily to prevent an overload. Wiper operation will return to normal within a few minutes.

Models with intermittent time adjustment ring

If the vehicle speeds up while the wipers are operating intermittently, the length of the wipe interval shortens

When the vehicle speeds up, the wiper operation's shortest delay setting (4) and the LO setting become the same

NOTICE

In cold weather, the blades may freeze to the windscreen.

Operating the wipers in this condition may damage the wipers. Use the demister to warm the windscreen, then turn the wipers on.

- *1: Models with manual intermittent operation
- *2: Models with automatic intermittent operation

Automatic Intermittent Wipers*



- Adjustment Ring
 - : Low Sensitivity
 - +: High Sensitivity

When you push the lever down to **AUTO**, the windscreen wipers sweep once, and go into the automatic mode.

The wipers operate intermittently, at low speed, or at high speed and stop in accordance with the amount of rainfall the rainfall sensor detects.


■ AUTO sensitivity adjustment

When the wiper function is set to **AUTO**, you can adjust the sensitivity of the rainfall sensor (using the adjustment ring) so that wipers will operate in accordance with your preference.

Wipers and Washers

If the wipers stop operating due to an obstacle such as the buildup of snow, park the vehicle in a safe place. Rotate the wiper switch to **OFF**, set the power mode to ACCESSORY or VEHICLE OFF, then remove the obstacle.

The rainfall sensor is in the location shown below.

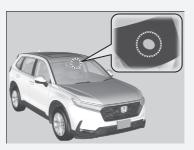


NOTICE

AUTO should always be turned **OFF** before the following situations in order to prevent severe damage to the wiper system:

- Cleaning the windscreen
- Driving through a car wash
- No rain present

■ Rear Wiper/Washer

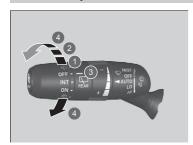

1NT: Intermittent

2 ON: Continuous wipe

OFF

4 Washer

The rear wiper and washer can be used when the power mode is in ON.

■ Wiper switch (OFF, INT, ON)

Change the wiper switch setting according to the amount of rain.

■ Washer (🛱)

Sprays on the rear window while you rotate the switch to this position.


Hold it to activate the rear wiper and to spray the washer. Once released, the washer spray will stop and the rear wiper will return to its selected switch setting after a few sweeps.

■ Operating in reverse

When you shift the transmission to $\boxed{\mathbf{R}}$ with the windscreen wipers activated, the rear wiper operates automatically as follows even if its switch is off.

| Front Wiper Operation | Rear Wiper Operation |
|-----------------------------------|----------------------|
| Intermittent | Intermittent |
| Low speed wipe High speed wipe | Continuous |

Rear Demister Button

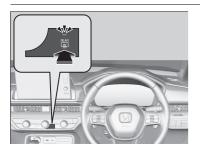

Press the rear demister button to demist the rear window when the power mode is in ON.

The rear demister automatically switches off after 10-30 minutes depending on the outside temperature. However, if the outside temperature is 0°C or below, it does not automatically switch off.

>> Rear Demister Button


This system consumes a lot of power, so turn it off when the window has been demisted. Also, do not use the system for a long time while the engine is idling. This may weaken the battery, making it difficult to start the engine.

Driving Position Memory System*

You can store two driver's seat positions (except for power lumbar) with the driving position memory system.

When you unlock and open the driver's door with a keyless remote or keyless access system, the seat adjusts automatically to one of the two preset positions.

- **DRIVER 1** transmitter is linked to memory button 1.
- DRIVER 2 transmitter is linked to memory button 2.

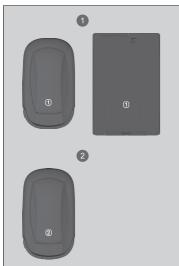

The driver's seat moves rearward depending on the set seating position once you

- Stop the vehicle.
- Put the transmission in **P**.
- Set the power mode to VEHICLE OFF.
- Open the driver's door.

Once the power mode is in the ACCESSORY position, the driver's seat moves forward to the **DRIVER 1** or **2** preset position.

Driving Position Memory System *

Using the driver information interface or audio/ information screen, you can disable the automatic seat adjustment function.

Models with colour audio system

Settings* P. 185

Models with Display Audio

Now to Customize the Vehicle Settings
P. 467

The driver's seat easy exit feature can be turned ON/ OFF.

Models with colour audio system

Settings* P. 185

Models with Display Audio

▶ How to Customize the Vehicle Settings P. 467

System Operation

The system will not operate if:

- The transmission is out of the P position.
- Either memory button is pressed while the seat is in motion.
- The seat position is adjusted while in operation.
- Either of the memorized positions is set fully to the rear.

The system may not recognise a key if:

- The key is in close proximity to a mobile phone or other wireless device.
- Both keys are in the vehicle at the same time.
- The Driving Position Memory System is disabled in customized features.
- Opening driver's door without fully grabbing the door handle.

DRIVER 1DRIVER 2

Storing a Position in Memory



- 1 Memory Button 1
- 2 Memory Button 2
- **SET** Button
- 4 Indicator Light

- **1.** Set the power mode to ON. Adjust the driver's seat to the desired position.
- 2. Press the SET button.
 - ► The **SET** button indicator light will come on.
- **3.** Press and hold memory button 1 or 2 within five seconds of pressing the **SET** button.
- ➤ You will hear the beeper, and The **SET** button indicator light goes off.


Storing a Position in Memory

After you press the **SET** button, the storing operation will be cancelled when:

- You do not press the memory button within five seconds.
- You readjust the seat position before the doublebeep.
- You set the power mode to any position except ON.

Continued 279

■ Recalling the Stored Position

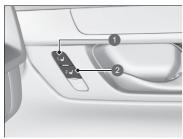

- Memory Button 1
- 2 Memory Button 2

- **1.** Put the transmission into P.
- **2.** Apply the parking brake.
- **3.** Press a memory button (1 or 2).

The seat will automatically move to the memorized position.


■ Recalling the Stored Position

The seat will stop moving if you:

- Press the **SET** button, or a memory button (1 or 2).
- Adjust the seat position.
- Put the transmission to a position other than **P**.

Adjusting the Steering Wheel

The steering wheel height and distance from your body can be adjusted so that you can comfortably grip the steering wheel in an appropriate driving posture.

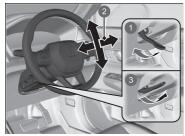

- Release
- 2 Adjust
- B Lock

- **1.** While the vehicle is stopped, push the steering wheel adjustment lever down.
 - ► The steering wheel adjustment lever is under the steering column.
- **2.** Move the steering wheel up or down, and in or out.
 - ► Make sure you can see the instrument panel gauges and indicators.
- **3.** Pull the steering wheel adjustment lever up to lock the steering wheel in position.
 - ➤ After adjusting the position, make sure you have securely locked the steering wheel in place by trying to move it up, down, in, and out.

∑Adjusting the Steering Wheel

AWARNING

Adjusting the steering wheel position while driving may cause you to lose control of the vehicle and be seriously injured in a crash.


Adjust the steering wheel only when the vehicle is stopped.

Mirrors

Interior Rearview Mirror

Adjust the angle of the rearview mirror when you are sitting in the correct driving position.

■ Rearview Mirror with Day and Night Positions*

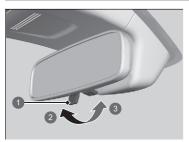

Flip the tab to switch the position.

The night position will help to reduce the glare from headlights behind you when driving after dark.


Keep the inside and outside mirrors clean and adjusted for best visibility.

Adjust the mirrors before you start driving.

Front Seats P. 286

- 1 Tab
- 2 Night Position
- 3 Daytime Position

Automatic Dimming Rearview Mirror*

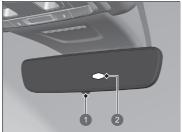

When you are driving after dark, the automatic dimming rearview mirror reduces the glare from headlights behind you. Press the AUTO button to turn this function on and off. When activated, the AUTO indicator comes on.

- Auto Button
- 2 Sensor

■ Automatic Dimming Rearview Mirror *

The auto dimming function cancels when the transmission is in $\boxed{\mathbf{R}}$.

Power Door Mirrors



- Selector Switch
- 2 Adjustment Switch
- S Folding Button

You can adjust the door mirrors when the power mode is in ON.

■ Mirror position adjustment

L/R selector switch: Select the left or right mirror. After adjusting the mirror, return the switch to the centre position.

Mirror position adjustment switch: Press the switch left, right, up, or down to move the mirror.

■ Folding door mirrors

Press the folding button to fold in and out the door mirrors.

Reverse Tilt Door Mirror*



Selector Switch

If activated, the passenger side door mirror automatically tilts downward when you put the transmission into $\boxed{\mathbf{R}}$: this improves close-in visibility on the passenger side of the vehicle when backing up. The mirror automatically returns to its original position when you take the transmission out of $\boxed{\mathbf{R}}$.

To activate this feature, set the power mode to ON and slide the selector switch to the passenger's side.

Automatic Folding Door Mirror Function*

■ Folding in the door mirrors

Press the lock button on the keyless remote or the tailgate, or touch the door lock sensor on the either front door.

▶ The mirrors start folding in automatically.

■ Folding out the door mirrors

Press the unlock button on the keyless remote, or grab the door handle on the either front door.

▶ The mirrors start folding out automatically.

■ Automatic Folding Door Mirror Function*

You cannot turn the automatic folding out automatically if they have been folded in using the folding button.

You can turn the automatic folding door mirror function on and off.

Models with colour audio system

Settings* P. 185

Models with Display Audio

► How to Customize the Vehicle Settings P. 467

Door mirrors will not fold automatically when locking from inside the vehicle using lock tab or master door lock switch.

Front Seats



Move back to allow sufficient space.

Adjust the driver's seat as far back as possible while allowing you to maintain full control of the vehicle. You should be able to sit upright, well back in the seat and be able to adequately press the pedals without leaning forward, and grip the steering wheel comfortably. The passenger's seat should be adjusted in a similar manner, so that it is as far back from the front airbag in the dashboard as possible.

>>> Seats

Always make seat adjustments before driving.

≫Front Seats

AWARNING


Sitting too close to a front airbag can result in serious injury or death if the front airbags inflate.

Always sit as far back from the front airbags as possible while maintaining control of the vehicle.

In addition to the seat adjustment, you can adjust the steering wheel up and down, in and out. Allow at least 25 cm between the centre of the steering wheel and the chest.

■ Adjusting the Seat Positions

■ Adjusting the front power seats*

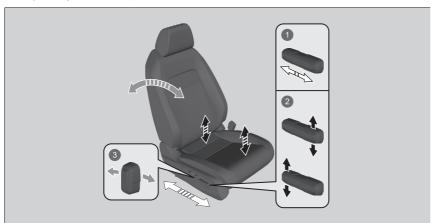

1 Horizontal Position Adjustment Slide the lever to move the seat.

Pull up or push down the lever to raise or lower the seat.

3 Seat-back Angle Adjustment
Push forward or pull backward the lever to change the angle.



Lumbar Support Adjustment Switch

■ Lumbar support adjustment switch*

Press the top: To move the lumbar support up.

Press the bottom: To move the lumbar

support down.


Press the front: To increase the entire

lumbar support.

Press the rear: To decrease the entire lumbar

* Not available on all models

■ Adjusting the front manual seat*

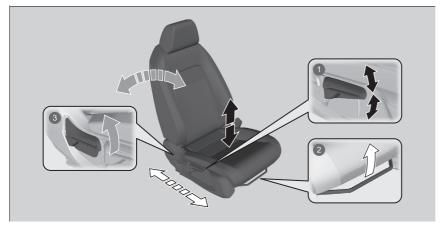


- **1** Height Adjustment (Driver side only)
 Pull up or push down the lever to raise or lower the seat.
- **2** Horizontal Position Adjustment
 Pull up on the bar to move the seat, then release the bar.
- **3 Seat-back Angle Adjustment**Pull up the lever to change the angle.

∑Adjusting the front manual seat*

Once a seat is adjusted correctly, rock it back and forth to make sure it is locked in position.

Adjusting the Seat-Backs

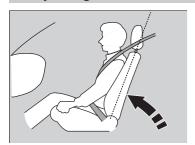

Adjust the driver's seat-back to a comfortable, upright position, leaving ample space between your chest and the airbag cover in the centre of the steering wheel.

The front seat passenger should also adjust their seat-back to a comfortable, upright position.

Reclining a seat-back so that the shoulder part of the belt no longer rests against the occupant's chest reduces the protective capability of the belt. It also increases the chance of sliding under the belt in a crash and being seriously injured. The farther a seat-back is reclined, the greater the risk of injury.

■ Adjusting the Seat-Backs

AWARNING

Reclining the seat-back too far can result in serious injury or death in a crash.

Adjust the seat-back to an upright position, and sit well back in the seat.


Do not put a cushion, or other object, between the seat-back and your back.

Doing so may interfere with proper seat belt or airbag operation.

If you cannot get far enough away from the steering wheel and still reach the controls, we recommend that you investigate whether some type of adaptive equipment may help.

Second Row Seats

Adjusting the Seat Positions

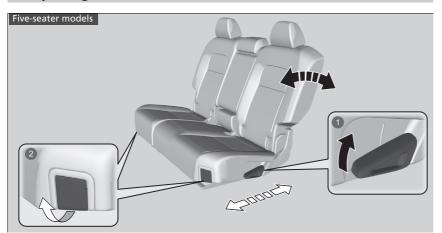

- 1 Seat-back Angle Adjustment
 Pull up the lever to change the angle.
- **2** Horizontal Position Adjustment
 Pull up on the lever to move the seat, then release the lever.

Second Row Seats

AWARNING


An unsecured seat or seat-back can move out of position or collapse without warning if there is sudden acceleration or stop or in a crash.

A seat or seat-back that suddenly moves or collapses can result in severe injury or death.

Always make sure all seats and seat-backs are securely locked into position before driving.

Once a seat is adjusted correctly, rock it back and forth to make sure it is locked in position.


Continued 291

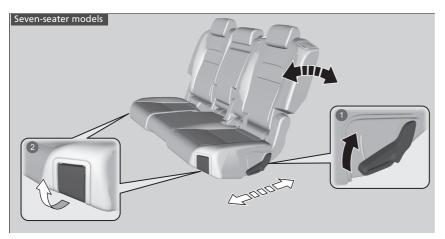

- 1 Seat-back Angle Adjustment
 Pull up the lever to change the angle.
- 2 Horizontal Position Adjustment
 Pull up on the lever to move the seat, then release the lever.

Five-seater models

■ Folding Down the Second Row Seats

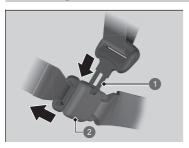

- 1 Latch Plate
- 2 Anchorage Buckle



Release Lever

- **1.** Store the centre seat belt first. Insert the latch plate into the slot on the side of the anchorage buckle.
- **2.** Retract the seat belt into the holder on the ceiling.
 - Seat Belt with Detachable Anchorage*
 P. 56
- **3.** Lower the second row seat head restraint to its lowest position. Put the armrest back into the seat-back
- **4.** Pull the release lever and fold down the seat.

∑Folding Down the Second Row Seats

AWARNING

Make sure the seat-backs are latched securely before driving.

The seat-backs can be folded down to accommodate bulkier items in the luggage area.

Remove any items from the second row seat cushion and floor before you fold down the second row seat.

The front seats must be far enough forward so they do not interfere with the second row seats as they fold down

When returning the seat-back to its original position, push it firmly back. Also, make sure all rear shoulder belts are positioned in front of the seat-back.

Make sure all items in the luggage area or items extending through the opening into the second row seats are properly secured. Loose items can fly forward if you have to brake hard.

Seven-seater models

■ Folding Down the Second Row Seat

Separately fold down the left and right halves of the second row seat to make room for luggage.



Release Lever

1. Lower the second row seat head restraint to its lowest position. Put the armrest back into the seat-back.

2. Pull the release lever and fold down the seat.

∑Folding Down the Second Row Seat

AWARNING

Make sure the seat-backs are latched securely before driving.

Remove any items from the second row seat cushion and floor before you fold down the second row seat.

The front seats must be far enough forward so they do not interfere with the second row seats as they fold down.

To lock the seat-back upright, push it backwards until it locks.

Make sure the seat-back, head restraints and seat cushion are securely latched back into place before driving. Also, make sure all rear shoulder belts are positioned in front of the seat-back, and the centre shoulder belt is re-positioned in the holding slot.

Seven-seater models

■ Third Row Seat Access



Lever

- **1.** Lower the second row seat head restraint to its lowest position.
- **2.** Pulling forward on the walk-in lever slides the second row seat forward.
 - ► The whole seat tilts forward.

■Third Row Seat Access

Make sure the second row seats are securely latched back into place before driving. Also, make sure all rear shoulder belts are positioned in front of the seatback, and the centre seat belt is repositioned on the seat.

When you enter the third row seat, be careful not to trip over the second row seat or seat belt.

Do not leave the second row seat tilted up.


The front seats must be far enough forward so they do not interfere with the second row seats as they tilt up.

Remove any items from the second row seat cushion and floor before you tilt the second row seat.

Please be careful the second row seat may have fallen onto your feet.

Third Row Seats*

■ Adjusting the Seat-back Positions

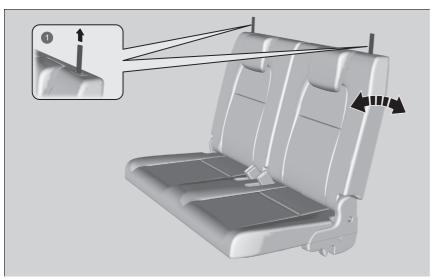

1) Seat-back Angle Adjustment Pull the strap to change the angle.


Third Row Seats *

Once a seat is adjusted correctly, rock it back and forth to make sure it is locked in position.

■ Folding Down the Third Row Seat

Separately fold down the left and right halves of the third row seat to make room for luggage.

■ To fold down the seat

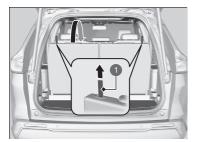

- **1.** Lower the third row seat head restraint to its lowest position.
- 2. Pull the strap on the seat-back fully.
- **3.** Push the seat-back forward while pulling the strap.
 - ► If you want to use the luggage area flatly, put the floor lid in the raise position.
 - **Luggage Storage Area*** P. 317

Strap

■ To return the seat to the original position



- **1.** Pull the seat-back up with the strap pulled.
- **2.** Pull the head restraint up to its original position.

■ Folding Down the Third Row Seat

Make sure all items in the luggage area or items extending to the third row seats are properly secured. Loose items can fly forward if you have to brake hard.

Remove any items from the third row seat cushion and floor before you fold down the third row seat.

The second row seats must be far enough forward so they do not interfere with the third row seats as they fold down.

To lock the seat-back upright, push it backwards until it locks.

Make sure the seat-backs are securely latched back into place before driving. Also, make sure both rear shoulder belts are positioned in front of the seatback.

Strap

* Not available on all models

Rear Seat Reminder

This feature alerts you of the possible presence of passengers or items in the second row or third row* seats before you exit the vehicle. It activates when the power mode is set to VEHICLE OFF if the rear doors were opened shortly before or after the power mode was set to ON.

■ Rear Seat Reminder

When the power mode is set to VEHICLE OFF, the reminder comes on briefly, then the function is deactivated.

The reminder will not work if the power mode has not been set to ON within 10 minutes of operating the rear doors.

The system does not detect passengers in the second row or third row* seats. Instead, it can detect when a rear door is opened and closed, indicating that there may be something in the second row or third row* seats.

You can turn off the notification setting.

Models with colour audio system

Settings* P. 185

Models with Display Audio

▶ How to Customize the Vehicle SettingsP. 467



A reminder appears on the driver information interface and an alert will sound when the power mode is set to VEHICLE OFF.





Maintain a Proper Sitting Position

After all occupants have adjusted their seats and head restraints, and put on their seat belts, it is very important that they continue to sit upright, well back in their seats, with their feet on the floor, until the vehicle is safely parked and the engine is off.

Sitting improperly can increase the chance of injury during a crash. For example, if an occupant slouches, lies down, turns sideways, sits forward, leans forward or sideways, or puts one or both feet up, the chance of injury during a crash is greatly increased.

In addition, an occupant who is out of position in the front seat can be seriously or fatally injured in a crash by striking interior parts of the vehicle or being struck by an inflating front airbag.

Maintain a Proper Sitting Position

AWARNING

Sitting improperly or out of position can result in serious injury or death in a crash.


Always sit upright, well back in the seat, with your feet on the floor.

301


Head Restraints

Your vehicle is equipped with head restraints in all seating positions.

Adjusting the Front Head Restraint Positions

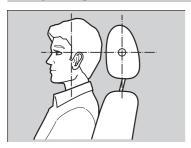

Position head in the centre of the head restraint.

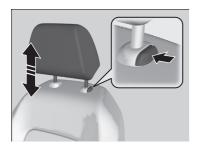

Head restraints are most effective for protection against whiplash and other rearimpact crash injuries when the centre of the back of the occupant's head rests against the centre of the restraint. The tops of the occupant's ears should be level with the centre height of the restraint.

To raise the head restraint:

Pull it upward.

To lower the head restraint:

Push it down while pressing the release button.

Magazing Adjusting the Front Head Restraint Positions

Magazine

Magaz

AWARNING


Improperly positioning head restraints reduces their effectiveness and increases the likelihood of serious injury in a crash.

Make sure head restraints are in place and positioned properly before driving.

In order for the head restraint system to work properly:

- Do not hang any items on the head restraints, or from the restraint legs.
- Do not place any objects between an occupant and the seat-back.
- Install each restraint in its proper location.

The front seat head restraints cannot be removed.

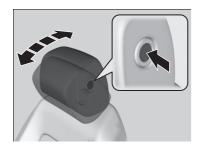

Australian, Fijian, New Zealand, and Taiwanese models


The front head restraint tilt can be adjusted according to you and a front passenger's head positions.

To tilt forward: Push the head restraint forward.

To return to the original position: Press the release button.

Five-seater models

Changing the Second Row Seat Head Restraint Positions

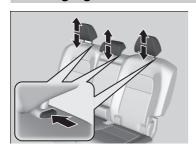

A passenger sitting in the rear seat should adjust the height of their head restraint to an appropriate position before the vehicle begins movina.

To raise the head restraint:

Pull it upward.

To lower the head restraint:

Push it down while pressing the release button.

○ Changing the Second Row Seat Head Restraint Positions

When you use the head restraint in the second row centre seating position, pull up the head restraint to its highest position. Do not use it in any lower position.










Seven-seater models

■ Changing the Second Row and Third Row Seat Head **Restraint Positions**

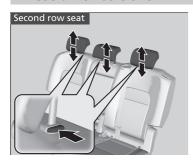

A passenger sitting in the second row and third row seat should adjust the height of their head restraint to an appropriate position before the vehicle begins moving.

To raise the head restraint:

Pull it upward.

To lower the head restraint:

Push it down while pressing the release button(s).

 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 ○
 Positions


When you use the head restraint in the second row and third row seating position, pull up the head restraint to its highest position. Do not use it in any lower position.







Continued 303

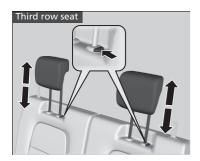

Removing and Reinstalling the Second Row and Third Row* Seat Head Restraints

Head restraints can be removed for cleaning or repair.

To remove a head restraint:

Pull the restraint up as far as it will go. Then, push the release button and pull the restraint up and out.

To reinstall a head restraint:

Insert the legs back in place, then adjust the head restraint to an appropriate height while pressing the release button. Pull up on the restraint to make sure it is locked in position.

▶ Removing and Reinstalling the Second Row and Third Row* Seat Head Restraints


AWARNING

Failure to reinstall or correctly reinstall, the head restraints can result in severe injury during a crash.

Always replace the head restraints before driving.

Armrest

■ Using the Front Seat Armrest

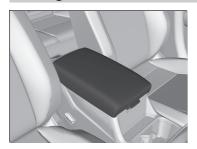

The console lid can be used as an armrest.

■ Using the Second Row Seat Armrest



Pull down the armrest in the centre seat-back.



Interior Convenience Items

Interior Lights

■ Interior Light Switches



- Door Activated Position
- ON
- OFF

ON

The interior lights come on regardless of whether the doors are open or closed.

■ Door activated

The interior lights come on in the following situations:

- When any doors are opened.
- When the driver's door is unlocked.
- When the power mode is set to VEHICLE OFF.

■ OFF

The interior lights remain off regardless of whether the doors are open or closed.

■Interior Light Switches

In the door activated position, the interior lights fade out and turn off about 30 seconds after the doors are closed.

The lights turn off after about 30 seconds in the following situations:

- When you unlock the driver's door but do not open it.
- When you set the power mode to VEHICLE OFF but do not open a door.

You can change the interior lights dimming time.

Models with colour audio system

Settings* P. 185

Models with Display Audio

► How to Customize the Vehicle Settings P. 467

The interior lights turn off immediately in the following situations:

- When you lock the driver's door.
- When you close the driver's door in ACCESSORY mode.
- When you set the power mode to ON.

To avoid draining the battery, do not leave the interior light on for an extended length of time when the engine is off.

If you leave any of the doors open in VEHICLE OFF mode, the interior lights turn off after about 15 minutes.

■ Map Light Switches



■ Front seat

The map lights can be turned on and off by pressing the buttons.



1 Touch

■ Second row seat

The map lights can be turned on and off by touching the map lights.


Map Light Switches

When the front interior light switch is in the door activated position and any door is open, the map light will not turn off when you press the buttons or touch the rear map lights.

■ Luggage Area Light(s)



The luggage area lights come on when you open the tailgate.

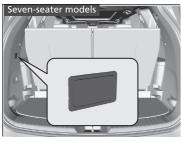

Storage Items

■ Glove Box



Pull the handle to open the glove box.

- Handle
- 2 Glove Box

Solve Box

AWARNING


An open glove box can cause serious injury to your passenger in a crash, even if the passenger is wearing the seat belt.

Always keep the glove box closed while driving.

■ Console Compartment



Pull the handle to open the console compartment.

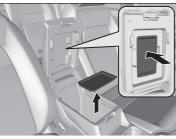

■ Removable tray

The tray can be removed and stored on the bottom surface of the armrest.

Continued 311

■ Beverage Holders



■ Front seat beverage holders Located in the console between the front seats.





Second row seat beverage holders
Fold the armrest down to use the second row seat beverage holders.

■ Beverage Holders

NOTICE

Spilled liquids can damage the upholstery, carpeting, and electrical components in the interior.

Be careful when you are using the beverage holders. Hot liquid can scald you.



Seven-seater models

■ Third row seat beverage holders

Pull up the beverage holder to use it. You can adjust the beverage holder angle depending on size the beverage.

1 Beverage Holder





■ Door beverage holders

Located on both of front and rear door side pockets.

Continued 313

Coat Hook



There is a coat hook on the driver side rear grab handle.

The tie-down anchorages on the luggage area

floor can be used to install a net for securing

items.

■ Tie-down Anchorages*



Anchorages

Coat Hook

The coat hook is not designed for large or heavy items.

∑Tie-down Anchorages *

Do not let anyone access items in the luggage area while driving. Loose items can cause injury if you have to brake hard.

■ Luggage Hooks*



The luggage hooks on the both sides of the luggage area can be used to hang a light items.

1 Hook

∑Luggage Hooks*

NOTICE

Do not hang a large object or an object that weighs more than 3 kg on the side luggage hooks. Hanging heavy or large objects may damage the hooks.

■ Sunglasses Holder



To open the sunglasses holder, press and release the indent. To close, press it again until it latches.

You can store eyeglasses and other small items in this holder.





■ Conversation mirror*


The sunglasses holder comes with a mirror. Open the sunglasses holder fully, then push it back to the first detent.

You can use the mirror to view the second row and third row* seats.

Sunglasses Holder

Keep the holder closed while driving except when accessing stored items.


■ Luggage Storage Area*

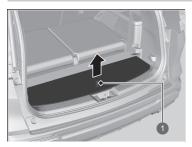

■ Storing items on the lid (raise position)
By pushing the third row seat forward and putting the floor lid in the raise position, you can store bulkier items in the luggage area.

- 1. Folding down the third row seat.
 - ► Folding Down the Third Row Seat
 P. 297
- **2.** Pull the strap to open the luggage floor lid (upper).

Strap

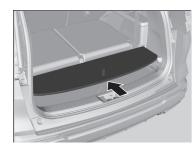


- **3.** Pull the floor lid towards you until it disengages from the support rods.
- **4.** Put the floor lid in the raise position, then slide it to the end.

■ Luggage Floor Box*



1. Pull the strap to remove the luggage floor lid (upper).

Strap

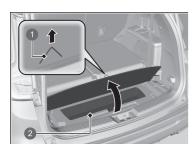

2. Pull the strap to open the luggage floor lid (lower).

- Strap
- 2 Luggage Floor Box

■ Luggage Area Cover*



Handle



Mounting Rod

2 Hook

The luggage area cover can be used to conceal items in the luggage area and protect them from direct sunlight.

■ To extend:

Slightly lift up on the handle at the centre edge of the cover to unhook each end, then pull the cover rearward and clip the mounting rods in the hooks at both sides of the tailgate opening.

■ To retract:

Slip the rods out of the hooks, then slowly roll it back until it is completely retracted.

∑Luggage Area Cover*

Do not let anyone access items in the luggage area while driving. Loose items can cause injury if you have to brake hard.

Do not stack objects higher than the top of the seat in the luggage area. They could block your view and be thrown about the vehicle during a sudden stop.

To prevent luggage area cover damage:

- Do not place items on the luggage area cover.
- Do not put weight on the luggage area cover.

Be sure that each mounting rod sets in its respective retention groove when you retract the rear luggage cover. If they are not set in the grooves, the rods may rattle as they contact the surrounding surfaces.



■ To remove:

Push either end of the housing inward, then lift it out of its position.

Other Interior Convenience Items


Accessory Power Sockets

The accessory power sockets can be used when the power mode is in ACCESSORY or ON.



■ Console panel

Open the cover to use it.

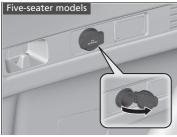

■ Luggage area

Open the cover to use it.

NOTICE


Do not insert an automotive type cigarette lighter element. This can overheat the accessory power socket.

The accessory power socket is designed to supply power for 12-volt DC accessories that are rated 180 watts (15 amps) or less.

To prevent battery drain, only use the power socket with the engine is running.


When the accessory power socket is not in use, close the cover to prevent any small foreign objects from getting into the accessory power socket.

Continued 321

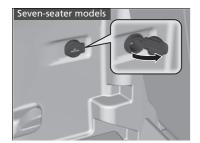

■ Wireless Charger*

To use the wireless charger, the power mode must be in ACCESSORY or ON. Charge any devices compatible with Qi wireless charging on the area indicated by the \cong mark as follows:

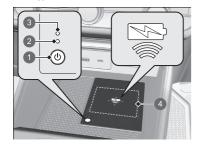

- ① (Power) Button
- 2 Green Indicator
- 3 Amber Indicator
- 4 Charging Area

- 1. To turn the system on and off, press and hold the 😈 (power) button.
 - ▶ When the system is activated, the green indicator light comes on.
- **2.** Place the device you want to charge on the charging area.
 - ➤ The system will automatically start charging the device, and the amber indicator light will come on.
 - Make sure that the device is compatible with the system, and placed with the chargeable side in the centre of the charging area.
- **3.** When charging is completed, the green indicator light will come on.
 - ▶ Depending on the device, the amber indicator light will stay on.

Wireless Charger[∗]

ACAUTION

Metal objects between the charge pad and the device to be charged will get hot and can burn you.

- Always remove foreign objects from the charge pad before charging the device.
- Be sure the surface is clear of dust and other debris before charging.
- Do not spill liquids (i. e. water, drinks, etc.) on the charger and the device.
- Do not use oil, grease, alcohol, benzine, or thinner for cleaning the charge pad.
- Do not cover the system with towels, clothing, or other objects while charging etc.
- Avoid spraying aerosols which may come in contact with the charge pad surface.

In order to use safely:

- Remove any metal objects from the charge pad before charging a device.
- Do not open the charger case.
- Do not use the charger if it malfunctions. Contact your dealer.

■ When charging does not start

Perform one of the solutions in the following table.

| Indicator | | Cause | Solution |
|---------------------|---------------------------------|---|---|
| Green & Amber | Blinking simulta- neously | There is an obstacle(s) between the charging area and the device. | Remove the obstacle(s). |
| | | The device is not within the charging area. | Pick up and reset the device to the centre of the charging area where 👺 is located. |
| | | The temperature of the wireless charger pad increases. | Temporarily suspend charging the device. Wait for the temperature to drop and attempt to charge the device again. |
| Amber | Blinking | The wireless charger is faulty. | Contact a dealer for repairs. |

Wireless Charger[∗]

If the charger interferes with radio communications, attempt to correct the interference:

• Press and hold the switch on the charger for a few seconds to turn off the charger.

This system consumes a lot of power. Do not use the system for a long time when the engine is not running. This may weaken the battery, making it difficult to start the engine.

When using the wireless charger, check the user's manual that came with the compatible device you want to charge.

Wireless Charger[∗]

The wireless charger can support up to 15 W, but the charging rate varies based on the device and other conditions.

NOTICE

Do not place any magnetic recording media or precision machines within the charging area while charging.

The data on your cards such as credit cards can be lost because of the magnetic effect. Also, precision machines such as watches can be affected.

"Qi" and \P marks are the registered trademarks owned by Wireless Power Consortium (WPC).

In the following cases, charging may stop or not start:

- The device is already fully charged.
- The temperature of the device is extremely high while charging.
- You are at a place that emits strong electromagnetic waves or noises, such as a TV station, electric power plant, or petrol station.
- The device has a cover, case, or accessories which are not compatible with wireless charging.

A device may not charge if the size or shape of its chargeable side is not appropriate for use with the charging area.


Not all devices are compatible with the system.

During the charging phase, it is normal for the charging area and device to heat up.

Charging may be briefly interrupted when:

- All the doors and the tailgate are closed
 - to avoid interference with the proper functioning of the keyless access system.
- The position of the device is altered.

Do not charge more than one device at a time on a charging area.

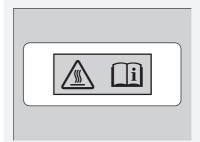

Burn risk:


Any metal objects placed between pad and device may become hot.

If the device becomes too hot and its battery protection function activates, it may charge extremely slowly or no longer charge. The temperature at which the battery protection function activates depends on the device.

■ Front Seat Heaters*



The seat heaters can be used when the power mode is in ON.

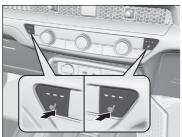

Press the seat heater button:
Once - The HI setting (three indicators on)
Twice - The MID setting (two indicators on)
Three times - The LO setting (one indicator on)
Four times - The OFF setting (no indicators on)

When the power mode is turned on after it is turned off, the previous setting is maintained.

≫ Front Seat Heaters *

AWARNING

Heat induced burns are possible when using seat heaters.

Persons with a diminished ability to sense temperature (e.g., persons with diabetes, lowerlimb nerve damage, or paralysis) or with sensitive skin should not use seat heaters.

Do not use the seat heaters even in LO when the engine is off. Under such conditions, the battery may be weakened, making the engine difficult to start.

After a certain period of time, the strength setting for the front seat heaters will automatically be reduced by one level at a time until the front seat heaters shuts off. The elapsed time varies according to the interior environment.

Sun Visor



The sun visor can be extended horizontally.

Ashtray*



The ashtray that fits in the front beverage holders is removable. Pull up on the lid to open.

To prevent a possible fire and damage to your vehicle, use the ashtray only for discarding cigarettes and cigars.

Ashtray


Climate Control System

Using Automatic Climate Control

The automatic climate control system maintains the interior temperature you select. The system also selects the proper mix of heated or cooled air that raises or lowers the interior temperature to your preference as quickly as possible.

Use the system when the engine is running.

- **1.** Press the **AUTO** button.
- **2.** Adjust the interior temperature using the driver's side or passenger's side temperature control dial.
- **3.** Press the solve (on/off) button to cancel.

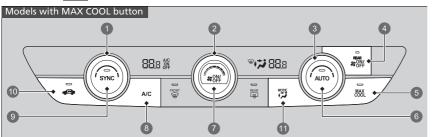

- 1 Passenger's Side Temperature Control Dial*1 Recirculation Button*1
- Fan Control Dial
- 3 Driver's Side Temperature Control Dial*1
- 4 REAR SON/ (Rear On/Off) Button*1
- 6 MAX COOL Button*1
- 6 AUTO Button*1
- ON/OFF Button
- 8 A/C (Air Conditioning) Button*1
- SYNC Button*1

• Air flows from dashboard and back of the centre console vents

MODE Button*1

- Air flows from dashboard, floor, and back of the centre console vents
- Air flows from floor vents
- Air flows from floor and windscreen demister vents
- *1:Right-hand drive types shown. For the left-hand drive types, these buttons are located at the symmetrically opposite to the right-hand drive type.

■Using Automatic Climate Control

If any buttons are pressed while using the climate control system in auto, the function of the button that was pressed will take priority.

The auto button indicator will go off, but functions unrelated to the button that was pressed will be controlled automatically.

To prevent cold air from blowing in from outside, the fan may not start immediately when the **AUTO** button is pressed.

Models without MAX COOL button

If the interior is very warm, you can cool it down more rapidly by partially opening the windows, turning the system on auto, and setting the temperature to low. Change the fresh air mode to recirculation mode until the temperature cools down.

Models with MAX COOL button

If the interior is very warm, you can cool it down more rapidly by partially opening the windows, press the **MAX COOL** button.


When you set the temperature to the lower or upper limit, **Lo** or **Hi** is displayed.

Models with Auto Idle Stop

During idle-stops, air-conditioning is suspended, and only the blower remains active.

If you do not want air-conditioning suspended, press the Auto Idle Stop **OFF** button to cancel idle-stop.

Continued 329

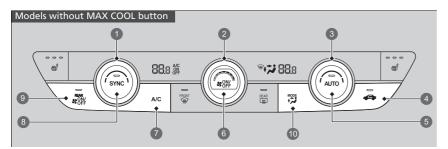

- 1 Passenger's Side Temperature Control 9 REAR SON (Rear On/Off) Button*1 Dial*1
- Pan Control Dial
- Driver's Side Temperature Control Dial*1
- 4 Recirculation Button*1
- 6 AUTO Button*1
- **6 ON/OFF** Button
- **⊘** A/C (Air Conditioning) Button^{*1}
- SYNC Button*1

- **MODE** Button*1
 - 🔁 Air flows from dashboard and back of the centre console vents
 - Air flows from dashboard, floor, and back of the centre console vents
 - Air flows from floor vents
 - Air flows from floor and windscreen demister vents
- *1:Right-hand drive types shown. For the left-hand drive types, these buttons are located at the symmetrically opposite to the right-hand drive type.

■ Switching between the recirculation and fresh air modes

Press the (recirculation) button and switch the mode depending on environmental conditions.


Recirculation mode (indicator on): Recirculates air from the vehicle's interior through the system.

Fresh air mode (indicator off): Maintains outside ventilation. Keep the system in fresh air mode in normal situations.

Pressing the sold button switches the climate control system between on and off. When turned on, the system returns to your last selection.

While ECON mode is active, the climate control system may have reduced cooling performance.

Defrosting the Windscreen and Windows

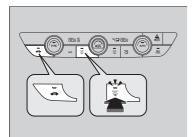

Except African, Middle Eastern, Australian, Fijian, and New Zealand models

Pressing the (windscreen demister) button turns the air conditioning system on.

Press the button (indicator off) to switch the fresh air mode.


African, Middle Eastern, Australian, Fijian, and New Zealand models

Pressing the button turns the air conditioning system on and automatically switches the system to fresh air mode.

All models

Press the button again to turn off, the system returns to the previous settings.

■ To rapidly defrost the windows

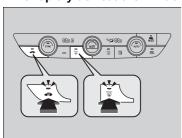

- **1.** Press the button (indicator on).
- **2.** Press the button (indicator on).

Defrosting the Windscreen and Windows

For your safety, make sure you have a clear view through all the windows before driving.

Do not set the temperature near the upper or lower limit.

When cold air hits the windscreen, the outside of the windscreen may fog up.

Models with Auto Idle Stop

If you press the will button during Auto Idle Stop, the engine restarts automatically.

∑To rapidly defrost the windows

After defrosting the windows, switch over to fresh air mode. If you keep the system in recirculation mode, the windows may fog up from humidity. This impedes visibility.


Continued 331

Synchronization Mode

You can set the temperature synchronously for the driver's side and the passenger's side in synchronization mode.

- 1. Press the SYNC button.
 - ▶ The system switches to synchronization mode.
- **2.** Adjust the temperature using the driver's side temperature control dial.

Press the **SYNC** button or adjust the interior temperature using the passenger's side temperature control dial to return to dual mode.

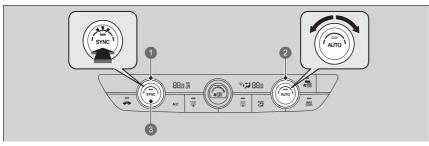

- 1 Passenger's Side Temperature Control Dial
- 2 Driver's Side Temperature Control Dial
- **3 SYNC** Button

Synchronization Mode

When the system is in dual mode, the driver's side temperature and the passenger's side temperature can be set separately.


When you press the $\overline{\mathbb{F}}$ button, the system changes to synchronization mode.

Automatic Climate Control Sensors




The automatic climate control system is equipped with a sensors. Do not cover or spill any liquid on them.


Sensor

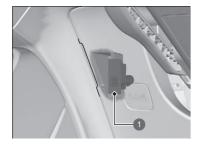

Sensor

Rear Cooling*

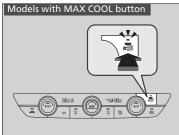

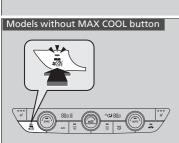

Use the system when the engine is running.

1. Press the **REAR** SON/OFF (Rear On/Off) Button.

■ Rear Cooling *

The rear cooling can not be used when the **REAR**[#GF] (Rear On/Off) button on the front control panel is off.



1 Fan Control Lever

- **2.** Adjust the fan speed using the fan control lever.
- 3. Slide the fan control lever to **OFF** or press the **REAR** (Rear On/Off) button on the front control panel to cancel.



| rudio System | 338 |
|----------------------------------|-----|
| olour Audio | 341 |
| isplay Audio | 400 |
| udio Error Messages* | 500 |
| ieneral Information on the Audio | |
| System | 502 |


* Not available on all models

Audio System


About Your Audio System

The audio system features FM/AM radio and Digital Audio Broadcasting (DAB) service*. It can also play USB flash drives*, iPod*, iPhone*, Bluetooth® devices, and smartphone*.

You can operate the audio system from the buttons and knobs on the panel, the remote controls on the steering wheel or the icons on the touchscreen interface.

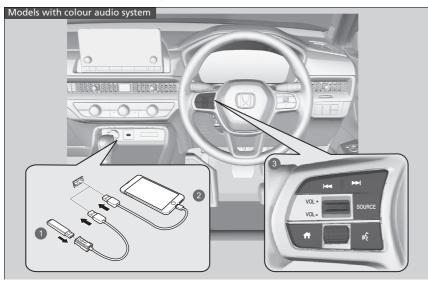

- 1 USB Flash Drive
- iPod
- Remote Controls

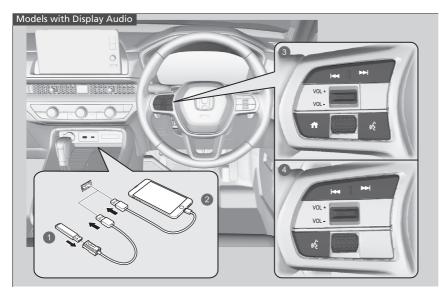

- 1 USB Flash Drive
- iPod
- 3 Remote Controls*1
- 4 Remote Controls*2

Audio System Theft Protection*

The audio system is disabled when it is disconnected from the power source, such as when the battery is disconnected or goes dead. In certain conditions, the system may display a code entry screen. If this occurs, reactivate the audio system.

■ Reactivating the audio system


- 1. Set the power mode to ON.
- 2. Turn on the audio system.
- 3. Press and hold the **VOL/ (a) AUDIO** (Volume/Power) knob for more than two seconds.
 - ▶ The audio system is reactivated when the audio control unit establishes a connection with the vehicle control unit. If the control unit fails to recognise the audio unit, you must go to a dealer and have the audio unit checked.

Colour Audio

Basic Operation

Audio System Function

To use the audio system, the power mode must be in ACCESSORY or ON.

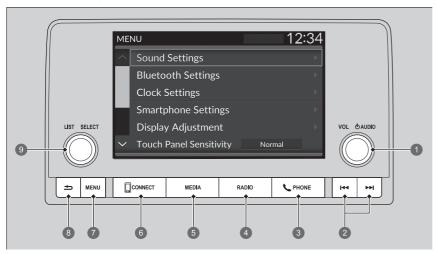

- **1 VOL/也 AUDIO** (Volume/Power) Knob
- 2 ◄ / ►► (Seek/Track) Buttons
- PHONE Button
- **4 RADIO** Button
- **6 MEDIA** Button
- **6 CONNECT** Button
- **MENU** Button
- (Back) Button
- Selector Knob

Colour Audio

These indications are used to show how to operate the selector knob.

Rotate 😙 to select.

Press 💍 to enter.

Menu Items

Adjust Clock P. 220

■ Adjusting the Sound P. 345

Display Setup P. 346

≥ Customized Features P. 374

Press the buttons on the steering wheel to change any audio setting.

▶ Audio Remote Controls P. 344

Touchscreen operation

- Use simple gestures including touching, swiping and scrolling to operate certain audio functions.
- Some items may be grayed-out during driving to reduce the potential for distraction.
- You can select them when the vehicle is stopped.
- Wearing gloves may limit or prevent touchscreen response.

You can change the touchscreen sensitivity setting.

Customized Features P. 374

Continued 341

Use the selector knob or **MENU** button to access some audio functions.

Press ≼ to switch between the normal and extended display for some functions.

VOL/ (J) AUDIO (Volume/Power) Knob: Press to turn the audio system on and off. Turn to adjust the volume.

[◄◄ / ►► (Seek/Track) Buttons: Press [◄◄] or ►► to change station, song or file.

PHONE button: Press to go directly to the **Phone** screen.

RADIO button: Press to select a band.

MEDIA button: Press to select iPod, USB flash drive, or Bluetooth® Audio (if

connected).

CONNECT button: Press to display Apple CarPlay, or Android Auto screen.


MENU button: Press to display the menu screen.

(Back) button: Press to go back to the previous display.

Selector knob: Rotate left or right to scroll through the available choices. Press 💍

to set your selection.

USB Ports

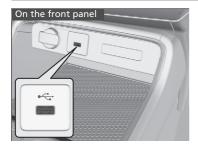



■ On the front panel ()

The USB port (2.5A) is for charging devices, playing audio files and connecting compatible phones with Apple CarPlay or Android Auto.

➤ To prevent any potential issues, be sure to use an Apple MFi Certified Lightning Connector for Apple CarPlay, and for Android Auto, the USB cables should be certified by USB-IF to be compliant with USB 2.0 Standard.

On the back of the console compartment

The USB ports (3.0A) are only for charging devices.

➤ You cannot play music even if you have connected music players to them.

≥ USB Ports

- Do not leave the iPod or USB flash drive in the vehicle. Direct sunlight and high temperatures may damage it.
- We recommend that you use a USB cable if you are attaching a USB flash drive to the USB port.
- Do not connect the iPod or USB flash drive using a hub.
- Do not use a device such as a card reader or hard disk drive, as the device or your files may be damaged.
- We recommend backing up your data before using the device in your vehicle.
- Displayed messages may vary depending on the device model and software version.

USB charge

The USB port can supply up to 2.5A/3.0A of power. It does not output 2.5A/3.0A unless requested by the device.

For amperage details, read the operating manual of the device that needs to be charged.

Under certain conditions, a device connected to the port may generate noise to the radio station you are listening to.

Continued 343

Audio Remote Controls

Allow you to operate the audio system while driving. The information is shown on the driver information interface



SOURCE Button

Cycles through the audio modes as follows: FM→DAB*→AM→USB/iPod/Apple CarPlay/ Android Auto→Bluetooth® Audio

VOL

/VOL

(Volume) Switch

Press Up: To increase the volume. **Press Down:** To decrease the volume.

- SOURCE Button
- **③ VOL**+/**VOL**− (Volume) Switch

[◀◀/▶▶| (Seek/Skip) Buttons

When listening to the radio

Press To select the next preset radio station.

Press To select the previous preset radio station.

Press and hold To select the next strong station.

Press and hold To select the previous strong station.

 When listening to an iPod, USB flash drive, Bluetooth® Audio, or Smartphone Connection

Press To skip to the next song.

Press To go back to the beginning of the current or previous song.

• When listening to a USB flash drive or Bluetooth® Audio

Press and hold To skip to the next folder/group.

Press and hold To go back to the previous folder/group.


> Audio Remote Controls

Some modes appear only when an appropriate device or medium is used.

Depending on the *Bluetooth*® device you connect, some functions may not be available.

* Not available on all models

Adjusting the Sound

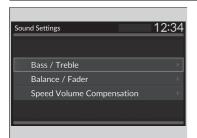



- 1. Select an audio source.
- 2. Press the MENU button.
- 3. Select Sound Settings.

Select an item from the following choices:

- Bass / Treble: Bass, Midrange, Treble
- Balance / Fader: Balance, Fader
- **Speed Volume Compensation:** Sets the amount of volume increase.

■ Adjusting the Sound

The Speed Volume Compensation (SVC) adjusts the volume level based on the vehicle speed. As you go faster, audio volume increases. As you slow down, audio volume decreases.

Display Setup

You can set the screen brightness separately for Day and Night modes.

■ Changing the Screen Brightness



- **1.** Press the **MENU** button.
- 2. Select Display Adjustment.
- 3. Select Day or Night.
- **4.** Select the setting you want.

You can change the **Contrast** and **Black Level** settings in the same manner.

You can adjust the settings by sliding or tapping on the bar.

Playing AM/FM Radio



- VOL/ AUDIO (Volume/Power) Knob
- 2 Seek Buttons
- **® RADIO** Button
- Preset Icons
- **6 MENU** Button
- 6 (Back) Button
- Selector Knob

Preset Icons

Tune the radio frequency for preset memory.

Select and hold the preset icon to store that station.

Select > to display beyond preset 5.

■ Station List

Lists the strongest stations on the selected band.

- **1.** Press 🕹 while listening to a radio.
- 2. Select the station.

■ Manual update

Updates your available station list at any time.

- **1.** Press 🕹 while listening to a radio.
- 2. Select Refresh.

Scan

Samples each of the strongest stations on the selected band for 10 seconds.

1. Select Scan.

To turn off scan, select **Stop** or press the **b**utton.

Seek

Press or by to search the selected band up or down for a station with a strong signal.

▶ Playing AM/FM Radio

Stereo reproduction in AM is not available.

You can store 12 AM stations and 12 FM stations into the preset memory.

Switching the Audio Mode Press the audio source selecting button on the steering wheel.

Audio Remote Controls P. 344

■ Radio Data System (RDS)*

Provides text data information related to your selected RDS-capable FM station.

■ To find an RDS station from Station List

- **1.** Press 🗟 while listening to an FM station.
- 2. Select the station.

■ Update List

Updates your available station list at any time.

- **1.** Press 🛎 while listening to an FM station.
- 2. Select Refresh.

■ Radio text

Displays the radio text information of the selected RDS station.

1. Select Text.

Scan

Samples each of the strongest stations on the selected band for 10 seconds.

1. Select Scan

To turn off scan, select **Stop** or press the **b**utton.

When you select an RDS-capable FM station, the RDS automatically turns on, and the station name is displayed under the frequency. However, when the signals of that station become weak, the station name disappears.

■ Traffic announcement (TA)

The TA standby function allows the system to stand by for traffic announcements in any mode while the function is on. The last tuned station must be an RDS-capable traffic program station.

To turn the function on: Select **TA**. When a traffic announcement begins, the information screen appears on the audio/information screen. The system returns to your last selected mode after the traffic announcement is finished.

▶ If you want to go back to your last selected mode during the traffic announcement, select **Stop**.

To turn the function off: Select TA again.

∑Traffic announcement (TA)

If you select **Scan** while the TA standby function is on, the system searches TP station only.

Playing DAB (Digital Audio Broadcasting)*



- VOL/७ AUDIO (Volume/Power) Knob
- Seek Buttons
- **3 RADIO** Button
- Preset Icons
- (Back) Button
- **6 MENU** Button
- Selector Knob
- 8 DAB Signal Strength Indicator

Preset Icons

Tune the preset frequency.

Select and hold the preset icon to store that service.

Select > to display beyond preset 3.

Service List and Ensemble List

■ To find a DAB station from Service List or Ensemble List

To find a DAB station from the service list:

- **1.** Press 🕹 while selecting the DAB mode.
- 2. Select the ensemble.
 - ▶ If you select **Refresh**, the system update the ensemble list.
- **3.** Select the station.
 - If you select **Refresh**, the system update the station list.

■ Scan

Samples each of the strongest stations on the selected band for 10 seconds.

1. Select Scan.

To turn off scan, select **Stop** or press the **b**utton.

■ Radio Text:

Displays the radio text information of the selected DAB station.

1. Select Text.

Service List and Ensemble List

You can store 12 DAB stations into the preset memory.

Switching the Audio Mode Press the audio source selecting button on the steering wheel.

Audio Remote Controls P. 344

If the system cannot find a station, a confirmation message for updating the list appears. Select \mathbf{OK} to update the list.

■ Traffic announcement (TA)

The TA standby function allows the system to stand by for traffic announcements in any mode while the function is on. The last tuned station must be a traffic program station.

To turn the function on: Select **TA**. When a traffic announcement begins, the information screen appears on the audio/information screen. The system returns to your last selected mode after the traffic announcement is finished.

▶ If you want to go back to your last selected mode during the traffic announcement, select **Stop**.

To turn the function off: Select TA again.

Seek


∑Traffic announcement (TA)

If you select **Scan** while the TA standby function is on, the system searches TP station only.

Playing an iPod

Using your USB connector, connect the iPod to the USB port, then press the **MEDIA** button.

■ USB Ports P. 343

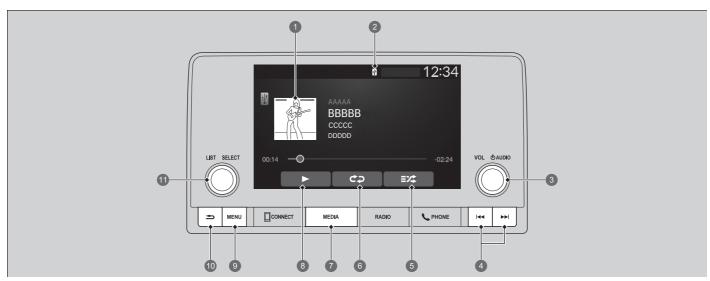

- 1 Album Art
- USB Indicator
- **③ VOL/也 AUDIO** (Volume/Power) Knob
- 4 Track Buttons
- Shuffle Icon
- 6 Repeat Icon

- MEDIA Button
- 8 Play/Pause Icon
- MENU Button
- (Back) Button
- Selector Knob

■ How to Select a Song from the iPod Music List



1. Press ८ to display the iPod music list.

2. Select a category.

- 3. Select an item.
 - Select an item repeatedly until a desired item you want to listen to is displayed.

Available operating functions vary on models or versions. Some functions may not be available on the vehicle's audio system.

If there is a problem, you may see an error message on the audio/information screen.

iPod/USB Flash Drive P. 500

- Category Selection
- 2 Item Selection

Continued

■ How to Select a Play Mode

You can select repeat and shuffle modes when playing a song.



■ Shuffle/Repeat

Repeatedly select the shuffle or repeat icon until you find a play mode option of your preference.

Shuffle Icon

Select to play all files in the current category in random order.

Repeat Icon

Select to repeat the current file.

- Repeat Icon
- Shuffle Icon

■ To turn off a play mode

Select the mode you want to turn off.

■ How to Change a Song

Press or by to change songs. Press and hold to move rapidly within a song.

Play Mode Menu Items

Shuffle

Shuffle off: Shuffle mode to off.

Shuffle All Songs: Plays all available songs in a selected list in random order.

Repeat

Repeat off: Repeat mode to off.

Repeat all: Repeats all songs.

12 Repeat Song: Repeats the current song.

Playing a USB Flash Drive

Your audio system reads and plays sound files on a USB flash drive in either MP3, WMA, AAC, FLAC, or WAV format. Connect your USB flash drive to the USB port, then press the **MEDIA** button.


USB Ports P. 343



- USB Indicator
- **2 VOL/(() AUDIO** (Volume/Power) Knob
- 3 Track Buttons
- 4 Random Icons
- 6 Repeat Icons
- **6 MEDIA** Button

- Pause Icon
- 8 Play Icon
- MENU Button
- (Back) Button
- Selector Knob

How to Select a File from a Folder

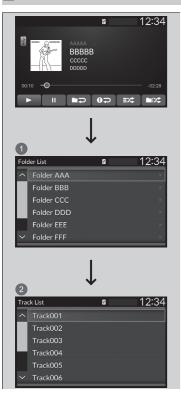

1. Press ≼ to display a folder list.

2. Select a folder.

3. Select a file.

- Folder Selection
- 2 Track Selection

▶ Playing a USB Flash Drive

skips to the next file.

Use the recommended USB flash drives.

☑ General Information on the Audio System P. 502

Files in WMA format protected by digital rights management (DRM) cannot be played. The audio system displays **Unplayable File**, and then

If there is a problem, you may see an error message on the audio/information screen.

■ iPod/USB Flash Drive P. 500

■ How to Select a Play Mode

You can select repeat and random modes when playing a file.



■ Random/Repeat

Select random or repeat icon.

Random Icons

Select to play all files in the current category in random order.

Repeat Icons

Select to repeat the current file.

- Repeat Icons
- 2 Random Icons

■ To turn off a play mode

Select the mode you want to turn off.

■ How to Change a File

Press or by to change files. Press and hold to move rapidly within a track.

∑How to Select a Play Mode

Play Mode Menu Items

Random

EXX Random All Tracks: Plays all files in random order.

Random in Folder: Plays all files in the current folder in random order.

Repeat

• Repeat track: Repeats the current file.

Repeat folder: Repeats all files in the current folder.

Playing Bluetooth® Audio

Your audio system allows you to listen to music from your *Bluetooth*-compatible phone.

This function is available when the phone is paired and connected to the vehicle's Hands-Free Telephone (HFT) system.

Phone Setup P. 385



- Bluetooth® Indicator
- 2 VOL/ AUDIO (Volume/Power) Knob
- Track Buttons
- A Shuffle Icon
- Repeat Icon

- **6 MEDIA** Button
- Play/Pause Icon
- 8 MENU Button
- (Back) Button
- Selector Knob

Not all *Bluetooth*-enabled phones with streaming audio capabilities are compatible with the system. To check if your phone is compatible, ask a dealer.

In some states, it may be illegal to perform some data device functions while driving.

Only one phone can be used with HFT at a time. When there is more than one paired phone in the vehicle, the system automatically connects to the prioritized phone. You can assign priority to a phone in the **Bluetooth Settings** menu.

▶ HFT Menus P. 383

To change the searched phone manually, select **Go** to **Device List**.

In some cases, the name of the artist, album, or track may not appear correctly.

Some functions may not be available on some devices.

If a phone is currently connected via Apple CarPlay or Android Auto, *Bluetooth*® Audio from that phone is unavailable. However, a second previously paired phone can stream *Bluetooth*® Audio by selecting **Audio** from the *Bluetooth*® device list.

Phone Setup P. 385

■ To Play *Bluetooth*® Audio Files



- 1 Play/Pause Icon
- 2 MEDIA Button
- To pause or resume a file Select the play/pause icon.

- **1.** Make sure that your phone is paired and connected to HFT.
- **2.** Press the **MEDIA** button until the *Bluetooth*® Audio Source is selected.

If the phone is not recognised, another HFT-compatible phone, which is not compatible for *Bluetooth®* Audio, may already be connected.

≥To Play Bluetooth® Audio Files

To play the audio files, you may need to operate your phone. If so, follow the phone manufacturer's operating instructions.

The pause function may not be available on some phones.

If any audio device is connected to the USB port, you may need to press the **MEDIA** button repeatedly to select the *Bluetooth*® Audio system.

Switching to another mode pauses the music playing from your phone.

Check the volume setting of your phone if the audio volume is too loud or soft.

■ How to Select a Song from the Music Search List



1. Press 💍 to display the music search list.

2. Select a category.

- 3. Select an item.
 - Select an item repeatedly until a desired item you want to listen to is displayed.

≥ How to Select a Song from the Music Search List

Depending on the *Bluetooth*® device you connect, some or all of the categories may not be displayed.

Category Selection

2 Item Selection

■ How to Select a Play Mode

You can select repeat and shuffle modes when playing a song.



■ Shuffle/Repeat

Repeatedly select the shuffle or repeat icon until you find a play mode option of your preference.

Shuffle Icon

Select to play all files in the current category in random order.

Repeat Icon

Select to repeat the current file.

- Repeat Icon
- Shuffle Icon

■ To turn off a play mode

Select the mode you want to turn off.

■ How to Change a File

Press or bt to change files.

∑How to Select a Play Mode

Play Mode Menu Items

Shuffle

Shuffle off: Shuffle mode to off.

Shuffle Albums: Plays all available albums in a selected list in random order.

Shuffle All Songs: Plays all available songs in a selected list in random order.

Repeat

Repeat off: Repeat mode to off.

Repeat all: Repeats all songs.

Repeat Song: Repeats the current song.


Depending on the *Bluetooth*® device you connect, some or all of the functions may not be displayed.

Siri Eyes Free

You can talk to Siri using the [6] (Talk) button on the steering wheel when your iPhone is paired to the Hands-Free Telephone (HFT) system.

Phone Setup P. 385

Using Siri Eyes Free

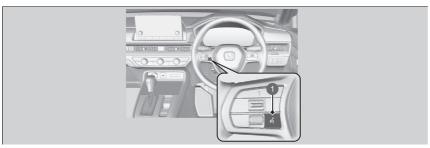

1 (Talk) Button

Press until the display changes as shown. Press and hold to deactivate Siri Eyes Free. While in Siri Eyes Free: The display remains the same.

No feedback or commands appear.



Appears when Siri is activated in Siri Eyes Free.

Siri Eyes Free

Check Apple Inc. website for features available for Siri.

We recommend against using Siri other than in Siri Eyes Free mode while operating a vehicle.

≥ Using Siri Eyes Free

Some commands work only on specific phone features or apps.

Smartphone Voice Recognition

You can use Smartphone Voice Recognition using the [62] (Talk) button on the steering wheel when your Android phone is paired to the Hands-Free Telephone (HFT) system.

Phone Setup P. 385

Using Smartphone Voice Recognition



1 (Talk) Button

Press to activate Smartphone Voice Recognition. Press and hold to deactivate Smartphone Voice Recognition. While in Smartphone Voice Recognition: The display remains the same. No feedback or commands appear.



Appears when Smartphone Voice Recognition is activated.

■Using Smartphone Voice Recognition

Depending on your Android phone, you may need to operate your phone.

Some commands work only on specific phone features or apps.

Apple CarPlay

If you connect an Apple CarPlay-compatible iPhone to the system via the front USB, you can use the audio/information screen, instead of the iPhone display, to make a phone call, listen to music, view maps (navigation), and access messages.

USB Ports P. 343

Apple CarPlay Menu



1 CONNECT Button

Press to display Apple CarPlay screen.

■ Apple CarPlay

The images shown here (designs, specifications, etc.) may differ from what is displayed on your screen.

Only iPhone 5 or newer versions with iOS 8.4 or later are compatible with Apple CarPlay.

We recommend using the latest OS.

Park in a safe place before connecting your iPhone to Apple CarPlay and when launching any compatible apps.

To directly access the Apple CarPlay phone function, press the **PHONE** button. While connected to Apple CarPlay, calls are only made through Apple CarPlay. If you want to make a call with Hands-Free Telephone (HFT), turn Apple CarPlay OFF or detach the USB cable from your iPhone.

Setting Up Apple CarPlay P. 368

When your iPhone is connected to Apple CarPlay, it is not possible to use the *Bluetooth*® Audio or Hands-Free Telephone (HFT). However, other previously paired phones can stream audio via *Bluetooth*® while Apple CarPlay is connected.

Phone Setup P. 385

Apple CarPlay and Android Auto cannot run at the same time

For details on countries and regions where Apple CarPlay is available, as well as information pertaining to function, refer to the Apple homepage.

Phone

Access the contact list, make phone calls, or listen to voicemail.

Music

Play music stored on your iPhone.

Maps

Display Apple Maps and use the navigation function just as you would on your iPhone.

Messages

Check and reply to text messages, or have messages read to you.

Honda

Select the Honda icon to go back to the home screen.

• 🗀

Go back to the Apple CarPlay Dashboard screen.

•

Go back to the Apple CarPlay menu screen.

■ Apple CarPlay

Apple CarPlay Operating Requirements & Limitations

Apple CarPlay requires a compatible iPhone with an active cellular connection and data plan. Your carrier's rate plans will apply.

Changes in operating systems, hardware, software, and other technology integral to providing Apple CarPlay functionality, as well as new or revised governmental regulations, may result in a decrease or cessation of Apple CarPlay functionality and services. Honda cannot and does not provide any warranty or guarantee of future Apple CarPlay performance or functionality.

It is possible to use 3rd party apps if they are compatible with Apple CarPlay. Refer to the Apple homepage for information on compatible apps.

To adjust the ringtone volume, the guidance volume of the navigation or Siri, or the audio volume, turn the **VOL** AUDIO (Volume/Power) knob while the sound you want to adjust is playing.

Setting Up Apple CarPlay

After you have connected your iPhone to the system via the front USB, use the following procedure to set up Apple CarPlay. Use of Apple CarPlay will result in the transmission of certain user and vehicle information (such as vehicle location, speed, and status) to your iPhone to enhance the Apple CarPlay experience. You will need to consent to the sharing of this information on the audio/information screen.

■ Connecting Apple CarPlay Using the USB Cable to the USB Port

- 1. Connect the iPhone to the USB port using the USB cable.

 USB Ports P. 343
 - ► The confirmation screen will be displayed.
- 2. Select Yes.
 - ▶ If you do not want to connect Apple CarPlay, select **No**.

You may change the consent settings under the **Smartphone Settings** menu.

Setting Up Apple CarPlay

Only initialize Apple CarPlay when you are safely parked.

When Apple CarPlay first detects your iPhone, you will need to set up your iPhone. Refer to the instruction manual that came with your iPhone.

You can use the following procedure to disconnect or delete the devices connecting Apple CarPlay:
Press the **MENU** button→
Select Smartphone Settings→Apple CarPlay
→Select device

Use of user and vehicle information

The use and handling of user and vehicle information transmitted to/from your iPhone by Apple CarPlay is governed by the Apple iOS terms and conditions and Apple's Privacy Policy.

■ Operating Apple CarPlay with Siri

Press the 🖟 (talk) button to activate Siri.



1 (Talk) Button

Press to activate Siri. Press again to deactivate Siri.

∑Operating Apple CarPlay with Siri

Below are examples of questions and commands for Siri.

- What movies are playing today?
- Call dad at work.
- What song is this?
- How's the weather tomorrow?
- Read my latest email.

For more information, please visit www.apple.com/ios/siri.

To adjust the guidance volume of Siri, turn the **VOL**/ **ODJ AUDIO** (Volume/Power) knob while Siri is activated.

Android Auto™

When you connect an Android phone to the audio system via the USB port, Android Auto is automatically initiated. When connected via Android Auto, you can use the audio/information screen to access the Phone, Google Maps (Navigation), and Google Now functions. When you first use Android Auto, a tutorial will appear on the screen.

We recommend that you complete this tutorial while safely parked before using Android Auto.

USB Ports P. 343

▶ Auto Pairing Connection P. 372

NOTE:

Android Auto may not be available in your country or region. For details about Android Auto, please refer to the Google support site.

The images shown here (designs, specifications, etc.) may differ from what is displayed on your screen.

We recommend that you update Android OS to the latest version when using Android Auto. *Bluetooth* A2DP cannot be used while your phone is connected to Android Auto.

To use Android Auto on a smartphone with Android 9.0 (Pie) or earlier, you need to download the Android Auto app from Google Play to your smartphone.

Park in a safe place before connecting your Android phone to Android Auto and when launching any compatible apps.

When your Android phone is connected to Android Auto, it is not possible to use the *Bluetooth*® Audio. However, other previously paired phones can stream audio via *Bluetooth*® while Android Auto is connected

Phone Setup P. 385

Apple CarPlay and Android Auto cannot run at the same time.

Android Auto is a trademark of Google LLC.

Android Auto Menu



1 CONNECT Button

Press to display Android Auto screen.

Maps

Display Google Maps and use the navigation function just as you would with your Android phone. When the vehicle is in motion, it is not possible to make keyboard entries. Stop the vehicle in a safe location to undertake a search or provide other inputs.

Phone

Make and receive phone calls as well as listen to voicemail.

Android Auto™

For details on countries and regions where Android Auto is available, as well as information pertaining to function, refer to the Android Auto homepage.

Screens may differ depending on the version of the Android Auto app you are using.

Android Auto Operating Requirements & Limitations

Android Auto requires a compatible Android phone with an active mobile connection and data plan. Your carrier's rate plans will apply.

Changes in operating systems, hardware, software, and other technology integral to providing Android Auto functionality, as well as new or revised governmental regulations, may result in a decrease or cessation of Android Auto functionality and services. Honda cannot and does not provide any warranty or guarantee of future Android Auto performance or functionality.

It is possible to use 3rd party apps if they are compatible with Android Auto. Refer to the Android Auto homepage for information on compatible apps.

To adjust the ringtone volume, the guidance volume of the navigation or voice recognition, or the audio volume, turn the **VOL U AUDIO** (Volume/Power) knob while the sound you want to adjust is playing.

Exit

Go back to the audio screen.

• 🐧

Operate Android Auto with your voice.

• Ţ

You can check Android notifications.

• (Android Auto Home)
Display useful information organized by Android Auto into simple cards that appear just when they're needed.

Auto Pairing Connection

When you connect an Android phone to the unit via the USB port, Android Auto is automatically initiated.

■ Connecting Android Auto Using the USB Cable to the USB Port

To enable Android Auto after connecting an Android phone to the system, select **Yes** on the screen.

You may change the consent settings under the **Smartphone Settings** menu.

■ Connecting Android Auto Using the USB Cable to the USB Port

Only initialize Android Auto when you are safely parked. When Android Auto first detects your phone, you will need to set up your phone so that auto pairing is possible. Refer to the instruction manual that came with your phone.

You can use the following procedure to disconnect or delete the devices connecting Android Auto after you have completed the initial setup:

Press the **MENU** button → Select Smartphone Settings → Android Auto → Select device

Use of user and vehicle information

The use and handling of user and vehicle information transmitted to/from your phone by Android Auto is governed by the Google's Privacy Policy.

Operating Android Auto with Voice Recognition

Press the [6] (talk) button to operate Android Auto with your voice.



1 (Talk) Button

Press to operate Android Auto with your voice. Press again to deactivate voice recognition.

■Operating Android Auto with Voice Recognition

Below are examples of commands you can give with voice recognition:

- Reply to text.
- Call my wife.
- Navigate to Honda.
- Play my music.
- Send a text message to my wife.
- Call flower shop.

For more information, please refer to the Android Auto homepage.

You can also activate the voice recognition function by selecting the ucon in the lower-left*1/right*2 corner of the screen.


To adjust the guidance volume of voice recognition, turn the **VOL AUDIO** (Volume/Power) knob while the guidance is playing.

Customized Features

Use the audio/information screen to customize certain features.

■ How to Customize the Settings

While the vehicle is at a complete stop with the power mode in ON, press the **MENU** button. To customize the phone settings, press the **PHONE** button, then select **Settings**.

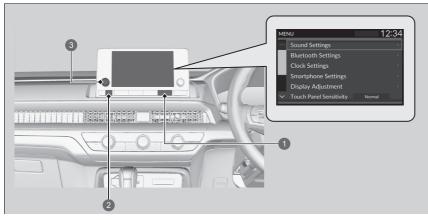

- **1 PHONE** Button
- **MENU** Button
- Selector Knob

○ Customized Features

When you customize settings:

- Make sure that the vehicle is at a complete stop.
- Shift to P.

To customize features detail, refer to the following.

■ List of customizable options P. 375

■ List of customizable options

Press the **MENU** button.

| Customizable Features | | Description | Selectable Settings |
|-----------------------|---|---|---------------------|
| Sound Settings | Bass / Treble Balance / Fader Speed Volume Compensation | — Adjusts the settings of the audio speakers' — sound. ■ Adjusting the Sound P. 345 | _ |
| Bluetooth Settings | Connect New Device | Pairs a new phone to HFT. → Phone Setup P. 385 | _ |
| | Change Device | Connects a paired phone. ▶ Phone Setup P. 385 | |
| | Priority Device | Sets a device as the priority device. | ON*1/OFF |
| | Disconnect All Devices (Disconnect All Device) | Disconnects a paired phone from HFT. | _ |
| | Delete Device | Deletes a paired phone. | _ |
| Clock Settings | Automatic Time | Selects ON to have the GPS automatically adjust the clock. Select OFF to cancel this function. | ON*1/OFF |
| | Daylight Saving Time | Sets the clock to update based on daylight savings time. | ON/OFF*1 |
| | Set Time | Adjusts time. Adjusting the Clock P. 220 | |
| | Time Zone | Changes the time zone manually. | |
| Smartphone Settings | Apple CarPlay | Sets up the Apple CarPlay connection. | _ |
| | Android Auto | Sets up the Android Auto connection. | _ |

^{*1:}Default Setting

| Customizable Features | | Description | Selectable Settings |
|-----------------------|-----------------------|--|---------------------|
| RDS Settings* | AF Setting | Turns on and off to automatically change the frequency of the same programme as you enter different region. | ON/OFF*1 |
| | REG Settings | Turns on and off to keep the same frequency of the stations within that region even if the signal gets weak. | ON*1/OFF |
| | NEWS Settings | Turns on and off to automatically tune to the news programme. | ON/OFF*1 |
| DAB Settings* | DAB-DAB Link | Selects whether the system automatically searches for the same station from Ensembles, and switches to it. | ON/OFF*1 |
| | DAB-FM Link | Selects whether the system finds the same station from an FM band, and automatically switches the band. | ON/OFF*1 |
| Display Adjustment | Brightness | Changes the brightness of the audio/ information screen. | |
| | Contrast | Changes the contrast of the audio/ information screen. | _ |
| | Black Level | Changes the black level of the audio/ information screen. | <u> </u> |
| | Day Night Display OFF | Changes between the daytime mode, nighttime mode and display off mode. | |

^{*1:}Default Setting

| Customizable Features | | Description | Selectable Settings |
|---|-------------------|---|---|
| Touch Panel Sensitivity | | Sets the sensitivity of the touch panel screen. | Normal*1/High |
| Rear Camera Settings (Rear Camera Setting) | Fixed Guideline | Shows the guideline that does not move with the steering wheel. Multi-View Rear Camera* P. 708 | ON*1/OFF |
| | Dynamic Guideline | Shows the guideline that moves with the steering wheel. Multi-View Rear Camera* P. 708 | ON*1/OFF |
| Cross Traffic Monitor* | | Shows arrows on the rear camera image to indicate vehicles approaching from the sides. Cross Traffic Monitor* P. 704 | ON*1/OFF |
| Language | | Changes the display language. | English (United Kingdom)*2, English (United States)*2, Arabic*2, or Chinese*2 See other selectable languages on the screen. |
| Licence (License) | | Shows the legal information. | _ |
| Factory Data Reset | | Resets all the settings to their factory default. Defaulting All the Settings P. 379 | _ |

^{*1:}Default Setting
*2:The default setting varies depending on the model.

Press the **PHONE** button and select **Settings**.

| Customizable Features | | Description | Selectable Settings |
|--|--|---|---------------------|
| Bluetooth Settings | Connect New Device | Pairs a new phone to HFT. Phone Setup P. 385 | _ |
| | Change Device | Connects a paired phone. Phone Setup P. 385 | _ |
| | Priority Device | Sets a device as the priority device. | ON*1/OFF |
| | Disconnect All Devices (Disconnect All Device) | Disconnects a paired phone from HFT. | _ |
| | Delete Device | Deletes a paired phone. | _ |
| Ringtone | | Selects the ringtone. | Phone*1/Vehicle |
| Auto Phone Call Transfer | | Sets calls to automatically transfer from your phone to HFT when you enter the vehicle. | ON*1/OFF |
| System Clear (Hands-Free System Clear) | | Resets all customized items in the Phone Settings group as default. | _ |

^{*1:}Default Setting

Defaulting All the Settings

Reset all the menu and customized settings as the factory defaults.

- 1. Press the **MENU** button.
- 2. Select Factory Data Reset.
 - ► A confirmation message appears on the screen.
- **3.** Select **Yes** to reset the settings.
- **4.** Select **Yes** again to reset the settings.
 - ► The system will reboot.

Defaulting All the Settings

When you transfer the vehicle to a third party, reset all settings to default and delete all personal data.


If you perform **Factory Data Reset**, it will reset the preinstalled apps to their factory default.

Hands-Free Telephone System

Hands-Free Telephone (HFT) System allows you to place and receive phone calls using your vehicle's audio system, without handling your mobile phone.

Using HFT

■ HFT Buttons

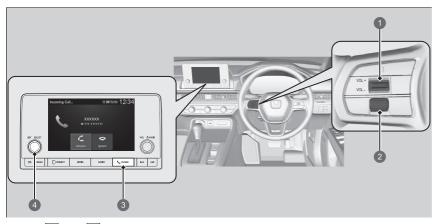

- VOL +/VOL (Volume) Switch
- 2 Left Selector Wheel
- **PHONE** Button
- 4 Selector Knob

Place your phone where you can get good reception.

To use HFT, you need a *Bluetooth*-compatible mobile phone. For a list of compatible phones, pairing procedures, and special feature capabilities, ask a dealer or your local Honda.

Voice control tips

- Aim the vents away from the ceiling and close the windows, as noise coming from them may interfere with the microphone.
- If the microphone picks up voices other than yours, the command may be misinterpreted.

Up to 20 favorite contacts can be stored. If there is no entry in the system, the pop-up notification appears on the screen.

Favorite Contacts P. 393

Up to 20 call histories can be stored. If there is no call history, Call History is disabled.

Left Selector Wheel: While receiving a call, the incoming call screen is displayed on the driver information interface. You can pick up the call using the left selector wheel.

Receiving a Call P. 398

PHONE button: Press to go directly to the **Phone** screen.

Selector knob: Rotate ♥ to select an item on the screen, then press ८.

Bluetooth® Wireless Technology

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc., and any use of such marks by Honda Motor Co., Ltd., is under licence. Other trademarks and trade names are those of their respective owners.

HFT Limitations

An incoming call on HFT will interrupt the audio system when it is playing. It will resume when the call is ended.

■ HFT Status Display

The audio/information screen notifies you when there is an incoming call.



- HFT Mode
- 2 Bluetooth® Indicator Appears when your phone is connected to HFT.
- Battery Level Status
- 4 Signal Strength
- 6 Roam Status
- 6 Caller's Name
- Caller's Number

Limitations for Manual Operation

Certain manual functions are disabled or inoperable while the vehicle is in motion. You cannot select a grayed-out option until the vehicle is stopped.

The information that appears on the audio/information screen varies between phone models.

HFT Menus


The power mode must be in ACCESSORY or ON to use the system.


>> HFT Menus

To use HFT, you must first pair your *Bluetooth*-compatible mobile phone to the system while the vehicle is parked.

Some functions are limited while driving. A message appears on the screen when the vehicle is moving and the operation is cancelled.

PHONE button

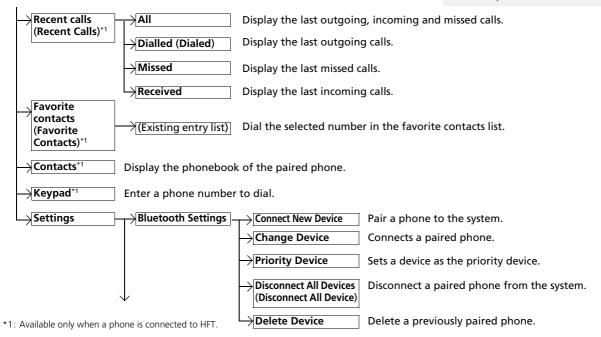

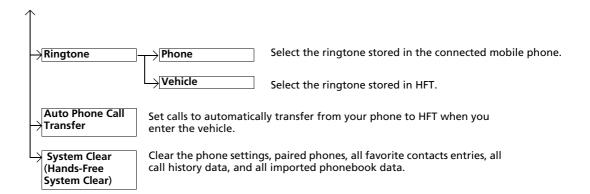

■ Phone Setup



- To pair a mobile phone (No phone has been paired to the system)
- 1. Press the **PHONE** button.
- **2.** Make sure your phone is in search or discoverable mode.
- 3. Select Yes.
 - The audio system will enter a waiting mode for pairing.
- Select Honda HFT from your phone.
 - ► If you want to pair a phone from this audio system, select Search from car and follow the prompts.

When your phone appears on the list, select it.

- **5.** The system gives you a pairing code on the audio/information screen.
 - Confirm if the pairing code on the screen and your phone match.
 This may vary by phone.
- **6.** A notification appears on the screen if pairing is successful.

∑Phone Setup

Your *Bluetooth*-compatible phone must be paired to HFT before you can make and receive hands-free calls.

Phone Pairing Tips:


- You cannot pair your phone while the vehicle is moving.
- Up to six phones can be paired.
- Your phone's battery may drain faster when it is connected to HFT.
- If your phone is not ready for pairing or not found by the system within three minutes, the system will time out and return to the **Bluetooth Settings** screen.

Once you have paired a phone, you can see it displayed on the screen with one or two icons on the right side.

These icons indicate the following:

☐: The phone is compatible with Bluetooth® Audio.
The phone can be used with HFT.

When pairing a phone from this audio system: If your phone doesn't appear on the audio/ information screen, select **Search from phone** and search for *Bluetooth*® devices using your phone. From your phone, select **Honda HFT**.

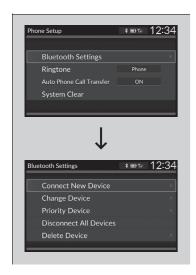


- To pair a mobile phone (when a phone has already been paired to the system)
- 1. Press the **PHONE** button.
 - ▶ If a prompt appears asking to connect to a phone, select **No** and proceed with step 2.
- 2. Select Settings.
- 3. Select Bluetooth Settings.
- 4. Select Connect New Device.
 - ► The audio system will enter a waiting mode for pairing.



- **5.** Make sure your phone is in search or discoverable mode.
- **6.** Select **Honda HFT** from your phone.
 - ► If you want to pair a phone from this audio system, select **Search from car** and follow the prompts.
 When your phone appears on the list
 - When your phone appears on the list, select it.
- **7.** The system gives you a pairing code on the audio/information screen.
 - Confirm if the pairing code on the screen and your phone match.
 This may vary by phone.

- **8.** A notification appears on the screen if pairing is successful.
 - ➤ You can prioritize a *Bluetooth*® device at the same time. Select **Yes** if you want to prioritize the device.

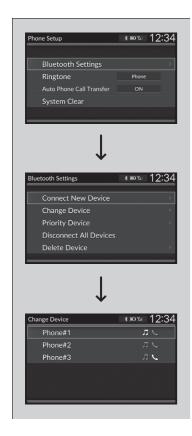


■ To change the currently paired phone

- 1. Press the **PHONE** button.
- 2. Select Settings.
- **3.** Select **Bluetooth Settings**.

- 4. Select Change Device.
 - ▶ The screen changes to a device list.

- **5.** Select a desired device name.
- 6. Select Both, Audio, or Phone.
 - ➤ When another device is connected to Android Auto and you select **Both** or **Phone**, a confirmation message appears. Select **Continue**.
 - ► HFT disconnects the connected phone and starts searching for another paired phone.

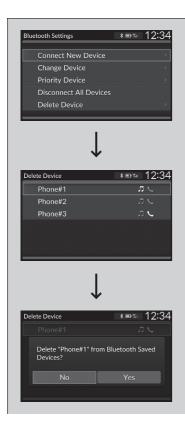

■ To delete a paired phone

- 1. Press the **PHONE** button.
- 2. Select Settings.
- 3. Select Bluetooth Settings.

- 4. Select Delete Device.
 - ▶ The screen changes to a device list.
- **5.** Select a phone you want to delete.

- **6.** A confirmation message appears on the screen. Select **Yes**.
 - When the device is connected to Android Auto, a confirmation message appears. Select Yes.

Automatic Transferring

If paring between your phone and the system is executed while you are on the phone, the call can be automatically transferred to HFT.



- 1. Press the **PHONE** button.
- 2. Select Settings.
- 3. Select Auto Phone Call Transfer.
- 4. Select ON or OFF.

Ringtone

You can change the ringtone setting.



- **1.** Press the **PHONE** button.
- 2. Select Settings.
- **3.** Select **Ringtone**.
- 4. Select Phone or Vehicle.

Phone: Depending on the make and model of the mobile phone, the ringtone stored in the phone will sound if the phone is connected.

Vehicle: The fixed ringtone sounds from the speakers.

■ To Clear the System

Phone settings, paired phones, all favorite contacts entries, all call history data, and all imported phonebook data are erased.




- 1. Press the **PHONE** button.
- 2. Select Settings.
- **3.** Select **System Clear** (**Hands-Free System Clear**).
- 4. Select Yes.

5. A confirmation message appears on the screen. Select **Yes**.

6. A notification appears on the screen. Select **OK**.


■ Automatic Import of Mobile Phonebook and Call History

When your phone is paired, the contents of its phonebook and call history are automatically imported to HFT.

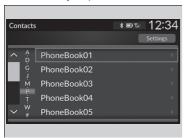

■ Automatic Import of Mobile Phonebook and Call History

When you select a person from the list in the mobile phonebook, you can see up to five category icons. The icons indicate what types of numbers are stored for that name.

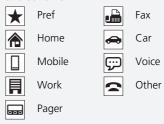


On some phones, it may not be possible to import the category icons to HFT.

The phonebook is updated after every connection. Call history is updated after every connection or call.

■ Favorite Contacts



Star Icon

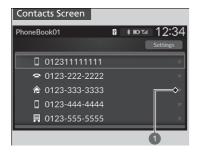

Star Icon

■ To add a favorite contacts


- 1. Press the **PHONE** button.
- 2. Select Recent calls (Recent Calls), Contacts, or Keypad.

On the Recent calls or Contacts screen

3. Select the star icon.



Favorite contacts (Add to Favorites)

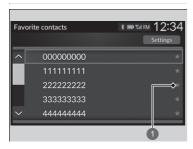

Star Icon

On the Keypad screen

- 3. Select Favorite contacts (Add to Favorites).
 - ► A notification appears on the screen if the favorite contact is successfully stored.
 - To remove the favorite contact, select the star icon again.

■ To delete a favorite contact

- **1.** Press the **PHONE** button.
- **2.** Select **Favorite contacts** (**Favorite Contacts**).
- **3.** Select the star icon.
- **4.** A confirmation message appears on the screen. Select **Yes**.

Making a Call

You can make calls by inputting any phone number, or by using the imported **Recent calls** (**Recent Calls**), **Favorite contacts** (**Favorite Contacts**), and **Contacts** entries.





■ To make a call using the imported phonebook

When your phone is paired, the contents of its phonebook are automatically imported to HFT.


- **1.** Press the **PHONE** button.
- 2. Select Contacts.
- **3.** The phonebook is stored alphabetically. Select a name.
- **4.** Select a number.
 - ▶ Dialing starts automatically.

Once a call is connected, you can hear the voice of the person you are calling through the audio speakers.



■ To make a call using a phone number

- 1. Press the **PHONE** button.
- 2. Select Keypad.
- 3. Select a number.
- 4. Select Call.
 - Dialing starts automatically.

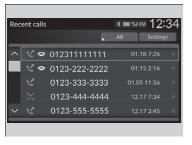


■ To make a call using the call history Call history is stored by All, Dialled (Dialed), Missed, or Received.

- 1. Press the **PHONE** button.
- 2. Select Recent calls (Recent Calls).
 - ➤ You can sort by **All**, **Dialled** (**Dialed**), **Missed**, or **Received**. Select the icon on the upper right of the screen.
- 3. Select a number.
 - ▶ Dialing starts automatically.

∑To make a call using the call history

The call history appears only when a phone is connected to HFT, and displays the last 20 dialled, received, or missed calls.

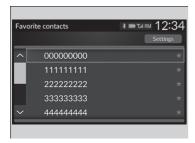

■ To make a call using a favorite contact

- 1. Press the **PHONE** button.
- **2.** Select **Favorite contacts** (**Favorite Contacts**).
- **3.** Select a number.
 - ▶ Dialing starts automatically.

■ Receiving a Call



- HFT Mode
- Caller's Name

When there is an incoming call, an audible notification sounds and the **Incoming Call...** screen appears.

You can answer the call using the left selector wheel.

To pick up the call, roll up or down to select **Answer** on the driver information interface and then press the left selector wheel.

▶ If you want to decline or end the call, select **Ignore** on the driver information interface using the left selector wheel.

■ Receiving a Call

Call Waiting

Select **Answer** using the left selector wheel to put the current call on hold to answer the incoming call. Select **Swap calls** using the left selector wheel to return to the current call.

Select **Ignore** using the left selector wheel to ignore the incoming call if you do not want to answer it. Select **Hang up** using the left selector wheel if you want to hang up the current call.

You can select the icons on the audio/information screen instead of the icons on the driver information interface.

Options During a Call

The following options are available during a call.

Swap Calls: Put the current call on hold to answer the incoming call.

Mute: Mute your voice.

Use Handheld: Transfer a call from HFT to your phone.

 $\textbf{Keypad:} \ \ \textbf{Send numbers during a call.} \ \ \textbf{This is useful when you call a menu-driven}$

phone system.



The available options are shown on the lower half of the screen.

Select the option.

➤ The mute icon appears when **Mute** is selected. Select **Mute** again to turn it off.

■Options During a Call


Keypad: Available on some phones.

Mute Icon

Display Audio

Start Up

The Display Audio starts automatically when you set the power mode to ACCESSORY or ON. At start-up, the following screen about the disclaimer will be displayed.

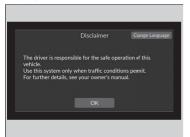

Select **OK**.

► If there is no registered device, select **OK** and the *Bluetooth*® pairing screen will be displayed.




- To pair a mobile phone (when there is no phone paired to the system)
- **1.** Make sure your phone is in search or discoverable mode.
- 2. Select Honda HFT from your phone.
 - ▶ If you want to pair a phone from this Display Audio, select Search for Devices, and then select your phone when it appears on the list.
 - ► If you check the box with Do not show this again, this screen will not be displayed.

Basic Operation

Audio System Function

To use the audio system function, the power mode must be in ACCESSORY or ON.

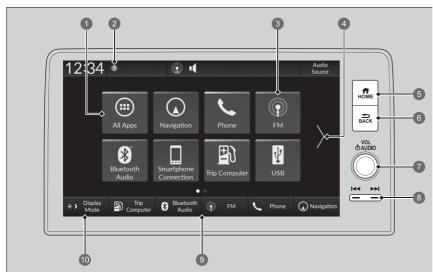

- 1 All Apps
- 2 Status Icons
- 3 App Shortcut Icons
- 4 Arrow
- (Home) Button

- 6 (Back) Button
- **VOL/ (b) AUDIO** (Volume/Power) Knob
- 8 ◄ / ►► (Seek/Track) Buttons
- Mode Change Switch Icons
- Display Mode Icon

■ Audio System Function

This screen is shown for the right-hand drive models. For the left-hand drive models, these are located at the symmetrically opposite to the right-hand drive model.

Continued 401

All Apps: Displays the all apps.

Status Icons: Show the indicators of the information for the vehicle, connected

phones, etc. in the header area.

App Shortcut Icons: Display the app shortcut icons.

Arrow: Displays the next pages on the audio/information screen.

(Home) Button: Presses to go to the home screen.

(Back) Button: Presses to go back to the previous screen.

VOL/ (b) AUDIO (Volume/Power) Knob: Turns the audio system on and off and


turns to adjust the volume.

[►►] (Seek/Track) **Buttons**: Press to change station, song or file. **Mode Change Switch Icons**: Display icons to change the mode directly.

Display Mode Icon: Changes the audio/information screen brightness. Select

*) once and select or to make an adjustment.

USB Ports

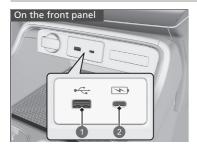

- Playing audio files and connecting compatible phones*
- Only for charging devices



■ On the front panel ()*

The USB port (2.5A) is for charging devices, playing audio files and connecting compatible phones with Apple CarPlay or Android Auto.

➤ To prevent any potential issues, be sure to use an Apple MFi Certified Lightning Connector for Apple CarPlay, and for Android Auto, the USB cables should be certified by USB-IF to be compliant with USB 2.0 Standard.

■ On the front panel ()

The USB port (3.0A) is only for charging devices.

You cannot play music even if you have connected music players to it.

■ On the back of the console compartment These USB ports (3.0A) are only for charging

These USB ports (3.0A) are only for charging devices.

You cannot play music even if you have connected music players to them.

≫USB Ports

- Do not leave the iPod or USB flash drive in the vehicle. Direct sunlight and high temperatures may damage it.
- We recommend that you use a USB cable if you are attaching a USB flash drive to the USB port.
- Do not connect the iPod or USB flash drive using a hub.
- Do not use a device such as a card reader or hard disk drive, as the device or your files may be damaged.
- We recommend backing up your data before using the device in your vehicle.
- Displayed messages may vary depending on the device model and software version.


USB charge

The USB port can supply up to 2.5A/3.0A of power. It does not output 2.5A/3.0A unless requested by the device.

For amperage details, read the operating manual of the device that needs to be charged.


Under certain conditions, a device connected to the port may generate noise to the radio station you are listening to.

Audio Remote Controls

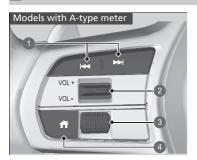

Allow you to operate the audio system while driving. The information is shown on the driver information interface.

- 2 VOL +/VOL (Volume) Switch
- 3 Left Selector Wheel
- 4 (Home) Button

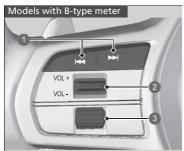

- 2 VOL +/VOL (Volume) Switch
- 3 Left Selector Wheel

MAudio Remote Controls

Some modes appear only when an appropriate device or medium is used.

Depending on the *Bluetooth*® device you connect, some functions may not be available.

Models with A-type meter

Press the (home) button to go back to the home screen of the driver information interface.

Press Up: To increase the volume.

Press Down: To decrease the volume.

Models with A-type meter

Left Selector Wheel

• When selecting the audio mode

Press the (home) button, then roll up or down to select (audio) on the driver information interface, and then press the left selector wheel.

Roll up or down:

To cycle through the audio modes, roll up or down and then press the left selector wheel:

FM/DAB*/AM/iPod/USB/Bluetooth/Apps (Apple CarPlay/Android Auto)

▶ Depending on a connected device, the displayed modes may be changed.

Models with B-type meter

Left Selector Wheel

Roll up or down:

To cycle through the audio modes, roll up or down and then press the left selector wheel:

Back/Phone/FM/DAB*/AM/iPod/USB/Bluetooth/Apps (Apple CarPlay/Android Auto)/ Customize display

▶ Depending on a connected device, the displayed modes may be changed.

【▲▲/▶▶】 (Seek/Skip) Buttons

• When listening to the radio

Press To select the next preset radio station.

Press To select the previous preset radio station.

Press and hold To select the next strong station.

Press and hold To select the previous strong station.

 When listening to an iPod, USB flash drive, Bluetooth® Audio, or Smartphone Connection

▶ Depending on a connected device, operations may be changed.

Press To skip to the next song.

Press To go back to the previous song.

• When listening to a USB flash drive

Press and hold To skip to the next folder.

Press and hold To go back to the previous folder.

• When listening to an iPod:

Press and hold To skip to the next song.

Press and hold I To go back to the previous song.

On-Board Owner's Manual*

You can view the content of the owner's manual on the Display Audio.

Open the Owner's Manual

- 1. Select All Apps.
- 2. Select Owner's Manual.

■ Install/Update the Owner's Manual

When you can install or update the owner's manual, the notification will be sent automatically.

To update:

- **1.** Tap the notification.
 - ► The version screen will display.
- **2.** Select items to be updated.
- 3. Tap Update.

If you unselect an item on the version screen, you will not receive any notifications for it.

≥ On-Board Owner's Manual*

This function does not cover all languages available for the Display Audio.

Changing the language of the Display Audio will also change the language of the owner's manual. If the owner's manual is not available or installed in that language, the owner's manual will default to English.

Install/Update the Owner's Manual

There may be differences in the displayed content depending on the version of the owner's manual.

If the owner's manual is not installed yet, you can install it via Wi-Fi.

Connect the Vehicle to a Wi-Fi Hotspot P. 447

Audio/Information Screen

Displays the audio status and clock. From this screen, you can go to various setup options.



>> Audio/Information Screen


Touchscreen Operation

- Use simple gestures including touching, swiping, and scrolling - to operate certain audio functions.
- Some items may be grayed-out during driving to reduce the potential for distraction.
- You can select them when the vehicle is stopped.
- Wearing gloves may limit or prevent touchscreen response.

You can change the touchscreen sensitivity setting.

■ Customized Features P. 458

■ App Shortcut Function

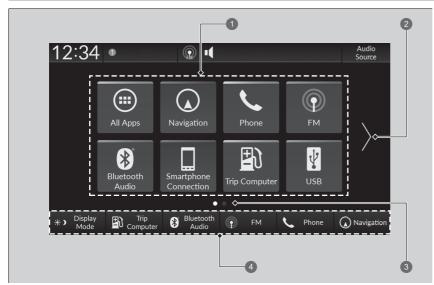

- App Shortcut Icons
- 2 Arrow
- Page Indicator
- 4 Mode Change Switches

■ To move to the next screen

Selecting < or >, or swiping the screen left or right changes to the next screen.

■ App Shortcut Function

The home screen can be added up to 6 pages.

Press the <u>first</u> button to go directly back to the first page of the home screen from any page.

Continued 409

■ To add app icons on the home screen

App icons can be added on the home screen.



- 1. Press the toutton.
- 2. Select All Apps.
- **3.** Select the box checked on the desired apps.

∑To add app icons on the home screen

Pre-installed apps may not start up normally. If this occurs, you need to re-start the system. Set the power mode to VEHICLE OFF, then set the power mode to ON. After that, start up an app again. If you are still unable to start up the apps, you need to reset the system.

Defaulting All the Settings P. 478

If you perform **Factory Data Reset**, it may reset all the settings to their factory default.

Defaulting All the Settings P. 478

In case those apps still do not start up normally even after **Factory Data Reset**, contact your dealer.

■ To move icons on the home screen

You can change location on the home screen.



- **1.** Press the button.
- 2. Select and hold an icon.
 - ► The screen switches to the customization screen.
- **3.** Drag and drop the icon to where you want it to be.
- 4. Select Done.
 - The screen will return to the home screen.

▼To move icons on the home screen ■ To move icons on the ho

Select **Tips** to show tips. To hide them, select it again.

Continued 411

■ To remove icons on the home screen

You can delete the icons on the home screen.



- 1. Press the toutton.
- **2.** Select and hold an icon.
 - ► The screen switches to the customization screen.
- **3.** Drag and drop the icon you want to remove to the header area.
 - ► The icon is removed from the home screen.
- 4. Select Done.
 - ► The screen will return to the home screen.

∑To remove icons on the home screen

Apps will not be deleted by deleting the icon on the home screen.

Select Tips to show tips. To hide them, select it again.

■ To shortcut icons on the home screen

You can store up to five icons on the bottom of the home screen.



Mode Change Switches

- **1.** Press the button.
- 2. Select and hold an icon.
 - ► The screen switches to the customization screen.
- **3.** Drag and drop the icon you want to store to the bottom of the home screen.
 - ► The icon is stored on the mode change switch area.
- 4. Select Done.
 - ► The screen will return to the home screen.

∑To shortcut icons on the home screen

Select **Tips** to show tips. To hide them, select it again.

Continued 413

Status Area

Shows the indicators of the information for the vehicle, connected phones, etc. in the header area. You can confirm the detail information by selecting these icons.

- Audio Source

 All Apps Navigation Phone Phone Wassesters

 Buetooth Audio Trip Computer USB

 Diplay D To Blackooth D Est Nove (Absenters
- **1.** Select the system status icon.
 - ► The status area appears.
- 2. Select an item to see the details.
- **3.** Press the button or select the system status icon to close the area.

System Status Icon

■ Selecting an Audio Source



Select **Audio Source** in the header area, then select an icon on the source list to switch the audio source.

■ Limitations for Manual Operation

Certain manual functions are disabled or inoperable while the vehicle is in motion. You cannot select a grayed-out option until the vehicle is stopped.

Clock Setup

■ Adjusting the Clock

You can adjust the time manually and set the wallpaper of the clock in the audio/information screen.



- 1. Press the button.
- 2. Select General Settings.
- 3. Select System.
- 4. Select Date & Time.
- 5. Select Set Date & Time.
- **6.** Select **Automatic Date & Time**, then select **OFF**.

To adjust date:

- 7. Select Set Date.
- 8. Select ▲/▼.
- **9.** Select **Save** to set the date.

To adjust time:

- 7. Select Set Time.
- 8. Select ▲/▼.
- **9.** Select **Save** to set the time

■ Adjusting the Clock

The clock is automatically updated through the audio system.

You can also adjust the clock by touching the clock displayed on the header area of the audio/information screen, **Clock** displayed on the home screen, or All Apps.

- Touch the clock on the screen.
 The clock screen of the face-type appears.
- 2. Select **Settings**.
- 3. Select **Date & Time**.
- 4. Select Set Date & Time.
- 5. Select Automatic Date & Time, then select OFF.
- 6. Select **Set Date** or **Set Time**.
- 7. Adjusting the dates, hours and minutes by selecting ▲/▼.
- 8. Select **Save** to set the time.

You can customise the clock display.

≥ System P. 459

Clock Wallpaper Setup



■ Import clock wallpaper*

- **1.** Connect the USB flash drive to the USB port.
 - **USB Ports** P. 403
- 2. Press the button.
- 3. Select Clock.
- 4. Select Settings.
- 5. Select Clock Faces.
- 6. Select Add More.
 - The image of the pictures stored in the USB flash drive are displayed on the list.
- 7. Select a desired picture to import.
 - ► Multiple pictures can be selected at the same time.
- 8. Select OK.
 - ► The selected pictures are displayed.
- 9. Select Transfer.
 - ▶ It will return to the clock wallpaper setting screen.

∑Clock Wallpaper Setup

- When importing wallpaper files, the image must be in the USB flash drive's root directory.
 Images in a folder cannot be imported.
- The file name must be less than 64 bytes.
- The file format of the image that can be imported is BMP (bmp) or JPEG (jpg).
- The individual file size limit is less than 10 MB.
- If the USB flash drive does not have any pictures, the message appears.
- Up to 11 pictures can be imported.
- The maximum image size is 4,096 x 2,304 pixels. If the image size is less than 1,280 x 720, the image is displayed in the middle of the screen with the extra area appearing in black.


■ Select clock wallpaper

- **1.** Press the number button.
- 2. Select Clock.
- 3. Select Settings.
- 4. Select Clock Faces.
- **5.** Select a desired picture to set.
 - ▶ The preview is displayed on the screen.
- **6.** Select **Save**.
 - ▶ The clock screen which the wallpaper has been set is displayed.

■ Delete clock wallpaper*

- **1.** Press the button.
- 2. Select Clock.
- 3. Select Settings.
- 4. Select Clock Faces.
- 5. Select Delete Photos.
- **6.** Select a desired picture to delete.
 - ▶ Multiple pictures can be selected at the same time.
- 7. Select OK.
 - ► The selected pictures are displayed.
- 8. Select Delete.
 - ▶ It will return to the clock wallpaper setting screen.

Adjusting the Sound

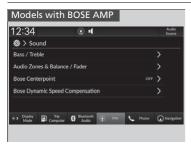



- **1.** Press the button.
- 2. Select an audio source icon.
- 3. Select Sound.

Select an item from the following choices:

- Bass / Treble: Treble, Midrange, Bass
- Audio Zones & Balance / Fader*1: Driver Only, Front Only, Rear Only, Full Vehicle, Balance, Fader
- Bose Centerpoint*1: Turns the Bose Centerpoint ON and OFF.
- Bose Dynamic Speed Compensation*1: Sets the amount of volume increase.
- Balance / Fader*2: Balance, Fader
- **Speed Volume Compensation***2: Sets the amount of volume increase.

■ Adjusting the Sound

The Bose Dynamic Speed Compensation*1/Speed Volume Compensation*2 (SVC) adjusts the volume level based on the vehicle speed. As you go faster, audio volume increases. As you slow down, audio volume decreases.

You can also adjust the sound by the following procedure. ___

- 1. Press the tome button.
- 2. Select **General Settings**.
- 3. Select **Sound**.

Audio Zones & Balance / Fader*1

You can change where the sound comes from by selecting one of the speaker options below:

- Full Vehicle: All the speakers emit sound.
- **Driver Only:** Only the speaker by the driver's seat emits sound.
- Front Only: Only the front speakers emit sound.
- Rear Only: Only the rear speakers emit sound.

To reset each setting for Bass / Treble, Audio Zones & Balance / Fader*1, Bose Dynamic Speed Compensation*1, Balance / Fader*2, and Speed Volume Compensation*2, select Default on each setting screen.

Display Setup

You can set the screen brightness.

■ Switching Display Mode Manually



Select **Display Mode**.

- ► The brightness bar is displayed for a few seconds.
- ➤ Select or to adjust the brightness.
- Select **Display OFF** to turn off the screen. To turn on the screen, press the

Display Setup

You can adjust the screen brightness by sliding or tapping on the brightness bar.

You can also change the screen brightness on the following procedures.

- 1. Press the toutton.
- 2. Select General Settings.
- 3. Select **Display**.
- 4. Select the setting you want.

To reset the settings, select **Default**.



System Updates

The audio system's firmware can be updated with a Wi-Fi connection, or with a USB device, or the telematics control unit (TCU)* through the subscription-based service.

How to Update

When the audio system update is available, the notification is shown on the status area. Use the following procedure to update the system.

- **1.** Press the button.
- 2. Select System Updates.
 - If **System Updates** is not displayed on the home screen, select All Apps.
 - ► The system will check for updates.
 - ► If the update icon is appeared on the home screen, select the status icon.

 Status Area P. 414
- 3. Select Download.
 - A notification appears on the screen if need to user acceptance for download.
- 4. Select Install Now or Install While Vehicle Off.
 - A notification appears on the screen if the update is successful.

You can update the system via Wi-Fi, but cannot use the captive portal that require login or agreement the terms of use on the browser.

Your download will be cancelled if:

- Your Wi-Fi connection is severed.
- You stop the engine when the battery is low on power.

Your download will recommence the next time a Wi-Fi connection is established.

For the battery protection, **Install While Vehicle Off** cannot be selected when the battery is low on power. If you want to install the updated data, recharge the battery or select **Install Now**.

System Updates Settings



The following settings can be set.

- Automatic Download
- Version Status
- Connection Setup
- Update History

■ Automatic download settings

Use the following procedure to change to the automatic download setting.

- 1. Press the toutton.
- 2. Select System Updates.
 - If **System Updates** is not displayed on the home screen, select **All Apps**.
- 3. Select Settings.
- 4. Select Automatic Download.
- **5.** Select the access point, then select **Enable**.
 - If you do not want to system update automatically, select **Disable**.

■ View a version and update status

Use the following procedure to confirm the version and update status.

- **1.** Press the button.
- 2. Select System Updates.
 - ▶ If **System Updates** is not displayed on the home screen, select **All Apps**.
- 3. Select Settings.
- 4. Select Version Status.

■ Connection setup

Use the following procedure to connect to the Internet via a Wi-Fi network.

- **1.** Press the toutton.
- 2. Select System Updates.
 - ▶ If **System Updates** is not displayed on the home screen, select **All Apps**.
- 3. Select Settings.
- 4. Select Connection Setup.
- **5.** Select **OK**.
- 6. Select an access point from the network list.
 - To connect to a hotspot that is not automatically detected, select Options then Add Network.
- 7. Enter the password.
 - ▶ If you check the **Use this network to automatically download system updates** box, you can set the network to be used for system updates.
- 8. Select Connect.

■ View the update history

Use the following procedure to confirm the update history.

- 1. Press the button.
- 2. Select System Updates.
 - ▶ If **System Updates** is not displayed on the home screen, select **All Apps**.
- 3. Select Settings.
- 4. Select Update History.

Continued 423

How to Update Wirelessly

■ Wireless connection mode setup

- **1.** Press the button.
- 2. Select System Updates.
 - If **System Updates** is not displayed on the home screen, select All Apps.
- 3. Select Settings.
- 4. Select Connection Setup.
- 5. Select OK.
- **6.** Select an access point from the network list.
 - ➤ To connect to a hotspot that is not automatically detected, select Options then Add Network.
- 7. Enter the password.
 - ▶ If you check the **Use this network to automatically download system updates** box, you can set the network to be used for system updates.
- 8. Select Connect.

■ How to update

- **1.** Press the toutton.
- 2. Select System Updates.
- 3. Select via Wireless.
- 4. Select **Download**.
 - A notification appears on the screen if need to user acceptance for download.
- 5. Select Install Now or Install While Vehicle Off.
 - A notification appears on the screen if the update is successful.

How to Update with a USB Device*

■ Download the update files from the server

- 1. Press the toutton.
- 2. Select System Updates.
- 3. Select Other Methods.
- 4. Select Via USB.
 - A notification appears on the screen.
- 5. Connect a USB device into the USB port.
 - ▶ The inventory data is copied into the USB device.

USB Ports P. 403

- **6.** Remove the USB device from the USB port.
- 7. Connect the USB device into your computer, and then download the update files.
 - ► Follow the link to download the required software update files. Refer to https://usb.honda.com for instructions.

■ Update the audio system

- 1. Press the toutton.
- 2. Select System Updates.
- 3. Select Other Methods.
- 4. Select Via USB.
 - A notification appears on the screen.
- 5. Connect the USB device with the update files into the USB port.
 - ► A notification appears on the screen.

USB Ports P. 403

- 6. Select Install Now.
 - A notification appears on the screen if the update is successful.

Mow to Update with a USB Device * Most a USB

A USB device with a minimum of 8 GB of free space or more is recommended.

Be sure to delete any previous inventory or update files from the USB before starting the USB update process.

Voice Control Operation*

Your vehicle has a voice control system that allows hands-free operation. The voice control system uses the (Talk) button on the steering wheel and a microphone near the map lights on the ceiling.

Voice Recognition

To achieve optimum voice recognition when using the voice control system:

• Make sure the correct screen is displayed for the voice command that you are using.

The system recognises only certain commands.

Available voice commands:

➤ Voice Portal Screen P. 427

- Close the windows and panoramic roof.
- Adjust the dashboard and side vents so air does not blow onto the microphone on the ceiling.
- Speak clearly in a natural speaking voice without pausing between words.
- Reduce any background noise if possible. The system may misinterpret your command if more than one person is speaking at the same time.

When you press the <u>s</u> button, a helpful prompt asks what you would like to do. Press and release the <u>s</u> button again to bypass this prompt and give a command.

The voice control system can only be used from the driver's seat because the microphone unit removes noises from the front passenger's side.

Voice Portal Screen



When the (talk) button is pressed, available voice commands appear on the screen

For a complete list of commands, say "Help" after the beep.

Depending on the selected mode, the displayed commands are different on the voice portal screen. The commands recognised are the same regardless of which screen is selected.

Normal Mode: A list of example commands is displayed to quickly complete your desired function.

Assist Mode: A list of basic commands is displayed to guide you step by step through the voice menu.

You can change the mode on the **General Settings** screen.

■ Voice Control* P. 466

The system only recognises the commands on the following pages, at certain screens. Free-form voice commands are not recognised.

■ General Commands

When the voice portal screen is displayed, it will change to the top screen of each function by using the global commands.

- Music Search
- AM
- FM
- Phone
- Navigation*

Phone Commands

When the system recognises a phone command, the screen will change to the dedicated phone voice recognition screen. These commands can only be used when a phone is connected.

■ Phone Commands

- Call <name>
- Call <number>

The system only recognises contact names stored in the phonebook of your phone. If a full name is registered in the first name field, the system will recognise the first name and last name as one contact name.

Phone commands are not available if using Apple CarPlay.

Audio Commands

When the system recognises an audio command, the screen will change to the dedicated audio voice recognition screen.

■ FM Commands

• Tune to <FM frequency>

■ AM Commands

• Tune to <AM frequency>

■ iPod Commands

- List Album <name>
- List Artist <name>
- List Genre <name>
- List Playlist <name>
- Play <artist> <album>
- Play
- Play Album <name>
- Play Artist <name>
- Play Genre <name>
- Play Music <text:media_combo>
- Play Playlist <name>
- Play Song <name>

■ USB Commands

- List Album <name>
- List Artist <name>
- List Playlist <name>
- Play <artist> <album>
- Play
- Play Album <name>
- Play Artist <name>
- Play Music <text:media_combo>
- Play Playlist <name>
- Play Song <name>

■ Navigation Commands*

The screen will change to the navigation screen when a navigation voice command is received.

Refer to the Navigation System Manual

Standard Commands


- Voice Help
- Cancel
- Back

Voice Help provides guidance for the current screen

List Commands

- Previous
- Next
- Yes
- No

Playing FM/AM Radio

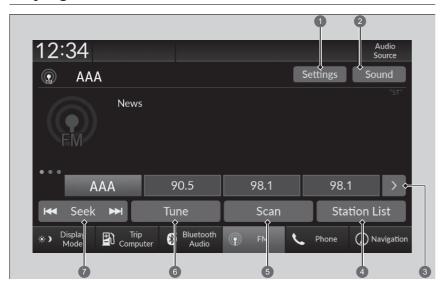

- Settings Icon*
- Sound Icon
- Preset Icons
- 4 Station List Icon

- **6** Scan Icon
- **1** Tune Icon
- Seek Icon

Preset Memory

Tunes the radio frequency for preset memory.

To store a station:

- 1. Tune to the selected station.
- **2.** Select and hold the preset icon to store that station.
 - ► Selecting **Press & Hold** can be set a new preset station.

■ Station List

Lists the strongest stations on the selected band.

- **1.** Select **Station List** to display a list.
- 2. Select the station.

■ Manual update

Updates your available station list at any time.

- 1. Select **Station List** to display a list.
- 2. Select Refresh.

Scan

Samples each of the strongest stations on the selected band for 10 seconds. To begin scanning, select **Scan**, and to turn it off, select **Stop** or press the button.

Seek

Selects or by to search the selected band up or down for a station with a strong signal.

The **ST** indicator appears on the display indicating stereo FM broadcasts.

Switching the Audio Mode Roll the left selector wheel or select **Audio Source** on the screen.

Audio Remote Controls P. 404

You can store 12 AM/FM stations into preset memory.

Sound

Adjusts the sound settings.

■ Adjusting the Sound P. 419

■ Radio Frequency Manual Tune Screen

Selects to use the on-screen keyboard for entering the radio frequency directly.

1. Select Tune.

on-screen keyboard.

2. Enter the desired radio frequency using the

3. Select **Enter** to tune into the frequency.



1 On-screen Keyboard

■ Radio Frequency Manual Tune Screen

⋖/ icons:

Select ◀ or ▶ to tune the radio frequency.

Continued 431

■ Radio Data System (RDS)*

Provides text data information related to your selected RDS-capable FM station.

■ To find an RDS station from Station List

- **1.** Select **Station List** to display a list while listening to an FM station.
- **2.** Select the station.

■ Manual update

Updates your available station list at any time.

- 1. Select **Station List** to display a list while listening to an FM station.
- 2. Select Refresh.

■ Traffic announcement (TA)

The TA standby function allows the system to stand by for traffic announcements in any mode while the function is on. The last tuned station must be an RDS-capable traffic program station.

To turn the function on: Select **TA**. When a traffic announcement begins, the information screen appears on the audio/information screen. The system returns to your last selected mode after the traffic announcement is finished.

▶ If you want to go back to your last selected mode during the traffic announcement, select **Stop**.

To turn the function off: Select TA again.

When you select an RDS-capable FM station, the RDS automatically turns on, and the frequency display changes to the station name. However, when the signals of that station become weak, the display changes from the station name to the frequency.

The **TA** indicator appears on the header area while the TA standby function is on.

If you select **Scan** while the TA standby function is on, the system searches TP station only.

Selecting **TA** while the traffic announcement is on does not cancel the TA standby function.

Settings*

Changes the RDS settings.

- 1. Select Settings.
- 2. Select an option.
- **TA-Information:** Turns on and off the traffic information. (**ON/OFF***1)
- AF: Turns on and off to automatically change the frequency of the same program you enter different regions. (ON*2/OFF*3)
- REG: Turns on and off to keep the same stations within that region even if the signal gets weak. (ON*1/OFF)
- NEWS: Turns on and off to automatically to tune to the news program. (ON/ OFF*1)


^{*1:} Default Setting

^{*2:} Default Setting for African models with Right-hand Drive Type

^{*3:} Default Setting for except African models with Right-hand Drive Type

^{*} Not available on all models

Playing DAB (Digital Audio Broadcasting)*

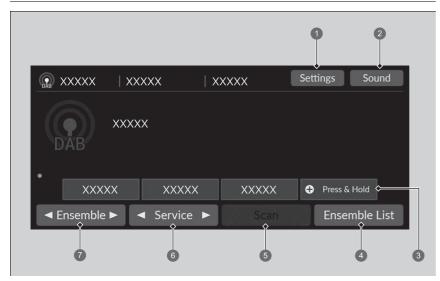

- Settings Icon
- Sound Icon
- Preset Icons
- Ensemble List Icon

- Scan Icon
- **6** Service Icons
- Ensemble Icons

Preset Memory

Tunes the preset frequency.

To store a service:

- 1. Tune to the selected service.
- **2.** Select and hold the preset icon to store that station.
 - ► Selecting **Press & Hold** can be set a new preset station.

Ensemble List

Lists the receivable ensembles on the selected service.

- **1.** Select **Ensemble List** to display a list.
- 2. Select the ensemble.

■ Manual update

Updates your available ensemble list at any time.

- 1. Select Ensemble List to display a list.
- 2. Select Refresh.

Ensemble

Tunes the ensemble.

- 1. Select **to** the tune ensemble.
- 2. Select and hold of to search the selected service up to down for an ensemble until a receivable ensemble is found.

Service

Tunes the service component.

To tune it, select **◄** or **▶**.

Switching the Audio Mode Roll the left selector wheel or select **Audio Source** on the screen.

Audio Remote Controls P. 344

You can store 12 DAB stations into preset memory.

Continued 435

Scan

Samples each of the receivable ensemble or service on the selected service for 10 seconds.

To begin scanning, select **Scan**, and to turn it off, select **Stop** or press the button.

Sound

Adjusts the sound settings.

■ Adjusting the Sound P. 345

Settings


Changes the DAB settings.

- **1.** Select **Settings**.
- **2.** Select the option you want to change.

Playing an iPod*

Using your USB connector, connect the iPod to the USB port, then select the USB mode

USB Ports P. 403

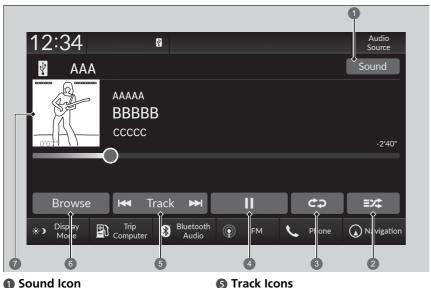

6 Browse Icon

Cover Art

- Sound Icon
- Shuffle Icon
- Repeat Icon
- Play/Pause Icon

▶ Playing an iPod*

Available operating functions vary on models or versions. Some functions may not be available on the vehicle's audio system.

If there is a problem, you may see an error message on the audio/information screen.

■ iPod/USB Flash Drive P 500

If you operate the music app on your iPhone/iPod while the phone is connected to the audio system, you may no longer be able to operate the same app on the audio/information screen. Reconnect the device if necessary.

If a smartphone is connected via Apple CarPlay or Android Auto, the iPod/USB source will be unavailable and audio files on the phone will be playable only within Apple CarPlay or Android Auto.

■ How to Select a Song from the Music Search List

You can select to display the music search list screen.

- 1. Select Browse.
- 2. Select a search category.
- 3. Continue making selections until you find the song of your choice.

■ How to Select a Play Mode

You can select shuffle and repeat modes when playing a song.

■ Shuffle/Repeat

Repeatedly select the shuffle or repeat icon until you find a play mode option of your preference.

Shuffle

(shuffle off): Shuffle mode to off.

(shuffle all songs): Plays all available songs in a selected list in random order.

Repeat

(repeat off): Repeat mode to off.

(repeat song): Repeats the current song.

(repeat all): Repeats all songs.

■ To pause or resume a song

Select the play/pause icon.

■ How to Change a Song

You can select or both to change songs. Select and hold to move rapidly within a song.

Sound

You can adjust the sound settings.

■ Adjusting the Sound P. 419

Playing a USB Flash Drive*

Your audio system reads and plays sound and video* files on a USB flash drive. Connect your USB flash drive to the USB port, then select the USB mode.

USB Ports P. 403



- Settings Icon (Playing a video)*
- Sound Icon
- Random Icon
- 4 Repeat Icon
- S Play/Pause Icon

- **6** Stop Icon (Playing a video)*
- **⑦** Track/Video[∗] Icons
- Browse Icon
- Over Art (Playing a music)/ Mini Player (Playing a video)*

▶ Playing a USB Flash Drive *

You can use the following formats to play sound or video files on a USB flash drive.

When playing a sound file: MP3, WMA, AAC^{*1} ,

FLAC, PCM/WAVE

When playing a video file*: MP4, AVI, MKV, ASF/ WMV

^{*1:} Only AAC format files recorded with iTunes are playable on this unit.

■ How to Select a File from the Music Search List

You can select to display the music search list screen.

- 1. Select Browse
- 2. Select Current Playlist, Music, or Video.
- **3.** Continue making selections until you find the file or video of your choice.

▶ Playing a USB Flash Drive*

Use the recommended USB flash drives.

☑ General Information on the Audio System P. 502

WMA and AAC files protected by digital rights management (DRM) cannot be played. The audio system displays **Unplayable File**, then skips to the next file.

If there is a problem, you may see an error message on the audio/information screen.

iPod/USB Flash Drive P. 500

■ How to Select a Play Mode

You can select repeat and random modes when playing a file.

■ Random/Repeat

Repeatedly select the random or repeat icon until you find a play mode option of your preference.

Random

(random off): Random mode to off.

(random all files): Plays all files in random order.

(random in folder): Plays all files in the current folder in random order.

Repeat

(repeat off): Repeat mode to off.

(repeat file): Repeats the current file.

(repeat folder): Repeats all files in the current folder.

■ When playing a video file*

(stop): Select to stop a file.

[3] / [2]: Select [3] to shrink a video screen. Select [2] to expand a video screen.

■ To pause or resume a file

Select the play/pause icon.

How to Change a File

Track/Video* Icons

You can select to change files. Select and hold to move rapidly within a file.

Sound

You can adjust the sound settings.

Adjusting the Sound P. 419

■ Settings*

Changes the USB settings when playing a video file.

- 1. Select Settings.
- 2. Select an option.
- Image Settings: Changes the brightness of the audio/information screen. To reset the settings, select Default. (Brightness/Contrast/Black Level/Colour (Color)/Tint).
- Aspect Ratio: Selects the display mode with a different aspect ratio. (Original/ Normal*1/Full/Zoom)
- Overlay Clock Location: Changes the clock display layout. (Upper right (Upper Right)*1/Upper left (Upper Left)/Lower right (Lower Right)/Lower left (Lower Left)/OFF)

^{*1:} Default Setting

^{*} Not available on all models

Playing Bluetooth® Audio

Your audio system allows you to listen to music from your *Bluetooth*-compatible phone.

This function is available when the phone is paired and connected to the vehicle's Hands-Free Telephone (HFT) system.

Phone Setup P. 486



- Sound Icon
- Shuffle Icon
- Repeat Icon
- Play/Pause Icon

- Track Icons
- **6** Browse Icon
- Cover Art

Not all *Bluetooth*-enabled phones with streaming audio capabilities are compatible with the system. To check if your phone is compatible, ask a dealer.

It may be illegal to perform some data device functions while driving.

Only one phone can be used with HFT at a time. When there is more than one paired phone in the vehicle, the system automatically connects to the prioritized phone. You can assign priority to a phone in the *Bluetooth*® device list.

Phone Setup P. 486

If more than one phone is paired to the HFT system, there may be a delay before the system begins to play.

In some cases, the name of the artist, album, or track may not appear correctly.

Some functions may not be available on some devices.

If a phone is currently connected via Apple CarPlay or Android Auto*, *Bluetooth*® Audio from that phone will be unavailable. However, if the other phone is connected to the system, it can be used as *Bluetooth*® Audio by selecting the audio mode.

Phone Setup P. 486

■ To Play Bluetooth® Audio Files

- 1. Make sure that your phone is paired and connected to the system.
 ▶ Phone Setup P. 486
- 2. Select the Bluetooth® Audio mode.

If the phone is not recognised, another HFT-compatible phone, which is not compatible for *Bluetooth*® Audio, may already be connected.

■ How to Select a Play Mode

Repeatedly select the shuffle or repeat icon until you find a play mode option of your preference.

Shuffle

(shuffle off): Shuffle mode to off.

(shuffle all songs): Plays all available songs in a selected list in random order.

Repeat

(repeat off): Repeat mode to off.

(repeat song): Repeats the current song.

(repeat group): Repeats the current group.

(repeat all): Repeats all songs.

■ To pause or resume a file

Select the play/pause icon.

∑To Play Bluetooth® Audio Files

To play the audio files, you may need to operate your phone. If so, follow the phone manufacturer's operating instructions.

Switching to another mode pauses the music playing from your phone.

You can change the connected phone by selecting **Change Device**.

Phone Setup P. 486

Continued 445

■ Searching for Music

- 1. Select Browse.
- **2.** Select a search category.
- 3. Select an item.
 - ► The selection begins playing.

Sound

You can adjust the sound settings.

■ Adjusting the Sound P. 419

Searching for Music

Depending on the ${\it Bluetooth}^{\rm @}$ device you connect, some or all of the lists may not be displayed.

Wi-Fi Connection

This vehicle is equipped with Wi-Fi connectivity. You can connect to an external Wi-Fi hotspot or communication device.

■ Connect the Vehicle to a Wi-Fi Hotspot



- 1. Press the tout button.
- 2. Select General Settings.
- **3.** Select **Connections**.
- 4. Select Wi-Fi.
- 5. Select OK.
- **6.** Select an access point from the network list.
 - To connect to a hotspot that is not automatically detected, select Options then Add Network
- 7. Enter the password.
 - ▶ If you check the Use this network to automatically download system updates box, you can set the network to be used for system updates.
 - System Updates P. 421
- 8. Select Connect.
- Turning off the Wi-Fi connection
- 1. Select Change Mode.
- 2. Select OFF.

Wi-Fi Connection ■ Wi-Fi Connect

Wi-Fi and Wi-Fi Direct are registered trademarks of Wi-Fi Alliance®.



■ Connect the Vehicle to a Wi-Fi Hotspot

You cannot go through the setting procedure while the vehicle is moving. Park in a safe place to set the audio system in Wi-Fi mode.

Some mobile phone carriers charge for tethering and smartphone data use. Check your phone's data subscription package.

Check your phone manual to find out if the phone has Wi-Fi connectivity.

You can confirm whether Wi-Fi connection is on or off with the icon on the system status area. Transmission speed and others will not be displayed on this screen.

Status Area P. 414

In case of Wi-Fi connection with your phone, make sure your phone's Wi-Fi setting is in access point (tethering) mode.

Apple CarPlay

If you connect an Apple CarPlay-compatible iPhone to the system via the USB port or wirelessly, you can use the audio/information screen, instead of the iPhone display, to make a phone call, listen to music, view maps (navigation), and access messages.

USB Ports P. 403



Apple CarPlay

■Apple CarPlay

The images shown here (designs, specifications, etc.) may differ from what is displayed on your screen.

Only iPhone 5 or newer versions with iOS 8.4 or later are compatible with Apple CarPlay.

We recommend using the latest OS.

Park in a safe place before connecting your iPhone to Apple CarPlay and when launching any compatible apps.

While connected to Apple CarPlay, calls are only made through Apple CarPlay. If you want to make a call with the Hands-Free Telephone (HFT) system, turn Apple CarPlay off.

Setting Up Apple CarPlay P. 450

When your iPhone is connected to Apple CarPlay, it is not possible to use the *Bluetooth*® Audio or the Hands-Free Telephone (HFT) system. However, other previously paired phones can stream audio via *Bluetooth*® while Apple CarPlay is connected.

Phone Setup P. 486

Apple CarPlay and Android Auto* cannot run at the same time.

For details on countries and regions where Apple CarPlay is available, as well as information pertaining to function, refer to the Apple homepage.

■ Apple CarPlay Menu



Phone

Access the contact list, make phone calls, or listen to voicemail.

• Music

Play music stored on your iPhone.

Maps

Display Apple Maps and use the navigation function just as you would on your iPhone

Messages

Check and reply to text messages, or have messages read to you.

• Honda

Select the Honda icon to go back to the home screen.

• TH

Go back to the Apple CarPlay Dashboard screen.

• ###

Go back to the Apple CarPlay menu screen.

■ Apple CarPlay

Apple CarPlay Operating Requirements & Limitations

Apple CarPlay requires a compatible iPhone with an active mobile connection and data plan. Your carrier's rate plans will apply.

Changes in operating systems, hardware, software, and other technology integral to providing Apple CarPlay functionality, as well as new or revised governmental regulations, may result in a decrease or cessation of Apple CarPlay functionality and services. Honda cannot and does not provide any warranty or guarantee of future Apple CarPlay performance or functionality.

It is possible to use 3rd party apps if they are compatible with Apple CarPlay. Refer to the Apple homepage for information on compatible apps.

Continued 449

Setting Up Apple CarPlay

After you have connected your iPhone to the system via the USB port or wirelessly, use the following procedure to set up Apple CarPlay. Use of Apple CarPlay will result in the transmission of certain user and vehicle information (such as vehicle location, speed, and status) to your iPhone to enhance the Apple CarPlay experience. You will need to consent to the sharing of this information on the audio/information screen.

Connecting Apple CarPlay Using the USB Cable to the USB Port*

- 1. Connect the iPhone to the USB port using the USB cable.
 - USB Ports P. 403
 - ► The confirmation screen will be displayed.
- 2. Select Yes.
 - If you do not want to connect Apple CarPlay, select **No**.

You may change the consent settings under the **Smartphone Connection** settings menu.

Connect Apple CarPlay Wirelessly

- Connect Apple CarPlay wirelessly on the home screen
- 1. Press the button.
- 2. Select Smartphone Connection.
- 3. Select + Connect New Device.
- **4.** Pair the iPhone to the vehicle's Hands-Free Telephone (HFT) system.
 - Phone Setup P. 486
- 5. Select Yes.
 - ▶ If your iPhone asks for permission to accept an Apple CarPlay connection, accept to connect.
- * Not available on all models

Setting Up Apple CarPlay

Only initialize Apple CarPlay when you are safely parked.

When Apple CarPlay first detects your iPhone, you will need to set up your iPhone. Refer to the instruction manual that came with your iPhone.

You can use the following procedure to disconnect or delete the devices connecting Apple CarPlay:
Select General Settings →
Smartphone Connection → Apple CarPlay →
Select device

Use of user and vehicle information

The use and handling of user and vehicle information transmitted to/from your iPhone by Apple CarPlay is governed by the Apple iOS terms and conditions and Apple's Privacy Policy.

451

■ Connect Apple CarPlay wirelessly on the Apple CarPlay device list

- **1.** Press the button.
- 2. Select General Settings.
- 3. Select Smartphone Connection.
- 4. Select Apple CarPlay.
- 5. Select + Connect New Device.
- **6.** Pair the iPhone to the vehicle's Hands-Free Telephone (HFT) system.
 - Phone Setup P. 486
- 7. Select Yes.
 - ▶ If your iPhone asks for permission to accept an Apple CarPlay connection, accept to connect.

■ Connect Apple CarPlay wirelessly on the *Bluetooth*® device list

- **1.** Press the _____ button.
- 2. Select General Settings.
- 3. Select Connections.
- 4. Select Bluetooth.
- 5. Select + Connect New Device.
- **6.** Pair the iPhone to the vehicle's Hands-Free Telephone (HFT) system.
 - Phone Setup P. 486
- **7.** Check the box on **Apple CarPlay**.
 - If you select **Apple CarPlay**, you cannot select **Audio** and **Phone**.
- 8. Select Connect.
- 9. Select Yes.
 - ▶ If your iPhone asks for permission to accept an Apple CarPlay connection, accept to connect.

Continued

■ Connect Apple CarPlay wirelessly with the steering wheel


- 1. Press and hold the K (talk) button on the steering wheel.
- **2.** Pair the iPhone to the vehicle's Hands-Free Telephone (HFT) system.
 - Phone Setup P. 486
- **3.** Check the box on **Apple CarPlay**.
 - ▶ If you select **Apple CarPlay**, you cannot select **Audio** and **Phone**.
- 4. Select Connect.
- 5. Select Yes.
 - ▶ If your iPhone asks for permission to accept an Apple CarPlay connection, accept to connect.

■ Connect Apple CarPlay wirelessly at start-up (when there is no phone paired to the system)

- 1. Set the power mode to ACCESSORY or ON.
- 2. Select OK.
 - ▶ If there is no registered device, the *Bluetooth*® pairing screen will be displayed.
 - ▶ If you check the box with **Do not show this again**, this screen will not be displayed.
- **3.** Pair the iPhone to the vehicle's Hands-Free Telephone (HFT) system.
 - Phone Setup P. 486
- **4.** Check the box on **Apple CarPlay**.
 - If you select **Apple CarPlay**, you cannot select **Audio** and **Phone**.
- 5. Select Connect.
- 6. Select Yes.
 - ▶ If your iPhone asks for permission to accept an Apple CarPlay connection, accept to connect.

Operating Apple CarPlay with Siri

Press and hold the 🖟 (talk) button to activate Siri.

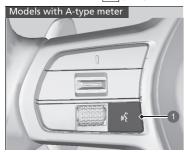

1 (Talk) Button



1 配 (Talk) Button

Press and hold to activate Siri.

Press again to deactivate Siri.

Press and release to activate voice tag dial*/standard voice recognition system*.

* Not available on all models

■Operating Apple CarPlay with Siri

Below are examples of questions and commands for Siri:

- What movies are playing today?
- Call dad at work.
- What song is this?
- How's the weather tomorrow?
- Read my latest email.

For more information, please visit www.apple.com/ios/siri.

Android Auto™*

When you connect an Android phone to the audio system via the USB port, Android Auto is automatically initiated. When connected via Android Auto, you can use the audio/information screen to access the Phone, Google Maps (Navigation), and Google Now functions. When you first use Android Auto, a tutorial will appear on the screen.

We recommend that you complete this tutorial while safely parked before using Android Auto.

USB Ports P. 403

▶ Auto Pairing Connection P. 456

NOTE:

Android Auto may not be available in your country or region. For details about Android Auto, please refer to the Google support site.



Android Auto

Android Auto™*

The images shown here (designs, specifications, etc.) may differ from what is displayed on your screen.

We recommend that you update Android OS to the latest version when using Android Auto. Bluetooth A2DP cannot be used while your phone is connected to Android Auto

To use Android Auto on a smartphone with Android 9.0 (Pie) or earlier, you need to download the Android Auto app from Google Play to your smartphone.

Park in a safe place before connecting your Android phone to Android Auto and when launching any compatible apps.

To use Android Auto, connect the USB cable to the USB port.

USB Ports P. 403

When your Android phone is connected to Android Auto, it is not possible to use the Bluetooth® Audio. However, other previously paired phones can stream audio via Bluetooth® while Android Auto is connected.

Phone Setup P. 486

Apple CarPlay and Android Auto cannot run at the same time.

Android Auto is a trademark of Google LLC.

Android Auto Menu



Maps

Display Google Maps and use the navigation function just as you would with your Android phone. When the vehicle is in motion, it is not possible to make keyboard entries. Stop the vehicle in a safe location to undertake a search or provide other inputs.

• Phone

Make and receive phone calls as well as listen to voicemail.

- Exit
- 👢

Operate Android Auto with your voice.

• Ô

You can check Android notifications.

• (Android Auto Home)

Display useful information organised by Android Auto into simple cards that appear just when they're needed.

Android Auto™*

For details on countries and regions where Android Auto is available, as well as information pertaining to function, refer to the Android Auto homepage.

Screens may differ depending on the version of the Android Auto app you are using.

Android Auto Operating Requirements & Limitations

Android Auto requires a compatible Android phone with an active mobile connection and data plan. Your carrier's rate plans will apply.

Changes in operating systems, hardware, software, and other technology integral to providing Android Auto functionality, as well as new or revised governmental regulations, may result in a decrease or cessation of Android Auto functionality and services. Honda cannot and does not provide any warranty or guarantee of future Android Auto performance or functionality.

It is possible to use 3rd party apps if they are compatible with Android Auto. Refer to the Android Auto homepage for information on compatible apps.

Auto Pairing Connection

When you connect an Android phone to the unit via the USB port, Android Auto is automatically initiated.

■ Enabling Android Auto

To enable Android Auto after connecting an Android phone to the system, select **Yes** on the screen.

You may change the consent settings under the **Smartphone Connection** settings menu.

■ Enabling Android Auto

Only initialize Android Auto when you are safely parked. When Android Auto first detects your phone, you will need to set up your phone so that auto pairing is possible. Refer to the instruction manual that came with your phone.

You can use the following procedure to disconnect or delete the devices connecting Android Auto after you have completed the initial setup:

Select General Settings →


Smartphone Connection → Android Auto → Select device

Use of user and vehicle information

The use and handling of user and vehicle information transmitted to/from your phone by Android Auto is governed by the Google's Privacy Policy.

Operating Android Auto with Voice Recognition

Press and hold the [6] (talk) button to operate Android Auto with your voice.

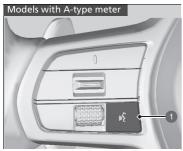

1 (Talk) Button



1 配 (Talk) Button

Press and hold to operate Android Auto with your voice.

Press and release to activate voice tag dial*/standard voice recognition system*.

- *1: Right-hand Drive Type
- *2: Left-hand Drive Type
- * Not available on all models

■Operating Android Auto with Voice Recognition

Below are examples of commands you can give with voice recognition:

- Reply to text.
- Call my wife.
- Navigate to Honda.
- Play my music.
- Send a text message to my wife.
- Call flower shop.

For more information, please refer to the Android Auto homepage.

You can also activate the voice recognition function by selecting the ucon in the lower-left*1/right*2 corner of the screen.

Customized Features

Use the audio/information screen to customize certain features.

■ How to Customize the General Settings

With the power mode in ON, select **General Settings**, then select a setting item.



- **System** ▶ P. 459
- Smartphone Connection

 P. 461
- Connections P. 462
- **Display ≥** P. 463
- Sound ▶ P 464
- **Camera** P. 465
- Voice Control* ▶ P 466

○ Customized Features

When you customize settings:

- Make sure that the vehicle is at a complete stop.
- Shift to P.

■ System

| Customizable Features | | tures | Description | Selectable Settings |
|-----------------------|-----------------------|--------------------------|--|---|
| Date & Time | | Automatic Date & Time | Selects ON to have the GPS automatically adjust the clock. Select OFF to cancel this function. | ON*1/OFF |
| | Set Date & Time | Set Date | Adjusts date. ► Adjusting the Clock P. 416 | Day/Month/Year |
| | Time | Set Time | Adjusts time. Adjusting the Clock P. 416 | Hour/Minute AM/PM |
| | Time Zone* | Automatic Time Zone* | Sets the audio system to automatically adjust the clock when driving through different time zones. | ON*1/OFF |
| | | (Select time zone) | Changes the time zone manually. | _ |
| | Auto Day Time* | ylight Saving | Sets the clock to update based on daylight savings time. | ON*1/OFF |
| | Date For | mat | Select a date format. | MM/DD/YYYY/ DD/MM/YYYY* ¹ / YYYY/MM/DD |
| | Time For | mat | Select a time format. | 12-H*1/24-H (12H*1/24H) |

^{*1:}Default Setting

* Not available on all models

| Customizable Features | | Description | Selectable Settings |
|----------------------------|------------------------|--|--|
| Language | | Changes the driver information interface and audio/information screen language separately. | English (United Kingdom)*2, English (United States)*2, Arabic*2, Chinese*2, or Thai*2 See other selectable languages on the screen. |
| Touch Panel Sensitivity | | Sets the sensitivity of the touch panel screen. | High/Normal*1 |
| | System Sounds | Sets the system sound volume level. | _ |
| | Text-to-Speech | Sets the text-to-speech volume level. | _ |
| System Volumes | Navigation Guidance | Sets the navigation guidance volume level. | _ |
| | Phone Calls | Sets the phone call volume level. | _ |
| | Default | Resets all System Volumes settings to default values. | |
| Refuel Recommend* | | Turns the refuel recommend function on and off. ▶ Refuel Recommend* P. 499 | ON*1/OFF |

^{*1:}Default Setting
*2:The default setting varies depending on the model.

| Customizable Features | | Description | Selectable Settings |
|------------------------------|-------------------|---|---------------------|
| About | Status | | |
| | Legal Information | | |
| | Model Number | Display with a Anadonial continuity of the con- | _ |
| | Android Version | — Displays the Android setting items. | |
| | Kernel Version | | |
| | Build Number | | |
| Factory Data Reset | | Resets all the settings to their factory default. Defaulting All the Settings P. 478 | Continue/Cancel |
| Detail Information | App Manager | Displays the Android system memory and apps information. | - |

■ Smartphone Connection

| Customizable Features | | Description | Selectable Settings |
|-----------------------|----------------------|---|---------------------|
| Apple CarPlay | + Connect New Device | Pairs a new phone to Apple CarPlay. ▶ Phone Setup P. 486 | _ |
| Apple CarPlay | (Saved Devices) | Connects, disconnects, or deletes a paired phone. ▶ Phone Setup P. 486 | _ |
| Android Auto | (Saved Devices) | Connects, disconnects, or deletes a paired phone. ▶ Phone Setup P. 486 | _ |

■ Connections

| Customizable Features | | Features | Description | Selectable Settings |
|-----------------------|---|-----------------|---|--------------------------------|
| | Change Mode (Available Networks/Connected Devices) | | Changes the Wi-Fi mode. | Network*1/ Smartphone*2/OFF |
| Wi-Fi | | | Displays the available network(s) or current connected device(s). | _ |
| _ | Options | Add Network | Adds a new network to connect Wi-Fi. | _ |
| | | Saved Networks | Saves the connected network. | _ |
| | Ontions | Bluetooth | Turns the <i>Bluetooth</i> ® on and off. | ON*1/OFF |
| | Options | Priority Device | Displays the priority device. | _ |
| Bluetooth | + Connect New Device | | Pairs a new phone to HFT. ▶ Phone Setup P. 486 | _ |
| | (Saved Dev | vices) | Connects, disconnects, or deletes a paired phone. ▶ Phone Setup P. 486 | _ |

^{*1:}Default Setting *2:Appears only when Apple CarPlay is connected wirelessly.

■ Display

| Customizable Features | Description | Selectable Settings |
|------------------------------|---|---------------------|
| Brightness | Changes the brightness of the audio/information screen. | _ |
| Contrast | Changes the contrast of the audio/information screen. | _ |
| Black Level | Changes the black level of the audio/information screen. | _ |
| Default | Resets all customized settings for the brightness, contrast, and black level. | _ |

■ Sound

| Customizable Features | | Description | Selectable Settings |
|-----------------------------------|----------|---|---------------------|
| | Treble | | |
| Bass / Treble | Midrange | _ | |
| | Bass | _ | |
| Audio Zones & Balance / Fader*1 | | Adjusts the settings of the audio speakers' sound. Adjusting the Sound P. 419 — | |
| Bose Centerpoint*1 | | | _ |
| Bose Dynamic Speed Compensation*1 | | | |
| Balance / Fader*2 | | | |
| Speed Volume Compensation*2 | | _ | |

^{*1:}Models with BOSE AMP

^{*2:}Models with Normal AMP

■ Camera

| Customizable Features | | Description | Selectable Settings |
|-----------------------|--|--|-----------------------|
| | Fixed Guideline | Shows the guideline that does not move with the steering wheel. Multi-View Rear Camera* P. 708 | ON*1/OFF |
| Rear Camera* | Dynamic Guideline | Shows the guideline that moves with the steering wheel. Multi-View Rear Camera* P. 708 | ON*1/OFF |
| LaneWatch* | Show with indicator (Show with turn signal) | Selects whether the LaneWatch display comes on when you move the turn signal lever to indicate a left*2/right*3 turn. LaneWatch* P. 588 | ON*1/OFF |
| | Display Time after Indicator Off (Display Time after Turn Signal Off) | Changes the length of time the LaneWatch display stays on after the turn signal lever returns to the centre. ▶ LaneWatch* P. 588 | 0 seconds*1/2 seconds |
| | Show Reference Line | Selects whether the reference lines come on the LaneWatch monitor. ▶ LaneWatch* P. 588 | ON*1/OFF |

^{*1:}Default Setting *2:Right-hand Drive Type *3:Left-hand Drive Type

| | Customizable Features | | Description | Selectable Settings |
|------------------------|--|--|---|---------------------|
| | Guidelines | Fixed Guideline | Shows the guideline that does not move with the steering wheel. Multi-View Camera* P. 710 | ON*1/OFF |
| Multi View | | Dynamic Guideline | Shows the guideline that moves with the steering wheel. Multi-View Camera* P. 710 | ON*1/OFF |
| Camera* Customise | | Show after shifting from Reverse | Selects whether to display the forward camera image after shifting from $\boxed{\mathbf{R}}$ to $\boxed{\mathbf{D}}$. | ON/OFF*1 |
| | Auto display when obstacle is detected*2 | Displays the forward camera image when a parking sensor detects an obstacle. | ON*1/OFF | |
| Cross Traffic Monitor* | | | Shows arrows on the rear camera image to indicate vehicles approaching from the sides. ▶ Cross Traffic Monitor* P. 704 | ON*1/OFF |

■ Voice Control*

| Customizable Features | Description | Selectable Settings |
|-----------------------|---|---------------------|
| Voice Control Mode | Selects a mode of the voice portal screen. ▶ Voice Control Operation* P. 426 | Assist/Normal*1 |

^{*1:}Default Setting

^{*1:}Default Setting
*2:This customizable feature is effective for vehicles equipped with the Multi-View Camera, the front corner and front centre sensors.

How to Customize the Vehicle Settings

With the power mode in ON, select **Vehicle Settings**, then select a setting item.



- Deflation warning system (TPMS Calibration)* ▶ P. 468
- Driver assist system setup (Driver Assist System Setup) 2 P. 468
- Meter setup (Meter Setup) **≥** P. 470
- Driving position setup* ▶ P. 472
- Keyless access setup (Keyless Access Setup) **№** P. 473
- Lighting setup (Lighting Setup) ₽ P. 474
- Power tailgate setup 🔁 P. 476
- Maintenance info. (Maintenance Info.) **≥** P. 477

∑How to Customize the Vehicle Settings

If **Vehicle Settings** is not displayed on the home screen, select

All Apps. You can change the displayed icons on the home screen.

▶ App Shortcut Function P. 409

■ Deflation warning system (TPMS Calibration)*

| Customizable Features | Description | Selectable Settings |
|---|--|---------------------|
| Deflation warning system (TPMS Calibration) | Cancels/Calibrates Deflation Warning System. ☐ Tyre Pressure Monitoring System (TPMS) P. 573 ☐ Deflation Warning System* P. 578 | Calibrate/Cancel |

■ Driver assist system setup (Driver Assist System Setup)

| Customizable Features | Description | Selectable Settings |
|---|---|--|
| Preceding vehicle proximity warning distance (Forward Collision Warning Distance) | Changes the distance at which Collision Mitigation Braking System (CMBS) alerts. ■ Collision Mitigation Braking System (CMBS) P. 596 | Far/Normal*1/Near (Long/Normal*1/Short) |
| Head-up warning* | Turn On/Off warning light for head-up flash alert. | ON*1/OFF |
| ACC vehicle ahead detected beep (ACC Forward Vehicle Detect Beep) | Causes the system to beep when a vehicle is detected or when the vehicle is out of ACC with Low Speed Follow range. ▶ Adaptive Cruise Control (ACC) with Low Speed Follow P. 626 | ON/OFF*1 |
| Lead car departure notification system (Lead Car Departure Notification System)* | Changes the setting for the lead car departure notification system. ▶ Lead Car Departure Notification System* P. 670 | Normal* ¹ /Early/OFF |

^{*1:}Default Setting

| Customizable Features | Description | Selectable Settings |
|--|--|---|
| Road departure mitigation setting (Road Departure Mitigation Setting) | Selects operating mode of the Road Departure Mitigation system. ▶ Road Departure Mitigation System P. 616 | Oceanian models Early/Normal/Delayed*1 Except Oceanian models Early/Normal*1/Delayed/ Warning only (Narrow/Normal*1/Wide/ Warning Only) |
| Lane keep assist beep (Lane Keeping Assist Suspend Beep) | Switches the LKAS and Traffic Jam Assist* suspend alert beeps on and off. Lane Keeping Assist System (LKAS) P. 648 Traffic Jam Assist* P. 661 | ON/OFF*1 |
| Blind spot information (Blind Spot Info)* | Selects On/Off the blind spot information system audible alert. ▶ Blind Spot Information System* P. 584 | Audible and visual alert*1/ Visual alert only (Audible And Visual Alert*1/Visual Alert) |
| Traffic sign recognition system display* | Displays the traffic sign recognition system on the instrument panel. Traffic Sign Recognition System* P. 675 | Display*¹/None |
| Traffic sign recognition system over speed warning* | Enables over speed limit warning when speed limit is exceeded. Traffic Sign Recognition System* P. 675 | ON*1/OFF |
| Driver attention monitor (Driver Attention Monitor) | Changes the setting for the driver attention monitor. ▶ Driver Attention Monitor P. 176, 203 | OFF/Tactile alert only/ Tactile and audible alert*1 (OFF/Tactile Alert/Tactile And Audible Alert*1) |

^{*1:}Default Setting

^{*} Not available on all models

| Customizable Features | Description | Selectable Settings |
|---|--|---------------------|
| Rear sensor setting (Rear Sensor Setting)* | Select to turn the rear parking sensor ON or OFF. This selection will also affect the rear Low Speed Braking Control if equipped. ▶ Parking Sensor System* P. 698 ▶ Low Speed Braking Control* P. 610 | ON*1/OFF |

^{*1:}Default Setting

■ Meter setup (Meter Setup)

| Customizable Features | Description | Selectable Settings |
|---|--|---|
| Warning message* | Selects whether to display the warning message. | ON/OFF*1 |
| Adjust outside temp. display (Adjust Outside Temp. Display) | Selects to adjust outside temperature reading by a few degrees. ▶ Outside Temperature P. 166 | -3°C ~ ±0°C*1 ~ +3°C |
| Trip A reset timing ("Trip A" Reset Timing) | Selects the timing to reset Trip A. ■ Range / Fuel / Trip Meter P. 171, 198 ■ Speed / Time / Trip Meter P. 173, 200 | When fully refueled/When ignition is turned OFF/Manual reset*1 (When Fully Refueled/IGN OFF/Manually Reset*1) |

^{*1:}Default Setting

| Customizable Features | Description | Selectable Settings |
|--|--|---|
| Trip B reset timing ("Trip B" Reset Timing) | Selects the timing to reset Trip B. Range / Fuel / Trip Meter P. 171, 198 Speed / Time / Trip Meter P. 173, 200 | When fully refueled/When ignition is turned OFF/Manual reset*1 (When Fully Refueled/IGN OFF/Manually Reset*1) |
| Alarm volume control (Adjust Alarm Volume) | Changes volume level of all system warnings, door opening warning and indicator. | Max/Mid*1/Min (High/Mid*1/Low) |
| Fuel efficiency backlight (Fuel Efficiency Backlight) | Turns the ambient meter feature on and off. | ON*1/OFF |
| Turn by turn display (Turn By Turn Auto Display) | Turns the pop-up warning ON/OFF in the turn-by-turn navigation in the driver information interface or head-up display*. Turn-by-Turn Directions P. 174, 201 | ON*1/OFF |
| Fuel economy unit (Fuel Economy Unit)* | Selects the fuel consumption units. | Except Vietnamese models km/l*1/l/100km Vietnamese models km/l/l/100km*1 |
| Tachometer* | Selects whether the tachometer come on the driver information interface. | ON*1/OFF |
| Rear seat reminder (Rear Seat Reminder) | Turns the Rear Seat Reminder feature on and off. | ON*1/OFF |

^{*1:}Default Setting

* Not available on all models

■ Driving position setup*

| Customizable Features | Description | Selectable Settings |
|---|--|---------------------|
| Memory position link | Turns the driving position memory system on and off. | ON*1/OFF |
| Seat Position Movement At Entry/Exit | Moves the seat rearward when you get in/get out of the vehicle. Changes the setting for this feature. | ON*1/OFF |

^{*1:}Default Setting

■ Keyless access setup (Keyless Access Setup)

| Customizable Features | Description | Selectable Settings |
|---|--|--|
| Door unlock mode (Door Unlock Mode)* | Changes which doors unlock when you grab the driver's door handle. | Driver door only*1/All doors (Driver Door Only*1/All Doors) |
| Keyless access beep volume (Keyless Access Beep Volume) | Changes the beep volume of unlocking /locking the doors. | Max* ¹ /Min (High* ¹ /Low) |
| Keyless access light flash (Keyless Access Light Flash) | Causes some exterior lights to flash when you unlock/lock the doors. | ON*1/OFF |
| Keyless access beep (Keyless Access Beep) | Causes the beeper to sound when you unlock/lock the doors. | ON*1/OFF |
| Remote start system ON/ OFF (Remote Start System ON/ OFF)* | Turns the remote engine start feature on and off. | ON* ¹ /OFF |

^{*1:}Default Setting

* Not available on all models

■ Lighting setup (Lighting Setup)

| Customizable Features | Description | Selectable Settings |
|--|---|----------------------------------|
| Auto High Beam | Turns on/off auto high beam function. | ON*1/OFF |
| Interior light dimmer duration (Interior Light Dimming Time) | Selects the length of time the interior lights stay on after doors are closed. ▶ Interior Lights P. 307 | 60sec/30sec* ¹ /15sec |
| Headlight auto OFF timer (Headlight Auto OFF Timer) | Selects the length of time the exterior lights stay on after you close the driver's door. Automatic Lighting Off Feature P. 265 | 60sec/30sec/15sec*1/0sec |
| Headlight integration with wipers (Auto Headlight On with Wiper On) | Selects On/Off headlight function and wiper operation when the headlight is in AUTO setting. ▶ Headlight Integration with Wipers P. 265 | ON*1/OFF |

^{*1:}Default Setting

■ Door/window setup (Door/Window Setup)

| Customizable Features | Description | Selectable Settings |
|---|--|---|
| Auto door lock (Auto Door Lock)* | Changes the setting for the automatic locking feature. | OFF/With vehicle speed*1/ Shift from P (OFF/With Vehicle Speed*1/ Shift From P) |
| Auto door unlock (Auto Door Unlock)* | Changes the setting for when the doors unlock automatically. | African models OFF/All doors with IGN OFF/Driver door with IGN OFF/All Doors With Shift To P/Driver Door With Shift To P*1 (OFF/All Doors With IGN OFF/Driver Door With IGN OFF/All Doors With Shift To P/Driver Door With Shift To P/Driver Door With Shift To P*1) Except African models OFF/Shift to P*1/When ignition is turned OFF (OFF/Shift To P*1/IGN OFF) |
| Key and remote unlock mode (Key And Remote Unlock Mode)* | Sets up either the driver's door or all doors to unlock on the first push of the keyless remote or built-in key. | Driver door only*1/All doors (Driver Door Only*1/All Doors) |

^{*1:}Default Setting

^{*} Not available on all models

| Customizable Features | Description | Selectable Settings |
|---|---|---------------------|
| Walk away lock (Walk Away Auto Lock) | Changes the settings for the auto lock function when you walk away from the vehicle. | ON/OFF*1 |
| Lock presetting | Turns on/off the lock presetting function. | ON*1/OFF |
| Keyless lock notification (Keyless Lock Answer Back) | Turns on/off flash of exterior lights when doors are locked/unlocked by keyless remote. Dusing the Remote Transmitter P. 231 | ON*1/OFF |
| Auto folding door mirror (Auto Folding Door Mirror)* | Changes how you can fold the door mirrors. | ON*1/OFF |
| Remote Window Control | Turns the remote window control on and off. | ON*1/OFF |

^{*1:}Default Setting

■ Power tailgate setup

| Customizable Features | Description | Selectable Settings |
|----------------------------|--|--|
| Keyless open mode | Changes the keyless setting for when the power tailgate opens. | Anytime*1/When unlocked |
| Power open by outer handle | Changes the setting to open power tailgate by tailgate outer handle. | ON (Power/Manual)*1/OFF (Manual only) |
| Hands free access* | Changes the setting to open power tailgate by a swift forward in and out kicking motion under the rear bumper. | ON*1/OFF |

^{*1:}Default Setting

■ Maintenance info. (Maintenance Info.)

| Customizable Features | Description | Selectable Settings |
|--|--|---------------------|
| Maintenance info. (Maintenance Info.) | Resets the maintenance information. Oil Monitor System P. 735 | Reset |

Defaulting All the Settings

Reset all the menu and customized settings as the factory defaults.

■ Defaulting General Settings

- 1. Press the button.
- 2. Select General Settings.
- 3. Select System.
- 4. Select Factory Data Reset.
 - A confirmation message appears on the screen.
- **5.** Select **Continue** to reset the settings.
- **6.** Select **Continue** again to reset the settings.
 - ► The system will reboot.

■ Defaulting Vehicle Settings

- **1.** Press the button.
- 2. Select Vehicle Settings.
- 3. Select **Default**.
- 4. Select Yes.

Defaulting All the Settings


When you transfer the vehicle to a third party, reset all settings to default and delete all personal data.

If you perform **Factory Data Reset**, it will reset the preinstalled apps to their factory default.

Hands-Free Telephone System

Hands-Free Telephone (HFT) system allows you to place and receive phone calls using your vehicle's audio system, without handling your mobile phone.

■ HFT Buttons

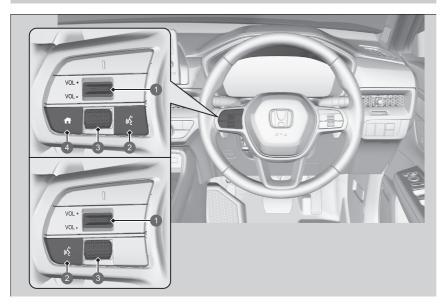

- **1 VOL** +/**VOL** − (Volume) Switch
- ② 🖟 (Talk) Button
- 3 Left Selector Wheel
- 4 ★ (Home) Button*1
- *1: Models with A-type meter
- * Not available on all models

Place your phone where you can get good reception.

To use HFT, you need a *Bluetooth*-compatible mobile phone. For a list of compatible phones, pairing procedures, and special feature capabilities, ask a dealer or your local Honda.

To use the system, the **Bluetooth** setting must be **ON**.

Phone Setup P. 486 **Phone Setup** P. 486

Voice control tips

- Aim the vents away from the ceiling and close the windows, as noise coming from them may interfere with the microphones.
- Press the button when you want to call a number using a stored voice tag*, a phonebook name* or a number*. Speak clearly and naturally after a beep.
- If the microphone picks up voices other than yours, the command may be misinterpreted.
- To change the volume level, select the audio system's VOL (Volume) or use the remote audio controls on the steering wheel.

If there is no Favourite contacts entry in the system, the pop-up notification appears on the screen.

Favourite Contacts P. 491

(Talk) button: Press to call a number with a stored voice tag* or to access Voice Portal*.

(Home) button*1: Press to go back to the home screen of the driver information interface.

Left Selector Wheel: Press the (Home) button*1. Roll up or down to select (phone) on the driver information interface, and then press the left selector wheel. While receiving a call, the incoming call screen is displayed on the driver information interface. You can pick up the call using the left selector wheel.

Receiving a Call P. 497

Bluetooth® Wireless Technology

The *Bluetooth*® word mark and logos are registered trademarks owned by *Bluetooth* SIG, Inc., and any use of such marks by Honda Motor Co., Ltd., is under licence. Other trademarks and trade names are those of their respective owners.


HFT Limitations

An incoming call on HFT will interrupt the audio system when it is playing. It will resume when the call is ended.

^{*1:} Models with A-type meter

■ HFT Status Display

The audio/information screen notifies you when there is an incoming call.

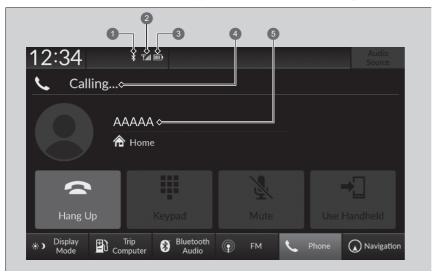

- Bluetooth® Indicator
 Appears when your phone is connected to HFT.
- Signal Strength
- Battery Level Status
- 4 HFT Mode
- **5** Caller's Name (If registered)/Caller's Number (If not registered)

► MFT Status Display

The information that appears on the audio/information screen varies between phone models.

■ Limitations for Manual Operation


Certain manual functions are disabled or inoperable while the vehicle is in motion. You cannot select a grayed-out option until the vehicle is stopped.

Only previously stored Favourite contacts entries with voice tags*, phonebook names*, or numbers* can be called using voice commands while the vehicle is in motion.

Favourite Contacts P. 491

HFT Menus

The power mode must be in ACCESSORY or ON to use the system. Select **Phone** to display the phone screen.

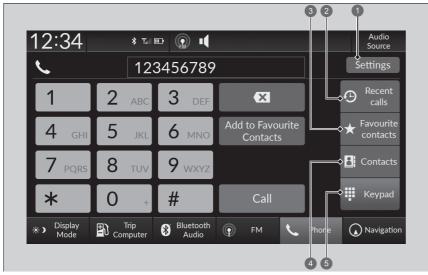

- Settings
- Recent calls (Recent Calls)
- **3** Favourite contacts (Favorite Contacts)
- Contacts
- 6 Keypad

>> HFT Menus

Some functions are limited while driving.

Settings: Changes the phone settings.

▶ Phone Settings Screen P. 485

Recent calls (Recent Calls): Displays the last outgoing, incoming, and missed calls.

To make a call using the recent calls P. 495

Favourite contacts (Favorite Contacts): Dials the selected number in the

Favourite contacts entry.

▶ To make a call using a Favourite contacts entry P. 495

Contacts: Displays the phonebook of the paired phone.


≥ To make a call using the imported phonebook P. 496

Keypad: Enters a phone number to dial.

To make a call using a phone number P. 496

■ Phone Settings Screen

To display the phone settings screen, select **Settings** on the phone screen.

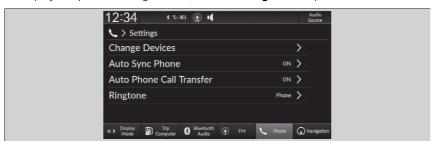

Change Devices: Pairs a new phone to the system and connect, disconnect, or delete a paired device.

Phone Setup P. 486

Auto Sync Phone: Sets phonebook and recent calls data to be automatically imported when a phone is paired to HFT.

⚠ Automatic Import of Mobile Phonebook and Recent calls P. 489

Auto Phone Call Transfer: Sets calls to automatically transfer from your phone to HFT when you enter the vehicle.

■ Automatic Transferring P. 490

Ringtone: Selects the ringtone.

Ringtone P. 490

■ Phone Setup

■ Bluetooth® setup

You can turn Bluetooth® function on and off.

- 1. Press the toutton.
- 2. Select General Settings.
- 3. Select Connections.
- 4. Select Bluetooth.
- **5.** Select **Options**.
- **6.** Select **Bluetooth**, then select **ON**.



- To pair a mobile phone (when there is no phone paired to the system)
- 1. Select Phone.
- 2. Select Connect New Device.
- **3.** Make sure your phone is in search or discoverable mode.
- **4.** Select **Honda HFT** from your phone.
 - ▶ If you want to pair a phone from this audio system, select Search for Devices, and then select your phone when it appears on the list.
- **5.** The system gives you a pairing code on the audio/information screen.
 - Confirm if the pairing code on the screen and your phone match. This may vary by a phone.
- **6.** Select desired functions and then select **Connect**.
- **7.** A notification appears on the screen if pairing is successful.
- 8. Select OK.

∑Phone Setup

Your *Bluetooth*-compatible phone must be paired to the system before you can make and receive handsfree calls.

Phone Pairing Tips:

- You cannot pair your phone while the vehicle is moving.
- Up to six phones can be paired.
- Your phone's battery may drain faster when it is paired to the system.

Once you have paired a phone, you can see it displayed on the screen with the following icons.

- **ID**: The phone is compatible with *Bluetooth*® Audio.
- : The phone can be used with HFT.
- E: The phone is compatible with Apple CarPlay.

If there is an active connection to Apple CarPlay or Android Auto*, pairing of additional *Bluetooth*® compatible devices is unavailable.



■ To change the currently paired phone

- 1. Select Phone.
- 2. Select Settings.
- 3. Select Change Devices.
- **4.** Select a phone to connect.
 - ► HFT disconnects the connected phone and starts searching for another paired phone.
 - ➤ You can set the connected phone priority. Select the box checked on the phone you want to prioritize.
- **5.** Select (audio), (phone), or (Apple CarPlay).
- 6. Select Apply.

■ To delete a paired phone

- 1. Select Phone.
- 2. Select Settings.
- 3. Select Change Devices.
- 4. Select a phone you want to delete.
- 5. Select **Delete**.
- **6.** A confirmation message appears on the screen. Select **Delete**.

∑To change the currently paired phone

If no other phones are found or paired when trying to switch to another phone, HFT will inform you that the original phone is connected again.

To pair other phones, select **+ Connect New Device** from the **Bluetooth** screen.



Automatic Import of Mobile Phonebook and Recent calls


When your phone is paired, the contents of its phonebook and recent calls are automatically imported to the system.

- 1. Select Phone.
- 2. Select Settings.
- **3.** Select **Auto Sync Phone**.
- 4. Select ON or OFF.
 - ► The default setting is **ON**.

■ Automatic Import of Mobile Phonebook and Recent calls

On some phones, it is necessary to set up it enabled to be imported the mobile phonebook.

When you select a name from the list in the mobile phonebook, you can see a category icon. The icons indicate what types of numbers are stored for that name.

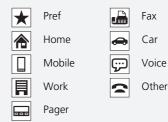

On some phones, it may not be possible to import the category icons to the system.

The phonebook is updated after every connection. Recent calls are updated after every connection or call.

Automatic Transferring

If you get into the vehicle while you are on the phone, the call can be automatically transferred to HFT.

- 1. Select Phone.
- 2. Select Settings.
- 3. Select Auto Phone Call Transfer.
- 4. Select ON or OFF.
 - ► The default setting is **ON**.

Ringtone

You can change the ringtone setting.

- 1. Select Phone.
- 2. Select Settings.
- 3. Select Ringtone.
- **4.** Select **Vehicle** or **Phone**.
 - ► The default setting is **Phone**.

Vehicle: The fixed ringtone sounds from the speakers.

Phone: Depending on the make and model of the mobile phone, the ringtone stored in the phone will sound if the phone is connected.

■ Favourite Contacts



Star Icon



Star Icon

■ To add a Favourite contacts

- 1. Select Phone.
- 2. Select Recent calls (Recent Calls), Contacts, or Keypad.

On the Recent calls or Contacts screen

3. Select the star icon.

On the Keypad screen

- **3.** Select **Add to Favourite Contacts** (**Add to Favorite Contacts**).
 - A notification appears on the screen if the Favourite contacts is successfully stored.
 - ➤ To remove the Favourite contacts, select the star icon again.



Add to Favourite Contacts
 (Add to Favorite Contacts)



Models without voice control system

- To add a voice tag to a stored Favourite contacts entry
- 1. Select Phone.
- **2.** Select **Favourite contacts** (**Favorite Contacts**).
- **3.** Select **Edit** on the Favourite contacts entry you want to edit.
- 4. Select Voice Tag.
- 5. Select Record.
- **6.** Select **Record**, or use the <u>©</u> button and follow the prompts to complete the voice tag.

Models without voice control system

- To delete a voice tag
- 1. Select Phone.
- **2.** Select **Favourite contacts** (**Favorite Contacts**).
- **3.** Select **Edit** on the Favourite contacts entry you want to edit.
- 4. Select Voice Tag.
- 5. Select Clear.
- **6.** A confirmation message appears on the screen. Select **Yes**.

>> Favourite Contacts

Models without voice control system

Avoid using duplicate voice tags. Avoid using "home" as a voice tag. It is easier for the system to recognise a longer name. For example, use "John Smith" instead of "John."



■ To edit a Favourite contacts

- 1. Select Phone.
- **2.** Select **Favourite contacts** (**Favorite Contacts**).
- **3.** Select **Edit** on the Favourite contacts entry you want to edit.
- **4.** Select a setting you want.
- **5.** Select **Done**.

■ To delete a Favourite contacts

- 1. Select Phone.
- **2.** Select **Favourite contacts** (**Favorite Contacts**).
- **3.** Select **Edit** on the Favourite contacts entry you want to delete.
- 4. Select Remove.
- **5.** A confirmation message appears on the screen. Select **Yes**.

Making a Call



You can make calls by inputting any phone number, or by using the imported **Recent** calls (**Recent Calls**), **Favourite contacts** (**Favorite Contacts**), and **Contacts** entries.

■ To make a call using the recent calls

Recent calls are stored by All, Dialled (Dialed), Missed, and Received.

- 1. Select Phone.
- 2. Select Recent calls (Recent Calls).
 - You can sort by **All**, **Dialled** (**Dialed**), **Missed**, or **Received**. Select the icon on the upper right of the screen.
- 3. Select a number.
 - ▶ Dialing starts automatically.

■ To make a call using a Favourite contacts entry

- 1. Select Phone.
- 2. Select Favourite contacts (Favorite Contacts).
 - ➤ You can change the order of Favourite contacts entries by selecting **Reorder**.
- 3. Select a number.
 - ▶ Dialing starts automatically.

Models without voice control system

Any voice-tagged Favourite contacts entry can be dialled by voice from most screens.

Press the 🖟 button and say the voice tag name.

Once a call is connected, you can hear the voice of the person you are calling through the audio speakers.

While there is an active connection with Apple CarPlay, phone calls cannot be made with Hands-Free Telephone (HFT) system and are only made from Apple CarPlay.

∑To make a call using the recent calls

The recent calls appear only when a phone is connected to the system.

All: Displays the last outgoing, incoming, and missed calls.

Dialled (Dialed): Displays the last outgoing calls. **Missed:** Displays the last missed calls. **Received:** Displays the last incoming calls.

∑To make a call using a Favourite contacts entry

Models without voice control system

When a voice tag is stored, press the 🖟 button to call the number using the voice tag.

Favourite Contacts P. 491

Any voice-tagged Favourite contacts entry can be dialled by voice from any screen.

Press the 65 button and follow the prompts.

■ To make a call using the imported phonebook

- 1. Select Phone.
- 2. Select Contacts.
- 3. Select a name.
 - ➤ You can sort by **First Name** or **Surname** (**Last Name**). Select the icon on the upper right of the screen.
- **4.** Select a number.
 - ▶ Dialing starts automatically.

■ To make a call using a phone number

- 1. Select Phone.
- 2. Select Keypad.
- 3. Select a number.
 - ▶ Use the keyboard on the touch screen for entering numbers.
- 4. Select Call.
 - ▶ Dialing starts automatically.

■ Receiving a Call



When there is an incoming call, an audible notification sounds (if activated) and the **Incoming Call...** screen appears.

You can answer the call using the left selector wheel.

To pick up the call, roll up or down to select (answer) on the driver information interface and then press the left selector wheel.

► If you want to decline or end the call, select (ignore) on the driver information interface using the left selector wheel.

■ Receiving a Call

Call Waiting

Select (answer) to put the current call on hold to answer the incoming call.

Select using the left selector wheel to return to the current call.

Select (ignore) to ignore the incoming call if you do not want to answer it.

You can select the icons on the audio/information screen instead of and on the driver information interface.

Options During a Call



The following options are available during a call.

Keypad: Send numbers during a call. This is useful when you call a menu-driven phone system.

Mute: Mute your voice.

Use Handheld: Transfer a call from the system to your phone.

The available options are shown on the lower half of the screen.

Select the option.


▶ The mute icon appears when **Mute** is selected when the other source screen other than the phone screen is displayed. Select **Mute** again to turn it off.

≥Options During a Call

You can select the icons on the audio/information screen.

Refuel Recommend*

Your vehicle is equipped with a feature that automatically calculates when to refuel. This feature will notify you when refueling is recommended as well as enable you to search for gas stations that are located in the vicinity of your vehicle.

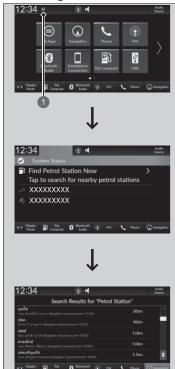

- **1.** When it is time to refuel the vehicle, a notification is displayed and a notification icon is displayed in the header.
- 2. Touch the box that contains the icon.

3. Select Find Petrol Station Now (Find Gas Station Now).

- **4.** Choose a gas station from the search screen of the navigation system.
 - ➤ For instructions on how to use the navigation system, refer to the navigation system manual.

Refuel Recommend *

You can turn the Refuel Recommend function on and off.

■ Customized Features P. 458

When you turn off this feature, the refuel recommend notification will not display.

This feature can only be used when the gas tank fuel level is below 30 percent.

If you select **Find Petrol Station Now** (**Find Gas Station Now**) or put more than 5 liters of gasoline into the gas tank, the notification for refueling will disappear. If you prefer not to be notified, select OFF in the settings for Refuel Recommend.

When you drive on a rough road or ascend or descend a hill for an extended period of time, the notification may disappear or may not be displayed at all.

Notification Icon

^{*} Not available on all models

Audio Error Messages*

iPod/USB Flash Drive

If an error occurs while playing an iPod or USB flash drive, you may see the following error messages. If you cannot clear the error message, contact a dealer.

| Error Message | Solution |
|--|---|
| Faulty USB Device Please check owner's manual (Bad USB Device Please check owners manual)*1 | Appears when an incompatible device is connected. Disconnect the device. Then, turn the audio system off and turn it on again. Do not reconnect the device that caused the error. |
| Connect Retry*1, *2 | Appears when the system does not acknowledge the iPod. Reconnect the iPod. |
| Unplayable File*1, *2 | Appears when the files in the USB flash drive are copyright protected or an unsupported format. This error message appears for about a few seconds, then plays the next file. |
| No Data*1, *2 | Appears when the iPod is empty. USB flash drive Appears when the USB flash drive is empty or there are no MP3, WMA, AAC, FLAC, PCM/WAVE, MP4*, AVI*, MKV*, or ASF/WMV* files in the USB flash drive. iPod and USB flash drive Check that compatible files are stored on the device. |
| Unsupported*1, *2 | Appears when an unsupported device is connected. If it appears when a supported device is connected, reconnect the device. |

^{*1:}Models with colour audio system

^{*2:}Models with Display Audio

| Error Message | Solution |
|---|---|
| No response from device (Device No Response)*1, *2 | Appears when the system does not communicate with a connected device. If it appears when a device is connected, contact your place of device purchase. |
| USB hub not supported*1, *2 | Appears when only a HUB is connected. If it appears, connect a USB flash drive to the HUB. |
| A charging error has occurred with the connected USB device. When safe please check the compatibility of the device and USB cable and try again.*1.*2 | Appears when an incompatible device is connected. Disconnect the device. Then, turn the audio system off and turn it on again. Do not reconnect the device that caused the error. |

^{*1:}Models with colour audio system *2:Models with Display Audio

General Information on the Audio System

Compatible iPod, iPhone, and USB Flash Drives

iPod and iPhone Model Compatibility

Models with colour audio system

Model

Made for iPod touch (6th to 7th generation) released between 2015 and 2019 Made for iPhone 5s/iPhone 6/iPhone 6 Plus/iPhone 6S/iPhone 6S Plus/iPhone SE/iPhone 7/iPhone 7 Plus/iPhone 8/iPhone 8 Plus/iPhone X/iPhone XS/iPhone XS Max/iPhone XR/iPhone 11/iPhone 11 Pro/iPhone 11 Pro Max/iPhone SE (2nd generation) /iPhone 12/iPhone 12 Pro/iPhone 12 Pro Max/iPhone 12 mini

Models with Display Audio

Model

Made for iPod touch (5th to 6th generation) released between 2012 and 2015 Made for iPhone 5s/iPhone 5c/iPhone 6/iPhone 6 Plus/iPhone 6S/iPhone 6S Plus/iPhone SE/iPhone 7/iPhone 7 Plus/iPhone 8/iPhone 8 Plus/iPhone X/iPhone XS/iPhone XS/iPhone XR/iPhone 11/iPhone 11 Pro/iPhone 11 Pro Max/iPhone SE (2nd generation)/iPhone 12/iPhone 12 Pro/iPhone 12 Pro Max/iPhone 12 mini

This system may not work with all software versions of these devices.

The Lightning connector works with iPhone 5s, iPhone 5c*1, iPhone 6, iPhone 6 Plus, iPhone 6S, iPhone 6S Plus, iPhone SE, iPhone 7, iPhone 7 Plus, iPhone 8, iPhone 8 Plus, iPhone X, iPhone XS, iPhone XS Max, iPhone XR, iPhone 11, iPhone 11 Pro, iPhone 11 Pro Max, iPhone SE (2nd generation), iPhone 12, iPhone 12 Pro, iPhone 12 Pro Max, iPhone 12 mini, iPod touch (5th*1, 6th, 7th*2 generation).

USB works with iPhone 5s, iPhone 5c*1, iPhone 6, iPhone 6 Plus, iPhone 6S, iPhone 6S Plus, iPhone SE, iPhone 7, iPhone 7 Plus, iPhone 8, iPhone 8 Plus, iPhone X, iPhone XS, iPhone XS Max, iPhone XR, iPhone 11, iPhone 11 Pro, iPhone 11 Pro Max, iPhone SE (2nd generation), iPhone 12, iPhone 12 Pro, iPhone 12 Pro Max, iPhone 12 Pro Max, iPhone 12 Pro, iPhone 13 Pro Max, iPhone 14 Pro Max, iPhone 15 Pro, iPhone 16 Pro, iPhone 17 Pro, iPhone 18 Pro Max, iPhone 19 Pro, iPhone 19 Pro, iPhone 19 Pro, iPhone 10 Pro, iPhone 10 Pro, iPhone 11 Pro, iPhone 11 Pro, iPhone 12 Pro, iPhone 12 Pro, iPhone 12 Pro, iPhone 13 Pro, iPhone 14 Pro, iPhone 15 Pro, iPhone 15 Pro, iPhone 16 Pro, iPhone 17 Pro, iPhone 17 Pro, iPhone 18 Pro, iPhone 18 Pro, iPhone 19 Pro, iPh

^{*1:} Models with Display Audio

^{*2:} Models with colour audio system

USB Flash Drives*

- A USB flash drive of 256 MB or higher is recommended.
- Some digital audio players may not be compatible.
- Some USB flash drives (e.g., a device with security lockout) may not work.
- Some software files may not allow for audio play or text data display.
- Each audio system is compatible the following formats. Some versions of the formats may be unsupported.

Models with colour audio system

MP3, WMA, AAC, FLAC, WAV

Models with Display Audio

MP3, WMA, AAC, FLAC, WAV, PCM/WAVE, MP4*, AVI*, MKV*, ASF/WMV*

■USB Flash Drives *

Files on the USB flash drive are played in their stored order. This order may be different from the order displayed on your PC or device.

■ Recommended Devices*

■ MP4 File

| Media | USB Fla | sh Drive |
|------------------------------|--|-------------------------------|
| Profile (MP4 version) | BaselineProfile/Level 3, MailProfile/Level 3.1 (MPEG4-AVC) | SimpleProfile/Level 5 (MPEG4) |
| File extension (MP4 version) | mp4/.m4v | |
| Compatible audio codec | AAC, MP3 | |
| Compatible video codec | MPEG4-AVC (H.264) MPEG4 (ISO/IEC 14496 Part. | |
| Bit rate | 10 Mbps, 14 Mbps (MPEG4-AVC) 8 Mbps (MPEG4) | |
| Maximum image | 1,280 × 720 pixels (MPEG4-AVC) | 720 × 576 pixels (MPEG4) |

■ AVI File

| Media | USB Flash Drive | | |
|------------------------------|--|-------------------------------|--|
| Profile (AVI version) | BaselineProfile/Level 3, MailProfile/Level 3.1 (MPEG4-AVC) | SimpleProfile/Level 5 (MPEG4) | AdvancedProfile/Level 2, MainProfile/Level Medium, SimpleProfile/Level Medium (VC-1) |
| File extension (AVI version) | | .avi | |
| Compatible audio codec | | AAC, MP3, WMA | |
| Compatible video codec | MPEG4-AVC (H.264) | MPEG4 (ISO/IEC 14496 Part.2) | VC-1 |
| Bit rate | 10 Mbps, 14 Mbps (MPEG4-AVC) | 8 Mbps (MPEG4) | 20 Mbps, 10 Mbps, 384 kbps (VC-1) |
| Maximum image | 1,280 × 720 pixels (MPEG4-AVC) | 720 × 576 pixels (MPEG4) | 1,280 × 720 pixels, 720 x 480 pixels, 352 x 288 pixels (VC-1) |

■ MKV File

| Media | | USB Flash Drive | |
|------------------------------|--|-------------------------------|--|
| Profile (MKV version) | BaselineProfile/Level 3, MailProfile/Level 3.1 (MPEG4-AVC) | SimpleProfile/Level 5 (MPEG4) | AdvancedProfile/Level 2, MainProfile/Level Medium, SimpleProfile/Level Medium (VC-1) |
| File extension (MKV version) | | .mkv | |
| Compatible audio codec | | AAC, MP3 | |
| Compatible video codec | MPEG4-AVC (H.264) | MPEG4 (ISO/IEC 14496 Part.2) | VC-1 |
| Bit rate | 10 Mbps, 14 Mbps (MPEG4-AVC) | 8 Mbps (MPEG4) | 20 Mbps, 10 Mbps, 384 kbps (VC-1) |
| Maximum image | 1,280 × 720 pixels (MPEG4-AVC) | 720 × 576 pixels (MPEG4) | 1,280 × 720 pixels, 720 x 480 pixels, 352 x 288 pixels (VC-1) |

■ ASF/WMV File

| Media | USB Flash Drive | |
|-------------------------------------|--|--|
| Profile (ASF/WMV version) | BaselineProfile/Level 3, MailProfile/Level 3.1 (MPEG4-AVC) | AdvancedProfile/Level 2, MainProfile/Level Medium, SimpleProfile/Level Medium (VC-1) |
| File extension (ASF/WMV version) | .asf/.wmv | |
| Compatible audio codec | WMA | |
| Compatible video codec | MPEG4-AVC (H.264) | VC-1 |
| Bit rate | 10 Mbps, 14 Mbps (MPEG4-AVC) | 20 Mbps, 10 Mbps, 384 kbps (VC-1) |
| Maximum image | 1,280 × 720 pixels (MPEG4-AVC) | 1,280 × 720 pixels, 720 x 480 pixels, 352 x 288 pixels (VC-1) |

About Open Source Licences

To see the open source licence information, follow these steps.

Models with colour audio system

- **1.** Press the **MENU** button.
- 2. Select Licence (License).

Models with Display Audio

- **1.** Press the toutton.
- 2. Select General Settings.
- 3. Select System.
- 4. Select About.
- **5.** Select **Legal Information**.
- 6. Select Licence (License).

Licence Information

Bluetooth

The *Bluetooth*® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Panasonic Automotive Systems Co., Ltd. is under license. Other trademarks and trade names are those of their respective owners.

The *Bluetooth*® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by MITSUBISHI ELECTRIC is under license. Other trademarks and trade names are those of their respective owners.

https://www.bluetooth.com/develop-with-bluetooth/marketing-branding/



■ Windows Media

This product is protected by certain intellectual property rights of Microsoft. Use or distribution of such technology outside of this product is prohibited without a license from Microsoft.

Continued 507

Apple

"Made for iPod," and "Made for iPhone," mean that an electronic accessory has been designed to connect specifically to iPod, or iPhone, respectively, and has been certified by the developer to meet Apple performance standards. Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards. Please note that the use of this accessory with iPod, or iPhone, may affect wireless performance.

Apple, the Apple Logo, iPhone, iPod touch are trademarks of Apple Inc., registered in the U.S. and other countries. Apple CarPlay, iPod, iPhone, iTunes, Siri and Lightning are trademarks of Apple Inc. App Store is a service mark of Apple Inc.



MPEG

Mpeg4 Visual

THIS PRODUCT IS LICENSED UNDER THE MPEG-4 VISUAL PATENT PORTFOLIO LICENSE FOR THE PERSONAL AND NON-COMMERCIAL USE OF A CONSUMER FOR (i) ENCODING VIDEO IN COMPLIANCE WITH THE MPEG-4 VISUALA STANDARD ("MPEG-4 VIDEO") AND/OR (ii) DECODING MPEG-4 VIDEO THAT WAS ENCODED BY A CONSUMER ENGAGED IN A PERSONAL AND NONCOMMERCIAL ACTIVITY AND/OR WAS OBTAINED FROM A VIDEO PROVIDER LICENSED BY MPEG LA TO PROVIDE MPEG-4 VIDEO. NO LICENSE IS GRANTED OR SHALL BE IMPLIED FOR ANY OTHER USE. ADDITIONAL INFORMATION INCLUDING THAT RELATING TO PROMOTIONAL, INTERNAL AND COMMERCIAL USES AND LICENSING MAY BE OBTAINED FROM MPEG LA, LLC. SEE HTTP://WWW.MPEGLA.COM.

VC-1

THIS PRODUCT IS LICENSED UNDER THE VC-1 PATENT PORTFOLIO LICENSE FOR THE PERSONAL AND NON-COMMERCIAL USE OF A CONSUMER TO (i) ENCODE VIDEO IN COMPLIANCE WITH THE VC-1 STANDARD ("VC-1 VIDEO") AND/OR (ii) DECODE VC-1 VIDEO THAT WAS ENCODED BY A CONSUMER ENGAGED IN A PERSONAL AND NON-COMMERCIAL ACTIVITY AND/OR WAS OBTAINED FROM A VIDEO PROVIDER LICENSED TO PROVIDE VC-1 VIDEO. NO LICENSE IS GRANTED OR SHALL BE IMPLIED FOR ANY OTHER USE.

ADDITIONAL INFORMATION MAY BE OBTAINED FROM MPEG LA, L.L.C. SEE HTTP://WWW.MPEGLA.COM.

AVC/H.264

THIS PRODUCT IS LICENSED UNDER THE AVC PATENT PORTFOLIO LICENSE FOR THE PERSONAL AND NONCOMMERCIAL USE OF A CONSUMER TO (i) ENCODE VIDEO IN COMPLIANCE WITH THE AVC STANDARD ("AVC VIDEO") AND/OR (ii) DECODE AVC VIDEO THAT WAS ENCODED BY A CONSUMER ENGAGED IN A PERSONAL AND NON-COMMERCIAL ACTIVITY AND/OR WAS OBTAINED FROM A VIDEO PROVIDER LICENSED TO PROVIDE AVC VIDEO. NO LICENSE IS GRANTED OR SHALL BE IMPLIED FOR ANY OTHER USE.

ADDITIONAL INFORMATION MAY BE OBTAINED FROM MPEG LA, L.L.C. SEE HTTP://WWW.MPEGLA.COM.

Legal Information on Apple CarPlay/Android Auto*

OWNER'S MANUAL LICENSE/LIABILITY STATEMENTS

USE OF APPLE CARPLAY IS SUBJECT TO YOUR AGREEMENT TO THE CARPLAY TERMS OF USE, WHICH ARE INCLUDED AS PART OF THE APPLE IOS TERMS OF USE. IN SUMMARY, THE CARPLAY TERMS OF USE DISCLAIM APPLE AND ITS SERVICE PROVIDERS' LIABILITY IF THE SERVICES FAIL TO PERFORM CORRECTLY OR ARE DISCONTINUED, STRICTLY LIMIT APPLE AND ITS SERVICE PROVIDERS' OTHER LIABILITIES, DESCRIBE THE KINDS OF USER INFORMATION (INCLUDING, FOR EXAMPLE, VEHICLE LOCATION, VEHICLE SPEED, AND VEHICLE STATUS) BEING GATHERED AND STORED BY APPLE AND ITS SERVICE PROVIDERS, AND DISCLOSE CERTAIN POSSIBLE RISKS ASSOCIATED WITH THE USE OF CARPLAY, INCLUDING THE POTENTIAL FOR DRIVER DISTRACTION. SEE APPLE'S PRIVACY POLICY FOR DETAILS REGARDING APPLE'S USE AND HANDLING OF DATA UPLOADED BY CARPLAY.

USE OF ANDROID AUTO IS SUBJECT TO YOUR AGREEMENT TO THE ANDROID AUTO TERMS OF USE WHICH MUST BE AGREED TO WHEN THE ANDROID AUTO APPLICATION IS DOWNLOADED TO YOUR ANDROID PHONE. IN SUMMARY, THE ANDROID AUTO TERMS OF USE DISCLAIM GOOGLE AND ITS SERVICE PROVIDERS' LIABILITY IF THE SERVICES FAIL TO PERFORM CORRECTLY OR ARE DISCONTINUED, STRICTLY LIMIT GOOGLE AND ITS SERVICE PROVIDERS' OTHER LIABILITIES, DESCRIBE THE KINDS OF USER INFORMATION (INCLUDING, FOR EXAMPLE, VEHICLE LOCATION, VEHICLE SPEED, AND VEHICLE STATUS) BEING GATHERED AND STORED BY GOOGLE AND ITS SERVICE PROVIDERS, AND DISCLOSE CERTAIN POSSIBLE RISKS ASSOCIATED WITH THE USE OF ANDROID AUTO, INCLUDING THE POTENTIAL FOR DRIVER DISTRACTION. SEE GOOGLE'S PRIVACY POLICY FOR DETAILS REGARDING GOOGLE'S USE AND HANDLING OF DATA UPLOADED BY ANDROID AUTO.

* Not available on all models

DISCLAIMER OF WARRANTIES; LIMITATION ON LIABILITY

YOU EXPRESSLY ACKNOWLEDGE AND AGREE THAT USE OF APPLE CARPLAY OR ANDROID AUTO ("THE APPLICATIONS") IS AT YOUR SOLE RISK AND THAT THE ENTIRE RISK AS TO SATISFACTORY QUALITY, PERFORMANCE, ACCURACY AND EFFORT IS WITH YOU TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW. AND THAT THE APPLICATIONS AND INFORMATION ON THE APPLICATIONS IS PROVIDED "AS IS" AND "AS AVAILABLE," WITH ALL FAULTS AND WITHOUT WARRANTY OF ANY KIND, AND HONDA HEREBY DISCLAIMS ALL WARRANTIES AND CONDITIONS WITH RESPECT TO THE APPLICATIONS AND INFORMATION ON THE APPLICATIONS, EITHER EXPRESS. IMPLIED OR STATUTORY, INCLUDING, BUT NOT LIMITED TO. THE IMPLIED WARRANTIES AND/OR CONDITIONS OF MERCHANTABILITY, SATISFACTORY QUALITY, FITNESS FOR A PARTICULAR PURPOSE, ACCURACY, QUIET ENJOYMENT, AND NON-INFRINGEMENT OF THIRD PARTY RIGHTS. NO ORAL OR WRITTEN INFORMATION OR ADVICE GIVEN BY HONDA OR AN AUTHORISED REPRESENTATIVE SHALL CREATE A WARRANTY. AS EXAMPLES, AND WITHOUT LIMITATION, HONDA DISCLAIMS ANY WARRANTY REGARDING THE ACCURACY OF DATA PROVIDED BY THE APPLICATIONS, SUCH AS THE ACCURACY OF DIRECTIONS, ESTIMATED TRAVEL TIME, SPEED LIMITS, ROAD CONDITIONS, NEWS, WEATHER, TRAFFIC, OR OTHER CONTENT PROVIDED BY APPLE, GOOGLE, THEIR AFFILIATES, OR THIRD PARTY PROVIDERS; HONDA DOES NOT GUARANTEE AGAINST LOSS OF APPLICATION DATA, WHICH MAY BE LOST AT ANY TIME; HONDA DOES NOT GUARANTEE THAT THE APPLICATIONS OR ANY SERVICES PROVIDED THROUGH THEM WILL BE PROVIDED AT ALL TIMES OR THAT ANY OR ALL SERVICES WILL BE AVAILABLE AT ANY PARTICULAR TIME OR LOCATION. FOR EXAMPLE. SERVICES MAY BE SUSPENDED OR INTERRUPTED WITHOUT NOTICE FOR REPAIR, MAINTENANCE, SECURITY FIXES, UPDATES, ETC., SERVICES MAY BE UNAVAILABLE IN YOUR AREA OR LOCATION, ETC. IN ADDITION, YOU UNDERSTAND THAT CHANGES IN THIRD PARTY TECHNOLOGY OR GOVERNMENT REGULATION MAY RENDER THE SERVICES AND/OR APPLICATIONS OBSOLETE AND/OR UNUSABLE.

TO THE EXTENT NOT PROHIBITED BY LAW, IN NO EVENT SHALL HONDA OR ITS AFFILIATES BE LIABLE FOR PERSONAL INJURY, OR ANY INCIDENTAL, SPECIAL, INDIRECT OR CONSEQUENTIAL DAMAGES WHATSOEVER, INCLUDING, WITHOUT LIMITATION, DAMAGES FOR LOSS OF PROFITS, CORRUPTION OR LOSS OF DATA, FAILURE TO TRANSMIT OR RECEIVE ANY DATA, BUSINESS INTERRUPTION OR ANY OTHER COMMERCIAL DAMAGES OR LOSSES, ARISING OUT OF OR RELATED TO THE APPLICATIONS OR YOUR USE OF OR INABILITY TO USE THE APPLICATIONS OR INFORMATION ON THE APPLICATIONS, HOWEVER CAUSED, REGARDLESS OF THE THEORY OF LIABILITY (CONTRACT, TORT OR OTHERWISE) AND EVEN IF HONDA WERE ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. SOME REGIONS AND JURISDICTIONS MAY DISALLOW THE EXCLUSION OR LIMITATION OF LIABILITY FOR DAMAGES, SO THESE LIMITATIONS AND EXCLUSIONS MAY NOT APPLY TO YOU. THE FOREGOING LIMITATIONS WILL APPLY EVEN IF THE ABOVE STATED REMEDY FAILS OF ITS ESSENTIAL PURPOSE.



This chapter discusses driving and refueling.

| Before Driving | . 514 |
|---------------------------------------|-------|
| Towing a Trailer | |
| Off-road Guidelines | . 526 |
| When Driving | |
| Starting the Engine | . 528 |
| Precautions While Driving | . 534 |
| Continuously Variable Transmission | . 536 |
| Shifting537, | 539 |
| ECON Mode | . 544 |
| Auto Idle Stop* | |
| Hill Descent Control System | . 552 |
| Adjustable Speed Limiter* | . 554 |
| Intelligent Speed Limiter* | . 561 |
| Vehicle Stability Assist (VSA) System | . 569 |
| Agile Handling Assist | |
| | |

| Real Time AWD with Intelligent Control System*572 |
|---|
| Taiwanese models |
| Tyre Pressure Monitoring System (TPMS)573 |
| Except Taiwanese models |
| Deflation Warning System* 578 |
| Blind Spot Information System * 584 |
| LaneWatch* 588 |
| Adjusting Headlight Distribution* 592 |
| Honda Sensing 593 |
| Collision Mitigation Braking System |
| (CMBS)596 |
| Low Speed Braking Control* 610 |
| Road Departure Mitigation System 616 |
| Adaptive Cruise Control (ACC) with Low |
| Speed Follow 626 |

| Lane Keeping Assist System (LKAS) 648 Traffic Jam Assist* 666 Lead Car Departure Notification System* 677 Traffic Sign Recognition System* 677 Front Sensor Camera 682 Radar Sensor 684 Sonar Sensors* 685 Braking 686 Parking Your Vehicle 696 Multi-View Rear Camera* 708 Multi-View Camera* 710 Refueling 722 Fuel Economy and CO ₂ Emissions 728 Turbo Engine Vehicle 725 |
|--|
|--|

Before Driving

Driving Preparation

Check the following items before you start driving.

Exterior Checks

- Make sure there are no obstructions on the windows, door mirrors, exterior lights, or other parts of the vehicle.
 - Remove any frost, snow, or ice.
 - ▶ Remove any snow on the roof, as this can slip down and obstruct your field of vision while driving. If frozen solid, remove ice once it has softened.
 - ▶ When removing ice from around the wheels, be sure not to damage the wheel or wheel components.
- Make sure the bonnet is securely closed.
 - ▶ If the bonnet opens while driving, your front view will be blocked.
- Make sure the tyres are in good condition.
 - ▶ Check air pressures, and check for damage and excessive wear.

≧ Checking and Maintaining Tyres P. 767

- Make sure there are no people or objects behind or around the vehicle.
 - ▶ There are blind spots from the inside.

Exterior Checks

NOTICE

When doors are frozen shut, use warm water around the door edges to melt any ice. Do not try to force them open, as this can damage the rubber trim around the doors. When done, wipe dry to avoid further freezing.

Do not pour warm water into the key cylinder. You will be unable to insert the key if the water freezes in the hole.

Heat from the engine and exhaust can ignite flammable materials left under the bonnet, causing a fire. If you've parked your vehicle for an extended period, inspect and remove any debris that may have collected, such as dried grass and leaves that have fallen or have been carried in for use as a nest by a small animal. Also, check under the bonnet for leftover flammable materials after you or someone else has performed maintenance on your vehicle.

Interior Checks

- Store or secure all items on board properly.
 - ➤ Carrying too much luggage, or improperly storing it, can affect your vehicle's handling, stability, stopping distance, and tyres, and make it unsafe.
 - Load Limit P. 517
- Do not pile items higher than the seat height.
 - ▶ They can block your view and may be thrown forward in the event of sudden braking.
- Do not place anything in the front seat footwells. Make sure to secure the floor mat.
 - An object or unsecured floor mat can interfere with your brake and accelerator pedal operation while driving.
- If you have any animals on board, do not let them move around in the vehicle.
 - ▶ They may interfere with driving and a crash could occur.
- Securely close all doors and the tailgate.
- Adjust your seating position properly.
 - Adjust the head restraint, too.
 - **Seats** P. 286
 - **△ Adjusting the Front Head Restraint Positions** P. 301
- Adjust the mirrors and steering wheel properly.
 - Adjust them while sitting in the proper driving position.
 - Mirrors P. 282
 - Adjusting the Steering Wheel P. 281

Interior Checks

The headlight aim is set by the factory, and does not need to be adjusted. However, if you regularly carry heavy items in the luggage area or tow a trailer*, have the aiming readjusted at a dealer or by a qualified technician.

Models with manual headlight adjusting system

You can adjust the low beam headlight angle by yourself.

▶ Headlight Adjuster* P. 269

Models with automatic headlight adjusting system

Your vehicle is equipped with the automatic headlight adjusting system that automatically adjusts the vertical angle of the low beam headlights.

- Be sure items placed on the floor behind the front seats cannot roll under the seats.
 - ▶ They can interfere with the driver's ability to operate the pedals, or the operation of the seats.
- Everyone in the vehicle must fasten their seat belt.
 - Fastening a Seat Belt P. 53
- Make sure that the indicators in the instrument panel come on when you start the vehicle, and go off soon after.
 - ▶ Always have a dealer check the vehicle if a problem is indicated.
 - Indicators P. 140

Load Limit

When you load luggage, the total weight of the vehicle, all passengers, and luggage must not exceed the maximum permissible weight.

Specifications P. 860

The load for the front and rear axles also must not exceed the maximum permissible axle weight.

▶ Specifications P. 860

∑Load Limit

AWARNING

Overloading or improper loading can affect handling and stability and cause a crash in which you can be hurt or killed.

Follow all load limits and other loading guidelines in this manual.

Towing a Trailer

Except Oceanian and African models with Right-hand Drive Type

Your vehicle is not designed to tow a trailer. Attempting to do so can void your warranties.

Oceanian and African models with Right-hand Drive Type

Towing Preparation

Towing Load Limits

Your vehicle can tow a trailer if you carefully observe the load limits, use the proper equipment, and follow the towing guidelines. Check the load limits before driving.

■ Total trailer weight

Do not exceed the maximum towing weight of the trailer and towbar (with/without brakes), luggage and everything in or on it. Towing loads in excess of the maximum towing weight can seriously affect vehicle handling and performance and can damage the engine and drivetrain.

1 Total Load

>> Towing Load Limits

AWARNING

Exceeding any load limit or improperly loading your vehicle and trailer can cause a crash in which you can be seriously hurt or killed.


Check the loading of your vehicle and trailer carefully before starting to drive.

Check if all loads are within limits at a public scale. If a public scale is not available, add the estimated weight of your luggage load to the weight of your trailer (as quoted by the manufacturer), and the trailer nose load

Break-in Period.

Avoid towing a trailer during your vehicle's first 1,000 km.

When using a detachable towing device, always remove the towing device when not in use and only install it when towing so that it does not cover or hide anything on the rear of your vehicle, such as the exterior lights or licence plate.

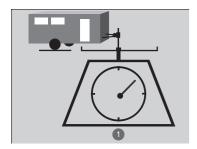

1 Trailer Nose Load

■ Trailer nose load

The trailer nose load should never exceed 100^{*1} or 80^{*2} kg. This is the amount of weight the trailer puts on the towbar when it is fully-loaded. As a rule of thumb for trailer weights of less than 1,000 kg, the trailer nose load should be 10 percent of the total trailer package.

- Excessive trailer nose load reduces front tyre traction and steering control. Too little trailer nose load can make the trailer unstable and cause it to sway.
- To achieve a proper trailer nose load, start by loading 60% of the load toward the front of the trailer and 40% toward the rear. Readjust the load as needed.

■Towing Load Limits

Never exceed the maximum towing weight and specified load limit.

▶ Specifications P. 860

If you tow a trailer in mountainous conditions, remember to reduce 10% of the combined vehicle weights from the maximum towing weight for every 1,000 metres of elevation.

*1: Oceanian models

*2: African models with Right-hand Drive Type

■ Towing Equipment and Accessories

Towing equipment varies by the size of your trailer, how much load you are towing, and where you are towing.

■ Towbars

The towbar must be of an approved type and properly bolted to the underbody.

■ Safety chains

Always use safety chains when you tow a trailer. Leave enough slack to allow the trailer to turn corners easily, but do not allow the chains to drag on the ground.

■ Trailer brakes

If you are thinking of getting a trailer that has brakes, be sure they are electronically actuated. Do not attempt to tap into your vehicle's hydraulic system. No matter how successful it may seem, any attempt to attach trailer brakes to your vehicle's hydraulic system will lower braking effectiveness and create a potential hazard.

■ Additional towing equipment

There may be laws requiring special outside mirrors when towing a trailer. Even if mirrors are not required in your locale, you should install special mirrors if visibility is restricted in any way.

∑Towing Equipment and Accessories

Make sure that all equipment is properly installed and maintained, and that it meets the regulations of the country where you are driving.

Consult your trailer sales or rental agency if any other items are recommended or required for your towing situation


Consult your trailer maker for proper installation and setup of the equipment.

Improper installation and setup can affect the electrical components, handling, stability, and braking performance of your vehicle.

The lighting and wiring of trailers can vary by type and brand. If a connector is required, it should only be installed by a qualified technician.

■ Trailer light

Trailer lights and equipment must comply with the regulations of the country where you are driving. Check with your local trailer sales or rental agency for the requirements in the area where you plan to tow.

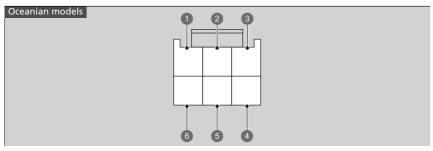


- 1 Left Turn Signal (Light Blue)
- ② Grand (Black)
- 3 Right Turn Signal (Green)
- 4 +B Trailer (Light Violet/Red)
- **6** Brake Light (Green)
- 6 Small (Grey)

▼Trailer light

The trailer lighting connector is located behind the left side panel in the luggage area.

Even if you are planning to use the non-Honda trailer lighting harness and converter, ask a dealer for the correct connector and pins.

Continued 521

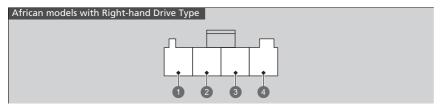

- Back-up Light (Light Green)
- 2 +B Trailer (Light Violet/Red)
- Rear Fog Light (Brown)
- 4 Small (Grey)

We recommend that you have a dealer install a Honda wiring harness and converter. They are designed for your vehicle.

The lighting and wiring of trailers can vary by type and brand. If a connector is required, it should only be installed by a qualified technician.

Trailer Stability Assist*

Helps to stabilize the vehicle and trailer when the trailer severely sways.

■ How trailer stability assist works

When the vehicle and trailer become unstable while driving, trailer stability assist determines the cause. If the trailer oscillation is detected as the cause, and the swaying increases, the system applies the brakes or controls engine output to reduce vehicle speed.

Both the vehicle and trailer brake lights come on automatically if you brake to reduce vehicle speed.

■ Trailer Stability Assist*

Trailer stability assist is not a function that prevents the vehicle and trailer from swaying. Avoid high speeds, abrupt steering, improper trailer load, and sudden braking to keep the trailer from swaying. When swaying too severely, the system becomes ineffective, and you may lose control of your vehicle, causing the trailer to roll over or get damaged.

Driving Safely with a Trailer* P. 524

Trailer towing sway is caused by:

- Crosswinds
- Improper towbar down load
- Excessive speed

The VSA system indicator blinks during the trailer stability assist operation.

VSA Operation P. 569

* Not available on all models

Driving Safely with a Trailer*

■ Things You Need To Know Before Towing a Trailer

- Have the trailer properly serviced and keep it in good condition.
- Make sure that all the weights and load in the vehicle and trailer are within limits.
 Towing Load Limits P. 518
- Securely attach the towbar, safety chains, and other necessary parts to the trailer.
- Securely store all the items in and on the trailer so that they do not shift while driving.
- Check if the lights and brakes on the trailer are working properly.
- Check the pressure of the trailer tyres, including the spare.
- Check regulations concerning the maximum speed or driving restrictions for vehicles towing trailers. If you are driving across several countries, check each country's requirements before leaving home, because regulations may vary.
- Turn off the rear parking sensor system.
 - **▶** Parking sensor system on and off P. 699

Oceanian models

 Turn off the Low Speed Braking Control system. It may activate if it detects the towed object as an obstacle.

System On and Off P. 613

Driving Safely with a Trailer *

Operating speed when towing a trailer must not exceed 100 km/h.

Parking

In addition to the normal precautions, place wheel chocks at each of the trailer's tyres.

When towing a trailer, we recommend that you carry a full-size spare wheel and tyre for both your vehicle and trailer.

Models with compact spare tyre

If you use the compact spare tyre that came with your vehicle, it could adversely affect vehicle driving stability.

Remember to unhitch the trailer before changing a flat tyre. Ask the trailer sales or rental agency where and how to store the trailer's spare tyre.

We recommend you drive uphill of less than 12% slope. Follow the trailer association's recommendations for suitable roads.

Winds caused by passing large vehicles can sway your trailer, keep a constant speed and steer straight ahead.

Always drive slowly and have someone guide you when reversing.

■ Towing Speeds and Shift Position

- Drive slower than normal.
- Obey posted speed limits for vehicles with trailers.
- Use the **D** position when towing a trailer on level roads.

Turning and Braking

- Turn more slowly and with a wider turning arc than normal.
- Allow more time and distance for braking.
- Do not brake or turn suddenly.

■ Driving in Hilly Terrain

- If the **Engine temperature near limit. Avoid strong acceleration and high speed.** message appears on the driver information interface, turn off the climate control system and reduce speed.
 - If the **Engine temperature too hot. Do not drive. Allow engine to cool.** message appears on the driver information interface, pull to the side of the road safely to cool down the engine.

■ Towing Speeds and Shift Position ■ Towing Speeds and Speeds and Shift Position ■ Towing Speeds and Speeds and

When towing a fixed-sided trailer (e.g., camper), do not exceed 88 km/h. At higher speeds, the trailer may sway or affect vehicle handling.

Off-road Guidelines

General Information

Your vehicle has been designed primarily for use on pavement, however, its higher ground clearance allows you to occasionally travel on unpaved roads. It is not designed for trail-blazing, or other challenging off-road activities.

If you decide to drive on unpaved roads, you will find that it requires somewhat different driving skills and that your vehicle will handle somewhat differently than it does on pavement. Pay attention to the precautions and tips in this section, and get acquainted with your vehicle before leaving the pavement.

Important Safety Precautions

To avoid loss of control or rollover, be sure to follow all precautions and recommendations:

- Be sure to store luggage properly and do not exceed your luggage load limits.
 Load Limit P. 517
- Whenever you drive, make sure you and your passengers always wear seat belts.
- Keep your speed low, and never go faster than the conditions allow.
- It's up to you to continually assess the situation and drive within the limits.

Off-road Guidelines

AWARNING

Improperly operating this vehicle on or offpavement can cause a crash or rollover in which you and your passengers could be seriously injured or killed.

- Follow all instructions and guidelines in this owner's manual.
- Keep your speed low, and don't drive faster than conditions permit.

Failure to operate your vehicle correctly might result in a crash or a rollover.

- **≥** Important Handling Information P. 44
- **▶ Precautions While Driving** P. 534

Avoiding Trouble

- Check Out Your Vehicle before you leave the pavement and make sure that all scheduled maintenance has been completed. Pay special attention to the condition of the tyres, and check the tyre pressures.
- Remember the route you choose presents limits (too steep or bumpy), you have limits (driving skill and comfort), and your vehicle has limits (traction, stability, and power). Failing to recognise these limits will likely put you and your passengers in a hazardous situation.
- Accelerating and Braking should be done slowly and gradually. Trying to start
 or stop too fast can cause a loss of traction and you could lose control.
- Avoiding Obstacles and Debris in the road reduces the likelihood of a rollover or damage to your suspension or other components.
- **Driving on Slopes** increases your risk of a rollover, particularly if you attempt to drive across a slope that is too steep. Going straight up or down a slope is usually the safest. If you can't clearly see all conditions or obstacles on a slope, walk it before you drive it. If there is any doubt whether you can safely pass, don't try it. Find another route. If you get stuck when climbing, do not try to turn around. Back down slowly following the same route you took up the hill.
- Crossing a Stream Avoid driving through deep water. If you encounter water in your route (a small stream or large puddle, for example), evaluate it carefully before going ahead. Make sure it is shallow, flowing slowly, and has firm ground underneath. If you are not sure of the depth or the ground, turn around and find another route. Driving through deep water can also damage your vehicle. When driving in water that reaches around half of the wheel height, the water can get into the transmission and differential, diluting the lubricant and causing an eventual failure. It can also wash the grease out of the wheel bearings.
- If You Get Stuck, carefully go in the direction that you think will get you unstuck. Do not spin the tyres as this will only make things worse and could damage the transmission. If you are unable to free yourself, your vehicle will need to be towed. Front and rear tow hooks are provided for this purpose.

When Driving

Starting the Engine



Electric Parking Brake Switch



- **2.** Check that the transmission is in **P**, then depress the brake pedal.
 - ► Although it is possible to start the vehicle in **N**, it is safer to start it in **P**.



► The parking brake and brake system indicator (red) comes on for 30 seconds when you pull up the electric parking brake switch


Starting the Engine

Keep your foot firmly on the brake pedal when starting the engine.

The engine is harder to start in cold weather and in thinner air found at altitudes above 2,400 metres.

When starting the engine in cold weather, turn off all electrical accessories such as the lights, climate control system, and rear demister in order to reduce battery drain.

If the exhaust system sounds abnormal or you can smell exhaust gas inside the vehicle, have your vehicle checked by a dealer. There may be a problem with the engine or exhaust system.

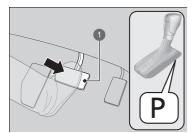

Brake Pedal



3. Press the **ENGINE START/STOP** button without depressing the accelerator pedal.

Starting the Engine

Bring the keyless remote or card key* close to the **ENGINE START/STOP** button if the battery in the keyless remote or card key* is weak.

If the Keyless Remote/Card Key* Battery is Weak P. 820

The engine may not start if the keyless remote or card key* is subjected to strong radio waves.

Do not hold the **ENGINE START/STOP** button to start the engine.

If the engine does not start, wait at least 30 seconds before starting the engine again.

The immobilizer system protects your vehicle from theft. If an improperly coded device is used, the engine's fuel system is disabled.

Immobilizer System P. 249

■ Remote Engine Start*

You can remotely start the engine using the keyless remote.

■ To start the engine



Press the <u>a</u> button, then press and hold the <u>b</u> button.

► Some exterior lights flash once.

1 LED: Blinks when any button is pressed.



If the engine starts successfully, some exterior lights flash six times.

■ Remote Engine Start*

AWARNING

Engine exhaust contains toxic carbon monoxide.

Breathing carbon monoxide can kill you or cause unconsciousness.

Never use the remote engine starter when the vehicle is parked in a garage or other area with limited ventilation.

The remote engine start may violate local laws. Before using the remote engine start, check your local laws

If there are buildings and obstacles between your vehicle and the keyless remote, the range will be reduced.

This distance may vary by external electrical interference



If the engine does not start, exterior lights will not flash.

► Go within the range, and try again.

When started remotely, the engine automatically shuts off after 10 minutes of idling and/or the brake pedal and **ENGINE START/STOP** button have not been pressed simultaneously.

To extend the run time for another 10 minutes during the first run, press the button, then press and hold the \bigcirc button.

Some exterior lights flash six times if a 10-minute extension request was transmitted successfully.

■ Remote Engine Start*

The engine may not start by the remote engine start if:

- You have disabled a remote engine start setting.
 - Settings* P. 185
 - Now to Customize the Vehicle Settings
 P. 467
- The power mode is not in VEHICLE OFF.
- The transmission is in a position other than P.
- The bonnet is open, or any door or the tailgate is unlocked.
- You have already used the remote twice to start the engine.
- Another registered keyless remote is in the vehicle.
- There is any antenna failure.
- The door is unlocked with the built-in key.
- The engine oil pressure is low.
- The engine coolant temperature is extremely high.
- The telematics unit* malfunctions.
- The security system alarm is not set.
- The battery charge is too low.

■ To stop the engine



Press and hold the button for one second.



If the engine stops successfully, the exterior lights flash once.



When the remote is out of the keyless access system range, the exterior lights will not flash. The engine will not stop.

► Go within the range, and try again.

■ Remote Engine Start *

The engine may stop while it is running if:

- You do not start the vehicle within 10 minutes of starting the engine with the keyless remote.
- The engine is stopped by using the keyless remote.
- The security system alarm is not set.
- The door is unlocked with the built-in key.
- The bonnet is open, or any door, or the tailgate is unlocked.
- You press the shift lever release button.
- The engine coolant temperature is extremely high.
- The battery is low.
- The engine oil pressure is low.
- The malfunction indicator lamp comes on if there is a problem with the emissions control systems.

While the engine is running, the vehicle will automatically precondition inside the vehicle. When it is cold outside:

- The demister is activated at a moderately warm temperature.
- The rear demister and seat heaters* are activated.
 - Rear Demister Button P. 277
 - Front Seat Heaters* P. 327

Starting to Drive

When the engine was started using the button on the keyless remote

1. Depress and hold the brake pedal, then press the **ENGINE START/STOP** button.

When the engine was started in any case

- **2.** Keeping your right foot on the brake pedal, put the transmission into \boxed{D} . Select \boxed{R} when reversing.
- **3.** With the parking brake applied, release the brake pedal and gently depress the accelerator pedal.
 - ► Make sure the parking brake and brake system indicator (red) goes off. ▶ Parking Brake P. 686

■ Hill start assist system

Hill start assist keeps the brake engaged briefly to help to prevent the vehicle from rolling on inclines as you move your foot from the brake pedal to the accelerator.

Put the transmission into \boxed{D} , \boxed{S} , or \boxed{L}^* when facing uphill, or \boxed{R} when facing downhill, then release the brake pedal.

Stopping the Engine

You can turn the engine off when the vehicle is completely stopped.

- **1.** Put the transmission into **P**.
- 2. Press the ENGINE START/STOP button.

Starting to Drive

When the engine was started using the button on the keyless remote

The engine stops when the transmission is taken out of $\boxed{\textbf{P}}$ before the **ENGINE START/STOP** button is pressed. Follow step 1 when starting to drive.

You can also release the parking brake by pressing the electric parking brake switch while depressing the brake pedal.

When facing downhill, you can start your vehicle more smoothly by manually releasing it with the electric parking brake switch than by releasing it with the accelerator pedal.

Hill start assist may not prevent the vehicle from rolling downhill on a very steep or slippery slope, and will not operate on small inclines.

Hill start assist is not a replacement for the parking brake.

Hill start assist will operate even when VSA is switched off

Precautions While Driving

Driving Guidelines for Your Utility Vehicle

Utility vehicles have a significantly higher rollover rate than other types of vehicles. To prevent rollovers or loss of control:

- Take corners at slower speeds than you would with a passenger vehicle.
- Avoid sharp turns and abrupt maneuvres whenever possible.
- Do not modify your vehicle in any way that you would raise the centre of gravity.
- Do not carry heavy luggage on the roof.

■ In a Fog

Visibility becomes low when it is foggy. When you drive, turn on the low beam headlights even during the daytime. Slow down, using the road line in the centre, guard rails, and the taillights of the vehicle ahead of you as your driving guide.

In a Strong Wind

If a strong side wind drifts your vehicle while driving, hold the steering wheel tight. Slowly decelerate your vehicle and keep your vehicle in the middle of the road. Be careful with wind gusts especially when your vehicle is exiting a tunnel, driving on a bridge or river bank, and driving through an open area like a quarry, and when a large lorry is passing by.

In Rain

The road is slippery when raining. Avoid hard braking, rapid acceleration, and abrupt steering and be more cautious when driving. It is likely to experience hydroplaning phenomenon if you are driving on a rutted road with puddles. Do not drive in deep water and on flooded roads. This can damage the engine or driveline, or cause electrical component failure.

▶ Precautions While Driving

CAUTION: Do not drive on the road where water is deep. Driving through deep water will cause damage to the engine and electrical equipment and the vehicle will break down.

NOTICE

Do not operate the shift lever while pressing the accelerator pedal. You could damage the transmission.

NOTICE

If you repeatedly turn the steering wheel at an extremely low speed, or hold the steering wheel in the full left or right position for a while, the electric power steering (EPS) system heats up. The system goes into a protective mode, and limits its performance. The steering wheel becomes harder and harder to operate. Once the system cools down, the EPS system is restored.

Repeated operation under these conditions can eventually damage the system.

If the power mode is set to ACCESSORY while driving, the engine will shut down and all steering and brake power assist functions will stop, making it difficult to control the vehicle.

Do not select $\boxed{\mathbf{N}}$ while driving as you will lose engine braking (and acceleration) performance.

During the first 1,000 km of operation, avoid sudden acceleration or full throttle operation so as not to damage the engine or powertrain.

Other Precautions

If there is a strong impact with something under the vehicle, stop in a safe location. Check the underside of the vehicle for damage or any fluid leaks.

▶ Precautions While Driving

Avoid hard braking for the first 300 km after purchasing your new vehicle or replacing the brake pads or rotors, to allow for proper break-in.

☑Driving Guidelines for Your Utility Vehicle

Failure to operate your vehicle correctly might result in a crash or a rollover.

▶ Important Handling Information P. 44

≫In Rain

Be careful when hydroplaning phenomenon occurs. When you drive on a road covered with water at excessive speed, a layer of water builds between the tyres and the road surface. If this occurs, the vehicle cannot respond to control inputs such as steering, and braking.

Models with paddle shifter

Slowly decelerate when you shift down. If the road is slippery, sudden engine braking can cause the tyres to skid.

Continuously Variable Transmission

Creeping

When the engine runs at higher idle speeds, the creeping force increases. Keep the brake pedal firmly depressed when stopped.

■ Kickdown

Quickly depressing the accelerator pedal while driving uphill may cause the transmission to drop to a lower ratio, unexpectedly increasing vehicle speed. Depress the accelerator pedal carefully, especially on slippery roads and curves.

Models without paddle shifter

Shifting

Change the shift position in accordance with your driving needs.

■ Shift positions



Release Button

P Park

Used when parking or starting the engine.

R Reverse

Used when reversing.

N Neutral

Transmission is not locked.

D Drive

Used for normal driving

S Drive(S)

Used:

- For better acceleration.
- To increase engine braking.
- When going up or down hills.

L Low

Used:

- To further increase engine braking.
- When going up or down hills.

Shift positions


You cannot change the power mode from ON to VEHICLE OFF unless the shift position is in \boxed{P} .

The vehicle may move very slightly even in $\boxed{\mathbf{N}}$ while the engine is cold.

Depress the brake pedal firmly and, when necessary, apply the parking brake.

Continued 537

■ Shift Operation

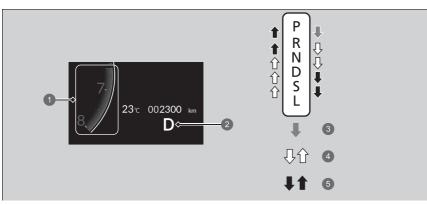

- 1 Tachometer Red Zone
- 2 Shift Position Indicator (Transmission System Indicator)
- 3 Depress the brake pedal and press the shift lever release button to shift.
- 4 Shift without pressing the shift lever release button.
- **6** Press the shift lever release button and shift.

Shift Operation

NOTICE

When you change the shift position from **D** to **R** and vice versa, come to a complete stop and keep the brake pedal depressed.

Operating the shift lever before the vehicle has come to a complete standstill can damage the transmission.

Use the shift position indicator to check the lever position before pulling away.

If the transmission system indicator blinks when driving, in any shift position, there is a problem with the transmission.

Avoid sudden acceleration and have the transmission checked by a dealer as soon as possible.

The fuel supply may be cut off if you drive at engine speeds in or over the tachometer red zone (engine speed limit). If this happens, you may experience a slight jolt.

It may not be possible to operate the shift lever if the brake pedal is applied while the shift lever release button is held down.

Depress the brake pedal first.

When shifting positions in extremely low temperatures (–30°C), there may be a short delay before the shift position is displayed. Always confirm you are in the correct shift position before driving.

Models with paddle shifter

Shifting

Change the shift position in accordance with your driving needs.

■ Shift positions



Release Button

P Park

Used when parking or starting the engine.

R Reverse

Used when reversing.

N Neutral

Transmission is not locked.

D Drive

Used:

- For normal driving.
- When temporarily driving in the 7-speed manual shift mode.

S Drive (S)

Used:

- For better acceleration
- To increase engine braking
- When going up or down hills
- When driving in the 7-speed manual shift mode

Shift positions


You cannot change the power mode from ON to VEHICLE OFF unless the shift position is in \boxed{P} .

The vehicle may move very slightly even in $\boxed{\bf N}$ while the engine is cold.

Depress the brake pedal firmly and, when necessary, apply the parking brake.

Continued 539

Shift Operation

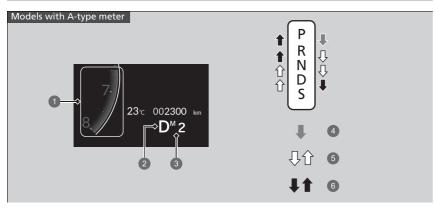

- 1 Tachometer red zone
- 2 Shift Position Indicator (Transmission System Indicator)
- 3 M (7-Speed Manual Shift Mode) Indicator/Shift Indicator
- 4 Depress the brake pedal and press the shift lever release button to shift.
- **S** Shift without pressing the shift lever release button.
- **6** Press the shift lever release button and shift.

Shift Operation

NOTICE

When you change the shift position from **D** to **R** and vice versa, come to a complete stop and keep the brake pedal depressed.

Operating the shift lever before the vehicle has come to a complete standstill can damage the transmission.

Use the shift position indicator to check the lever position before pulling away.

If the transmission system indicator blinks when driving, in any shift position, there is a problem with the transmission.


Avoid sudden acceleration and have the transmission checked by a dealer as soon as possible.

The fuel supply may be cut off if you drive at engine speeds in or over the tachometer red zone (engine speed limit). If this happens, you may experience a slight jolt.

It may not be possible to operate the shift lever if the brake pedal is applied while the shift lever release button is held down.

Depress the brake pedal first.

When shifting positions in extremely low temperatures (–30°C), there may be a short delay before the shift position is displayed. Always confirm you are in the correct shift position before driving.

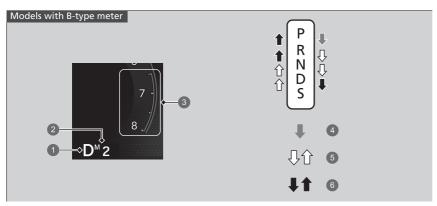

- 1 Shift Position Indicator (Transmission System Indicator)
- 2 M (7-Speed Manual Shift Mode) Indicator/Shift Indicator
- Tachometer Red Zone
- 4 Depress the brake pedal and press the shift lever release button to shift.
- **5** Shift without pressing the shift lever release button.
- 6 Press the shift lever release button and shift.

■ 7-Speed Manual Shift Mode

Use the paddle shifters to change between 1st and 7th speeds without releasing your hands from the steering wheel. The transmission switches to the 7-speed manual shift mode when you pull a paddle shifter while driving. This mode is useful when engine braking is needed.

■ When the transmission is in D:

The shift mode goes into the 7-speed manual shift mode temporarily, and the number is displayed in the shift indicator.

The 7-speed manual shift mode is cancelled automatically if you drive at constant speed or accelerate, and the number in the shift indicator goes off.

Pulling the + paddle shifter for a few seconds will cancel this mode.

The 7-speed manual shift mode is especially useful when reducing the vehicle speed temporarily before making a turn.

■ When the transmission is in S:

The shift mode goes into the 7-speed manual shift mode. The \mathbf{M} indicator and the speed number are displayed in the shift indicator. As the vehicle speed slows down, the transmission automatically shifts down accordingly. When the vehicle comes to a stop, it automatically shifts down into 1st.

If the vehicle speed increases and the engine speed reaches near the tachometer red zone, the transmission automatically shifts up.

You can only pull away in 1st speed.

When cancelling the 7-speed manual shift mode, change the shift position from $\boxed{\textbf{S}}$ to $\boxed{\textbf{D}}$ or pull the $\boxed{+}$ paddle shifter for a few seconds. When the 7-speed manual shift mode is cancelled, the $\boxed{\textbf{M}}$ indicator and shift indicator will turn off.

≥ 7-Speed Manual Shift Mode


In the 7-speed manual shift mode, the transmission shifts up or down by operating either paddle shifter under the following conditions:

Shift Up: The engine speed reaches the lowest threshold of the higher speed position. Shift Down: The engine speed reaches the highest threshold of the lower speed position.

When the engine speed reaches near the tachometer red zone, the transmission shifts up automatically. When the engine speed reaches the lowest threshold of the selected speed position, the transmission shifts down automatically.

Operating the paddle shifters on slippery surfaces may cause the tyres to lock up. In this case, the 7-speed manual shift mode is cancelled and goes back to the normal $\boxed{\mathsf{D}}$ driving mode.

■ 7-Speed Manual Shift Mode Operation

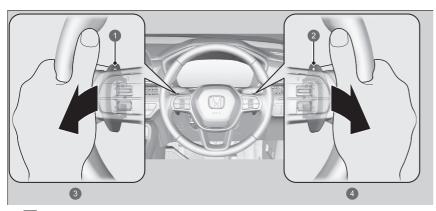

- Paddle Shifter (Shift down)
- 2 + Paddle Shifter (Shift up)
- 3 Downshifting when pulling the paddle shifter (Changes to lower speed number)
- **4** Upshifting when pulling the **+** paddle shifter (Changes to higher speed number)

≥ 7-Speed Manual Shift Mode Operation


Each paddle shift operation makes a single speed change.

To change continuously, release the paddle shifter before pulling it again for the next speed.

The shift indicator blinks when you cannot shift up or down. It indicates that your vehicle speed is not in its allowable shifting range.

Slightly accelerate to shift up and decelerate to shift down while the indicator is blinking.

ECON Mode

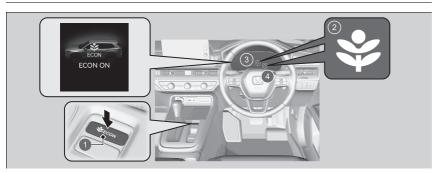

- **1 ECON** Button
- 2 ECON Mode Indicator
- Models with A-type meter
- 4 Models with B-type meter

The **ECON** button turns **ECON** mode on and off.

ECON mode helps you improve your fuel economy by adjusting the performance of the engine, transmission and climate control system.

≫ECON Mode

While in **ECON** mode, the climate control system has greater temperature fluctuation.

Due to emergency brakes operation or driving conditions, you may not be able to change the mode.

Auto Idle Stop*

To help to maximise fuel economy, the engine automatically stops when the vehicle comes to a stop, depending on environmental and vehicle operating conditions. The indicator (green) comes on at this time.



- Auto Idle Stop Indicator (Green)
- Models with A-type meter
- Models with B-type meter

The environmental and vehicle conditions that impact Auto Idle Stop system operation are varied.

■ Auto Idle Stop Activates When: P. 548, 549

The engine then restarts once the vehicle is about to move again, and the indicator (green) goes off.

The Engine Automatically Restarts When:
 P. 550

If the driver's door is opened while the indicator (green) comes on, a buzzer sounds to notify you that the Auto Idle Stop function is in operation.

A message associated with Auto Idle Stop appears on the driver information interface.

Mathematical Auto Idle Stop *

The 12-volt battery installed in this vehicle is specifically designed for a model with Auto Idle Stop. Using a 12-volt battery other than this specified type may shorten the 12-volt battery life, and prevent Auto Idle Stop from activating. If you need to replace the 12-volt battery, make sure to select the specified type. Ask a dealer for more details.

The duration of the Auto Idle Stop operation:

- Increase in ECON mode, compared to when ECON mode is off, with climate control in use.
 - **ECON Mode** P. 544



- Auto Idle Stop Suspend Indicator
- 2 Models with A-type meter
- Models with B-type meter

The Auto Idle Stop suspend indicator comes on and a message appears on the driver information interface when the Auto Idle Stop system cannot be activated.

- **▶ Indicators** P. 140
- **Auto Idle Stop System ON/OFF** P. 547

Auto Idle Stop System ON/OFF



- Auto Idle Stop OFF Indicator
- 2 Models with A-type meter
- Models with B-type meter
- 4 Auto Idle Stop OFF Button

To turn the Auto Idle Stop system off, press this button. The Auto Idle Stop system stops.

Auto Idle Stop system will stop, the indicator will come on and a message appears on the driver information interface.

The Auto Idle Stop system is turned on every time you start the engine, even if you turned it off the last time you drove the vehicle.

If you turn off the Auto Idle Stop system while it is activated, the engine will restart.

■ Auto Idle Stop Activates When: P. 548

If you press and hold the Auto Idle Stop **OFF** button, you can select whether to display the status messages or not.

Auto Idle Stop Activates When:

The vehicle stops with the transmission in $\boxed{\textbf{D}}$ and the brake pedal depressed. When you put the transmission into $\boxed{\textbf{P}}$ quickly with depressing the brake pedal, the Auto Idle Stop continues to operate, even if the brake pedal is released.

If you depress the brake pedal, the engine may automatically restart.

■ Auto Idle Stop does not activate when:

- The Auto Idle Stop **OFF** button is pressed.
- The driver's seat belt is not fastened.
- The engine is not adequately warmed up or coolant temperature is high.
- The transmission fluid temperature is low or high.
- The vehicle comes to a stop again before the vehicle speed reaches 5 km/h after the engine starts.
- The vehicle is stopped on a steep incline.
- The transmission is in a position other than **D**.
- The engine is started with the bonnet open.
 - ▶ Turn off the engine. Close the bonnet before you restart the engine to activate Auto Idle Stop.
- The battery charge is low.
- The internal temperature of the battery is 5°C or less.
- The climate control system is in use, and the outside temperature is below –20°C or over 40°C.
- The climate control system is in use, and the temperature is set to **Hi** or **Lo**.
- From is ON (indicator on).

Do not open the bonnet while the Auto Idle Stop function is activated. If the bonnet is opened, the engine will not restart automatically.

In this case, restart the engine with the **ENGINE START/STOP** button.

Starting the Engine P. 528

Pressing the **ENGINE START/STOP** button causes the engine to no longer restarts automatically. Follow the standard procedure to start the engine.

Starting the Engine P. 528

When ACC with Low Speed Follow is in operation, the vehicle stops without depressing the brake pedal and Auto Idle Stop may activate. In such cases, the engine may restart if you change the shift position other than $\boxed{\mathsf{D}}$.

■ Auto Idle Stop may not activate when:

- The vehicle is stopped by braking suddenly.
- The steering wheel is operated.
- The vehicle is repeatedly accelerated and decelerated at a low speed.
- The fan speed is high.
- The climate control system is in use, and there is a significant difference between the set temperature and the actual interior temperature.
- The climate control system is in use, and humidity in the interior is high.
- Altitude is high.

■ The Engine Automatically Restarts When:

- The brake pedal is released (without the automatic brake hold system activated).
- The accelerator pedal is depressed (with the automatic brake hold system activated).

Automatic Brake Hold P. 690

• When the transmission is put into \boxed{P} from \boxed{D} or \boxed{N} on a slope.

■ The engine restarts even if the brake pedal is depressed*1 when:

- The Auto Idle Stop **OFF** button is pressed.
- The steering wheel is operated.
- The transmission is put into \mathbb{R} , \mathbb{S} , or \mathbb{L}^* , or when it is set from \mathbb{N} to \mathbb{D} .
 - ▶ If you put the transmission into P after the Auto Idle Stop activates, the Auto Idle Stop continues to operate. In this case, the engine restarts when you depress the brake pedal.
- The pressure on the brake pedal is reduced and the vehicle starts moving while stopped on an incline.
- The brake pedal is released slightly during a stop.
- The battery charge becomes low.
- The accelerator pedal is depressed.
- The driver's seat belt is unlatched.
- is ON (indicator on).
- The climate control system is in use, and the difference between the set temperature and actual interior temperature becomes significant.
- The climate control system is being used to dehumidify the interior.
- The vehicle ahead of you starts again when your vehicle stops automatically with ACC with Low Speed Follow.

∑The Engine Automatically Restarts When:

If you are using an electronic device during Auto Idle Stop, the device may temporarily be turned off when the engine restarts.

≥ The engine restarts even if the brake pedal is depressed*¹ when:

*1: With the automatic brake hold system activated, you can release the brake pedal while Auto Idle Stop is in operation.

If the automatic brake hold system has been turned off, or if there is a problem with the system, the engine will restart automatically when you release the brake pedal.

Automatic Brake Hold P. 690

■ Starting Assist Brake Function

Briefly keeps the brake applied after releasing the brake pedal to restart the engine. This can keep your vehicle from unexpectedly moving while on an incline.

Hill Descent Control System


When driving down hills where engine braking is not enough to decelerate the vehicle, this system helps maintain a constant vehicle speed without needing to depress the brake pedal.

Hill Descent Control Operating Conditions

The system operates under the following conditions.

- Driving at a speed between about 3-20 km/h.
- · Driving downhill.
- Accelerator pedal and brake pedal are not depressed.

Driver Information Interface Display

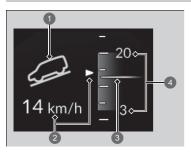

- The system's operating status
 - · Green: Activated
 - White: Standby
- 2 Vehicle speed display
 - White: Set speed
 - Grev: Current speed
 - ▶ Blinks when the vehicle speed is above the operating speed.
- Current speed
- 4 Operating range of set speed

AWARNING

Hill descent control cannot maintain a constant vehicle speed in every situation.

When driving down a very steep hill or on slippery road surfaces, the vehicle may not be able to maintain the vehicle speed and could cause a crash, resulting in serious injury or death.

Since Hill Descent Control is not designed to increase the limits of vehicle performance, the driver must always be aware of road surface conditions and drive safely.

The brake lights automatically come on while the system is in operation.

The system may not operate when driving down a gentle slope. Check the Hill Descent Control System indicator to see if the system is in operation.

The system may activate even when not driving downhill, such as when the vehicle leans while driving over uneven surfaces.

How to Operate Hill Descent Control



- Hill Descent Control System Indicator
- 2 Models with A-type meter
- Models with B-type meter
- (Hill Descent Control)
 Button

■ To turn the system on

When the vehicle speed is less than about 20 km/h, press the button to turn the system on.

► The system goes into standby mode, and the Hill Descent Control System indicator (white) comes on.

When all the working conditions are met, the system activates, and the vehicle begins to maintain the vehicle speed when driving downhill.

► The Hill Descent Control System indicator (green) comes on when operating.

■ To adjust the set speed

Depress the accelerator pedal or brake pedal to adjust the vehicle speed within the operating range. The vehicle speed at which you release the accelerator pedal or brake pedal will be the set speed.

■ To turn the system off

Press the button to turn the system off.

∑How to Operate Hill Descent Control

Using the system repeatedly for a long time may cause the brakes to heat up and make the system go into standby mode temporarily.

Hill Descent Control is turned off every time you turn the engine off, even if it was turned on the last time you drove the vehicle.

The pedals may vibrate or you may hear the system working when in operation.


■To turn the system off

When the vehicle speed is about 60 km/h or more, the system turns off automatically.

Adjustable Speed Limiter*

This system enables you to set a maximum speed that cannot be exceeded even if you are depressing the accelerator pedal.

The vehicle speed limit can be set from about 30 km/h to about 250 km/h.

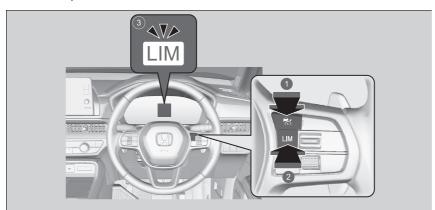

- 1 Press the button on the steering wheel.
- 2 If a different indicator comes on, press the LIM button to switch to the adjustable speed limiter.
- **3** The Adjustable Speed Limiter Indicator (White) is on in the gauge. Adjustable speed limiter is ready to use.

■ Adjustable Speed Limiter *

AWARNING

Adjustable Speed Limiter has limitations. It is always your responsibility to adjust the vehicle speed to obey the actual speed limit, and safely operate the vehicle.

AWARNING

Do not depress the accelerator pedal more than necessary.

Maintain an appropriate accelerator pedal position depending on the vehicle speed.


The adjustable speed limiter may not hold the set speed limit when driving downhill, especially if you are carrying a heavy luggage or towing a trailer. If this occurs, slow down by depressing the brake pedal.

When not using the adjustable speed limiter: Turn off the adjustable speed limiter by pressing the button.

You cannot use the Adjustable Speed Limiter and below systems at the same time.

-Adaptive cruise control (ACC) with low speed follow -Intelligent speed limiter

■ To Set the Speed Limit

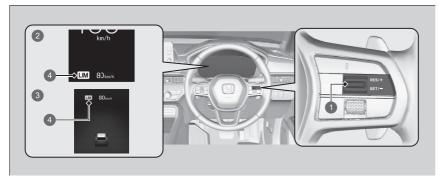

- **1 RES/+/SET/-** Switch Up or down
- 2 On when the adjustable speed limiter is set for models with A-type meter
- 3 On when the adjustable speed limiter is set for models with B-type meter
- 4 Adjustable Speed Limiter Indicator (Green)
- Press the RES/+/SET/- switch up or down when you reach the desired speed.
 The moment you release the RES/+/SET/- switch, the speed limit is fixed, and the adjustable speed limiter is set. The speed limit is displayed.
- You can set the previously set speed limit by pressing the **RES/+/SET/-** switch up.

■To Set the Speed Limit

If you set the speed limit while travelling at less than 30 km/h, the speed limit is set to 30 km/h.

The displayed speed limit blinks continuously when your vehicle exceeds the speed limit by 1 km/h or more.

A few seconds after the speed limit starts blinking, a beeper sounds for about four seconds.


However, when any of the following conditions are met, the beeper will stop.

- The brake pedal is depressed.
- The accelerator pedal is released.
- The vehicle speed becomes less than or equal to the displayed speed limit.

The adjustable speed limiter is set to the current speed if it is higher than the previously set speed limit when you press the **RES/+/SET/-** switch up.

■ To Adjust the Speed Limit

Increase or decrease the speed limit by using the **RES/+/SET/-** switch on the steering wheel.

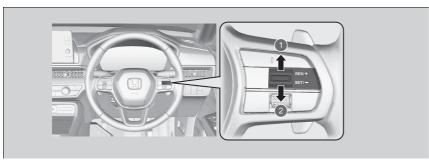

- 1 To increase speed
- 2 To decrease speed
- Each time you press the **RES/+/SET/-** switch up or down, the speed limit increases or decreases by 1 km/h accordingly.
- If you keep the **RES/+/SET/-** switch pressed, the speed limit increases or decreases in increments of 10 km/h every 0.5 second until system limit is reached.
- The vehicle may accelerate or decelerate until the set speed is reached.

■ Exceeding the Speed Limit Temporarily

The speed limit can be exceeded by depressing the accelerator pedal completely.


- ► The displayed limit speed blinks.
- ▶ The beeper sounds once the speed limit has been exceeded.

∑Exceeding the Speed Limit Temporarily

The beeper sounds when the vehicle speed goes higher than the set speed limit with the accelerator pedal depressed completely.

The adjustable speed limiter resumes working once the vehicle speed goes lower than the set speed limit.

■ To Cancel

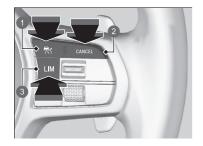

- Button
- 2 CANCEL Button
- Button

To cancel the adjustable speed limiter, do any of the following:

- Press the **CANCEL** button.
- Press the 🔂 button.
- Press the **LIM** button.

∑To Cancel

The adjustable speed limiter changes into adaptive cruise control (ACC) with Low Speed Follow or intelligent speed limiter if the **LIM** button is pressed.


Resuming the prior set speed:

Press the **CANCEL** button to display the prior set speed (grey) and press the **RES/+/SET/-** switch up to resume the prior set speed.


If you are driving at a speed faster than the prior set speed (grey), the adjustable speed limiter is set to the current speed by pressing the **RES/+/SET/-** switch up.

If you press the **RES/+/SET/**– switch up when no prior set speed (in grey) is displayed, the speed will be set to your vehicle's current speed.

∑To Cancel

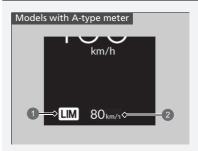

- Adjustable Speed Limiter Indicator (White)
- Prior Set Speed (Grey)

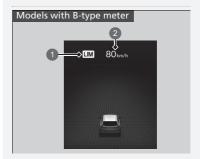

- Adjustable Speed Limiter Indicator (White)
- Prior Set Speed (Grey)

∑To Cancel

If there is a problem with the system when you are using the adjustable speed limiter, the beeper sounds and **OFF** comes on. The adjustable speed limiter will be turned off.



- Models with A-type meter
- Models with B-type meter
- 3 Adjustable Speed Limiter Indicator (White)

Intelligent Speed Limiter*


Automatically sets the speed limit that the traffic sign recognition system detects. And the speed limit cannot be exceeded even if you are depressing the accelerator pedal. If you fully depress the accelerator the speed limit can be exceeded.

☑ Traffic Sign Recognition System* P. 675

AWARNING

Intelligent Speed Limiter has limitations. The Intelligent Speed Limiter may set itself to a speed above or below the actual speed limit, or may not work, particularly where the traffic sign recognition system does not operate correctly or where a road has no speed limit signs. It is always your responsibility to adjust the speed to obey the actual speed limit and to safely operate the vehicle.

Depending on the amount of depression of the accelerator pedal, the vehicle will accelerate until it reaches the speed identified by the traffic sign recognition system.

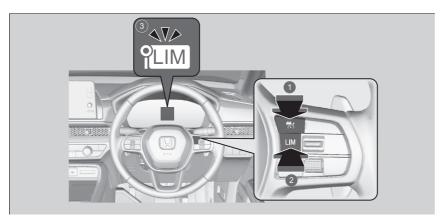

- 1 Press the steering wheel.
- 2 If a different indicator comes on, press the **LIM** button to change it to the intelligent speed limiter.
- 3 The Intelligent Speed Limiter Indicator (White) is on in the gauge. Intelligent speed limiter is ready to use.

The system is designed to detect signs that follow the Vienna Convention standards. Not all signs may be detected, but any signs posted on roadsides should not be ignored. The system does not work on the designated traffic signs of all the countries you travel, nor in all situations.

▶ Traffic Sign Recognition System* P. 675

If the intelligent speed limiter is set to the wrong speed limit, try one of the following:

To cancel

- Press the CANCEL button.
- Press the 🔂 button.
- Press the **LIM** button.

To exceed the speed limit temporarily

• Depressing the accelerator pedal fully.

The intelligent speed limiter may not hold the set speed limit when driving downhill, especially if you are carrying a heavy luggage or towing a trailer. If this occurs, slow down by depressing the brake pedal.

When not using the intelligent speed limiter, turn off the intelligent speed limiter by pressing the sutton.

You cannot use the intelligent speed limiter and adaptive cruise control (ACC) with Low Speed Follow or adjustable speed limiter at the same time.

To Set the Speed Limit



• RES/+/SET/- Switch Up or down

- 2 On when the intelligent speed limiter is set to the speed limit that the traffic sign recognition system detects for models with A-type meter
- 3 On when the intelligent speed limiter is set to the speed limit that the traffic sign recognition system detects for models with B-type meter
- 4 Intelligent Speed Limiter Indicator (Green)
- The moment you release the **RES/+/SET/-** switch, the intelligent speed limiter is set to the speed limit that the traffic sign recognition system detects. The speed limit is displayed.

Do not use the intelligent speed limiter in areas of different units from the display unit of the intelligent speed limiter.

∑To Set the Speed Limit

If you set the intelligent speed limiter when the speed limit that the traffic sign recognition system detects is less than 30 km/h, the speed limitation function and warning function may switch to pause.

If your vehicle speed is higher than the speed limit that the traffic sign recognition system detects, your vehicle decelerates slowly to the speed limit or less. If necessary, slow down by depressing the brake pedal. Also, the displayed speed limit blinks continuously when your vehicle exceeds the speed limit by 1 km/h or more.


A few seconds after the speed limit starts blinking, a beeper sounds for about four seconds.

However, when any of the following conditions are met, the beeper will stop.

- The brake pedal is depressed.
- The accelerator pedal is released.
- The vehicle speed becomes less than or equal to the displayed speed limit.


■ When the traffic sign recognition system detects the new speed limit sign


The intelligent speed limiter is set to the new speed limit that the traffic sign recognition system detects.

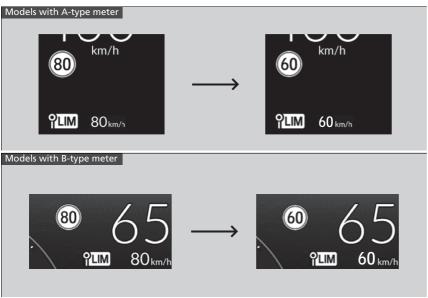


∑To Set the Speed Limit

The intelligent speed limiter may also switch to pause when the traffic sign recognition system detects only additional speed limit signs.

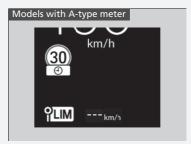

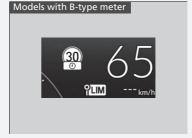


- The speed limitation function and warning function may switch to pause if there is no speed limit sign in the screen of the traffic sign recognition system when:
- The end of speed limit or other designated limit is detected.
- Your vehicle enters/exits motorway or highway.
- You make a turn with a turn signal to change direction at an intersection.

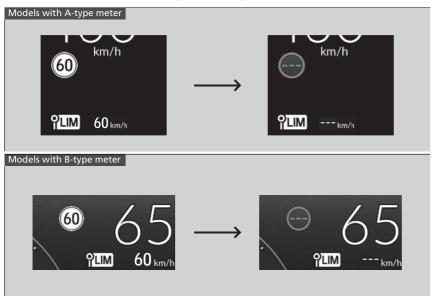


■ When the traffic sign recognition system detects the speed limit sign while the intelligent speed limiter is paused

The speed limitation function and warning function will be resumed automatically.

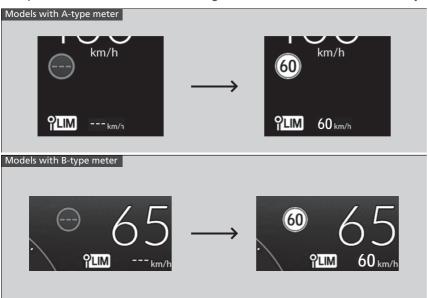

■ When the traffic sign recognition system does not detect the speed limit sign for a time while the intelligent speed limiter is activated

While driving, in addition to when the traffic sign recognition system detects no speed limit sign, the traffic sign recognition system may display no speed limit. But, intelligent speed limiter functions continue.

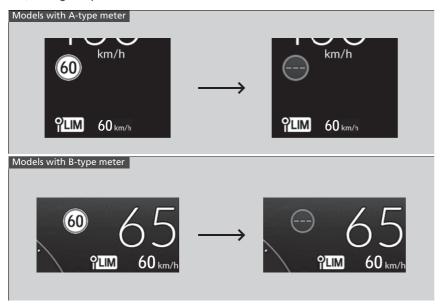

Exceeding the Speed Limit Temporarily

The speed limit can be exceeded by depressing the accelerator pedal fully.

► The displayed speed limit blinks.

The beeper sounds once the speed limit has been exceeded.

■ To Cancel



To cancel the intelligent speed limiter, do any of the following:

- Press the **CANCEL** button.
- Press the 🔂 button.
- Press the **LIM** button.

- 1 Rutton
- 2 CANCEL Button
- B LIM Button

∑Exceeding the Speed Limit Temporarily

The beeper sounds when the vehicle speed goes higher than the set speed limit with the acceleration pedal depressed completely.

The intelligent speed limiter resumes working once the vehicle speed goes lower than the set speed limit.

∑To Cancel

The intelligent speed limiter changes into adaptive cruise control (ACC) with Low Speed Follow or adjustable speed limiter if the **LIM** button is pressed.



- Models with A-type meter
- Models with B-type meter
- 3 Intelligent Speed Limiter Indicator (White)


If there is a problem with the system or traffic sign recognition system when you are using the intelligent speed limiter, the beeper sounds and **OFF** comes on. The intelligent speed limiter will be turned off.

☑ Traffic Sign Recognition System* P. 675

Vehicle Stability Assist (VSA) System

VSA helps to stabilise the vehicle during cornering if the vehicle turns more or less than what was intended. It also assists in maintaining traction on slippery surfaces. It does so by regulating engine output and selectively applying the brakes.

■ VSA Operation

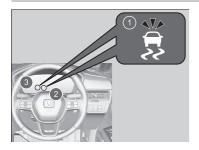

When VSA activates, you may notice that the engine does not respond to the accelerator. You may also notice some noise from the hydraulic brake system. You will also see the indicator blink.

- VSA System Indicator
- Models with A-type meter
- Models with B-type meter

The VSA may not function properly if tyre type and size are mixed. Make sure to use the same size and type of tyre, and the air pressures as specified.

When the VSA system indicator comes on and stays on while driving, there may be a problem with the system. While this may not interfere with normal driving, have your vehicle checked by a dealer immediately.


VSA cannot enhance stability in all driving situations and does not control the entire braking system. You still need to drive and corner at speeds appropriate for the conditions and always leave a sufficient margin of safety.

The main function of the VSA system is generally known as Electronic Stability Control (ESC). The system also includes a traction control function.

The Vehicle Stability Assist (VSA) system, brake system (Amber), Adaptive Cruise Control (ACC) with Low Speed Follow, low tyre pressure/TPMS*, low tyre pressure/deflation warning system*, Collision Mitigation Braking System (CMBS), Road Departure Mitigation, and safety support indicators may come on in amber along with a message in the gauge when you set the power mode to ON after reconnecting the battery.

Drive a short distance at more than 20 km/h. Each indicator should go off. If any do not, have your vehicle checked by a dealer.

■ VSA On and Off

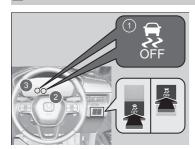

- VSA OFF Indicator
- 2 Models with A-type meter
- Models with B-type meter

This button is on the driver side control panel. To partially disable VSA functionality/features, press and hold it until you hear a beep.

Your vehicle will have normal braking and cornering ability, but traction control function will be less effective.

To restore VSA functionality/features, press the (VSA **OFF**) button until you hear a beep.

VSA is turned on every time you start the engine, even if you turned it off the last time you drove the vehicle.

In certain unusual conditions when your vehicle gets stuck in shallow mud or fresh snow, it may be easier to free it with the VSA temporarily switched off.

When the Button is pressed, the traction control function becomes less effective. This allows for the wheels to spin more freely at low speed. You should only attempt to free your vehicle with the VSA off if you are not able to free it when the VSA is on.

Immediately after freeing your vehicle, be sure to switch VSA on again. We do not recommend driving your vehicle with the VSA system switched off.

You may hear a motor sound coming from the engine compartment while system checks are being performed immediately after starting the engine or while driving. This is normal.

Oceanian and African models with Right-hand Drive Type

When the VSA system is off, trailer stability assist is also off.

Trailer Stability Assist* P. 523

Agile Handling Assist

Lightly brakes each of the front and rear wheels, as needed, when you turn the steering wheel, and helps to support the vehicle's stability and performance during cornering.

■ Agile Handling Assist

The agile handling assist cannot enhance stability in all driving situations. You still need to drive and corner at speeds appropriate for the conditions and always leave a sufficient margin of safety.

When the VSA system indicator comes on and stays on while driving, the agile handling assist does not activate.

You may hear a sound coming from the engine compartment while the agile handling assist is activated. This is normal.

Real Time AWD with Intelligent Control System*

Your vehicle is equipped with the AWD system. When the system senses a loss of front wheel traction, it automatically transfers some power to the rear wheels. This allows you to utilise all available traction and may increase mobility.

You still need to exercise the same care when accelerating, steering, and braking that you would in a two wheel drive vehicle.

If you excessively spin all four wheels and overheat the AWD system, only the front wheels receive power. Stop until the system cools down.

■ Real Time AWD with Intelligent Control System *

NOTICE

Do not continuously spin the front tyres of your vehicle. Continuously spinning the front tyres can cause transmission or rear differential damage.


The AWD system may not function properly if tyre type and size are mixed. Make sure to use the same size and type of tyre, and the air pressures as specified.

■ Tyre and Wheel Replacement P. 769

Taiwanese models

Tyre Pressure Monitoring System (TPMS)

Instead of directly measuring the pressure in each tyre, the TPMS on this vehicle monitors and compares the rolling radius and rotational characteristics of each wheel and tyre while you are driving to determine if one or more tyres are significantly under-inflated.

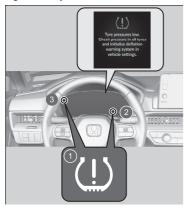

This will cause the low tyre pressure/TPMS indicator to come on and a message to appear on the gauge.

- 1 Low Tyre Pressure/TPMS Indicator
- 2 Models with A-type meter
- Models with B-type meter

∑Tyre Pressure Monitoring System (TPMS)

The system does not monitor the tyres when driving at low speed.

Conditions such as low ambient temperature and altitude change directly affect tyre pressure and can trigger the low tyre pressure/TPMS indicator to come on.

Tyre pressure checked and inflated in:

- Warm weather can become under-inflated in colder weather.
- Cold weather can become overinflated in warmer weather.

The low tyre pressure/TPMS indicator will not come on as a result of overinflation.

The TPMS may not function properly if tyre type and size are mixed. Make sure to use the same size and type of tyre.

► Checking and Maintaining Tyres P. 767

The low tyre pressure/TPMS indicator may come on with a delay or may not come on at all when:

- You rapidly accelerate, decelerate, or turn the steering wheel.
- You drive on snowy or slippery roads.

The low tyre pressure/TPMS indicator may come on under the following conditions:

• There is a heavier and uneven load on the tyres than the condition at calibration.

■ TPMS Calibration

You must start TPMS calibration every time you:

- Adjust the pressure in one or more tyres.
- Rotate the tyres.
- Replace one or more tyres.

Before calibrating the TPMS:

• Set the cold tyre pressure in all four tyres.

EXECUTE: Checking Tyres P. 767

Make sure:

- The vehicle is at a complete stop.
- The transmission is in **P**.
- The power mode is in ON.

∑Tyre Pressure Monitoring System (TPMS)

The Vehicle Stability Assist (VSA) system, brake system (Amber), Adaptive Cruise Control (ACC) with Low Speed Follow, low tyre pressure/TPMS, Collision Mitigation Braking System (CMBS), Road Departure Mitigation and safety support indicators may come on in amber along with a message in the gauge when you set the power mode to ON after reconnecting the battery.

Drive a short distance at more than 20 km/h. Each indicator should go off. If any do not, have your vehicle checked by a dealer.


> TPMS Calibration


The calibration process requires approximately 30 minutes of cumulative driving at speeds between 40-100 km/h.

During this period, if power mode is set to ON and the vehicle is not moved within 45 seconds, you may notice the low tyre pressure indicator comes on briefly. This is normal and indicates that the calibration process is not yet complete.

If the low tyre pressure/TPMS indicator comes on even when the properly inflated specified regular tyres are installed, have your vehicle checked by a dealer.

We recommend that the tyres be replaced with the same brand, model, and size as the originals. Ask a dealer for details.

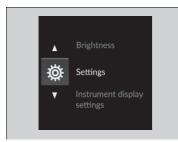

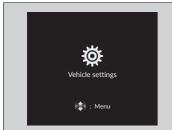



Models with colour audio system

When you calibrate the TPMS, do the following.

- **Switching the Display** P. 169
- 1. Press the (home) button, to select **Settings**, then press the left selector wheel.
 - ▶ **Vehicle settings** appears on the display.
- 2. Roll the left selector wheel.
 - ▶ **Deflation warning system** appears on the display.



- **3.** Press the left selector wheel.
 - ► The display switches to the customization setup screen, where you can select Cancel or Initialise.
- **4.** Roll the left selector wheel and select **Initialise**, then press the left selector wheel.
 - Completed screen appears, then the display returns to the customization menu screen.
- If the **Failed** message appears, repeat step 4.
- The calibration process finishes automatically.



Models with Display Audio


When you calibrate the TPMS, do the following.

- **Basic Operation** P. 341
- **1.** Set the power mode to ON.
- 2. Press the button.
- **3.** Select **Vehicle Settings**.
- 4. Select TPMS Calibration.
- **5.** Select **Calibrate** or **Cancel**.
- If the **Calibration Failed To Start.** message appears, repeat step 5.
- The calibration process finishes automatically.

Except Taiwanese models

Deflation Warning System*

Instead of directly measuring the pressure in each tyre, the deflation warning system on this vehicle monitors and compares the rolling radius and rotational characteristics of each wheel and tyre while you are driving to determine if one or more tyres are significantly under-inflated.

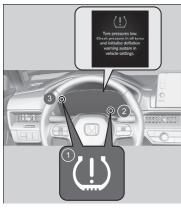

This will cause the low tyre pressure/deflation warning system indicator to come on and a message to appear on the gauge.

- 1 Low Tyre Pressure/Deflation Warning System Indicator
- 2 Models with A-type meter
- Models with B-type meter

Deflation Warning System *

The system does not monitor the tyres when driving at low speed.

Conditions such as low ambient temperature and altitude change directly affect tyre pressure and can trigger the low tyre pressure/deflation warning system indicator to come on.

Tyre pressure checked and inflated in:

- Warm weather can become under-inflated in colder weather.
- Cold weather can become overinflated in warmer weather.

The low tyre pressure/deflation warning system indicator will not come on as a result of overinflation.

The deflation warning system may not function properly if tyre type and size are mixed. Make sure to use the same size and type of tyre.

≧ Checking and Maintaining Tyres P. 767

The low tyre pressure/deflation warning system indicator may come on with a delay or may not come on at all when:

- You rapidly accelerate, decelerate, or turn the steering wheel.
- You drive on snowy or slippery roads.
- Tyre chains* are used.

The low tyre pressure/deflation warning system indicator may come on under the following conditions:

- A compact spare tyre* is used.
- There is a heavier and uneven load on the tyres, such as when towing a trailer*, than the condition at calibration.
- Tyre chains* are used.

Deflation Warning System Calibration

You must start deflation warning system calibration every time you:

- Adjust the pressure in one or more tyres.
- Rotate the tyres.
- Replace one or more tyres.

Before calibrating the deflation warning system:

• Set the cold tyre pressure in all four tyres.

≧ Checking Tyres P. 767

Make sure:

- The vehicle is at a complete stop.
- The transmission is in **P**.
- The power mode is in ON.

Deflation Warning System *

The Vehicle Stability Assist (VSA) system, brake system (Amber), Adaptive Cruise Control (ACC) with Low Speed Follow, low tyre pressure/deflation warning system, Collision Mitigation Braking System (CMBS), Road Departure Mitigation, and safety support indicators may come on in amber along with a message in the gauge when you set the power mode to ON after reconnecting the battery. Drive a short distance at more than 20 km/h. Each indicator should go off. If any do not, have your vehicle checked by a dealer.

▶ Deflation Warning System Calibration

Deflation warning system cannot be calibrated if a compact spare tyre* is installed.


The calibration process requires approximately 30 minutes of cumulative driving at speeds between 40-100 km/h.


During this period, if the power mode is set to on and the vehicle is not moved within 45 seconds, you may notice the low tyre pressure indicator comes on briefly. This is normal and indicates that the calibration process is not yet complete.

If the tyre chains* are installed, remove them before calibrating the deflation warning system.

If the low tyre pressure/deflation warning system indicator comes on even when the properly inflated specified regular tyres are installed, have your vehicle checked by a dealer.

We recommend that the tyres be replaced with the same brand, model, and size as the originals. Ask a dealer for details.

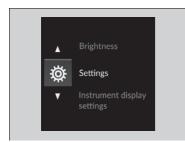

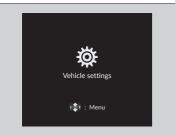



Models with colour audio system


When you calibrate the deflation warning system, do the following.

- Switching the Display P. 169
- 1. Press the (home) button, to select Settings, then press the left selector wheel.
 - ► Vehicle settings appears on the display.
- 2. Roll the left selector wheel.
 - ▶ **Deflation warning system** appears on the display.



- 3. Press the left selector wheel.
 - ➤ The display switches to the customization setup screen, where you can select **Cancel** or **Initialise**.
- **4.** Roll the left selector wheel and select **Initialise**, then press the left selector wheel.
 - ➤ **Completed** screen appears, then the display returns to the customization menu screen.
- If the **Failed** message appears, repeat step 4.
- The calibration process finishes automatically.


Continued 581

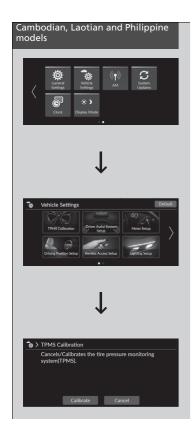

When you calibrate the deflation warning system, do the following.

Basic Operation P. 401

- **1.** Set the power mode to ON.
- 2. Press the button.
- 3. Select Vehicle Settings.
- 4. Select TPMS Calibration.
- 5. Select Calibrate or Cancel.
- If the **Calibration Failed To Start.** message appears, repeat step 5.
- The calibration process finishes automatically.

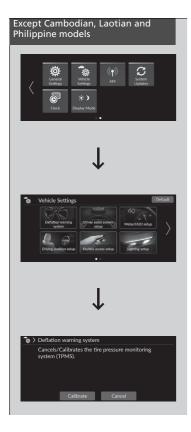

When you calibrate the deflation warning system, do the following.


- Basic Operation P. 401
- **1.** Set the power mode to ON.
- 2. Press the button.
- **3.** Select **Vehicle Settings**.
- **4.** Select **Deflation warning system**.
- **5.** Select **Calibrate** or **Cancel**.
- If the **Calibration Failed to Start.** message appears, repeat step 5.
- The calibration process finishes automatically.

Blind Spot Information System*

When the system detects vehicles approaching from behind in adjacent lanes, the appropriate indicator comes on, providing assistance when you change lanes.

■ How the System Works

The system activates when your vehicle is moving forward at about 20 km/h or above.

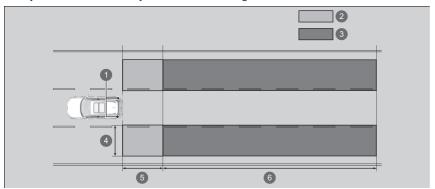

- Radar Sensors: underneath the rear bumper corners
- Alert Zone 1
- Alert Zone 2

Alert zone range

- 4 Approx. 0.5 ~ 3 m from vehicle side.
- **6** Approx. 3 m from rear bumper.
- (5) Approx. 3 ~ 25 m behind from rear bumper. (The faster the approaching vehicle, the further away it will be detected.)

The initially set alert zone is alert zone 1. Over time, after the vehicle has been driven on straight roads with traffic and roadside objects, the system will adapt and expand the alert zone (alert zone 1 and 2).

* Not available on all models

≫Blind Spot Information System *

Important Safety Reminder

Like all assistance systems, the Blind Spot Information System has limitations. Always look in your mirrors, to either side of your vehicle, and behind you for other vehicles before changing lanes. Overreliance on the Blind Spot Information System may result in a collision.

Have your vehicle checked by a dealer in the following situations:


- The rear bumper or area around the radar sensors is strongly impacted.
- The indicator does not come on even if a vehicle in the alert zone should have been detected.
- The rear bumper or any system components need to be repaired.

If the rear bumper or any system components are repaired, the system will revert to alert zone 1 only until it is able to adapt and expand to alert zone 1 and 2.

For proper Blind Spot Information System operation:

- Always keep the rear bumper and area around the radar sensors clean.
- Do not cover the rear bumper corner area with labels or stickers of any kind.

■ When the system detects a vehicle

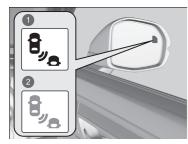

- Comes On
- 2 Blinks

Blind Spot Information System alert indicator: Located on the outside door mirror on both sides.

Comes on when:

- A vehicle approaches you from behind to overtake you at a speed difference of no more than about 50 km/h.
- You pass a vehicle at a speed difference of no more than about 20 km/h.

Blinks and a beeper sounds when:

You use the turn signal lever to signal a turn in the direction of the detected vehicle while the Blind Spot Information System alert indicator is on.

► The beeper sounds three times.

≫Blind Spot Information System *

The system is for your convenience only. Even if an object is within the alert zone, the following situations may occur:

- The Blind Spot Information System alert indicator does not come on and the message Blind spot information not available appears on the driver information interface.
- The Blind Spot Information System alert indicator may come on even with the message displayed.

The Vehicle Stability Assist (VSA) system, brake system (Amber), Adaptive Cruise Control (ACC) with Low Speed Follow, low tyre pressure/TPMS*, low tyre pressure/deflation warning system*, Collision Mitigation Braking System (CMBS), Road Departure Mitigation, and safety support indicators may come on in amber along with a message in the gauge when you set the power mode to ON after reconnecting the battery.

Drive a short distance at more than 20 km/h. Each indicator should go off. If any do not, have your vehicle checked by a dealer.

Turn the system off when towing a trailer. The system may not work properly for the following reasons:

- The added mass tilts the vehicle and changes the radar coverage.
- The trailer itself can be detected by the radar sensors, causing the Blind Spot Information System alert indicators to come on.

■ Blind Spot Information System On and Off

You can turn the system on and off using the driver information interface.

Switching the Display P. 169, 196

Safety Support P. 181, 208

The Blind Spot Information System will stay on the previously selected on or off setting each time you start the engine.

≫Blind Spot Information System *

You can change the settings for the Blind Spot Information System.

How to Customize the Vehicle Settings
P. 467

Blind Spot Information System Conditions and Limitations

The Blind Spot Information System alert indicator may not come on under the following conditions:

- There is a large speed difference between your vehicle and the vehicle in the adjacent lane.
- A vehicle is parked in a side lane.
- An object not detected by the radar sensors approaches or passes your vehicle.
- The vehicle driving in the adjacent lane is a motorcycle or other small vehicle.

The Blind Spot Information System may not operate correctly under the following conditions:

- Making a turn at an intersection.
- Objects (guard rails, poles, trees, etc.) are detected.
- An object that does not reflect radio waves well or a motorcycle, is in the alert zone
- Driving on a curved road.
- A vehicle is moving from a far lane to the adjacent lane.
- The system picks up signal interference such as other radar sensors from another vehicle or strong radio wave transmitted from a facility nearby.
- The rear bumper or the area around the radar sensors is covered by dirt, mud, snow, ice, etc.
- The rear bumper or the area around the radar sensors has been damaged or deformed.
- In bad weather (heavy rain, snow, and fog).
- Making a short turn or driving on a bumpy road that slightly tilts the vehicle.
- An object such as a bicycle rack is attached to the rear of the vehicle.
- When driving for long distances on a road in a trafficless area such as a desert.

LaneWatch*

LaneWatch is an assistance system that allows you to check the passenger side rear areas displayed on the audio/information screen when the turn signal is activated to the passenger's side.



A camera in the passenger side door mirror monitors these areas and allows you to check for vehicles, in addition to your visual check and use of the passenger door mirror. You can also keep the system on for your convenience while driving.

Camera



LaneWatch Button

The system activates when you do either of the following operations:

Press the LaneWatch button.

African models with Right-hand Drive Type

• Move the turn signal lever to the driver side.

Except African models with Right-hand Drive Type

Move the turn signal lever to the passenger side.

The system deactivates when you press the LaneWatch button again.

∑LaneWatch *

AWARNING

Failure to visually confirm that it is safe to change lanes before doing so may result in a crash and serious injury or death.

Do not rely only on LaneWatch while driving.

Always look in your mirrors, to either side of your vehicle, and behind you for other vehicles before changing lanes.

Important Safety Reminder

Like all assistance systems, LaneWatch has limitations. Overreliance on LaneWatch may result in a collision.

The LaneWatch function can be affected by weather, lighting (including headlights and low sun angle), ambient darkness, camera condition, and loading.

The LaneWatch may not provide the intended display of traffic to the side and rear under the following conditions:

- Your vehicle's suspension has been altered, changing the height of the vehicle.
- Your tyres are over or under inflated.
- Your tyres or wheels are of varied size or construction.




1 LaneWatch Button



1 LaneWatch Button

Continued 589

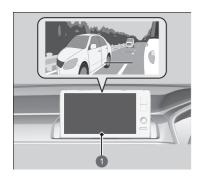

The passenger side view display appears on the audio/information screen.

1 Audio/Information Screen

■ Customizing the LaneWatch settings

You can customize the following items using the audio/information screen.

- Show with turn signal*1/Show with indicator*2: Selects whether LaneWatch monitor comes on when you operate the turn signal lever.
- **Display Time after Turn Signal Off***1/**Display Time after Indicator Off***2: Changes the remaining LaneWatch display time after you pull the turn signal lever back.
- Show Reference Line: Selects whether the reference lines appear on the LaneWatch monitor.
- Display: Adjusts display settings.
 Customized Features P. 458

∑LaneWatch *

The LaneWatch camera view is restricted. Its unique lens makes objects on the screen look slightly different from what they are.

LaneWatch display does not come on when the transmission is in $\boxed{\mathbf{R}}$.


For proper LaneWatch operation:

- The camera is located in the passenger side door mirror. Always keep this area clean. If the camera lens is covered with dirt or moisture, use a soft, moist cloth to keep the lens clean and free of debris.
- Do not cover the camera lens with labels or stickers of any kind.
- Do not touch the camera lens.

^{*1:} Cambodian, Laotian and Philippine models

^{*2:} Except Cambodian, Laotian and Philippine models

■ Reference Lines

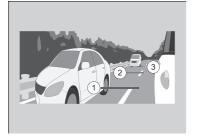

Three lines that appear on the screen can give an idea of how far the vehicles or objects on the screen are from your vehicle, respectively. If an object is near line ① (in red), it indicates that it is close to your vehicle whereas an object near line ③ is farther away.

■ Reference Lines

The area around the reference line ① (red) is very close to your vehicle. As always, make sure to visually confirm the safety of a lane change before changing lanes.


The distance between your vehicle and lines 1, 2 and 3 on the screen vary depending on road conditions and vehicle loading. For example, the reference lines on the screen may seem to appear closer than the actual distances when the rear of your vehicle is more heavily loaded.

Consult a dealer if:

- The passenger side door mirror, or area around it is severely impacted, resulting in changing the camera angle.
- The LaneWatch display does not come on at all.

Adjusting Headlight Distribution*

Driving the right-hand type vehicle in right-hand traffic, or the left-hand type vehicle in left-hand traffic causes headlight glare to oncoming vehicles. You need to alter the headlight beam distribution using masking tape.

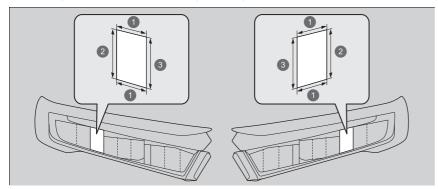

- **1** 45 mm
- **2** 49 mm
- **3** 48 mm
- 1. Prepare for two pieces of masking tape as shown.
 - ▶ Use masking tape that can shut out light, such as seal type waterproof vinyl.
- **2.** Affix the tape to the lens as shown.

∑Adjusting Headlight Distribution *

Be careful not to adhere the tape to an incorrect location. If the headlight beam is distributed incorrectly, it may not comply with your country's legal requirements. Ask your dealer for details.

Honda Sensing

Assists with functions such as acceleration, braking, and steering in order to reduce the burden on the driver, as well as avoid or reduce the severity of collisions.

Honda Sensing has the following functions.

■ The functions which do not require switch operations to activate

- Collision Mitigation Braking System (CMBS)
 P. 596
- Low Speed Braking Control* ▶ P. 610
- Road Departure Mitigation System **≥** P. 616
- Lead Car Departure Notification System*
 ▶ P. 670
- Traffic Sign Recognition System* ▶ P. 675
- Auto High-Beam ▶ P. 271
- Blind Spot Information System* **≥** P. 584
- Cross Traffic Monitor* ▶ P. 704
- Parking Sensor System*

 P. 698
- Driver Attention Monitor

 P. 176, 203

■ The functions which require switch operations to activate

- Adaptive Cruise Control (ACC) with Low Speed Follow ₱ P. 626
- Lane Keeping Assist System (LKAS) ₽ P. 648
- Traffic Jam Assist * ▶ P. 661
- Intelligent Speed Limiter*

 P. 561

Continued


Thai models

CAUTION: This equipment should be operated keeping the radiator at least 20 cm or more away from person's body (excluding extremities: hands, wrists, feet and ankles).

This telecommunication equipment conforms to NTC technical requirement.

This telecommunication equipment has EMF radiation conforms to NTC EMF exposure standard.

Operation Switches for the Adaptive Cruise Control (ACC) with Low Speed Follow/Lane Keeping Assist System (LKAS)/ Traffic Jam Assist*

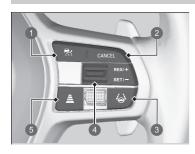


● Button

Press to activate standby mode for ACC with Low Speed Follow.
Or press to cancel the system.

- **2 CANCEL** Button Press to cancel ACC with Low Speed Follow.
- 3 LKAS Button Press to activate standby mode for LKAS and Traffic Jam Assist*. Or press to cancel these systems.
- RES/+/SET/- Switch Press the RES/+/SET/- switch up to set or resume the ACC with Low Speed Follow or increase the vehicle speed. Press the RES/+/SET/- switch down to set the ACC with Low Speed Follow or decrease the vehicle speed.
- ⑤ Interval Button Press to change the ACC with Low Speed Follow following-interval.

■ Gauge Content

You can see the current state of Adaptive Cruise Control (ACC) with Low Speed Follow, Lane Keeping Assist System (LKAS) and Traffic Jam Assist*.

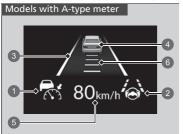

Models with B-type meter

5 100 120

60 40 80 km/h &

- Indicates that ACC with Low Speed Follow is ready to be activated.
- Green: The system is on.
- White: The system is standby.
- Amber: There is a problem with the system.
- 2 Indicates that LKAS or Traffic Jam Assist* is ready to be activated.
- Green: The system is on.
- White: The system is standby.
- Amber: There is a problem with the system.
- 3 Indicates that LKAS or Traffic Jam Assist* is activated and whether or not traffic lane lines are detected.
- Green lines: The system is on.
- White lines: Traffic lane lines are detected.
- Amber line: Lane departure is detected.
- 4 Indicates whether or not a vehicle is detected ahead.

Models with B-type meter

- Control target vehicle: White and outlined in green
- Outside of control target vehicle: Grey
- **5** Indicates that ACC with Low Speed Follow shows the set vehicle speed.
- 6 Indicates that ACC with Low Speed Follow shows the set vehicle interval.

■ Gauge Content

Models with head-up display

You can have the head-up display show you the current state of each function.

Head-Up Display* P. 213

Collision Mitigation Braking System (CMBS)

The system can assist you when it determines there is a possibility of your vehicle colliding with a vehicle (including motorcycles) ahead from behind, an oncoming vehicle in front, a vehicle approaching from the side*1, a pedestrian, or someone riding a bicycle (moving bicycle).

The CMBS is designed to alert you when the potential for a collision is determined, as well as assist in reducing speed, avoiding collisions, and reducing collision severity.

○ Collision Mitigation Braking System (CMBS)

Important Safety Reminder

The CMBS is designed to reduce the severity of an unavoidable collision. It does not prevent collisions nor stop the vehicle automatically. It is still your responsibility to operate the brake pedal and steering wheel appropriately according to the driving conditions.

The CMBS may not activate or may not detect a vehicle in front of your vehicle under certain conditions:

CMBS Conditions and Limitations P. 602


For directions on the proper handling of the radar sensor, refer to the following page.

Radar Sensor P. 684

You can read about handling information for the camera equipped with this system.

Front Sensor Camera P. 682

■ How the system works

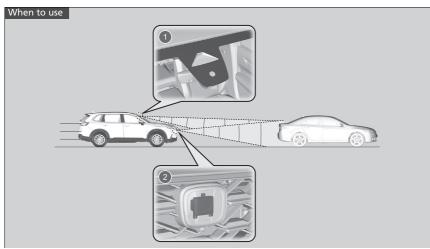

- **1** A front sensor camera is located behind the rearview mirror.
- 2 The radar sensor is behind the Honda emblem on the front grille.

The system starts monitoring the roadway ahead when your vehicle speed is about 5 km/h or above and will search for a vehicle (including motorcycles), pedestrian, or moving bicycle in front of you.

➤ How the system works

The camera in the CMBS is also designed to detect pedestrians.

However, this pedestrian detection feature may not activate or may not detect a pedestrian in front of your vehicle under certain conditions.

Refer to the ones indicating the pedestrian detection limitations from the list.

CMBS Conditions and Limitations P. 602

Continued 597

The CMBS activates when:

- The speed difference between your vehicle and a vehicle (including motorcycles), pedestrian, or moving bicycle detected in front of you becomes about 5 km/h and over with a chance of a collision.
- Your vehicle drives at about 30 km/h or less and there is a chance of in frontal
 collision with a detected oncoming vehicle (including motorcycles), pedestrian, or
 moving bicycle when you turn right*¹/left*² at an intersection.
- Your vehicle speed is about 100 km/h or less and the system determines there is a chance of a collision with:
- An oncoming or stationary vehicle detected in front of you.
- A pedestrian or moving bicycle detected in front of you.


Oceanian models

- A vehicle approaching from the side in front of you.

The CMBS will be cancelled when your vehicle stops or the system determines there no longer is the potential for a collision.

The CMBS may also be cancelled when a driver operates the steering wheel and the brake or accelerator pedal to avoid a collision.

■ When the system activates

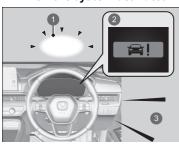

The system provides visual and audible alerts of a possible collision, and stops if the collision is avoided.

➤ Take appropriate action to prevent a collision (apply the brakes, change lanes, etc.)

- Head-up Warning Lights*
- Visual Alerts
- Audible Alert

You can change the distance (**Long***1/**Far***2, **Normal** or **Short***1/**Near***2) between vehicles at which the system's earliest collision alert will come on.

Settings* P. 185


▶ How to Customize the Vehicle Settings P. 467

When the system activates

Models with head-up display

The head-up warning uses a lens located at the front end of the dashboard.

Do not cover the lens or spill any liquid on it.

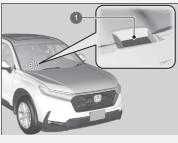

Lens

- *1: Cambodian, Laotian, Philippine and Taiwanese models
- *2: Except Cambodian, Laotian, Philippine and Taiwanese models

■ Collision Alert Stages

The system has three alert stages for a possible collision. However, depending on circumstances, the CMBS may not go through all of the stages before initiating the last stage.

| Distance between vehicles | | CMBS | | |
|---------------------------|-------|--|---|-----------------------|
| | | The sensors detect a vehicle | Audible & Visual WARNINGS | Braking |
| Stage one | 3 4 6 | There is a risk of a collision with the vehicle ahead of you. | When in Long *1/ Far *2, visual and audible alerts come on at a longer distance from a vehicle ahead than in Normal setting, and in Short *1/ Near *2, at a shorter distance than in Normal . | _ |
| Stage two | 0 2 | The risk of a collision has increased, time to respond is reduced. | Visual and audible alerts. | Lightly applied |
| Stage three | 0 2 | The CMBS determines that a collision is unavoidable. | | Forcefully applied |

- Your Vehicle
- 2 Vehicle Ahead
- S Long*1/Far*2
- 4 Normal
- Short*1/Near*2
- *1: Cambodian, Laotian, Philippine and Taiwanese models
- *2: Except Cambodian, Laotian, Philippine and Taiwanese models

CMBS On and Off

You can turn the system on and off using the driver information interface.

Switching the Display P. 169, 196

Safety Support P. 181, 208

The CMBS is turned on every time you start the engine, even if you turned it off the last time you drove the vehicle.

∑Collision Mitigation Braking System (CMBS)

You cannot turn the CMBS off while driving.

The CMBS may automatically shut off, and the safety support indicator (amber) and Collision Mitigation Braking System (CMBS) indicator (amber) will come and stay on under certain conditions:

CMBS Conditions and Limitations P. 602

When the CMBS is activated, it will continue to operate even if the accelerator pedal is partially depressed. However, it will be cancelled if the accelerator pedal is fully depressed.

Have your vehicle checked by a dealer if you find any unusual behaviour of the system (e.g., the warning message appears too frequently).

The Vehicle Stability Assist (VSA) system, brake system (Amber), Adaptive Cruise Control (ACC) with Low Speed Follow, low tyre pressure/TPMS*, low tyre pressure/deflation warning system*, Collision Mitigation Braking System (CMBS), Road Departure Mitigation and safety support indicators may come on in amber along with a message in the gauge when you set the power mode to ON after reconnecting the battery.

Drive a short distance at more than 20 km/h. Each indicator should go off. If any do not, have your vehicle checked by a dealer.

CMBS Conditions and Limitations

In the following situations, the radar sensor or camera may be unable to correctly detect vehicles, pedestrians, moving bicycles, or road conditions, potentially causing the CMBS to operate improperly.

Front Sensor Camera P. 682

Radar Sensor P. 684

■ Environmental conditions

- Driving in bad weather (rain, fog, snow, etc.).
- Sudden changes between light and dark, such as an entrance or exit of a tunnel.
- There is little contrast between objects and the background.
- Driving into low sunlight (e.g., at dawn or dusk).
- Strong light is reflected onto the vehicles (including motorcycles), pedestrians, moving bicycles or roadway.
- Driving in the shadows of trees, buildings, etc.
- Roadway objects or structures are misinterpreted as vehicles and pedestrians.
- Reflections on the interior of the windscreen.
- Driving at night or in a dark place such as a tunnel (due to low-light conditions, pedestrians, moving bicycles or other vehicles [including motorcycles], may not be detected).
- When driving for long distances on a road in a trafficless area such as a desert.

■ Roadway conditions

- Driving on a snowy or wet roadway (obscured lane marking, vehicle tracks, reflected lights, road spray, high contrast).
- Driving on curvy, winding, or undulating roads.
- The road is hilly or the vehicle is approaching the crest of a hill.
- Driving through an area where there are objects that strongly reflect radio waves onto vehicles, pedestrians, or moving bicycles.
- Your vehicle is strongly shaken on uneven road surfaces.

■ Vehicle conditions

- Headlight lenses are dirty or the headlights are not properly adjusted.
- The outside of the windscreen is blocked by dirt, mud, leaves, wet snow, etc.
- The inside of the windscreen is fogged.
- An abnormal tyre or wheel condition (incorrect sizes, varied sizes or construction, improperly inflated, compact spare tyre*, etc.).
- When tyre chains* are installed.
- The vehicle is tilted due to a heavy luggage or suspension modifications.
- When the radar sensor behind the Honda emblem on the front grille gets dirty.
- Driving at night or in a dark place (e.g., a tunnel) with the headlights off.
- There is residue on the windscreen from the windscreen wipers.

Oceanian models

- Camera vision is blocked by drops of water from the window washer, or by the wiper blades.
- Operation of the vehicle is unstable due to a slippery road, etc.

Oceanian and African models with Right-hand Drive Type

• The vehicle is towing a trailer.

■ Examples of limitations on the correct detection of the camera due to the condition of the vehicle ahead of you, oncoming vehicles, vehicle approaching from the side*1, pedestrians, or moving bicycles

- The distance between your vehicle and the vehicle (including motorcycles) ahead
 of you, vehicle approaching from the side*1, oncoming vehicle, pedestrian, or
 moving bicycle ahead of you is too short.
- The vehicle (including motorcycles) ahead of you, vehicle approaching from the side*1, oncoming vehicle, pedestrian, or moving bicycle suddenly cuts in front of or jumps out in front of you.
- The bicycle is stopped.
- The oncoming vehicle (including motorcycles) or vehicle ahead of you is sideways or facing diagonally.
- When the vehicle (including motorcycles) ahead of you, vehicle approaching from the side*1, oncoming vehicle, pedestrian, or moving bicycle blends in with the background, preventing the system from recognising them.
- When several pedestrians are moving ahead of you in a group.
- When several bicycles are moving ahead of you in a group.
- When a pedestrian or moving bicycle crosses the road too quickly.
- A pedestrian or moving bicycle approaches from the opposite direction.
- The headlights of the vehicle ahead of you or oncoming vehicle are lit on one side or not lit on either side in a dark place.
- When part of a pedestrian (heads, limbs, etc.) is hidden by luggage.
- When a pedestrian is bent over or squatting, when their hands are raised, or they are running.
- When the pedestrian is shorter than about 1 metre or taller than about 2 metres in height.
- When the pedestrian is pushing a stroller or bicycle.

Oceanian models

- A vehicle is approaching diagonally from the side.
- A specially-shaped vehicle (such as a tank lorry or a lorry without a luggage) is approaching from the side.
- A vehicle approaching from the side is driving on a curve or hill.

*1: Oceanian models

Make sure that all the tyres are of the same specified size, type and brand, and that they are evenly worn. If you use tyres of different sizes, types, brands, or degree of wear, the system may not work properly.

Do not modify the suspension. Altering the height of the vehicle may prevent the system from working properly.

■ Examples of other limitations on detection or system operation

- When the vehicle ahead of you is a small motorcycle, motorcycle with a sidecar, wheelchair, three-wheeled vehicle, or other specially shaped vehicle.
- When a vehicle is lower in the rear than the front such as lorries that are not carrying a luggage, or a narrow vehicle.
- When the vehicle (including motorcycles) ahead of you, oncoming vehicle, pedestrian or moving bicycle is not in front of the vehicle.
- The speed difference between your vehicle and the vehicle (including motorcycles) ahead of you, oncoming vehicle, pedestrian or moving bicycle is significantly large.
- The speed difference between your vehicle and a vehicle, pedestrian, or moving bicycle approaching from the side is significantly large*1.
- When the vehicle (including motorcycles) or moving bicycle in front of you slows suddenly.
- When the driver operates the brake pedal and steering wheel to avoid a collision.
- When you approach the vehicle (including motorcycles) ahead of you, oncoming vehicle, pedestrians or moving bicycles while accelerating rapidly or operating the steering wheel (except when turning right*2/left*3 at an intersection, etc.)*4
- When the moving bicycle is a child-sized bicycle, folding bicycle, three-wheeler or other bicycle with small tyres, or a long bicycle like a tandem bicycle.
- When the radar and camera cannot correctly identify the shape of the vehicle (including motorcycles) ahead of you, vehicle approaching from the side*1, oncoming vehicle, pedestrian, or moving bicycle.
- When the minimum ground clearance of a vehicle ahead of you is extremely high.
- When turning left or right and your turn signal is not activated in the same direction you are turning.
- *1: Oceanian models
- *2: Right-hand Drive Type
- *3: Left-hand Drive Type
- *4: When there is a possibility of a frontal collision with the oncoming vehicle while turning right *2/left *3, the CMBS is activated. However, it may not be activated if you suddenly turn the steering wheel.

Continued 605

■ Automatic shutoff


The CMBS may automatically shut itself off and the safety support indicator (amber) and Collision Mitigation Braking System (CMBS) indicator (amber) come and stay on when:

- You drive off-road or on a mountain road, or curved and winding road for an extended period.
- Driving in bad weather (rain, fog, snow, etc.).
- Driving with the parking brake applied.
- The camera temperature gets too high.
- The front of the camera or radar sensor behind the Honda emblem is covered by dirt, fog, rain, mud, wet snow, seals, accessories, stickers, or film on the windscreen.
- An abnormal tyre condition is detected (incorrect tyre size, flat tyre, etc.). Once the conditions that caused the CMBS to shut off improve or are addressed (e.g., cleaning), the system comes back on.

■ With Little Chance of a Collision


Even if there is little chance of a collision, the CMBS may activate under the following conditions.

- Also, the system may activate if it detects a possibility of collision with pedestrians, moving bicycles, or vehicles.
- Your vehicle approaches or passes another vehicle that is making a left or right turn.
- Your vehicle approaches another vehicle ahead of you and you change lanes to pass.

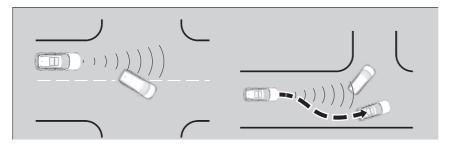


Continued 607

- When your vehicle approaches vehicles, pedestrians, or moving bicycles.
- When vehicles, pedestrians, or moving bicycles are passing in front of you.
- When you drive under a low structure or through a narrow gate at high speed.
- When there are traffic signs or structures such as guard rails are beside the road along a curve.

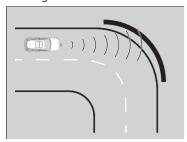

• When driving through curves, your vehicle comes to a point where the oncoming vehicle is right in front of you.

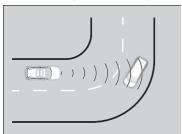

• When approaching stationary vehicles or walls, such as when parking.

Oceanian models

- A vehicle approaches from the side as it is driving through a curve.
- You pass by a vehicle (including motorcycles), pedestrian, or bicycle that is turning left or right.
- You pass in front of a vehicle (including motorcycles), pedestrian, or bicycle that is approaching from the side.
- A vehicle (including motorcycles), pedestrian, or bicycle turns left or right while approaching your vehicle from the side.
- You attempt to pass in front of a vehicle (including motorcycles) or bicycle while you are turning left or right.
- A vehicle (including motorcycles) or bicycle is attempting to pass in front of your vehicle while you are turning left or right.
- A vehicle (including motorcycles), pedestrian, or bicycle enters the path of your vehicle and stops in front of you.
- When you are turning left or right, a crossing pedestrian enters the path of your vehicle and stops in front of you.
- You pass close by the side of a vehicle parked on the street.

Low Speed Braking Control*

Using sonar sensors located on the front and rear bumpers, this system can detect if there is danger of a potential collision with a wall or other obstacle during normal driving or when the accelerator pedal is depressed with too much force. The system then assists in avoiding collisions and reducing damage from impact through Low Speed Brake function and/or Collision Mitigation Throttle Control and Rear Collision Mitigation Throttle Control.

∑Low Speed Braking Control*

AWARNING

The Low Speed Braking Control System cannot avoid all collisions and may not reduce damage in each situation where the accelerator is mistakenly or aggressively pressed.

Overreliance on the system may result in a collision with serious injury or death. Always check your surroundings, your shift position, and your pedal use. Driver remains responsible for safely operating the vehicle.


If the Low Speed Braking Control activates in a situation where you do not want automatic brake application (such as when the vehicle is between two railroad crossing gates), simply press the brake pedal to deactivate the system and then continue to drive as intended.

If the system is activated by curbs/parking curbs or level differences on the road and you are unable to park or clear them, turn the system off.

How the System Works

■ Low Speed Brake function

The Low Speed Brake function provides a visual and audible alert when the vehicle is moving between approximately 2 and 10 km/h and there is the possibility of a collision with a detected wall or other obstacles, as well as providing assistance with braking.

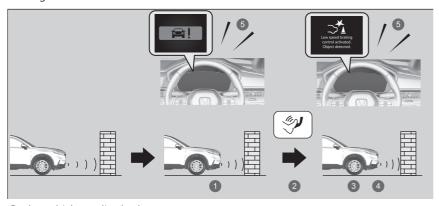

- 1 The vehicle applies brake
- 2 Driver depresses brake pedal
- Stop
- 4 Remove brake after maintaining stationary position
- **6** Audible Alert

If the only rear sensors are turned off using the parking sensor system, the Low Speed Brake function will not work when reversing.

Parking sensor system on and off P. 699

∑Low Speed Braking Control*

For directions on the proper handling of the sonar sensors, please refer to the following page.

Sonar Sensors* P. 685

The vehicle will release the brake and start moving a few seconds after the system is activated. To keep the vehicle stopped, keep the brake pedal depressed or put the transmission into P.


In order to prevent the system from activating when not needed, always turn it off during vehicle maintenance, when loading on ships, trucks, and so on, or when using a chassis dynamometer or free rollers for inspection.

If you put any accessories (such as a towing hitch or bicycle rack) on or around the rear sensors, the Low Speed Braking Control System may activate if it detects these accessories as an obstacle. In this case. turn off the rear sensor.

How to Customize the Vehicle Settings P 467

■ Collision Mitigation Throttle Control and Rear Collision Mitigation Throttle Control

When the vehicle is stopped or moving at less than 10 km/h and there is an obstacle such as a wall near the front or back of the vehicle, if the accelerator pedal is depressed more than necessary, the system will inform you with a visual and audible alert. At the same time, the system will prevent sudden forward or backwards movement by limiting the output of the engine, then Low Speed Brake function will activate when you get closer to the obstacle.

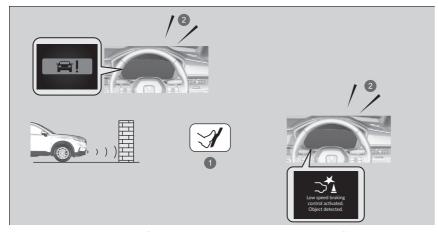

- 1 Accidental depression of the accelerator/Limiting the output of the engine
- Audible Alert

Collision Mitigation Throttle Control and Rear Collision Mitigation Throttle Control will not activate in the following situations.

When moving forward:

When on a steep slope or the shift position is in [P], [R], or [N].

When reversing:

When on a steep slope or the shift position is in a position other than \mathbb{R} .

If the only rear sensors are turned off using the parking sensor system, the Collision Mitigation Throttle Control and Rear Collision Mitigation Throttle Control will not work when reversing.

▶ Parking sensor system on and off P. 699

System On and Off

You can turn the system on and off using the driver information interface.

Switching the Display P. 169, 196

Safety Support P. 181, 208

The system is turned on every time you start the engine, even if you turned it off the last time you drove the vehicle.

The Low Speed Braking Control system may temporarily turn off after reconnecting the battery. The system will automatically turn ON after the vehicle has been moving at over 20 km/h for some time.

If the system does not turn on, have your vehicle checked by a dealer.

Conditions for Cancellation

Conditions for Collision Mitigation Throttle Control, and Rear Collision Mitigation Throttle Control.

- When the accelerator is no longer depressed.
- When the accelerator is depressed for approximately four seconds.
- When the brake pedal is depressed.

Conditions for Low Speed Brake function cancellation.

• A certain amount of time has passed since activation.

Low Speed Braking Control System Conditions and Limitations

The system may not operate correctly under the following conditions:

■ Examples of obstacles the sonar sensors cannot detect

- Obstacles that do not reflect sound waves well, such as people, snow, cloth, sponges, etc.
- Thin obstacles such as fences, bicycles, sign posts, etc.
- Short or small obstacles.
- Obstacles immediately in front of the bumper.
- Obstacles that are not perpendicular to the ground.
- Moving objects or obstacles that suddenly enter the road.

○ Conditions for Cancellation

After Low Speed Brake and Collision Mitigation Throttle Control have activated once, they will not activate again for the same obstacle.

They can be activated again after driving for some time after the last activation.

Low Speed Braking Control activates separately when moving forward and reversing. (For example, if it activates when moving forward, it can be activated again immediately if reversing.)

However, if Low Speed Brake function has been activated, in order to activate Collision Mitigation Throttle Control and Rear Collision Mitigation Throttle Control again, it is necessary to drive for a certain distance to reset the system.

■ Examples of situations where the sonar sensors cannot detect obstacles

- The sonar sensors is dirty (covered by snow, water, mud, etc.).
- The vehicle is too hot or cold.
- The steering wheel is turned sharply when approaching the obstacle at an angle.

■ Examples of other cases where the system may not work correctly

- The vehicle is tilted due to heavy luggage or suspension modifications.
- Bad weather conditions such as heavy rain, fog, snow, sandstorms, etc.
- The ambient temperature/humidity is too high or low.
- When going down a very steep slope.
- When close to other vehicles with sonar sensors or other objects that emit ultrasonic waves.
- An abnormal tyre or wheel condition (incorrect sizes, varied sizes or construction, improperly inflated, compact spare tyre*, etc.).

■ Situations where the system may activate even without risk of a collision

- When passing through short or narrow gates.
- When driving on uneven surfaces, grassy areas, or places with steps.
- When a sloped pillar or wall is protruding from a high position.
- When there are obstacles next to the road.
- When driving toward flags, curtains, tree branches, railroad crossing bars, etc.
- When driving on flooded roads.

* Not available on all models

Road Departure Mitigation System

Oceanian, Hong Kong, Macao and Singaporean models

Alerts and helps to assist you when the system detects a possibility of your vehicle crossing over detected lane markings, or approaching the outer edge of the pavement (into grass or gravel border) or a detected oncoming vehicle.

Except Oceanian, Hong Kong, Macao and Singaporean models

Alerts and helps to assist you when the system detects a possibility of your vehicle unintentionally crossing over detected lane markings and/or leaving the roadway altogether.

Important Safety Reminder

Like all assistance systems, the Road Departure Mitigation system has limitations.

Overreliance on the Road Departure Mitigation system may result in a collision. It is always your responsibility to keep the vehicle within your driving lane.

Oceanian, Hong Kong, Macao and Singaporean models

The Road Departure Mitigation system alerts you when the system detects that you are approaching the outer edge of the pavement (into grass or gravel border), an oncoming vehicle, or drifting into another lane without using a turn signal.

The Road Departure Mitigation system may not detect all lane markings or every instance of lane drift.

The Road Departure Mitigation system may not detect that you are approaching the outer edge of the pavement (bordered by grass or gravel) or an oncoming vehicle.


The Road Departure Mitigation system may not be able to assist you depending on weather, speed or road conditions.

Except Oceanian, Hong Kong, Macao and Singaporean models

The Road Departure Mitigation system only alerts you when lane drift is detected without a turn signal in use. The Road Departure Mitigation system may not detect all lane markings or lane or roadway departures; accuracy will vary based on weather, speed and lane marker condition. It is always your responsibility to safely operate the vehicle and avoid collisions.

How the System Works

Oceanian, Hong Kong, Macao and Singaporean models

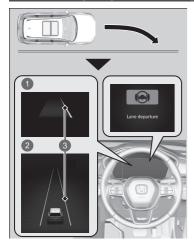

- Models with A-type meter
- 2 Models with B-type meter
- 3 Amber line

The front camera behind the rearview mirror monitors left and right lane markings in white or yellow, the outer edge of the pavement (bordered by grass or gravel) or a detected oncoming vehicles.

If your vehicle approaches any detected lane markings, the outer edge of the pavement (bordered by grass or gravel) or a detected oncoming vehicles when the turn signals have not been engaged, the system activates.

- ▶ If the system cannot detect lane markings (in white or yellow), no assistance will be provided to avoid approaching oncoming vehicles. In addition to a visual alert, the system assists with steering and alerts you with rapid steering wheel vibrations to help you remain within the detected lane.
 - Settings* P. 185
 - ► How to Customize the Vehicle Settings
 P. 467

As a visual alert, the **Lane departure** message appears on the driver information interface.

The system cancels assisting operations when you turn the steering wheel to avoid crossing over detected lane markings or approaching the outer edge of the pavement (into grass or gravel border) or an oncoming vehicle.

■ Road Departure Mitigation System

You can read about handling information for the camera equipped with this system.


Front Sensor Camera P. 682

The Road Departure Mitigation system may not work properly or may work improperly under the certain conditions:

Road Departure Mitigation system
Conditions and Limitations P. 622

There are times when you may not notice the Road Departure Mitigation system functions due to your operation of the vehicle, or road surface conditions.

Except Oceanian, Hong Kong, Macao and Singaporean models

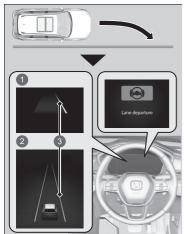

P. 467

As a visual alert, the Lane departure message appears on the driver information interface.

lane.

Settings* P. 185

The front camera located behind the rearview

mirror monitors left and right lane markings

(in white or yellow). If your vehicle is getting

turn signal activated, the system, in addition

to a visual alert, applies steering torque and

alerts you with rapid vibrations on the steering

wheel, to help you remain within the detected

How to Customize the Vehicle Settings

too close to detected lane markings without a

- Models with A-type meter
- 2 Models with B-type meter
- Amber line

The system cancels assisting operations when you turn the steering wheel to avoid crossing over detected lane markings.

Oceanian, Hong Kong, Macao and Singaporean models

You can change the settings for the Road Departure Mitigation system.

If LKAS is off, the message below may appear if the system has determined that there is a possibility of your vehicle crossing over detected lane markings, the outer edge of the pavement (into a grass or gravel border) or oncoming vehicle.

- Settings* P. 185
- ► How to Customize the Vehicle Settings P. 467

Except Oceanian, Hong Kong, Macao and Singaporean models

You can change the settings for the Road Departure Mitigation system.

If LKAS is off, the message below may appear if the system has determined that there is a possibility of your vehicle crossing over detected lane markings.

- Settings* P. 185
- How to Customize the Vehicle Settings
 P. 467



All models



- Road Departure Mitigation System Steering Assist Auto OFF indicator
- Models with A-type meter
- Models with B-type meter

If the system operates several times without detecting driver response, the system beeps to alert you. After that, the Road Departure Mitigation System Steering Assist Auto OFF indicator comes on, the Road Departure Mitigation steering assist is temporarily stopped, and the system will only alert you with the warning sound.

After a few minutes, the Road Departure Mitigation System Steering Assist Auto OFF indicator goes off and the Road Departure Mitigation system is fully restored.

How the System Activates

The system activates when all of the following conditions are met:

• The lane markings are white (yellow).

The vehicle is travelling between about 72 and 180 km/h.

Oceanian, Hong Kong, Macao and Singaporean models

► When oncoming vehicles are running The vehicle is travelling between about 30 and 180 km/h.

Oceanian, Hong Kong, Macao and Singaporean models

• The outer edge of the pavement is grass or gravel border. The vehicle is travelling between about 30 and 180 km/h.

All models

- The vehicle is on a straight or slightly curved road.
- The turn signals are off.
- The system makes a determination that the driver is not actively accelerating, braking, or steering.

➤ How the System Activates

The Road Departure Mitigation system may automatically shut off and the safety support indicator (amber) and Road Departure Mitigation indicator (amber) comes and stays on.

Indicators P. 140

The Road Departure Mitigation system function can be impacted when the vehicle is:

- Driven on the inside edge of a curve, or outside of a lane.
- Driven in a narrow lane.

Road Departure Mitigation system On and Off

You can turn the system on and off using the driver information interface.

Switching the Display P. 169, 196

Safety Support P. 181, 208

Except Oceanian models

The Road Departure Mitigation system is in the previously selected on or off setting each time you start the engine.

Oceanian models

The Road Departure Mitigation system is turned on every time you start the engine, even if you turned it off the last time you drove the vehicle.

■Road Departure Mitigation system On and Off

Except Oceanian models

When you have selected **Warning Only***1/**Warning only***2, the system does not operate the steering wheel.

Settings* P. 185

▶ How to Customize the Vehicle Settings P. 467

The Vehicle Stability Assist (VSA) system, brake system (Amber), Adaptive Cruise Control (ACC) with Low Speed Follow, low tyre pressure/TPMS*, low tyre pressure/deflation warning system*, Collision Mitigation Braking System (CMBS), Road Departure Mitigation and safety support indicators may come on in amber along with a message in the gauge when you set the power mode to ON after reconnecting the battery.

Drive a short distance at more than 20 km/h. Each indicator should go off. If any do not, have your vehicle checked by a dealer.

^{*1:} Cambodian, Laotian, Philippine and Taiwanese models with Display Audio

^{*2:} Except Cambodian, Laotian, Philippine and Taiwanese models with Display Audio

Road Departure Mitigation system Conditions and Limitations

Oceanian, Hong Kong, Macao and Singaporean models

The system may not properly detect lane markings (in white or yellow), the outer edge of the pavement (into grass or gravel border) or an oncoming vehicle under certain conditions. Some examples of these conditions are listed below.

Except Oceanian, Hong Kong, Macao and Singaporean models

The system may not properly detect lane markings and the position of your vehicle under certain conditions. Some examples of these conditions are listed below.

■ Environmental conditions

- There is little contrast between lane lines and the roadway surface.
- Driving in bad weather (rain, fog, snow, etc.).
- Driving on a snowy or wet roadway.
- Driving into low sunlight (e.g., at dawn or dusk).
- Shadows of adjacent objects (trees, buildings, guard rails, vehicles, etc.) are parallel to white (or yellow) lines.
- Sudden changes between light and dark, such as the entrance or exit of a tunnel or the shadows of trees, buildings, etc.
- Strong light is reflected onto the roadway.
- Driving at night or in a dark place such as a tunnel (due to low-light conditions, lane lines, the road surface, or oncoming vehicles may not be illuminated).
- The distance between your vehicle and the vehicle ahead of you is too short, and lane lines and the road surface are not visible.

Oceanian, Hong Kong, Macao and Singaporean models

• The outer edge of the road is bordered by objects, materials, etc. other than grass or gravel.

■ Roadway conditions

- Driving on a road with temporary lane markings.
- Faint, multiple, or varied lane markings are visible on the roadway due to road repairs or old lane markings.
- The roadway has merging, split, or crossing lines, such as at an intersection or crosswalk.
- The lane markings are extremely narrow, wide, or changing.
- Part of the lane markings are hidden by an object, such as a vehicle.
- The road is hilly or the vehicle is approaching the crest of a hill.
- Your vehicle is strongly shaken on uneven road surfaces.
- When objects on the road (curb, guard rail, pylons, etc.) are recognised as white (or yellow) lines.
- Driving on rough or unpaved roads, or over bumpy surfaces.
- Driving on roads with double lane lines.
- Driving on snowy or slippery roads.
- Passing through a junction.
- The pavement is only partially visible due to snow or puddles on the road.
- Driving on unpaved or rutted roads.
- White (or yellow) lines are not recognised correctly due to road conditions such as curves, twists, or hills.

■ Vehicle conditions

- When lighting is weak due to dirt covering the headlight lenses, or there is poor visibility in a dark place due to the headlights being improperly adjusted.
- The front of the camera is covered by dirt, fog, rain, mud, wet snow, seals, accessories, stickers, or film on the windscreen.
- Driving at night or in a dark place (e.g., a tunnel) with the headlights off.
- When the driver operates the brake pedal and steering wheel.
- There is residue on the windscreen from the windscreen wipers.
- An abnormal tyre or wheel condition (incorrect sizes, varied sizes or construction, improperly inflated, compact spare tyre*, etc.).
- The vehicle is tilted due to heavy luggage in the luggage area or rear seats.
- Tyre chains* are installed.
- The suspension has been modified.

Oceanian and African models with Right-hand Drive Type

• The vehicle is towing a trailer.

Oceanian, Hong Kong, Macao and Singaporean models

■ Examples of limitations on detection due to the condition of oncoming vehicles

- The oncoming vehicle or vehicle ahead of you is sideways.
- The oncoming vehicle jumps out in front of you.
- When the oncoming vehicle blends in with the background, preventing the system from recognising it.
- The headlights of an oncoming vehicle are lit on one side or not lit on either side in a dark place.
- The distance between your vehicle and the oncoming vehicle is too short.
- Part of the oncoming vehicle is not visible due to the vehicle ahead of you.
- There are multiple oncoming lanes or turning lanes.
- The vehicle in the adjacent lane is parked or moving at an extremely slow speed.

Oceanian, Hong Kong, Macao and Singaporean models

■ Examples of other limitations on detection or system operation

- When the oncoming vehicle is specially-shaped.
- When the camera cannot correctly identify the shape of the oncoming vehicle.

Oceanian, Hong Kong, Macao and Singaporean models

■ With Little Chance of a Collision


The Road Departure Mitigation system may activate in the below conditions.

• When driving through curves, your vehicle comes to a point where an oncoming vehicle is right in front of you.

Adaptive Cruise Control (ACC) with Low Speed Follow

Helps to maintain a constant vehicle speed and a set following-interval behind a vehicle detected ahead of yours and, if the detected vehicle comes to a stop, can decelerate and stop your vehicle, without you having to keep your foot on the brake or the accelerator.

When ACC with Low Speed Follow slows your vehicle by applying the brakes, your vehicle's brake lights will illuminate.

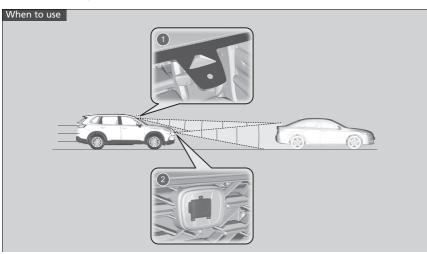

- **1** A front sensor camera is located behind the rearview mirror.
- 2 The radar sensor is behind the Honda emblem on the front grille.

Madaptive Cruise Control (ACC) with Low Speed Follow

AWARNING

Improper use of ACC with Low Speed Follow can lead to a crash.

Use ACC with Low Speed Follow only when driving on motorways and in good road and weather conditions.

AWARNING

ACC with Low Speed Follow has limited braking capability and may not stop your vehicle in time to avoid a collision with a vehicle that quickly stops in front of you.

Always be prepared to apply the brake pedal if the conditions require.

Important Reminder

As with any system, there are limits to ACC with Low Speed Follow. Use the brake pedal whenever necessary, and always keep a safe interval between your vehicle and other vehicles.

For directions on the proper handling of the radar sensor, refer to the following page.


Radar Sensor P. 684

You can read about handling information for the camera equipped with this system.

Front Sensor Camera P. 682

- Vehicle speed for ACC with Low Speed Follow: A vehicle is detected ahead within ACC with Low Speed Follow range – ACC with Low Speed Follow operates at speeds up to 180 km/h.
 - No vehicle is detected within ACC with Low Speed Follow range ACC with Low Speed Follow operates at the speed of 30 km/h or above.
- Shift position for ACC with Low Speed Follow: In **D** or **S**.

■ How to activate the system

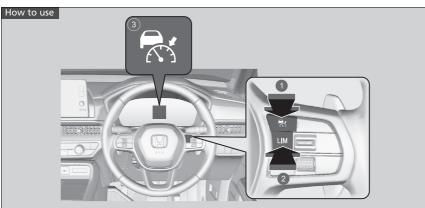

- Button Press the button on the steering wheel.
- 2 LIM Button*
 If a different indicator comes on, press the LIM button to change it to ACC with Low Speed Follow.
- 3 The (white) is on in the gauge. ACC with Low Speed Follow is ready to use.

Madaptive Cruise Control (ACC) with Low Speed Follow

The radar sensor for ACC with Low Speed Follow is shared with the Collision Mitigation Braking System (CMBS).


► Collision Mitigation Braking System (CMBS) P. 596

ACC with Low Speed Follow may not work properly under certain conditions.

■ ACC with Low Speed Follow Conditions and Limitations P. 638

When not using ACC with Low Speed Follow: Turn off adaptive cruise by pressing the sutton.

■ To Set the Vehicle Speed

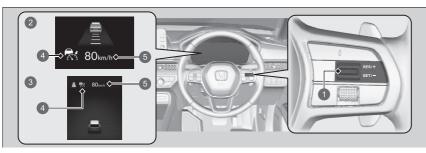

- **1 RES/+/SET/** Switch Up or down
- 2 On when ACC with Low Speed Follow begins for models with A-type meter
- 3 On when ACC with Low Speed Follow begins for models with B-type meter
- 4 🤼 (green)
- **5** Set Vehicle Speed (white)

When driving at about 30 km/h or above: Take your foot off the pedal and press the RES/+/SET/- switch up or down when you reach the desired speed. The moment you release the switch, the set speed is fixed, and ACC with Low Speed Follow begins.

When you use ACC with Low Speed Follow, Straight Driving Assist (a feature of the Electric Power Steering system) is activated.

By enabling the steering system to automatically compensate for natural steering pull, Straight Driving Assist makes it easier for you to keep your vehicle in a straight line.

Do not use ACC with Low Speed Follow under the following conditions:

- On roads with frequent lane change or continuous stop and go traffic, ACC with Low Speed Follow cannot keep an appropriate distance between your vehicle and the vehicle ahead of you.
- On roads with sharp turns.
- On roads with toll collection facilities or other objects between lanes of traffic, or in parking areas, or facilities with drive through access.
- On roads with bad weather (rain, fog, snow, etc.), ACC with Low Speed Follow may not detect the distance between your vehicle and the vehicle ahead of you properly.
- On roads with slippery or icy surfaces. The wheels may spin out and your vehicle may lose the control on the condition.
- On roads with steep uphill or steep downhill slopes.
- On roads with undulating slopes.


Continued

The Vehicle Stability Assist (VSA) system, brake system (Amber), Adaptive Cruise Control (ACC) with Low Speed Follow, low tyre pressure/TPMS*, low tyre pressure/deflation warning system*, Collision Mitigation Braking System (CMBS), Road Departure Mitigation and safety support indicators may come on in amber along with a message in the gauge when you set the power mode to ON after reconnecting the battery.

Drive a short distance at more than 20 km/h. Each indicator should go off. If any do not, have your vehicle checked by a dealer.


When driving slower than about 30 km/h: If the vehicle is moving and the brake pedal is not depressed, pressing the switch fixes the set speed to about 30 km/h regardless of current vehicle speed.

If your vehicle is stationary, you can set the vehicle speed even with the brake pedal depressed.

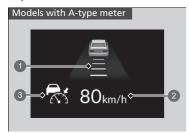

When ACC with Low Speed Follow starts operating, the vehicle icon, interval bars and set speed appear on the gauge.

- Set Vehicle Interval
- 2 Set Vehicle Speed
- (green)

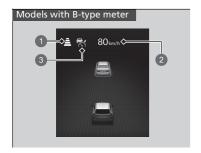


- 1 Set Vehicle Interval
- 2 Set Vehicle Speed3 (green)

■ When in Operation

■ There is a vehicle ahead

ACC with Low Speed Follow monitors if a vehicle ahead of you enters the ACC with Low Speed Follow range. If a vehicle is detected doing so, the ACC with Low Speed Follow system maintains or decelerates your vehicle's set speed in order to keep the vehicle's set following-interval from the vehicle ahead.


▶ To Set or Change Following-interval P. 643

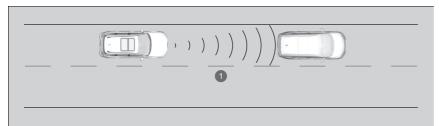

ACC with Low Speed Follow Range: 120 m

When in Operation ■ Compare the Com


If the vehicle ahead of you slows down abruptly, or if another vehicle cuts in front of you, the beeper sounds and a message appears on the driver information interface, and the head-up warning lights* flash.

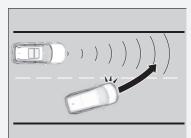

Depress the brake pedal, and keep an appropriate interval from the vehicle ahead




- Head-up Warning Lights*
- 2 Audible Alert

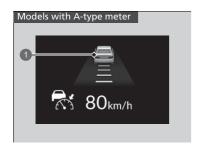

When a vehicle whose speed is slower than your set speed comes in or cuts in front of you and is detected by the radar and the camera, your vehicle starts to slow down.

A vehicle icon appears on the gauge

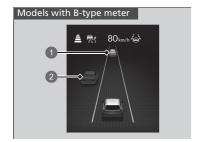

A vehicle icon appears on the gauge

- 1 Control target vehicle: White and outlined in green
- 2 Outside of control target vehicle: Grey

Even if the interval between your vehicle and the vehicle detected ahead is short, ACC with Low Speed Follow may start accelerating your vehicle under the following circumstances:

- The vehicle ahead of you is going at almost the same speed as, or faster than, your vehicle.
- A vehicle that cuts in front of you is going faster than your vehicle, gradually increasing the interval between the vehicles.

You can also set the system to beep when a vehicle detected in front of you comes in and goes out of the ACC with Low Speed Follow detecting range. A vehicle detect beep on and off can be selected.


- Settings* P. 185
- ► How to Customize the Vehicle Settings P. 467

Limitations

You may need to use the brake to maintain a safe interval when using ACC with Low Speed Follow. Additionally, ACC with Low Speed Follow may not work properly under certain conditions.

ACC with Low Speed Follow Conditions and Limitations P. 638

■ There is no vehicle ahead

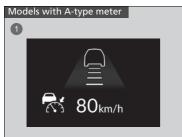


1 A vehicle icon with line contour appears on the gauge.

Your vehicle maintains the set speed without having to keep your foot on the brake or accelerator pedal.

If there previously was a vehicle detected ahead that kept your vehicle from travelling at the set speed, ACC with Low Speed Follow accelerates your vehicle to the set speed, and then maintains it.

While driving down steep hills, ACC with Low Speed Follow brakes to inhibit excessive acceleration for maintaining the set speed. However, the vehicle speed may become faster than the set speed.

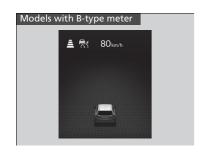


■ When you depress the accelerator pedal

You can temporarily increase the vehicle speed. In this case, there is no audible or visual alert even if a vehicle is in the ACC with Low Speed Follow range. ACC with Low Speed Follow stays on unless you cancel it. Once you release the accelerator pedal, the system resumes an appropriate speed for keeping the following-interval while a vehicle ahead is within the ACC with Low Speed Follow range.


When in Operation ■

 ACC with Low Speed Follow may temporarily control the interval between your vehicle and the vehicle in adjacent lane or surroundings of your vehicle depending on the road conditions (e.g., curves) or vehicle conditions (e.g., operating the steering wheel or the vehicle location in the lane).

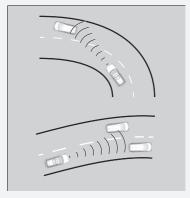


 When the vehicle ahead of you moves away, such as when entering an interchange or rest area, ACC with Low Speed Follow may continue to maintain the set following-interval for a short time.

■ A vehicle detected ahead is within ACC with Low Speed Follow range and slows to a stop

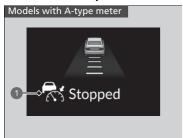

Your vehicle also stops, automatically. The **Stopped** message appears on the gauge. When the vehicle ahead of you starts again, if you press the **RES/+/SET/-** switch up or down, or depress the accelerator pedal, ACC with Low Speed Follow operates again within the previously set speed.

1 (green)

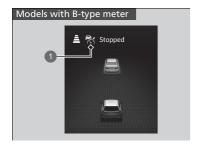

1 (green)


When in Operation
 ■

AWARNING

Exiting a vehicle that has been stopped while the ACC with Low Speed Follow system is operating can result in the vehicle moving without operator control.


A vehicle that moves without operator control can cause a crash, resulting in serious injury or death.

Never exit a vehicle when the vehicle is stopped by ACC with Low Speed Follow.

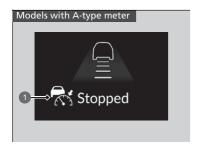

If no vehicle is ahead of you before you resume driving, depress the accelerator pedal and ACC with Low Speed Follow will operate again within the prior set speed.



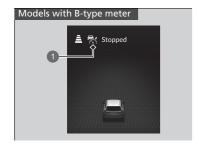

1 (green)

ACC with Low Speed Follow Conditions and Limitations

The system may automatically shut off under certain conditions. Some examples of these conditions are listed below. Other conditions may reduce some of the ACC with Low Speed Follow functions.

Front Sensor Camera P. 682

Radar Sensor P. 684

■ Environmental conditions

- Driving in bad weather (rain, fog, snow, etc.).
- When driving for long distances on a road in a trafficless area such as a desert.

■ Roadway conditions

 Driving on a snowy or wet roadway (obscured lane marking, vehicle tracks, reflected lights, road spray, high contrast).

■ Vehicle conditions

- The outside of the windscreen is blocked by dirt, mud, leaves, wet snow, etc.
- An abnormal tyre or wheel condition (incorrect sizes, varied sizes or construction, improperly inflated, compact spare tyre*, etc.).
- The camera temperature gets too high.
- The parking brake is applied.
- The front grille is dirty.
- The vehicle is tilted due to a heavy luggage or suspension modifications.
- Tyre chains* are installed.

Oceanian and African models with Right-hand Drive Type


• The vehicle is towing a trailer.

If you need the radar sensor to be repaired, or removed, or the front grille is strongly impacted, turn off the system by pressing the button and take your vehicle to a dealer.

Have your vehicle checked by a dealer if you find any unusual behaviour of the system (e.g., the warning message appears too frequently).

■ Detection limitations

- A vehicle suddenly crosses in front of you.
- The interval between your vehicle and the vehicle ahead of you is too short.
- A vehicle cuts in front of you at a slow speed, and it brakes suddenly.
- You accelerate rapidly and approach the vehicle ahead of you at high speed.
- The vehicle ahead of you is a motorcycle, bicycle, mobility scooter, or other small vehicle
- There are animals in front of your vehicle.
- You drive on a curved or winding or undulating road that makes it difficult for the sensor to properly detect a vehicle in front of you.

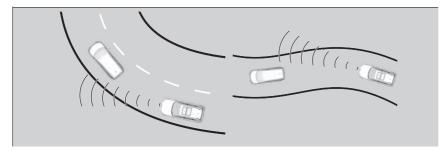


- A vehicle ahead of you stops and the speed difference between your vehicle and the vehicle ahead of you is significantly large.
- An oncoming vehicle suddenly comes in front of you.
- Your vehicle abruptly crosses over in front of an oncoming vehicle.

• Driving through a narrow metal bridge.




- The vehicle ahead of you brakes suddenly.
- The vehicle ahead of you has a unique shape.

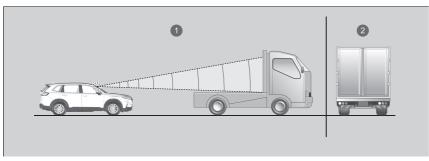


- 1 Sensor detects upper section of an empty carrier lorry.
- 2 Panel lorry, tanker lorry, etc.
- Your vehicle or the vehicle ahead of you is driving on one edge of the lane.

• When the minimum ground clearance of a vehicle ahead of you is extremely high.

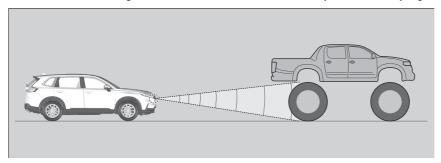

■ To Adjust the Vehicle Speed

Increase or decrease the vehicle speed using the **RES/+/SET/-** switch on the steering wheel.

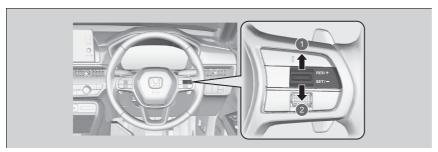

- 1 To increase speed
- 2 To decrease speed
- Each time you press the **RES/+/SET/** switch up or down, the vehicle speed is increased or decreased by about 1 km/h accordingly.
- If you press and hold the **RES/+/SET/** switch up or down, the vehicle speed increases or decreases by about 10 km/h accordingly.

∑To Adjust the Vehicle Speed

If a vehicle detected ahead is going at a speed slower than your increased set speed, ACC with Low Speed Follow may not accelerate your vehicle. This is to maintain the set interval between your vehicle and the vehicle ahead.

When you depress the accelerator pedal and then press down and release the **RES/+/SET/-** switch, the current speed of the vehicle is set.

■ To Set or Change Following-interval



1 Interval Button

Press the interval button to change the ACC with Low Speed Follow following-interval. Each time you press the button, the following-interval (the interval behind a vehicle detected ahead of you) setting cycles through extra long, long, middle, and short following-intervals.

Determine the most appropriate followinginterval setting based on your specific driving conditions. Be sure to adhere to any following-interval requirements set by local regulation.

The higher your vehicle's following-speed is, the longer the short, middle, long or extra long following-interval becomes. See the following examples for your reference.

| Following-interval | | When the Set Speed is: | |
|--------------------|------|------------------------|----------------------|
| | | 80 km/h | 104 km/h |
| Short | *1 | 25 metres 1.1 sec | 31 metres 1.1 sec |
| Middle | *1 | 33 metres 1.5 sec | 42 metres 1.5 sec |
| Long | *1 4 | 47 metres 2.1 sec | 61 metres 2.1 sec |
| Extra Long | *1 4 | 65 metres 2.9 sec | 86 metres 2.9 sec |

When your vehicle stops automatically because a vehicle detected ahead of you has stopped, the interval between the two vehicles will vary based on the ACC with Low Speed Follow interval setting.

∑To Set or Change Following-interval

The driver must in all circumstances preserve a sufficient braking interval from the vehicle which precedes it and be aware that minimum intervals or times of spacing can be provided by the provisions of the Motorway Code locally applicable and that it is the driver's responsibility to respect those laws.

^{*1:} Models with A-type meter

^{*2:} Models with B-type meter

■ To Cancel



- 1 Rutton
- 2 CANCEL Button3 LIM Button*

To cancel ACC with Low Speed Follow, do any of the following:

- Press the **CANCEL** button.
 - ► The 🔣 indicator (green) on the gauge changes to the 🛃 indicator (white).
- Press the 🔂 button.
 - indicator (green) goes off.
- Press the **LIM** button*.
- Depress the brake pedal while the vehicle is moving forward.
 - ► The indicator (green) on the gauge changes to the indicator (white).

∑To Cancel

Resuming the prior set speed: After you have cancelled ACC with Low Speed Follow, you can activate the ACC with Low Speed Follow with the prior set speed displayed on the gauge (in grey) by pressing the **RES/+/SET/-** switch up even if the vehicle is stopped.

When you turn the ACC with Low Speed Follow off by pressing the **CANCEL** button or depressing the brake pedal, the prior set speed is displayed on the gauge in grey.

When pressing the **RES/+/SET/-** switch up, the ACC with Low Speed Follow is activated with displayed speed.


If the similar indicator (white) is displayed and you press the **RES/+/SET/**– switch up, but no prior set speed (in grey) is displayed, the speed will be set to your vehicle's current speed.

■ Automatic cancellation

The beeper sounds and a message appears on the driver information interface when ACC with Low Speed Follow is automatically cancelled. Any of these conditions may cause the ACC with Low Speed Follow to automatically cancel:

- Bad weather (rain, fog, snow, etc.)
- When the radar sensor behind the Honda emblem on the front grille gets dirty.
- The vehicle ahead of you cannot be detected.
- An abnormal tyre condition is detected, or the tyres are skidding.
- Driving on a mountainous road for extended periods, or driving off road.
- Abrupt steering wheel movement.
- When the ABS, VSA, CMBS, or Low Speed Braking Control* is activated.
- When the ABS or VSA system indicator comes on.
- When the vehicle is stopped on a very steep slope.
- When you manually apply the parking brake.
- When the detected vehicle within the ACC with Low Speed Follow range is too close to your vehicle.
- When accelerating rapidly.
- The camera behind the rearview mirror, or the area around the camera, including the windscreen, gets dirty.
- The vehicle has repeatedly applied the brakes to maintain the set speed (for example, you are descending a long slope).
- When the system doesn't detect any driving actions from the driver for a certain amount of time while the LKAS is also activated.
- When the maximum permissible weight is exceeded.
- When passing through a dark place, such as tunnel.
- When the parking brake and brake system indicator (amber) comes on.

∑To Cancel

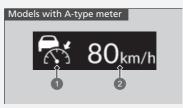

- (white)
- Prior Set Speed (grey)



- (white)
- Prior Set Speed (grey)

The set speed cannot be set or resumed when ACC with Low Speed Follow has been turned off using the

button. Press the system, then set the desired speed.

The ACC with Low Speed Follow automatic cancellation can be also triggered by the following causes. In these cases, the parking brake will be automatically applied.

- The driver's seat belt is unfastened when the vehicle is stationary.
- The vehicle stops for more than 10 minutes.
- The engine is turned off.

Lane Keeping Assist System (LKAS)


Provides steering input to help to keep the vehicle in the middle of a detected lane and provides tactile, audible and visual alerts if the vehicle is detected drifting out of its lane.

■ Steering input assist

The system applies torque to the steering to keep the vehicle between the left and right lane lines. The applied torque becomes stronger as the vehicle gets closer to either of the lane lines.

■ Tactile, audible and visual alerts

Rapid vibrations on the steering wheel, audible and a warning display alert you that the vehicle is drifting out of a detected lane.

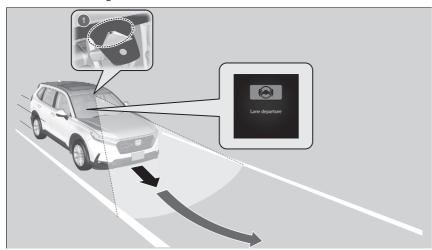

1 Front Sensor Camera: Monitors the lane lines

∑Lane Keeping Assist System (LKAS)

Important Safety Reminders

The LKAS is for your convenience only. It is not an autonomous driving system and always requires driver attention and control. The system does not work if you take your hands off the steering wheel or fail to steer the vehicle.

The LKAS is convenient when it is used on motorways or a dual carriage way.

Do not place objects on the instrument panel. Objects may reflect on the windscreen and prevent correct detection of the traffic lanes.

The LKAS only alerts you when lane drift is detected without a turn signal in use. The LKAS may not detect all lane markings or lane departures; accuracy will vary based on weather, speed, and lane marker condition.

It is always your responsibility to safely operate the vehicle and avoid collisions.

You can read about handling information for the camera equipped with this system.

Front Sensor Camera P. 682

The LKAS may not work properly or may work improperly under the certain conditions:


LKAS Conditions and Limitations P. 657

When you operate the turn signals to change lanes, the system is suspended, and resumes after the signals are off.

If you make a lane change without operating the turn signals, the LKAS alerts activate, and torque is applied to the steering.

■ Lane Keep Support Function

Provides assistance to keep the vehicle in the centre of the lane. When the vehicle nears a white or yellow line, steering force of the electric power steering will become stronger.

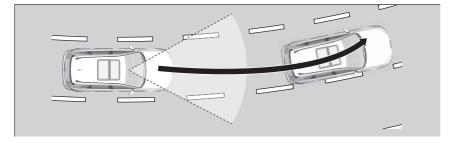


∑Lane Keeping Assist System (LKAS)

When it fails to detect lanes, the system will temporarily be cancelled. When a lane is detected, the system will recover automatically.

The LKAS may not function as designed while driving in frequent stop and go traffic, or on roads with sharp curves.

■ Lane Departure Warning Function

When the vehicle enters the warning area, the LKAS alerts you with slight steering wheel vibration, and audible and visual warnings.

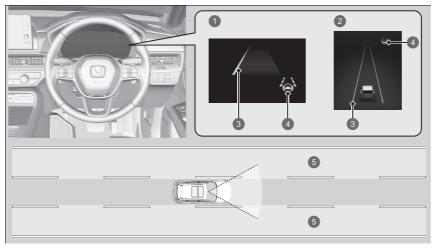

- Models with A-type meter
- Models with B-type meter
- Amber line
- 4 LKAS indicator (green)
- **6** Warning Area

■ When the System can be Used

The system can be used when the following conditions are met.


- The vehicle is travelling between about 72 and 180 km/h.
- The lane in which you are driving has detectable lane markers on both sides, and your vehicle is in the centre of the lane.
- You are driving on a straight or slightly curved road.
- The turn signals are off.
- The brake pedal is not depressed.

If the vehicle drifts towards either left or right lane line due to the system applying torque, turn off the LKAS and have your vehicle checked by a dealer.

Follow the points below to properly activate the system:

- Always keep the windscreen around the camera clean.
- When cleaning the windscreen, be careful not to apply windscreen cleanser to the camera lens.
- Do not touch the camera lens.
- Do not attach a sticker to the area around the camera.

■ How to activate the system

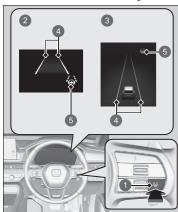


- 1 LKAS Button
- Models with A-type meter
- Models with B-type meter
- 4 White Lines
- **S** LKAS indicator (white)


- **1.** Press the LKAS button.
 - LKAS indicator (white) appears on the gauge.
 - The system is standby.
 - ► If traffic lane lines are detected, white lines appear on the gauge.

≫When the System can be Used

If LKAS button is pressed when the system $\overline{\text{can be}}$ used, LKAS is on without standby.

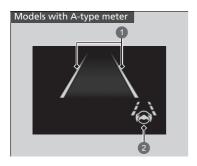

- Green lines
- 2 LKAS indicator (green)

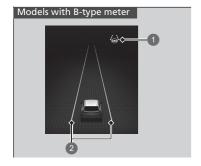

- 1 LKAS indicator (green)
- 2 Green lines

- **2.** Keep your vehicle near the centre of the lane while driving.
 - ➤ The LKAS indicator changes from white to green, and white lines change to green once the system starts operating after detecting the left and right lane markings.


■ To Cancel




Press the LKAS button.

The LKAS is turned off every time you stop the engine, even if you turned it on the last time you drove the vehicle.

1 LKAS Button

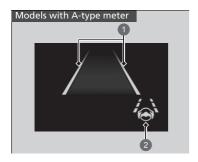

- White lines
- 2 LKAS indicator (white)

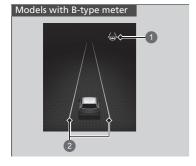

- 1 LKAS indicator (white)
- White lines

When the LKAS is suspended, green lines on the gauge change to white lines or disappear, and the beeper sounds (if activated).

- The system operation is suspended if you:
- Decrease the vehicle speed to about 64 km/h or less.
 - ► Increasing the vehicle speed to about 72 km/h or more resumes the LKAS.
- Depress the brake pedal.
 - ► The LKAS resumes and starts detecting the lane lines again once you release the brake pedal.
- Your vehicle is driving to the right or the left of the lane.

∑The system operation is suspended if you:

You can change the setting for the LKAS. LKAS suspended beep on and off can be selected.

- Settings* P. 185
- How to Customize the Vehicle Settings
 P. 467

■ The LKAS may be automatically suspended when:

- The system fails to detect lane lines.
- The steering wheel is turned quickly.
- You fail to steer the vehicle.
- Driving through a sharp curve.
- Driving at a speed in excess of approximately 185 km/h.
- The ABS or VSA system engages.

Once these conditions no longer exist, the LKAS automatically resumes.

■ The LKAS may be automatically cancelled when:

In the following cases, traffic lane lines may disappear on the gauge, the beeper may sound, and the LKAS may be automatically cancelled:

- The camera temperature gets extremely high.
- The camera behind the rearview mirror, or the area around the camera, including the windscreen, is dirty.

LKAS Conditions and Limitations


The system may not detect lane markings and therefore may not keep the vehicle in the middle of the lane under certain conditions, including the following:

■ Environmental conditions


- There is little contrast between lane lines and the roadway surface.
- Driving in bad weather (rain, fog, snow, etc.).
- Driving on a snowy or wet roadway.
- Driving into low sunlight (e.g., at dawn or dusk).
- Shadows of adjacent objects (trees, buildings, guard rails, vehicles, etc.) are parallel to white (or yellow) lines.
- Sudden changes between light and dark, such as the entrance or exit of a tunnel or the shadows of trees, buildings, etc.
- Driving at night or in a dark place such as a tunnel (due to low-light conditions, lane lines or the road surface may not be illuminated).
- The distance between your vehicle and the vehicle ahead of you is too short, and lane lines and the road surface are not visible.
- Strong light is reflected onto the roadway.

■ Roadway conditions

- Driving on a road with temporary lane markings.
- Faint, multiple, or varied lane markings are visible on the roadway due to road repairs or old lane markings.

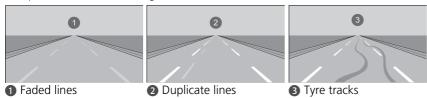


- The roadway has merging, split, or crossing lines, such as at an intersection or crosswalk.
- The lane markings are extremely narrow, wide, or changing.

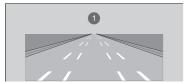

- Very wide or narrow traffic lane
- Part of the lane markings are hidden by an object, such as a vehicle.
- The road is hilly or the vehicle is approaching the crest of a hill.
- Your vehicle is strongly shaken on uneven road surfaces.
- When objects on the road (curb, guard rail, pylons, etc.) are recognised as white (or yellow) lines.
- Driving on rough or unpaved roads, or over bumpy surfaces.

- Driving on roads with double lane lines.
- Driving on snowy or slippery roads.
- The pavement is only partially visible due to snow or puddles on the road.
- There is a film of water or puddles on the road surface.
- White (or yellow) lines are not recognised correctly due to road conditions such as curves, twists, or hills.
- Driving on unpaved or rutted roads.
- Passing through a junction.

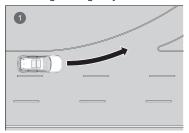

1 Lane void of lines at junction

■ Vehicle conditions

- When lighting is weak due to dirt covering the headlight lenses, or there is poor visibility in a dark place due to the headlights being improperly adjusted.
- The front of the camera is covered by dirt, fog, rain, mud, wet snow, seals, accessories, stickers, or film on the windscreen.
- Driving at night or in a dark place (e.g., a tunnel) with the headlights off.
- There is residue on the windscreen from the windscreen wipers.
- An abnormal tyre or wheel condition (incorrect sizes, varied sizes or construction, improperly inflated, compact spare tyre*, etc.).
- The vehicle is tilted due to a heavy luggage in the luggage area or rear seats.
- The suspension has been modified.
- Tyre chains* are installed.

Oceanian and African models with Right-hand Drive Type


• The vehicle is towing a trailer.

Traffic Jam Assist*

The Traffic Jam Assist system uses a camera mounted to the upper portion of the windscreen to detect and monitor left and right white (or yellow) traffic lane lines. Based on inputs from the camera, the system can apply steering torque to keep your vehicle in the centre of the detected lane.

■ How Traffic Jam Assist works

When you are in heavy traffic and Lane Keeping Assist System (LKAS) is active, the Traffic Jam Assist system, upon detecting the traffic lane lines, will apply steering torque to help keep your vehicle in the centre of the lane.

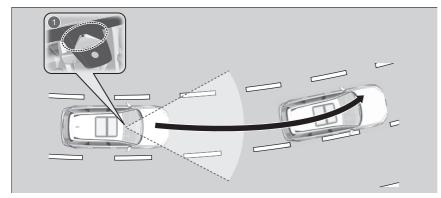

Front Sensor Camera
 Detects left and right white (or yellow) traffic lane lines

When you use the turn signal to indicate a lane change, Traffic Jam Assist is temporarily deactivated. It is reactivated once the vehicle is travelling in the centre of the lane and the system has detected the traffic lane lines.

>> Traffic Jam Assist *

Important Safety Reminders

Traffic Jam Assist is for your convenience only. It is not an autonomous driving system and always requires driver attention and control. The system does not work if you take your hands off the steering wheel or fail to steer the vehicle.

Traffic Jam Assist is convenient when it is used on motorways or a dual carriage way.

You can read about handling information for the camera equipped with this system.

Front Sensor Camera P. 682

The Traffic Jam Assist only alerts you when lane drift is detected without a turn signal in use. The Traffic Jam Assist may not detect all lane markings or lane departures; accuracy will vary based on weather, speed, and lane marker condition.

It is always your responsibility to safely operate the vehicle and avoid collisions.


Traffic Jam Assist may not work properly under certain conditions:

➡ Traffic Jam Assist: Conditions and Limitations P. 666 When the driver takes full control of the steering, the steering assist function is temporarily cancelled.

The torque applied to the steering may not be noticeable when the driver has full control of the steering, or when the surface of the road is rough or uneven.

■ Lane Departure Warning Function

When the vehicle enters the warning area, Traffic Jam Assist alerts you with an audible alert as well as a warning display.

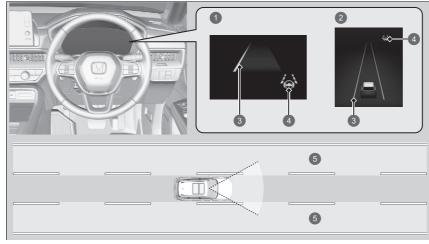

- Models with A-type meter
- 2 Models with B-type meter
- Amber line

- 4 LKAS indicator (green)
- Warning Area

■ Traffic Jam Assist Activation

Traffic Jam Assist is activated when all of the following conditions exist:

- LKAS is activated.
- The lane in which you are driving has detectable lane markers on both sides, and your vehicle is in the centre of the lane.
- The vehicle is travelling between about 0 and 72km/h.
- You are driving on a straight or slightly curved road.
- The driver is gripping the steering wheel.
- The shift position is in **D**, **S** or **L***.

Do not use Traffic Jam Assist in any of the following situations:

- You are travelling on a road with sharp curves.
 - ▶ The system may not allow your vehicle to respond in a manner best suited for the road conditions.
- You are entering a toll booth, interchange, service area, or parking area.
- You are driving in adverse weather (rain, fog, snow, etc.).
- The surface of the road is slippery; for example, it is icy or covered with snow.
 - ▶ The tyres may slip, causing you to lose control of the vehicle.

▼ Traffic Jam Assist Activation


Refer to the following page for proper handling of the Lane Keeping Assist System (LKAS):

■ Lane Keeping Assist System (LKAS) P. 648


Refer to the following page for steering buttons and displays:

- Doperation Switches for the Adaptive Cruise Control (ACC) with Low Speed Follow/Lane Keeping Assist System (LKAS)/Traffic Jam Assist* P. 594
- **Gauge Content** P. 595

■ How Traffic Jam Assist Works

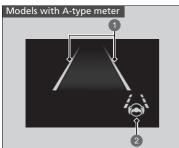

- Green lines
- 2 LKAS indicator (green)

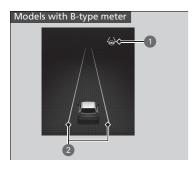

- 1 LKAS indicator (green)
- 2 Green lines

Keep your vehicle near the centre of the lane while driving.


➤ The LKAS indicator changes from white to green, and white lines change to green once the system starts operating after detecting the left and right lane markings.

If your vehicle veers too far to the right or the left of the white (or yellow) traffic lane lines while Traffic Jam Assist is active, deactivate Traffic Jam Assist and have your vehicle checked by a dealer.

In some cases the system cannot properly detect the traffic lane lines and, as a result, will not provide steering assistance.

► Traffic Jam Assist: Conditions and Limitations P. 666

If the driver takes their hands off the steering wheel or does not adequately maintain control of steering, the warning below will appear.

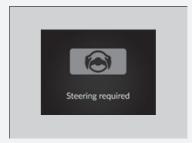

If the driver does not grip the steering wheel after the warning above has repeatedly appeared, a warning buzzer will sound and Traffic Jam Assist will be cancelled.

Cancelling Traffic Jam Assist

Press the LKAS button to cancel Traffic Jam Assist.

■ Traffic Jam Assist may be automatically suspended when:

The system is automatically temporarily cancelled under the following circumstances.

- The system fails to detect lane lines.
- The steering wheel is turned sharply.
- You fail to steer the vehicle.
- You are driving through a sharp curve.
- The brake pedal is depressed.

Once these conditions no longer exist, Traffic Jam Assist automatically resumes.

■ Traffic Jam Assist may be automatically cancelled when:

The traffic lane lines will disappear from the screen, the beeper may sound, and Traffic Jam Assist will be cancelled under the following circumstances:

- The temperature of the camera is too high.
- The camera behind the rearview mirror, or the area around the camera, including the windscreen, is dirty.

∑Traffic Jam Assist may be automatically suspended when:

You are travelling over 72km/h.

►When the speed of the vehicle reaches 72km/h, Traffic Jam Assist is deactivated. Once the speed of the vehicle drops to under 64 km/h, Traffic Jam Assist is reactivated.

You can change the setting for the Traffic Jam Assist. Traffic Jam Assist suspended beep on and off when you select the **Lane keep assist beep** on the audio/information screen.

► How to Customize the Vehicle Settings
P. 467

■ Traffic Jam Assist: Conditions and Limitations


The system may not detect lane markings and therefore may not keep the vehicle in the middle of the lane under certain conditions, including the following:

■ Environmental conditions


- There is little contrast between lane lines and the roadway surface.
- Driving in bad weather (rain, fog, snow, etc.).
- Driving on a snowy or wet roadway.
- Driving into low sunlight (e.g., at dawn or dusk).
- Shadows of adjacent objects (trees, buildings, guard rails, vehicles, etc.) are parallel to white (or yellow) lines.
- Sudden changes between light and dark, such as the entrance or exit of a tunnel or the shadows of trees, buildings, etc.
- Driving at night or in a dark place such as a tunnel (due to low-light conditions, lane lines or the road surface may not be illuminated).
- When the lane lines or road surface are not visible, such as when the distance to the vehicle in front of you is extremely short or when at a junction.
- Strong light is reflected onto the roadway.

■ Roadway conditions

- Driving on a road with temporary lane markings.
- Faint, multiple, or varied lane markings are visible on the roadway due to road repairs or old lane markings.

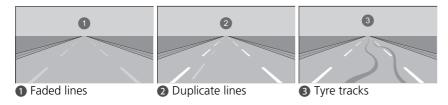


- The roadway has merging, split, or crossing lines, such as at an intersection or crosswalk.
- The lane markings are extremely narrow, wide, or changing.

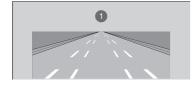

- Very wide or narrow traffic lane
- Part of the lane markings are hidden by an object, such as a vehicle.
- The road is hilly or the vehicle is approaching the crest of a hill.
- Your vehicle is strongly shaken on uneven road surfaces.

- When objects on the road (curb, guard rail, pylons, etc.) are recognised as white (or yellow) lines.
- Driving on rough or unpaved roads, or over bumpy surfaces.
- Driving on roads with double lane lines.
- Driving on snowy or slippery roads.
- The pavement is only partially visible due to snow or puddles on the road.
- There is a film of water or puddles on the road surface.
- White (or yellow) lines are not recognised correctly due to road conditions such as curves, twists, or hills.
- Driving on unpaved or rutted roads.
- Passing through a junction.

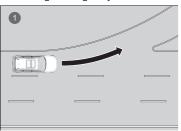

1 Lane void of lines at junction

■ Vehicle conditions

- When lighting is weak due to dirt covering the headlight lenses, or there is poor visibility in a dark place due to the headlights being improperly adjusted.
- The front of the camera is covered by dirt, fog, rain, mud, wet snow, seals, accessories, stickers, or film on the windscreen.
- Driving at night or in a dark place (e.g., a tunnel) with the headlights off.
- There is residue on the windscreen from the windscreen wipers.
- An abnormal tyre or wheel condition (incorrect sizes, varied sizes or construction, improperly inflated, compact spare tyre*, etc.).
- The vehicle is tilted due to a heavy luggage in the luggage area or rear seats.
- The suspension has been modified.
- Tyre chains are installed.


Oceanian models

• The vehicle is towing a trailer.

* Not available on all models

Lead Car Departure Notification System*

Informs you with visual and audible alerts when your vehicle is stopped even though the vehicle ahead of you has started moving.

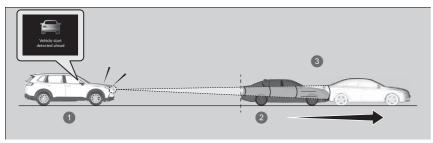

- When stopped
- Vehicle ahead is stopped
- Sehicle ahead starts moving

■ How the System Works

The system detects a stopped vehicle in front of you, on the condition that the vehicles are within 10 m of each other and both vehicles have been stopped for a period of time. When the detected vehicle moves but yours does not, the system will activate.

■ When the shift position is in D or S

The system will work when the brake pedal is depressed, the brake hold function of the automatic brake hold system is in operation, or the vehicle is stopped by ACC with Low Speed Follow.

AWARNING

Lead Car Departure Notification System is an supplemental system that provides driving assistance. It is not a system that informs you if it is safe to start driving.

Improper use of this system may lead to a collision.

Always visually confirm the safety of your surroundings before driving the vehicle and maintain a safe following-interval when driving.

For directions on the proper handling of the radar sensor, refer to the following page.

Radar Sensor P 684

You can read about handling information for the camera located behind the rearview mirror.

Front Sensor Camera P. 682

Like other assistance systems, this system may not function properly depending on weather, environmental conditions, and so on.

■ When the shift position is in N

The system will work when the vehicle is stopped, the brake pedal is depressed, the parking brake is in operation, or the brake hold function of the automatic brake hold system is in operation.

You can choose from two system operation timing modes, **Normal** and **Early**.

Settings* P. 185

▶ How to Customize the Vehicle Settings P. 467

In Normal mode, the system operates when the vehicle ahead of you has moved approximately 3 m from where it stopped.

In Early mode, the system operates as soon as movement has been detected.

You can turn off the Lead Car Departure Notification System.


Settings* P. 185

► How to Customize the Vehicle Settings P. 467

The Lead Car Departure Notification System will not activate while the Adaptive Cruise Control (ACC) with Low Speed Follow Indicator (amber) is on.

Adaptive Cruise Control (ACC) with Low Speed Follow P. 626

■ When the System Activates

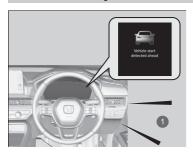

The beeper sounds and a message appears on the driver information interface when the system is activated.

1 Audible Alert

■ Lead Car Departure Notification System Conditions and Limitations

In the following conditions, the system may or may not activate regardless of whether the vehicle ahead of you starts to move.

Examples of cases when the radar sensor cannot properly detect another vehicle due to vehicle condition

- The vehicle is tilted due to a heavy luggage or suspension modifications.
- The front grill is dirty.
- When the vehicle was only stopped for a short time.

■ Examples of cases when the radar sensor cannot properly detect another vehicle due to environmental conditions

- Weather conditions are poor (rain, fog, snow, etc.).
- Water or snow has been stirred up or sprayed by the vehicle ahead of you.

■ Examples of cases when the radar sensor cannot properly detect the vehicle ahead of you due to road conditions

- The road is curvy, winding, or sloping.
- There are objects around your vehicle that reflect radio waves strongly, such as when driving through a narrow metal bridge.

■ Examples of cases when the radar sensor cannot properly detect the vehicle ahead of you due to the conditions of the vehicle itself

- The vehicle ahead of you was only stopped for a short time.
- The space between your vehicle and the vehicle ahead of you is too short.
- The vehicle ahead of you is moving too slowly.
- The vehicle ahead of you turns right, left, or around suddenly.

■ Examples of cases when the radar sensor cannot properly detect the vehicle ahead of you due to other conditions

- There is a pedestrian, bicycle, or mobility scooter in front of your vehicle, or the vehicle ahead of you has a unique shape.
- Another vehicle, pedestrian or bicycle suddenly moves between your vehicle and the vehicle ahead of you.
- The vehicle ahead of you is not directly in front of you.

Traffic Sign Recognition System*

Reminds you of road sign information, such as the current speed limit your vehicle has just passed through, showing it on the gauge.

How the System Works

When the camera located behind the rearview mirror captures traffic signs while driving, the system displays the ones that are recognised as designated for your vehicle. The sign icon will be displayed until the vehicle reaches a predetermined time and distance.

If the system does not detect any traffic signs while you are driving, the sign icon will not be displayed.

∑Traffic Sign Recognition System *

Not all signs may be displayed, but any signs posted on roadsides should not be ignored. The system does not work on the designated traffic signs of all the countries you travel, nor in all situations. Do not rely too much on the system. Always drive at speeds appropriate for the road conditions.


Never apply a film or attach any objects to the windscreen that could obstruct the camera's field of vision and cause the system to operate abnormally. Scratches, nicks, and other damage to the windscreen within the camera's field of vision can cause the system to operate abnormally. If this occurs, we recommend that you replace the windscreen with a genuine Honda replacement windscreen. Making even minor repairs within the camera's field of vision or installing an aftermarket replacement windscreen may also cause the system to operate abnormally. After replacing the windscreen, have a dealer recalibrate the camera. Proper calibration of the camera is necessary for the system to operate properly.

You can read about handling information for the camera equipped with this system.

Front Sensor Camera P. 682

You can turn the Traffic Sign Recognition System on and off.

► How to Customize the Vehicle Settings P. 467

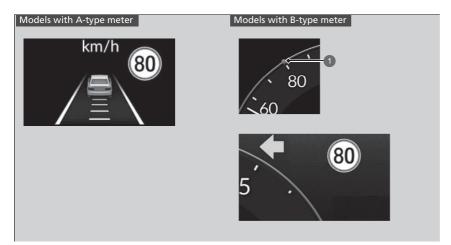

Speed Limit Sign

The sign icon also may switch to another one, or disappear when:

- The end of speed limit or other designated limit is detected.
- Your vehicle enters/exits motorway or highway.
- You make a turn with a turn signal at an intersection.

∑Traffic Sign Recognition System *

To help reduce the likelihood that high interior temperatures will cause the camera's sensing system to shut off, when parking, find a shady area or face the front of the vehicle away from the sun. If you use a reflective sun shade, do not allow it to cover the camera housing.

Covering the camera can concentrate heat on it.

If your vehicle exceeds the detected speed limit, an icon representing the speed limit sign for the current area will blink in the display.

▶ How to Customize the Vehicle Settings P. 467

The system's ability to accurately notify the driver of the speed limit is dependent on certain conditions such as the units displayed on the traffic sign as well as the speed and direction of travel of the vehicle. In some cases, the system may display false warnings or other inaccurate information.

■ Traffic Sign Recognition System Conditions and Limitations P. 677

Traffic Sign Recognition System Conditions and Limitations

The Traffic Sign Recognition system may incorrectly recognise, be slow to identify, or fail to recognise the traffic sign in the following cases.

■ Environmental conditions

- Driving into low sunlight (e.g., at dawn or dusk).
- Strong light is reflected onto the roadway.
- Driving at night, in dark areas such as long tunnels.
- Driving in bad weather (rain, fog, snow, etc.).
- Sudden changes between light and dark, such as the entrance or exit of a tunnel or the shadows of trees, buildings, etc.
- Water is sprayed by or snow blown from a vehicle ahead.

■ Roadway conditions

• Your vehicle is strongly shaken on uneven road surfaces.

■ Vehicle conditions

- When lighting is weak due to dirt covering the headlight lenses, or there is poor visibility in a dark place due to the headlights being improperly adjusted.
- The outside of the windscreen is blocked by dirt, mud, leaves, wet snow, etc.
- There is residue on the windscreen from the windscreen wipers.
- An abnormal tyre or wheel condition (incorrect sizes, varied sizes or construction, improperly inflated, compact spare tyre*, etc.).
- The vehicle is tilted due to heavy luggage in the luggage area or rear seats.
- The suspension has been modified.
- Tyre chains are installed.
- Driving at night or in a dark place (e.g., a tunnel) with the headlights off.
- The vehicle is towing a trailer.

■Traffic Sign Recognition System Conditions and Limitations

When the Traffic Sign Recognition System malfunctions, \square appears on the gauge. If this message does not disappear, have your vehicle checked by a dealer.



■ The position or the condition of the traffic sign

- The sign is in a place that makes it hard to find.
- The sign is located far away from your vehicle.
- The sign is located where it is hard for headlight beams to reach.
- The sign is on a corner or bend in the road.
- The sign is faded or bent.
- The sign is rotated or damaged.
- The sign is covered with mud, snow, or frost.
- Part of the sign is hidden by the trees, or is in the shadow of a vehicle or other object.
- Light (such as a streetlight) is reflected on the surface of the sign, or it is hidden in shadow.
- The sign is too bright or too dark (electric signs).
- Small signs (auxiliary signs, etc.).

■ Other conditions


• When you are driving at a high speed.

The Traffic Sign Recognition System may not operate correctly, such as displaying signs that do not adhere to the actual regulations for the roadway or do not exist at all in the following cases.

- ► A speed limit sign may display at a higher or lower speed than the actual speed limit
- There is a supplementary sign with further information such as weather, time, vehicle type, etc.
- Figures on the sign are hard to read (electric signs, numbers on the sign are blurred, etc.).
- The sign is in the vicinity of the lane you are driving in, even though it is not for the lane, such as a speed limit sign situated at the junction between the side road and the main road.
- There are things that look similar in colour or shape to recognised objects (similar sign, electric sign, signboard, structure, etc.).


■ Signs Displayed on the Gauge

Up to two speed limit signs can be simultaneously displayed next to each other when detected. Speed limit icons can be displayed on the gauge. Additional signs that indicate speed limit based on specific period of time can also appear.

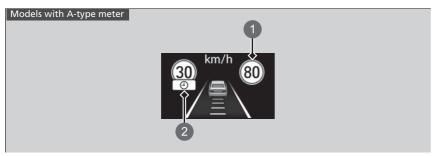

- Speed Limit Sign
- 2 Additional Speed Limit Sign Based on Conditions*1

Depending on situation, *1 can appear on the right side.

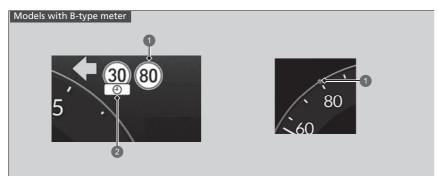


- 1 Speed Limit Sign
- 2 Additional Speed Limit Sign Based on Conditions*1

Depending on situation, *1 can appear on the right side.

Front Sensor Camera

The camera, used in systems such as Collision Mitigation Braking System (CMBS), Road Departure Mitigation System, Adaptive Cruise Control (ACC) with Low Speed Follow, Lane Keeping Assist System (LKAS), Traffic Jam Assist*, Lead Car Departure Notification System*, Traffic Sign Recognition system*, and Auto High-Beam, is designed to detect an object that triggers any of the systems to operate their functions.

Camera Location and Handling Tips

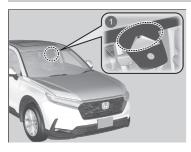

Front Sensor Camera

This camera is located behind the rearview mirror

To help to reduce the likelihood that high interior temperatures will cause the camera's sensing system to shut off, when parking, find a shady area or face the front of the vehicle away from the sun. If you use a reflective sun shade, do not allow it to cover the camera housing. Covering the camera can concentrate heat on it.

Never apply a film or attach any objects to the windscreen, the bonnet, or the front grille that could obstruct the camera's field of vision and cause the system to operate abnormally.

Scratches, nicks, and other damage to the windscreen within the camera's field of vision can cause the system to operate abnormally. If this occurs, we recommend that you replace the windscreen with a genuine Honda replacement windscreen. Making even minor repairs within the camera's field of vision or installing an aftermarket replacement windscreen may also cause the system to operate abnormally.

After replacing the windscreen, have a dealer recalibrate the camera. Proper calibration of the camera is necessary for the system to operate properly.

Do not place an object on the top of the instrument panel. It may reflect onto the windscreen and prevent the system from detecting lane lines properly.

>> Front Sensor Camera

If the Some driver assist systems cannot operate: Camera temperature too high message appears:


- Use the climate control system to cool down the interior and, if necessary, also use demister mode with the airflow directed towards the camera.
- Start driving the vehicle to lower the windscreen temperature, which cools down the area around the camera.

If the Some driver assist system cannot operate: Clean front windscreen or poor viewing condition. message appears:

 Park your vehicle in a safe place, and make sure the windscreen is clean.

Clean the windscreen if it is dirty. If the message does not disappear after driven for a while, have your vehicle checked by a dealer.

Radar Sensor

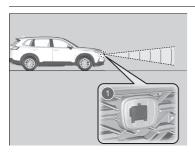

The radar sensor is behind the Honda emblem on the front grille.

Radar Sensor

■ Radar Sensor

For the system to work properly, observe the following precautions.

- Always keep the emblem and front grille clean.
- Never use chemical solvents or polishing powder for cleaning the emblem and front grille. Clean it with water or a mild detergent.
- Do not put any stickers or paint on the emblem or front grille.
- Do not scratch or damage the emblem or front grille.
- Do not replace the emblem, front grille, or bumper.
- Do not remove or disassemble the radar sensor.

Consult a dealer if:

- The radar sensor cover is strongly impacted.
- The front grille or bumper needs to be repaired.


If the vehicle is involved in any of the following situations, the radar sensor may not work properly. Have your vehicle checked by a dealer:

- Your vehicle is involved in a frontal collision.
- Your vehicle drives through deep water or is submerged in deep water.
- Your vehicle strongly strikes a bump, curb, chock, slope, or embankment that could jar the radar sensor.


Sonar Sensors*

■ Location and range of sensors

The sonar sensors are situated in the front and rear bumpers.

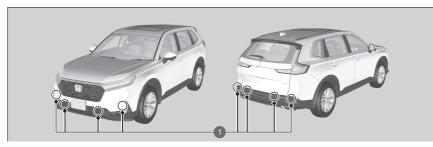

Sonar Sensors

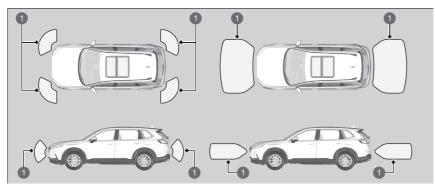

Sensor Range

Sonar Sensors *

For the sonar sensors to work properly, do not:

- Place stickers or other objects on or around the sensors.
- Hit the area around the sensors.
- Attempt to take apart any sensor.
- Put any accessories on or around the sensors.

Consult with a dealer if:

- A sensor has been subjected to shock.
- Work needs to be done to the area around a sensor.

In the following cases, the sonar sensors may not work properly. Have your vehicle checked by a dealer.

- The front or rear bumper has made contact with a hill, parking block, curb, embankment, etc.
- The vehicle has been involved in frontal or rear collision.
- The vehicle has been driven through a deep puddle.

Braking

Brake System

■ Parking Brake

Use the parking brake to keep the vehicle stationary when parked. When the parking brake is applied, you can manually or automatically release it.



Electric Parking Brake Switch



1 Electric Parking Brake Switch

■ To apply

The electric parking brake can be applied any time the vehicle has battery, no matter which position the power mode is in.

Pull the electric parking brake switch up gently and securely.

- ► The indicator in the switch comes on.
- ► The parking brake and brake system indicator (red) comes on.

■ To release

The power mode must be in ON in order to release the electric parking brake.

- 1. Depress the brake pedal.
- **2.** Press the electric parking brake switch.
 - ▶ The indicator in the switch goes off.
 - ► The parking brake and brake system indicator (red) goes off.

Manually releasing the parking brake using the switch helps your vehicle to start slowly and smoothly when facing downhill on steep hills.

■Brake System

When you depress the brake pedal, you may hear a whirring sound from the engine compartment. This is because the brake system is in operation, and it is normal.

▶ Parking Brake

You may hear the electric parking brake system motor operating from the rear wheel area when you apply or release the parking brake. This is normal.

The brake pedal may slightly move due to the electric parking brake system operation when you apply or release the parking brake. This is normal.

You cannot apply or release the parking brake if the battery goes dead.

≥ If the Battery Is Dead P. 824

If you pull up and hold the electric parking brake switch while driving, the brakes on all four wheels are applied by the VSA system until the vehicle comes to a stop. The electric parking brake then applies, and the switch should be released.

■ Automatic parking brake feature operation


If the automatic parking brake feature has been activated:

- The parking brake is applied automatically when you set the power mode to VEHICLE OFF.
- To confirm that the parking brake is applied, check if the parking brake and brake system indicator (red) is on.
 - \blacksquare Activating and deactivating the automatic parking brake feature <code>P. 688</code>

■ To release automatically

Depressing the accelerator pedal releases the parking brake.

Use the accelerator pedal to release the parking brake when you are starting the vehicle facing uphill, or in a traffic jam.

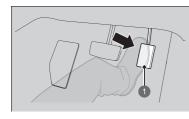

Gently depress the accelerator pedal. When on a hill, it may require more accelerator input to release.

➤ The parking brake and brake system indicator (red) goes off.

Accelerator Pedal

You can release the parking brake automatically when:

- You are wearing the driver's seat belt.
- The engine is running.
- The transmission is not in **P** or **N**.

▶ Parking Brake

In the following situations, the parking brake automatically operates.

- When the vehicle stops more than 10 minutes while Adaptive Cruise Control (ACC) with Low Speed Follow is activated.
- When the driver's seat belt is unfastened while your vehicle is stopped automatically by ACC with Low Speed Follow.
- When the engine is turned off, except by Auto Idle Stop system*, while ACC with Low Speed Follow is activated.
- When the vehicle stops with the automatic brake hold system activated for more than 10 minutes.
- When the driver's seat belt is unfastened while your vehicle is stopped and brake hold is applied.
- When the engine is turned off, except by Auto Idle Stop system*, while brake hold system is applied.
- When there is a problem with the brake hold system while brake hold is applied.

If the parking brake cannot be released automatically, release it manually.

When the vehicle is travelling uphill, the accelerator pedal may need to be pressed farther to automatically release the electric parking brake.

The parking brake cannot be released automatically while the following indicators are on:

- Malfunction indicator lamp
- Transmission system indicator

■ Activating and deactivating the automatic parking brake feature

With the power mode in ON, carry out the following steps to either activate or deactivate the automatic parking brake feature.

- **1.** Put the transmission into **P**.
- 2. Without depressing the brake pedal, pull up and release the electric parking brake switch.
 - ► Check that the parking brake and brake system indicator (red) has come on.
- **3.** Pull up and hold the electric parking brake switch. When you hear a beeping sound, release the switch and within three seconds pull up and hold the switch again.
- **4.** When you hear a sound indicating that the procedure is completed, release the switch.
 - Two beeps indicates that the feature has been activated.
 - ▶ One beep indicates that the feature has been deactivated.
 - ▶ When you have completed activating the feature, the parking brake will remain applied after you turn off the engine.
 - ➤ To confirm that the parking brake is applied, check if the parking brake and brake system indicator (red) is on.

If you need to temporarily deactivate the feature for when having your vehicle towed, follow the procedure explained below.

- **1.** Depress the brake pedal and bring the vehicle to a stop.
- **2.** Set the power mode to VEHICLE OFF and then within two seconds push down the electric parking brake switch.
 - Activation and deactivation settings for the feature will not be affected.
 - Before temporarily deactivating the feature, make sure to first turn off both Adaptive Cruise Control (ACC) with Low Speed Follow and the automatic brake hold system.
 - ➤ To confirm that the parking brake is applied, check if the parking brake and brake system indicator (red) is on.

▶ Parking Brake

The parking brake may not be released automatically while the following indicators are on:

- Parking brake and brake system indicator (amber)
- VSA system indicator
- ABS indicator
- Supplemental restraint system indicator

Mactivating and deactivating the automatic parking brake feature

In cold climates, the parking brake may freeze in place if applied.

When parking the vehicle, chock the wheels and make sure the automatic parking brake feature is deactivated.

Also, when putting your vehicle through a conveyortype car wash or when having your vehicle towed, deactivate the automatic parking brake feature and leave the parking brake released.

■ Foot Brake

Your vehicle is equipped with disc brakes at all four wheels. The brake assist system increases the stopping force when you depress the brake pedal hard in an emergency situation. The anti-lock brake system (ABS) helps you to retain steering control when braking very hard.

Brake Assist System P. 694

► Anti-lock Brake System (ABS) P. 693

>> Foot Brake

Check the brakes after driving through deep water, or if there is a buildup of road surface water. If necessary, dry the brakes by lightly depressing the pedal several times.

If you hear a continuous metallic friction sound when applying the brakes, the brake pads need to be replaced. Have your vehicle checked by a dealer.

Constantly using the brake pedal while going down a long hill builds up heat, which reduces the brake effectiveness. Apply engine braking by taking your foot off the accelerator pedal and downshifting to a speed position.

Do not rest your foot on the brake pedal while driving, as it will lightly apply the brakes and cause them to lose effectiveness over time and reduce pad life. It will also confuse drivers behind you.

Whenever the brakes are activated by CMBS or another system that automatically controls braking, the brake pedal is depressed and released in accordance with braking function.

Continued 689

Automatic Brake Hold

Keeps the brake applied after releasing the brake pedal until the accelerator pedal is pressed. You can use this system while the vehicle is temporarily stopped, like at traffic lights and in heavy traffic.

■ Turning on the system



- Automatic Brake Hold Button
- 2 Comes On

Fasten your seat belt properly, then start the engine. Press the automatic brake hold button

➤ The automatic brake hold system indicator comes on. The system is turned on.

The system is in the previously selected on or off setting each time you fasten the driver's seat belt and start the engine.

■ Automatic Brake Hold
 ■ Automatic

AWARNING

Activating the automatic brake hold system on steep hills or slippery roads may still allow the vehicle to move if you remove your foot from the brake pedal.

If a vehicle unexpectedly moves, it may cause a crash resulting in serious injury or death.

Never activate the automatic brake hold system or rely on it to keep a vehicle from moving when stopped on a steep hill or slippery roads.


AWARNING

Using the automatic brake hold system to park the vehicle may result in the vehicle unexpectedly moving.

If a vehicle moves unexpectedly, it may cause a crash, resulting in serious injury or death.

Never leave the vehicle when braking is temporarily kept by automatic brake hold and always park the vehicle by putting the transmission in P and applying the parking brake.

■ Activating the system

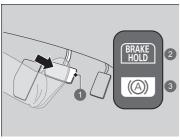

- Brake Pedal
- On
- Comes On

Depress the brake pedal to come to a complete stop. The transmission must not be in \boxed{P} or \boxed{R} .

- ➤ The automatic brake hold indicator comes on. Braking is kept for up to 10 minutes.
- Release the brake pedal after the automatic brake hold indicator comes on.

>> Automatic Brake Hold


AWARNING

When using the automatic brake hold, keep your foot on the brake pedal until the automatic brake hold indicator comes on.

If the vehicle unexpectedly moves, it may cause a crash resulting in serious injury or death.

Release your foot from the brake pedal after the automatic brake hold indicator comes on.

■ Cancelling the system

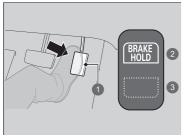

- Accelerator Pedal
- On
- Goes Off

Depress the accelerator pedal while the transmission is in a position other than $\boxed{\mathbf{P}}$ or $\boxed{\mathbf{N}}$. The system is cancelled and the vehicle starts to move.

► The automatic brake hold indicator goes off. The system continues to be on.

Continued 691


■ The system automatically cancels when:

- You engage the parking brake.
- You depress the brake pedal and put the transmission into P or R.

■ The system automatically cancels and the parking brake is applied when:

- Braking is kept for more than 10 minutes.
- The driver's seat belt is unfastened.
- The engine is turned off.
- There is a problem with automatic brake hold system.

■ Turning off the automatic brake hold system

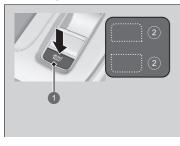

- Automatic Brake Hold Button
- Goes Off

Only the automatic brake hold system indicator comes on:

- Press the automatic brake hold button.
 - ► The automatic brake hold system indicator goes off.

When the automatic brake hold indicator comes on at the same time:

- Press the automatic brake hold button with the brake pedal depressed.
 - The automatic brake hold system indicator and the automatic brake hold indicator go off.

While the system is activated, you can turn off the engine or park the vehicle through the same procedure as you normally do.

₩hen Stopped P. 696

You may hear an operating noise if the vehicle moves while the automatic brake hold system is in operation.

∑Turning off the automatic brake hold system

Make sure to turn off the automatic brake hold system before using an automated car wash.

If you turn off the engine or unfasten the driver's seat belt while the automatic brake hold system is on, the automatic brake hold system will automatically turn off. In this case, when the driver's seat belt is fastened and the engine is turned back on, the automatic brake hold system will turn on without needing to press the automatic brake hold button.

Anti-lock Brake System (ABS)

ABS

Helps to prevent the wheels from locking up, and helps you to retain steering control by pumping the brakes rapidly, much faster than you can.

The electronic brake distribution (EBD) system, which is part of the ABS, also balances the front-to-rear braking distribution according to vehicle loading.

You should never pump the brake pedal. Let the ABS work for you by always keeping firm, steady pressure on the brake pedal. This is sometimes referred to as "stomp and steer."

■ ABS operation

The brake pedal may pulsate slightly when the ABS is working. Depress the brake pedal and keep holding the pedal firmly down. On dry pavement, you will need to press on the brake pedal very hard before the ABS activates. However, you may feel the ABS activate immediately if you are trying to stop on snow or ice.

ABS may activate when you depress the brake pedal when driving on:

- Wet or snow covered roads.
- Roads paved with stone.
- Roads with uneven surfaces, such as potholes, cracks, manholes, etc.

When the vehicle speed goes under 10 km/h, the ABS stops.

Mari Anti-lock Brake System (ABS)

Mari Anti-

NOTICE

The ABS may not function correctly if you use a tyre of the incorrect size or type.

If the **ABS** indicator comes on while driving, there may be a problem with the system.

While normal braking will not be affected, there is a possibility that the ABS will not be operating. Have your vehicle checked by a dealer immediately.

The ABS is not designed for the purpose of reducing the time or distance it takes for a vehicle to stop: It is designed to limit brake lockup which can lead to skidding and loss of steering control.

In the following cases, your vehicle may need more distance to stop than a vehicle without the ABS:

- You are driving on rough or uneven road surfaces, such as gravel or snow.
- The tyres are equipped with tyre chains*.

The following may be observed with the ABS system:

- Motor sounds coming from the engine compartment when the brakes are applied, or when system checks are being performed after the engine has been started and while the vehicle accelerates.
- Brake pedal and/or the vehicle body vibration when ABS activates.

These vibrations and sounds are normal to ABS systems and are no cause for concern.

* Not available on all models

Brake Assist System

Is designed to assist the driver by generating greater braking force when you depress the brake pedal hard during emergency braking.

■ Brake assist system operation


Press the brake pedal firmly for more powerful braking.

When brake assist operates, the pedal may wiggle slightly and an operating noise may be heard. This is normal. Keep holding the brake pedal firmly down.

Emergency Stop Signal

Activates when you brake hard while driving at 60 km/h or above to alert drivers behind you about sudden braking by rapidly flashing hazard warning lights. This may help to alert drivers behind you to take appropriate means to avoid a possible collision with your vehicle.

■ When the system activates:

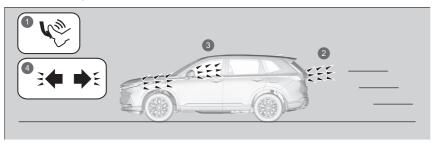

- 1 Hard Braking
- 2 Brake Lights Come On
- 3 Hazard Warning Lights Flash
- 4 Hazard Warning Indicators Blink

The hazard warning lights stop flashing when:

- You release the brake pedal.
- The ABS is deactivated.
- Your vehicle's decelerating speed becomes moderate.
- You press the hazard warning button.

The emergency stop signal is not a system that can prevent a possible rear-end collision caused by your hard braking. It flashes the hazard warning lights at the time you are braking hard. It is always recommended to avoid hard braking unless it is absolutely necessary.

The emergency stop signal does not activate with the hazard warning button pressed in.

If the ABS stops working for a certain period during braking, the emergency stop signal may not activate at all.

Parking Your Vehicle

When Stopped

- **1.** Depress the brake pedal firmly.
- 2. With the brake pedal depressed, pull up the electric parking brake switch slowly, but fully.
- **3.** Put the transmission into **P**.
- 4. Turn off the engine.
 - ▶ The parking brake and brake system indicator (red) goes off in about 30 seconds.

Always set the parking brake, especially if you are parked on an incline.

▶ Parking Your Vehicle

AWARNING

The vehicle can roll away if left unattended without confirming that Park is engaged.

A vehicle that rolls away could cause a crash resulting in serious injury or death.

Always keep your foot on the brake pedal until you have confirmed that P is shown on the shift position indicator.

Do not park your vehicle near flammable objects, such as dry grass, oil, or timber.

Heat from the exhaust can cause a fire

When Stopped

NOTICE

The following can damage the transmission:


- Depressing the accelerator and brake pedals simultaneously.
- Holding the vehicle in place when facing uphill by depressing the accelerator pedal.
- Putting the transmission into P before the vehicle stops completely.

In extremely cold temperatures, the parking brake may freeze up if applied. If such temperatures are expected, do not apply the parking brake but, if parking on a slope, either turn the front wheels so they will contact the curb if the vehicle rolls down the slope or block the wheels to keep the vehicle from moving. If you do not take either precaution, the vehicle may roll unexpectedly, leading to a crash.

Parking Sensor System*

The corner and centre sensors monitor obstacles around your vehicle, and the beeper, driver information interface and audio/information screen let you know the approximate distance between your vehicle and the obstacle.

■ The sensor location and range

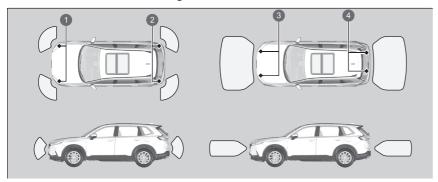

- 1 Front Corner Sensors*
- 2 Rear Corner Sensors
- Front Centre Sensors*
- A Rear Centre Sensors

▶ Parking Sensor System *

Even when the system is on, always confirm if there is no obstacle near your vehicle before parking.

The system may not work properly when:

- The sensors are covered with snow, ice, mud, or dirt.
- The vehicle has been out in hot or cold weather.
- There is something nearby that emits ultrasonic waves or high frequency sounds.
- Driving in bad weather (rain, fog, snow, etc.).

The system may not detect these obstacles:

- Thin or low objects.
- Sonic-absorptive materials, such as snow, cotton, or sponge.
- Objects directly under the bumper.

The system may falsely detect obstacles in the following situations:

- The vehicle is on uneven surface, such as grass, bumps, or a hill.
- When close to other vehicles with sonar sensors or other objects that emit ultrasonic waves.
- There is splashing water near the sensors due to heavy rains, etc.

Do not put any accessories on or around the sensors. Models with front sensors

- ▶If you put any accessories (such as a towing hitch* or bicycle rack) on or around the rear sensors, the system may activate if it detects these accessories as an obstacle. In this case, turn off the rear sensor.
 - ► How to Customize the Vehicle Settings P. 467

■ Parking sensor system on and off

You can turn the system on and off using the driver information interface.

Switching the Display P. 169, 196

Safety Support P. 181, 208

The front corner*, rear corner and rear centre sensors start to detect an obstacle when the transmission is in $\boxed{\mathbf{R}}$, and the vehicle speed is less than 8 km/h.

Models with front sensors

The front corner and front centre sensors start to detect an obstacle when the transmission is in any position other than \boxed{P} or \boxed{R} , and the vehicle speed is less than 8 km/h.

▶ Parking Sensor System *

When you set the power mode to ON, the system will be in the previously selected condition.

Models with front sensors

You can turn the rear parking sensor system on and off using the audio/information screen.

► How to Customize the Vehicle Settings P. 467

Models with Multi-View Camera


When the vehicle is moving forward at 8 km/h or less, the system detects any obstacles in front of the vehicle and the forward camera image will display as the distance between them decreases.

Multi-View Camera* P. 710

You can customize whether or not to display the forward camera image when an obstacle is detected.


■ Customized Features P. 458

■ Screen Operation

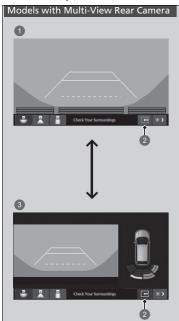

You can switch between split view off and split view on by touching the split screen tab.

- Split View Off
- 2 Split Screen Tab
- 3 Split View On

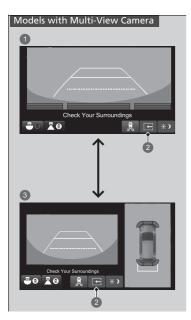

- Split View Off
- Split Screen Tab
- 3 Split View On

Continued 701

■ When the distance between your vehicle and detected obstacles becomes shorter

| Interval between beeps | Distance between the Bumper and Obstacle | | la di satan | Driver information | Audio/information |
|------------------------------|--|--|--|--------------------|------------------------------------|
| | Corner Sensors | Centre Sensors | Indicator | interface | screen |
| Moderate | - | Front*: About 65-55 cm Rear: About 110-70 cm | Comes on*1/ Blinks*2 in Yellow*3 | Approaching object | Models with Multi-View Rear Camera |
| Short | About 60-45 cm | Front*: About 55-45 cm Rear: About 70-55 cm | Comes on*1/ Blinks*2 in | | |
| Very short | About 45-35 cm | Front*: About 45-35 cm Rear: About 55-45 cm | Amber | | |
| Continuous | About 35 cm or less | Front*: About 35 cm or less Rear: About 45 cm or less | Comes on*1/ Blinks* ² in Red | | Models with Multi-View Camera |

- *1:On the driver information interface
- *2:On the audio/information screen
- *3:At this stage, only the centre sensors detect obstacles.
- 1 Indicators light up where the sensor detects an obstacle.

To temporarily turn off the beeper, press the left*4 or right*5 selector wheel while it is sounding. Temporary OFF will be cancelled when the shift position is switched or the vehicle speed reaches 14 km/h or higher.

^{*4:} Models with A-type meter

^{*5:} Models with B-type meter

Cross Traffic Monitor*

Monitors the rear corner areas using the radar sensors when reversing, and alerts you if a vehicle approaching from a rear corner is detected.

The system is convenient when you are backing out of a parking space.

ACAUTION


Cross Traffic Monitor cannot detect all approaching vehicles and may not detect an approaching vehicle at all.

Failure to visually confirm that it is safe to back up the vehicle before doing so may result in a collision.

Do not solely rely on the system when reversing; always also use your mirrors, and look behind and to the sides of your vehicle before reversing.

The parking sensor system's alerting buzzer overrides the Cross Traffic Monitor buzzer when the sensors are detecting obstacles at the closest range.

How the System Works

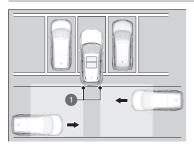

The system activates when:

- The power mode is in ON.
- The Cross Traffic Monitor is turned on. Cross Traffic Monitor On and Off P. 707
- The transmission is in **R**.
- Your vehicle is moving at 5 km/h or lower.

Radar sensors: Underneath the rear bumper corners.

When a vehicle is detected approaching from a rear corner, Cross Traffic Monitor alerts you with a buzzer and a displayed warning.

The system will not detect a vehicle that approaches from directly behind your vehicle, nor will it provide alerts about a detected vehicle when it moves directly behind your vehicle.

The system does not provide alerts for a vehicle that is moving away from your vehicle, and it may alert for pedestrians, bicycles, or stationary objects.

Cross Traffic Monitor*

Cross Traffic Monitor may not detect or may delay detecting an approaching vehicle, or may alert detection without an approaching vehicle under the following conditions:

- An obstacle, such as another vehicle or a wall near your vehicle's rear bumper, is blocking the radar sensor's scope.
- Your vehicle is moving at a speed of about 5 km/h or higher.
- A vehicle is approaching at a speed other than between about 10 km/h and 25 km/h.
- The system picks up external interference such as other radar sensors from another vehicle or strong radio wave transmitted from a facility nearby.
- Either corner of the rear bumper is covered with snow, ice, mud or dirt.
- When there is bad weather.
- Your vehicle is on an incline.
- Your vehicle is tilted due to a heavy luggage in the rear.
- Your vehicle is reversing towards a wall, a pole, a vehicle, and so on.
- When driving for long distances on a road in a trafficless area such as a desert.

If the rear bumper or the sensors have been improperly repaired or the rear bumper has been deformed. Have your vehicle checked by a dealer.

For proper operation, always keep the rear bumper corner area clean.

Do not cover the rear bumper corner area with labels or stickers of any kind.

When the System Detects a Vehicle

An arrow icon appears on the side a vehicle is approaching on the audio/information screen.



- Arrow Icon
- 2 Normal View
- Wide View
- 4 Top Down View



- Arrow Icon
- Rear Ground View
- Rear Wide View
- 4 Rear Normal View

If the son the lower right changes to so in amber when the transmission is in R, mud, snow, ice and other debris may have accumulated in the vicinity of the sensor. The system is temporarily cancelled. Check the bumper corners for any obstructions, and thoroughly clean the area if necessary.

If the $\boxed{\mathbb{R}}$ comes on when the transmission is in $\boxed{\mathbb{R}}$, there may be a problem with the Cross Traffic Monitor system. Do not use the system and have your vehicle checked by a dealer.

If the display remains the same with the transmission in $\lceil R \rceil$, there may be a problem with the rear camera system and the Cross Traffic Monitor system. Do not use the system and have your vehicle checked by a dealer.

■ Cross Traffic Monitor On and Off



Cross Traffic Monitor icon.

You can also switch the system on and off

audio/information screen by pressing the

The system can be turned on and off on the

from the customized feature on the audio/ information screen.

■ Customized Features P. 374, 458

Cross Traffic Monitor Icon




Cross Traffic Monitor Icon

Multi-View Rear Camera*

About Your Multi-View Rear Camera

The audio/information screen can display your vehicle's rear view. The display automatically changes to the rear view when the transmission is put into \mathbb{R} .

■ Multi-View Rear Camera Display Area

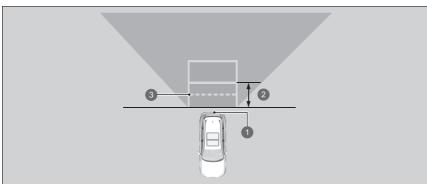

- Camera
- Approx. 1 m
- 3 Tailgate open range


The rear camera view is restricted. You cannot see the corner ends of the bumper or what is underneath the bumper. Its unique lens also makes objects appear closer or farther than they actually are.

Visually confirm that it is safe to drive before backing up. Certain conditions (such as weather, lighting, and high temperatures) may also restrict the rear view. Do not rely on the rearview display which does not give you all information about conditions at the back of your vehicle.

The rear camera view is displayed prior to the audio/information screen.

If the camera lens is covered with dirt or moisture, use a soft, moist cloth to keep the lens clean and free of debris.

You can view three different camera modes on the audio/information screen. Touch the appropriate icon to switch the mode.

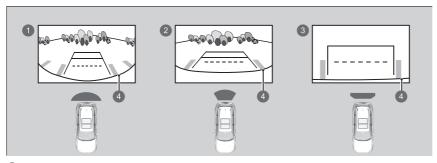

- Wide View Mode
- Normal View Mode
- 3 Top Down View Mode
- 4 Bumper
- If you were last using Wide view mode or Normal view mode, the same view mode will be activated the next time you put the transmission into $\boxed{\mathbf{R}}$.
- If you were using Top down view mode before you turned off the engine, Wide view mode will be activated the next time you set the power mode to ON and put the transmission into R.
- If you were using Top down view mode and 10 seconds elapsed after you took the transmission out of $\boxed{\mathbf{R}}$, Wide view mode will be activated the next time you put the transmission into $\boxed{\mathbf{R}}$.
- If you were using Top down view mode and put the transmission back into R within 10 seconds after you took it out of R, Top down view mode will be activated.

■ About Your Multi-View Rear Camera

You can change the **Fixed Guideline** and **Dynamic Guideline** settings.

Customized Features P. 374, 458

Fixed Guideline

ON: Guidelines appear when you put the transmission into $\boxed{\mathbf{R}}$.

OFF: Guidelines do not appear.

Dynamic Guideline

ON: Guidelines move according to the steering wheel direction.

OFF: Guidelines do not move.

If the vehicle's rear view is not displayed on the audio/ information screen while the shift position is in $\boxed{\mathbb{R}}$, there may be a problem with the system. Have your vehicle checked by a dealer immediately.

Is a four camera system that views areas commonly known as "blind spots" from different angles, then displays the images on the audio/information screen. This system can be used to:

- Check for obstacles when you are moving in R.
 - **≧** Checking for Obstacles at the Back of Your Vehicle P. 717
- Check the right and left sides of the vehicle while crossing at intersections with poor visibility (obstructed view, etc.).
 - **⚠** Checking from the front blind view at intersections P. 721
- Check for obstacles in front of the vehicle when parking or maneuvering in confined areas
 - **⚠** Checking the front and sides of your vehicle P. 719
 - **⚠** Checking the sides of your vehicle P. 722

Multi-View Camera^¹

AWARNING

Failure to visually assess the area around the vehicle (directly or by use of the mirrors) may result in a crash causing serious injury or death.

The areas shown in the multi-view camera system display are limited. The display may not show all pedestrians or other objects around your vehicle.

Do not solely rely only on the multi-view camera system display to assess whether it is safe to move your vehicle.

AWARNING

Failure to pay proper attention to your surroundings while driving may result in a crash causing serious injury or death.

To help mitigate the chances of a collision, only look at the multi-view camera system display when it is safe to do so.

The multi-view camera system does not eliminate all blind spots. The system is for your convenience only.

Displaying an Image From the Multi-View Cameras



CAMERA Button



Multi View Camera

■ For frontal views:

Press the **CAMERA** button or select **Multi View Camera** when the vehicle is stationary or moving at 20 km/h or slower. Press the button again to switch camera views.

■ For rear views:

Change the shift position to $\boxed{\textbf{R}}$ when the vehicle is stationary. Press the **CAMERA** button again to switch to rear view mode. You can customize the display setting.

⊇ Customized Features P. 458


Multi-View Camera*

Always keep the camera lenses clean and free from debris.


The navigation system is disabled when the shift position is in $\boxed{\mathbf{R}}$.

If you press the **CAMERA** button or select **Multi View Camera** while the vehicle speed is more than 25 km/h, the standby screen appears. When the vehicle speed is reduced below 20 km/h, the screen switches to a multi-view camera system image.

■ Camera Locations and Images

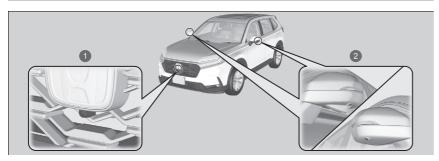


- Front View Camera
- 2 Side View Cameras

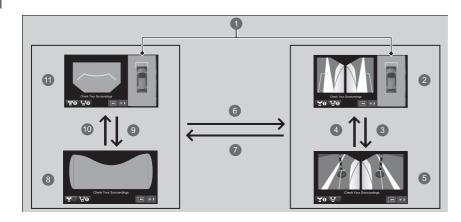


- Ground View: An overhead view created by the combination of images captured by four cameras.
- 2 Left and Right Side View + Ground View
- 3 √0 or ← 4 √0 or ←
- **5** Left and Right Side View
- 6 To or CAMERA button
- **7** 🛣 🗓 or 🛣 🗓
- 8 Front Blind View
- Front View + Ground View

The unique multi-view camera lenses make distances appear differently than they actually are - objects seen on the audio/information screen may appear closer or further away, and may be distorted. This becomes more apparent the further away an object is from your vehicle.

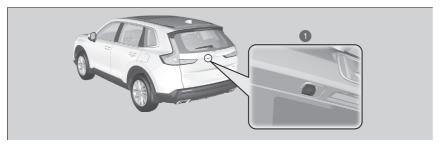

Rear View Camera

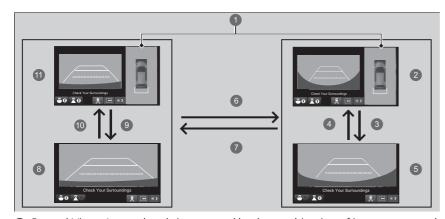

- 1 Ground View: An overhead view created by the combination of images captured by four cameras.
- Rear Wide View + Ground View
- 3 ⊕ (i) or

- 4 0 or -
- Rear Wide View
- 6 ⊕® or ⊕® or CAMERA button
- Rear Normal View
- 9 尺 ® or **全 0** 尺 ® or **全**
- **11** Rear Normal View + Ground View

The unique multi-view camera lenses make distances appear differently than they actually are - objects seen on the audio/information screen may appear closer or further away, and may be distorted. This becomes more apparent the further away an object is from your vehicle.

■ Reference Lines and Guide Lines

Following can be displayed when the multi-view camera system is on. **Fixed Guideline:** Helps you to get a sense of a distance between your vehicle and the surroundings. The distance may appear differently than the actual distance. **Dynamic Guideline:** Indicates vehicle direction while the steering wheel is in the current position.

Displaying an Image From the Multi-View Cameras

The positions/distances indicated by the guidelines and camera views on the display may differ from the actual positions/distances due to the changes in the vehicle height, road conditions, and other factors. The guidelines should be used as a reference only.

The guidelines can be turned on and off using the audio/information screen.


Customized Features P. 458

If you turn the guidelines off, they remain off until you turn them back on.

Using the Multi-View Camera


■ Checking for Obstacles at the Back of Your Vehicle

The display automatically changes to the rear view when the shift position is changed to $\overline{\mathbf{R}}$.

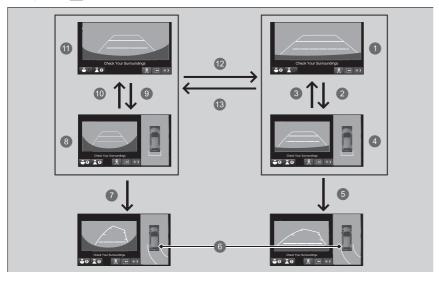

>> Using the Multi-View Camera

The ground view can be displayed even with the door mirrors folded. However, the viewable angle and blind spot change.

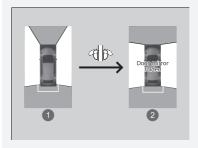


- Not folded
- Polded

Continued 717

- Rear Normal View
- 2 2 0 or 2 3 2 0 or 2
- Rear Normal View + Ground View
- **5** When the steering wheel is turned more than 90 degrees.
- **6** The projection lines appear 35 cm outside the vehicle body.
- When the steering wheel is turned more than 90 degrees.
- Rear Wide View + Ground View
- **9 □ 0** or **□**
- **10** 🖰 **10** or 🔄
- Rear Wide View
- B ☐® or ☐® or CAMERA button

∑Checking for Obstacles at the Back of Your Vehicle

When changing the shift position from/to \boxed{R} , you may experience a delay in switching between the audio/information screen and a rear view image.

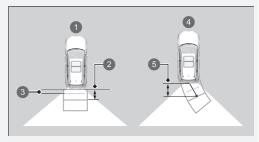


Approximate distances:

- 1 The guidelines indicate
- **2** 1.1 m
- **6** 80 cm
- 4 The projection lines indicate
- **5** 1.1 m


■ Checking the front and sides of your vehicle

You can display the front ground view screen using all the four cameras for the system. Pressing the **CAMERA** button when the vehicle speed is at below 20 km/h changes the image as follows.

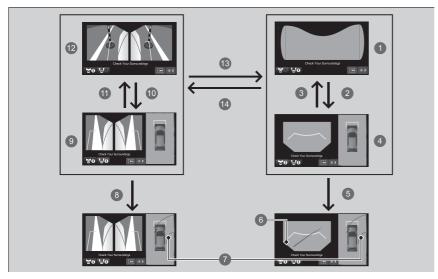

∑Checking the front and sides of your vehicle

While the image from the multi-view cameras is being displayed if the vehicle speed exceeds 25 km/h, the front or side view on the screen automatically switches to the audio/information screen.

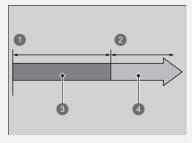

- 10 km/h
- 22 km/h
- Camera Screen
- Audio/Information Screen

Continued 719

- Front Blind View
- 4 Front View + Ground View
- **5** When the steering wheel is turned more than 90 degrees.
- 6 Blind spots appear in black.
- **7** The projection lines appear 35 cm outside the vehicle body.
- 8 When the steering wheel is turned more than 90 degrees.
- Left and Right Side View + Ground View
- Left and Right Side View
- **B** ≒ (a) or ≒ (a)




Approximate distance the reference line indicates



1.1 m

■ Checking from the front blind view at intersections

The front blind view screen is useful when you need to check for vehicles crossing from either direction at an intersection with poor visibility.

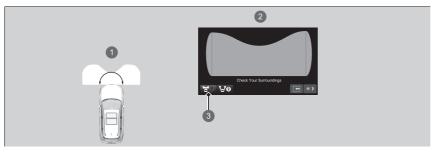

- 1 The angle provided by the front blind view screen is 180 degrees.
- 2 Front Blind View Screen
- When pressing the CAMERA button or selecting Multi View Camera and Front blind view icon.


∑Checking from the front blind view at intersections

The front blind view is a wide-angled view. The image will be largely distorted, and objects may appear closer or more distant than they actually are.

Continued 721

■ Checking the sides of your vehicle

The side view screens are convenient when you pull over at a curb or tollbooth, or slowly pass by oncoming vehicles on a narrow road.

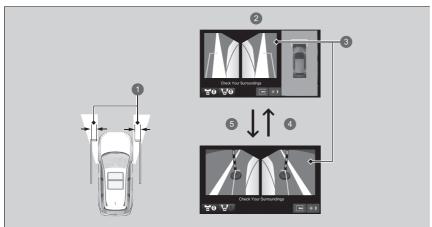

- **1** 40 cm
- Side View Screen
- 3 Side Views: The images from the side cameras

Approximate distance the projection lines indicate is 40 cm from the vehicle.

∑Checking the sides of your vehicle

When the door mirrors are folded, the side views cannot be displayed.

■ Multi-View Camera Limitations

The system may not work properly under the following conditions.

| | Conditions | Solutions | | | | | |
|--|---|--|--|--|--|--|--|
| The projection line is n | ot accurate. | Have your vehicle checked by a dealer. | | | | | |
| The images may not appear clearly when: | You activate the system in bad weather (heavy rain, snow, fog, etc.) or in the dark. Camera temperatures are high. A sudden change between light and dark such as an entrance or exit of a tunnel. You drive into the sunlight (e.g., at dawn or dusk.) A camera lens is scratched. | Do not use the multi-view camera system but rely only on visual confirmation until the conditions allow the system to work properly. | | | | | |
| | A camera lens is covered with dirt, moisture, or debris.When water drops or insects get on the camera lens. | Clean camera lenses with a soft cloth moisturised with water, mild detergent or glass cleaner. | | | | | |
| | • The audio/information screen is dirty. | Wipe off the screen using a soft dry cloth. | | | | | |
| A camera angle is A camera or the area around the camera has been altered. | | | | | | | |
| An error message is di | splayed while the multi-view camera system is in use. | Do not use the multi-view camera system and contact a | | | | | |
| | ome on the screen when you press the CAMERA button Camera on the audio/information screen and the vehicle or slower. | dealer. | | | | | |

Refueling

Fuel Information

■ Fuel recommendation

Thai models

Unleaded petrol/gasohol up to E85 (15% petrol and 85% ethanol), research octane number 91 or higher

Use of lower octane petrol/gasohol can cause a persistent, heavy metallic knocking noise that can lead to engine damage.

Indonesian models

Unleaded petrol, research octane number 91 or higher

Use of lower octane petrol can cause occasional metallic knocking noise in the engine and will result in decreased engine performance.

Use of petrol with a research octane less than 90 can lead to engine damage.

Pakistani models

EURO V/5 Unleaded petrol, manganese: maximum 2mg/Litre, research octane number 91 or higher

Your vehicle is designed to operate on EURO V/5 unleaded petrol with a research octane of 91 or higher.

The use of regular unleaded petrol can cause metallic knocking noises in the engine and will result in decreased engine performance. The long-term use of regular-grade petrol can lead to engine damage.

>> Fuel Information

NOTICE

Use of petrol that contains lead presents the following risks:

- Damage to the exhaust system including the catalytic converter
- Damage to the engine and fuel system
- Detrimental effects on the engine and other systems

Thai models

Immediately after refueling, especially when you have switched to another type of fuel, the engine and fuel system may go into a compensating period for fuel performance.

It will be required to drive moderately at a constant speed for about 10 minutes, without rapid acceleration when traffic allows. In this period, you may notice engine knocking.

Hong Kong, Macao and Singaporean models

Unleaded premium petrol, research octane number 95 or higher

Use of lower octane petrol can cause occasional metallic knocking noise in the engine and will result in decreased engine performance.

Use of petrol with a research octane less than 92 can lead to engine damage.

Taiwanese models

Unleaded petrol, research octane number 92 or higher

Use of lower octane petrol can cause a persistent, heavy metallic knocking noise that can lead to engine damage.

Models for other countries

Unleaded petrol, research octane number 91 or higher

Use of lower octane petrol can cause a persistent, heavy metallic knocking noise that can lead to engine damage.

■ Fuel tank capacity: 57 L


■ Engine cleaner

Fuel quality varies by region. Add genuine injector cleaner agent according to the time and distance instructions in the maintenance schedule.

Please use a genuine Honda injector cleaner agent. If not available, please use a PEA (polyetheramine) based cleaning agent instead.

Regular use of injector cleaner may be needed in countries or regions without a maintenance schedule. Consult your dealer for more information.

How to Refuel

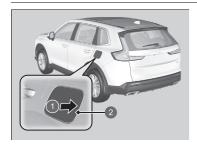

- Press
- Fuel Fill Door



Cap

- Stop your vehicle with the service station pump on the left side of the vehicle in the rear.
- 2. Turn off the engine.
- **3.** Unlock the driver's door
 - ➤ The fuel fill door on the outer side of the vehicle will unlock.
- **4.** Press and release the area indicated by the arrow to release the fuel fill door. You will hear a click and the lid will open slightly.
- **5.** Manually pull the fuel fill door to a fully open position.
- **6.** Remove the fuel fill cap slowly. If you hear a release of air, wait until this stops, then turn the knob slowly to open the fuel fill cap.

AWARNING

Petrol is highly flammable and explosive. You can be burned or seriously injured when handling fuel.

- Stop the engine, and keep heat, sparks, and flames away.
- Handle fuel only outdoors.
- Wipe up spills immediately.

ACAUTION

The filler nozzle automatically stops to leave space in the fuel tank so that fuel does not overflow as a result of changes in air temperature.

Do not continue to add fuel after the filler nozzle has automatically stopped. Additional fuel can exceed the full tank capacity and cause fuel to spill.

Use the lock tab or the master door lock switch to unlock the fuel fill door. The vehicle doors and fuel fill door automatically relock if the remote unlock function is used. This can be deactivated by briefly opening then closing the driver's door.



- 1 Cap
- 2 Holder

- 7. Place the fuel fill cap in the holder.
- 8. Insert the fuel filler nozzle fully.
 - ➤ When the tank is full, the filler nozzle will click off automatically. This leaves space in the fuel tank in case the fuel expands with a change in the temperature.
- **9.** After filling, replace the fuel fill cap, tightening it until you hear it click at least once.
 - ➤ Shut the fuel fill door by hand.

Using the Walk away auto lock feature will also lock the fuel fill door. Always make sure both the driver's door and fuel fill door are unlocked before attempting to open the fuel fill door.

Locking the doors and tailgate (Walk away auto lock) P. 228

Fuel Economy and CO₂ Emissions

Improving Fuel Economy and Reducing CO₂ Emissions

Achieving fuel economy and reducing CO_2 emissions is dependent on several factors, including driving conditions, load weight, idling time, driving habits, and vehicle condition. Depending on these and other factors, you may not achieve the rated fuel economy of this vehicle.

Maintenance and Fuel Economy

You can optimize your fuel economy with proper maintenance of your vehicle. Follow the maintenance schedule and, if necessary, consult your warranty booklet.

Maintenance Schedule P. 742

- Use engine oil with the viscosity recommended.
 - Recommended Engine Oil P. 750
- Maintain the specified tyre pressure.
- Do not load the vehicle with excess luggage.
- Keep your vehicle clean. A buildup of snow or mud on your vehicle's underside adds weight and increases wind resistance.

Direct calculation is the recommended method to determine actual fuel consumed while driving.



GCC country models

You can improve the mileage and reduce the CO₂ emissions of your vehicle by following these tips:

- Operate your vehicle correctly.
- Regularly maintain your vehicle.
- Maintain proper tyre pressure.
- Avoid carrying excessive loads.
- Adopt efficient driving techniques, such as driving at lower speeds, reducing idling time, and avoiding aggressive driving.

Turbo Engine Vehicle

Handling Precautions

The turbocharger is a high-precision device to obtain greater horsepower by delivering a large volume of compressed air into the engine using a turbine driven by the engine's exhaust gas pressure.

- When the engine is cold just after starting, avoid revving the engine or sudden acceleration.
- Always replace the engine oil and engine oil filter according to the maintenance schedule. The turbine rotates at very high speeds over 100,000 rpm and its temperature reaches over 700°C. It is lubricated and cooled by engine oil. If you fail to replace the engine oil and filter at the scheduled distance or interval, deteriorated engine oil may cause failure such as sticking and abnormal noise of the turbine bearing.

>> Turbo Engine Vehicle

The scheduled maintenance intervals for replacing the engine oil and filter is indicated on the driver information interface. Follow the information on replacement timing.

☑ Oil Monitor System P. 735

Recommended Engine Oil P. 750

The Engine temperature too hot. Do not drive. Allow engine to cool. or Engine temperature near limit. Avoid strong acceleration and high speed. message may appear on the driver information interface when you restart the engine after driving under high load conditions such as at high speed or in hilly terrain. This is normal. The message goes off after you idle or drive the vehicle for about one minute

Models with B-type meter

The temperature gauge pointer is at the upper level when you restart the engine after driving under high load conditions such as at high speed or in hilly terrain. This is normal. The gauge goes down after you idle or drive the vehicle for about one minute.

Maintenance

This chapter discusses basic maintenance.

| berore refronting manifemance | |
|--------------------------------------|----|
| Inspection and Maintenance7 | 32 |
| Safety When Performing Maintenance 7 | 33 |
| Parts and Fluids Used in Maintenance | |
| Service | 34 |
| Oil Monitor System7 | 35 |
| Maintenance Schedule7 | 42 |
| Maintenance Under the Bonnet | |
| Maintenance Items Under the Bonnet7 | 47 |
| Opening the Bonnet7 | 48 |
| Recommended Engine Oil7 | 50 |
| Oil Check 7 | 52 |

Refore Performing Maintenance

| Adding Engine Oil | 753 |
|--------------------------------|-------|
| Engine Coolant | 754 |
| Transmission Fluid | 757 |
| Brake Fluid | 758 |
| Refilling Window Washer Fluid | 759 |
| Fuel Filter | 759 |
| Replacing Light Bulbs | 760 |
| Checking and Maintaining Wipe | r |
| Blades | . 763 |
| Checking and Maintaining Tyres | |
| Checking Tyres | 767 |
| Wear Indicators | 768 |

| Tyre Service Life | 768 |
|-----------------------------------|-----|
| Tyre and Wheel Replacement | 769 |
| Tyre Rotation | 770 |
| Snow Traction Devices | 772 |
| Sattery 7 | 773 |
| Remote Transmitter Care | |
| Replacing the Remote Battery | 777 |
| limate Control System Maintenance | 780 |
| Cleaning | |
| Interior Care | 783 |
| Exterior Care | 786 |
| Accessories and Modifications | 789 |

Before Performing Maintenance

Inspection and Maintenance

For your safety, perform all listed inspections and maintenance to keep your vehicle in good condition. If you become aware of any abnormality (noise, smell, insufficient brake fluid, oil residue on the ground, etc.), have your vehicle inspected by a dealer. Refer to the Service Book* that came with your vehicle/maintenance schedule in this owner's manual for detailed maintenance and inspection information.

► Maintenance Schedule P. 742

■ Types of Inspection and Maintenance

■ Routine inspections

Perform inspections before long distance trips, when washing the vehicle, or when refueling.

■ Periodic inspections

- Check the brake fluid level monthly.
 - **Brake Fluid** P. 758
- Check the tyre pressure monthly. Examine the tread for wear and foreign objects.
 - **EXECUTE:** Checking and Maintaining Tyres P. 767
- Check the operation of the exterior lights monthly.
 - Replacing Light Bulbs P. 760
- Check the condition of the wiper blades at least every six months.
 - **≧** Checking and Maintaining Wiper Blades P. 763

733

Safety When Performing Maintenance

Some of the most important safety precautions are given here. However, we cannot warn you of every conceivable hazard that can arise in performing maintenance. Only you can decide whether you should perform a given task.

■ Maintenance Safety

- To reduce the possibility of fire or explosion, keep cigarettes, sparks, and flames away from the battery and all fuel related parts.
- Never leave rags, towels, or other flammable objects under the bonnet.
 Heat from the engine and exhaust can ignite them, causing a fire.
- To clean parts, use a commercially available degreaser or parts cleaner, not petrol.
- Wear eye protection and protective clothing when working with the battery or compressed air.
- Engine exhaust contains carbon monoxide, which is poisonous and can kill you.
 Only operate the engine if there is sufficient ventilation.

Safety When Performing Maintenance

AWARNING

Improperly maintaining this vehicle or failing to correct a problem before driving can cause a crash in which you can be seriously hurt or killed.

Always follow the inspection and maintenance recommendations and schedules in this owner's manual/Service Book*.

AWARNING

Failure to properly follow maintenance instructions and precautions can cause you to be seriously hurt or killed.

Always follow the procedures and precautions in this owner's manual.

■ Vehicle Safety

- The vehicle must be in a stationary condition.
 - ► Make sure your vehicle is parked on level ground, the parking brake is set, and the engine is off.
- Make sure that the radiator fan is stopped before inspecting the engine compartment.
 - Depending on the vehicle condition, the radiator fan may operate even when the power mode is in VEHICLE OFF.
- Be aware that hot parts can burn you.
 - ► Make sure to let the engine and exhaust system cool thoroughly before touching vehicle parts.
- Be aware that moving parts can injure you.
 - Do not start the engine unless instructed, and keep your hands and limbs away from moving parts.

Models with Auto Idle Stop

▶ Do not open the bonnet while the Auto Idle Stop function is activated.

Parts and Fluids Used in Maintenance Service

The use of Honda Genuine Parts and fluids is recommended when maintaining and servicing your vehicle. Honda Genuine Parts are manufactured according to the same high quality standards used in Honda vehicles.


Oil Monitor System

The warning message notifies you when to change the engine oil, or when to bring your vehicle to a dealer for indicated maintenance services.

Displaying the Oil Monitor System Information

Models with A-type meter

- **1.** Set the power mode to ON.
- 2. Press the (home) button.
- **3.** Roll the left selector wheel until is displayed.
- **4.** Press the left selector wheel to go to the oil monitor system information screen. The engine oil life appears on the driver information interface.

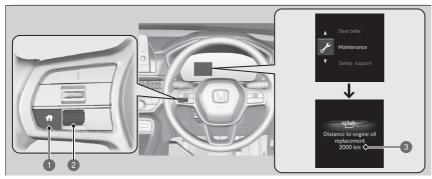

- 1 (home) Button
- 2 Left Selector Wheel
- 3 Remaining distance to the next engine oil maintenance period

The system message indicator (1) stays on in the instrument panel after the maintenance period reached. Have the indicated maintenance done by a dealer immediately.

Displaying the Oil Monitor System Information

Based on the engine operating and engine oil conditions, the remaining distance to the next maintenance period is calculated and displayed.

By driving conditions, actual travel distance might be shorter than the displayed distance.


Regardless of what the oil monitor system information indicates, perform maintenance regularly. Please refer to the maintenance schedule for more details.

▶ Maintenance Schedule P. 742

Continued 735

Models with B-type meter

- 1. Set the power mode to ON.
- **2.** Roll the right selector wheel until the oil monitor system information screen is displayed. The engine oil life appears on the driver information interface.

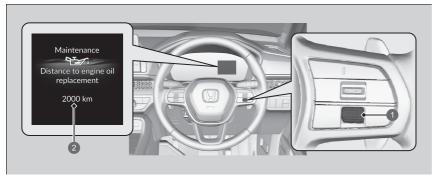


- Right Selector Wheel
- 2 Remaining distance to the next engine oil maintenance period

The system message indicator (\mathfrak{J}) stays on in the instrument panel after the maintenance period reached. Have the indicated maintenance done by a dealer immediately.


737

Oil Monitor System Information on the Driver Information Interface

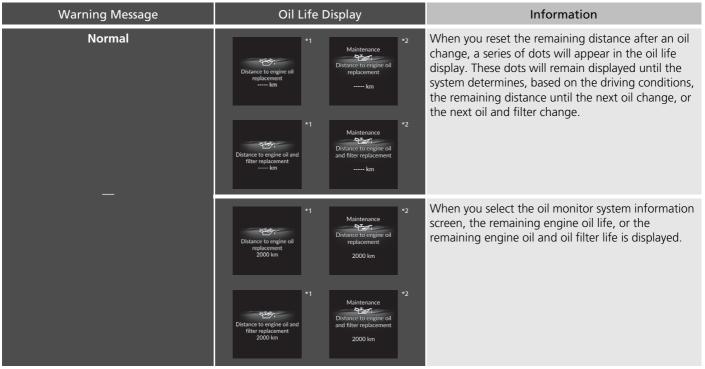


^{*1:}Models with A-type meter

^{*2:}Models with B-type meter

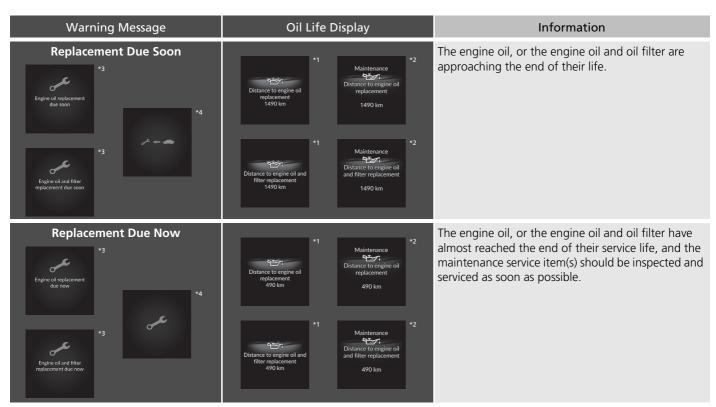

- *1:Models with A-type meter
- *2: Models with B-type meter
- *3:Except African models
- *4: African models

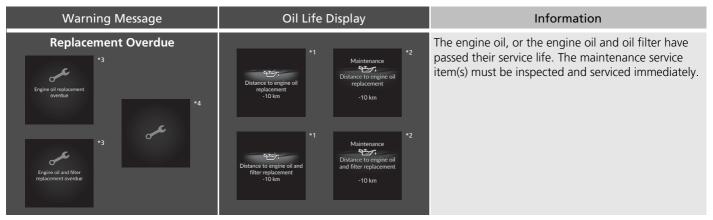


- *1:Models with A-type meter
- *2:Models with B-type meter
- *3:Except African models
- *4: African models

■ Resetting the Display

Reset the engine oil monitor system information if you have performed the maintenance service.

Models with A-type meter

- **1.** Set the power mode to ON.
- 2. Press the (home) button.
- **3.** Roll the left selector wheel until is displayed.
- **4.** Press the left selector wheel to go to the oil monitor system information screen.
- **5.** Press and hold the left selector wheel for about 10 seconds to enter the reset mode.
- Roll the left selector wheel to select Reset (You can also select Cancel to end the process).
- 7. Press the left selector wheel to reset the selected item.
 - ▶ When the oil monitor system information display is reset, the engine oil life is reset to ----- km.

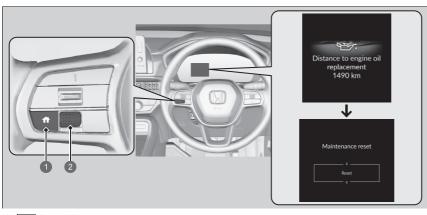

- 1 (home) Button
- 2 Left Selector Wheel
- * Not available on all models

■ Resetting the Display

NOTICE

Failure to reset the engine oil life after a maintenance service results in the system showing incorrect maintenance intervals, which can lead to serious mechanical problems.

Models with colour audio system

You can also reset the oil monitor system information display using the driver information interface.

Settings* P. 185

Models with Display Audio


You can also reset the oil monitor system information display using the audio/information screen.

► How to Customize the Vehicle Settings P. 467

The dealer will reset the engine oil life display after completing the required maintenance service. If someone other than a dealer performs maintenance service, reset the engine oil life display yourself.

Models with B-type meter

- 1. Set the power mode to ON.
- **2.** Roll the right selector wheel until the oil monitor system information screen is displayed.
- **3.** Press and hold the right selector wheel for about 10 seconds to enter the reset mode.
- **4.** Roll the right selector wheel to select **Reset** (You can also select **Cancel** to end the process).
- **5.** Press the right selector wheel to reset the selected item.
 - ▶ When the oil monitor system information display is reset, the engine oil life is reset to ----- km.

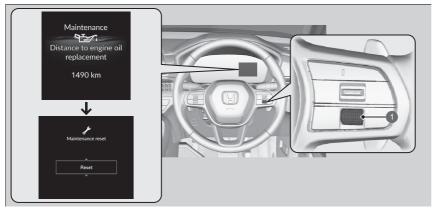

Right Selector Wheel

Maintenance Schedule

If your vehicle comes with the service book, the maintenance schedule for your vehicle is available in the book. For vehicles without the service book, refer to the following maintenance schedules.

The maintenance schedule outlines the minimum required maintenance that you should perform to ensure the troublefree operation of your vehicle. Due to regional and climatic differences, some additional servicing may be required. Please consult your warranty booklet for a more detailed description.

Maintenance work should be performed by properly trained and equipped technicians. Your authorised dealer meets all of these requirements.

Except Australian, New Zealand, and South African models

| Service at the indicated distance or | km X 1,000 | 20 | 40 | 60 | 80 | 100 | 120 | 140 | 160 | 180 | 200 | |
|--------------------------------------|--------------------|--------------------|---|-----------------------------------|----|-----|-----|-----|-----|-----|-----|--|
| time - whichever comes first. | months | 12 | 24 | 36 | 48 | 60 | 72 | 84 | 96 | 108 | 120 | |
| Replace engine oil | | | | When indicator comes on or 1 year | | | | | | | | |
| Replace engine oil filter | | | When indicator comes on or 2 years | | | | | | | | | |
| Replace air cleaner element | | | Every 30,000 km | | | | | | | | | |
| Inspect valve clearance | Except Thai models | Every 120,000 km*1 | | | | | | | | | | |
| Thai models | | Every 40,000 km | | | | | | | | | | |
| Replace spark plugs Except Thai m | | Every 100,000 km | | | | | | | | | | |
| Thai models | | Every 60,000 km | | | | | | | | | | |
| Inspect drive belts | | | • | | • | | • | | • | | • | |
| Replace engine coolant | | | At 200,000 km or 10 years, thereafter every 100,000 km or 5 | | | | | | | | | |
| | | | years | | | | | | | | | |
| Add genuine injector cleaner agent*2 | | | Every 10,000 km or 1 year | | | | | | | | | |
| Replace transmission fluid | | | • | | • | | • | | • | | • | |
| Replace rear differential fluid*3 | | | | | | • | | | | • | | |
| Replace dust and pollen filter | | | • | • | • | • | • | • | • | • | • | |
| Inspect front and rear brakes | | | Every 10,000 km or 1 year | | | | | | | | | |

^{*1:}Sensory Method

Adjust the valves during service 120,000 km if they are noisy.
*2:Regular use of injector cleaner is required for models designated for Grand Cayman and Philippines.

^{*3:}AWD models

| Service at the indicated distance or time - | km X 1,00 | 10 | 20 | 40 | 60 | 80 | 100 | 120 | 140 | 160 | 180 | 200 |
|---|-----------|------------------|---------------------------|--------------------|-----|----|---------|--------|-----|-----|-----|-----|
| whichever comes first. | | | | | | | | | | | | |
| | months | | 12 | 24 | 36 | 48 | 60 | 72 | 84 | 96 | 108 | 120 |
| Replace brake fluid | | | Every 3 years | | | | | | | | | |
| Replace fuel filter in tank*1 Normal | | Every 140,000 km | | | | | | | | | | |
| | | Severe | | | | Ev | ery 90, | 000 kr | m*4 | | | |
| Replace fuel filter in tank*2 | | Normal | Every 150,000 km | | | | | | | | | |
| | | Severe | Every 70,000 km*4 | | | | | | | | | |
| Replace fuel filter in tank*3 | | Normal | Every 180,000 km | | | | | | | | | |
| | Severe | | | Every 110,000 km*4 | | | | | | | | |
| Check expiration date for temporary tyre repair kit bottle (If equipped) | | | | Every 1 year | | | | | | | | |
| Rotate tyres (Check tyre inflation and condition at least once per month) | | | Every 10,000 km | | | | | | | | | |
| | Visually | inspect the f | ollowi | ng ite | ms: | | | | | | | |
| Driveshaft boots | | | | | | | | | | | | |
| Tie rod ends, steering gearbox, and boots | | | Every 10,000 km or 1 year | | | | | | | | | |
| Suspension components | | | | | | | | | | | | |
| Brake hoses and lines (including ABS/VSA) | | | | | | | | | | | | |
| Exhaust system | | | | | | | | | | | | |
| Fuel lines and connections | | | • | | | • | | | • | | | • |
| All fluid levels and condition of fluid | | | | | | | | | | | | |

^{*1:}Thai models

^{*2:} African, South American, and Indonesian models

^{*3:}Except African, South American, Indonesian, and Thai models
*4:It is recommended that you replace the fuel filter if the fuel you are using is suspected to be contaminated with dust, etc. because the filter may be clogged sooner.

Severe Conditions

Follow the Severe Conditions Maintenance Schedule if you drive your car MAINLY under one or more of the following conditions:

- Driving less than 8 km per trip or, in freezing temperatures, driving less than 16 km per trip.
- Driving in extremely hot, over 35°C condition.
- Extensive idling or long periods of stop-and-go driving.
- Towing trailer*, driving with a loaded car-top carrier or driving in mountainous conditions
- Driving on muddy, dusty, or de-iced roads.

NOTE: If you only OCCASIONALLY drive under "severe" conditions, you should follow the Normal Conditions Maintenance Schedule.

* Not available on all models


Maintenance Record (On Vehicles without Service Book)

Have your servicing dealer record all required maintenance below. Keep receipts for all work done on your vehicle.

| | Km or Month | Date | Sign or Stamp |
|--------------------------------|-------------|------|---------------|
| 20,000 km (or 12 Mo.) | | | |
| 40,000 km (or 24 Mo.) | | | |
| 60,000 km (or 36 Mo.) | | | |
| 80,000 km (or 48 Mo.) | | | |
| 100,000 km (or 60 Mo.) | | | |
| 120,000 km (or 72 Mo.) | | | |
| 140,000 km (or 84 Mo.) | | | |
| 160,000 km (or 96 Mo.) | | | |
| 180,000 km (or 108 Mo.) | | | |
| 200,000 km (or 120 Mo.) | | | |

Maintenance Under the Bonnet

Maintenance Items Under the Bonnet

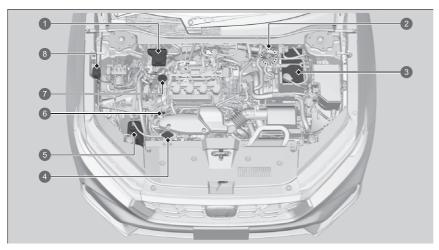


- Brake Fluid (Black Cap) (Right-hand Drive Type)
- 2 Brake Fluid (Black Cap) (Left-hand Drive Type)
- Battery
- A Radiator Cap

- **5** Engine Coolant Reserve Tank
- **6** Engine Oil Dipstick (Orange)
- Engine Oil Fill Cap
- Washer Fluid (Blue Cap)

Opening the Bonnet



- Bonnet Release Handle
- 2 Pull

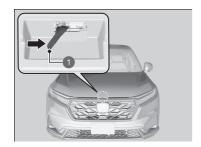

Lever

- **1.** Park the vehicle on a level surface, and set the parking brake.
- **2.** Pull the bonnet release handle under the driver's side lower outside corner of the dashboard.
 - ► The bonnet will pop up slightly.

3. Push the bonnet latch lever (located under the front edge of the bonnet to the centre) to the side and raise the bonnet. Once you have raised the bonnet slightly, you can release the lever.

○ Opening the Bonnet

NOTICE

Do not open the bonnet when the wiper arms are raised. The bonnet will strike the wipers, resulting in possible damage to the bonnet and/or the wipers.

When closing the bonnet, check that the bonnet is securely latched.

If the bonnet latch lever moves stiffly, or if you can open the bonnet without lifting the lever, the latch mechanism should be cleaned and lubricated.

Models with Auto Idle Stop

Do not open the bonnet while the Auto Idle Stop function is activated.



- **4.** Lift the bonnet up most of the way.
 - ► The hydraulic supports will lift it up the rest of the way and hold it up.


When closing, lower it to approximately 30 cm, then press down firmly with your hands.

Recommended Engine Oil

Use a genuine engine oil or another commercial engine oil of suitable type and viscosity (for the ambient temperature) as shown in the image that follows.

Oil is a major contributor to your engine's performance and longevity. If you drive the vehicle with insufficient or deteriorated oil, the engine may fail or be damaged.

Thai models

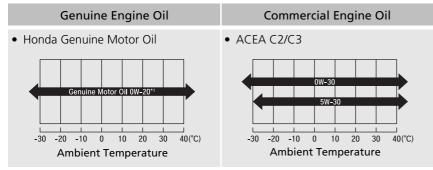

^{*1:}Formulated to improve fuel economy.

■ Recommended Engine Oil

Engine Oil Additives

Models with gasoline particulate filter

You cannot use Engine Oil Additives.

Models without gasoline particulate filter and Thai models


Your vehicle does not require oil additives. In fact, they may adversely affect the engine performance and durability.

Models without gasoline particulate filter and except Thai models

The following seal indicates the oil is energy conserving and that it meets the American Petroleum Institute's latest requirements.



Except Thai models

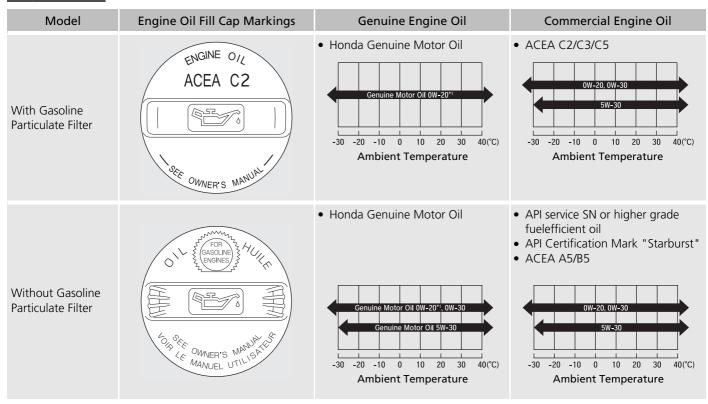


^{*1:}Formulated to improve fuel economy.


Oil Check

We recommend that you check the engine oil level every time you refuel. Park the vehicle on level ground.

Wait approximately three minutes after turning the engine off before you check the oil.

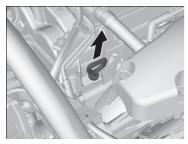

- 1. Remove the dipstick (orange).
- **2.** Wipe the dipstick with a clean cloth or paper towel.
- **3.** Insert the dipstick back all the way into its hole.

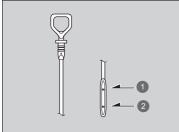

4. Remove the dipstick again, and check the level. It should be between the upper and lower marks. Add oil if necessary.

Oil Check

If the oil level is near or below the lower mark, slowly add oil, being careful not to overfill.



2 Lower Mark

Adding Engine Oil



- **1.** Unscrew and remove the engine oil fill cap.
- 2. Add oil slowly.
- **3.** Reinstall the engine oil fill cap, and tighten it securely.
- **4.** Wait for three minutes and recheck the engine oil dipstick.

■ Adding Engine Oil

NOTICE

Do not fill the engine oil above the upper mark. Overfilling the engine oil may result in leaks and engine damage.

If any oil spills, wipe it away immediately. Spilled oil may damage the engine compartment components.


Engine Coolant

Specified coolant: Honda All Season Antifreeze/Coolant Type 2

This coolant is premixed with 50% antifreeze and 50% water. Do not add any straight antifreeze or water.

We recommend you check the engine coolant level every time you refuel. Check the reserve tank first. If it is completely empty, also check the coolant level in the radiator. Add the engine coolant accordingly.

Reserve Tank

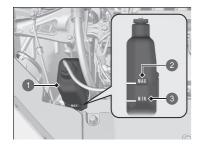

- Make sure the engine and radiator are cool.
- **2.** Check the amount of coolant in the reserve tank.
 - ► If the coolant level is below the MIN mark, add the specified coolant until it reaches the MAX mark.

AWARNING

Removing the radiator cap while the engine is hot can cause the coolant to spray out, seriously scalding you.

Always let the engine and radiator cool down before removing the radiator cap.


NOTICE

If temperatures consistently below -30°C are expected, the coolant mixture should be changed to a higher concentration. Consult your Honda dealer for details about a suitable coolant mixture.

If Honda antifreeze/coolant is not available, you may use another major brand of non-silicate coolant as a temporary replacement. Check that it is a high quality coolant recommended for aluminium engines. Continued use of any non-Honda coolant can result in corrosion, causing the cooling system to malfunction or fail. Have the cooling system flushed and refilled with Honda antifreeze/coolant as soon as possible.

Do not add rust inhibitors or other additives to your vehicle's cooling system. They may not be compatible with the coolant or with the engine components.


- Reserve Tank
- MAX
- MIN

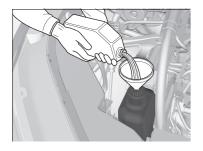

3. Inspect the cooling system for leaks.

Continued 755

Radiator

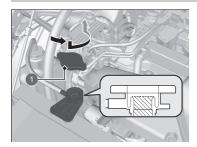

Radiator Cap

Make sure the engine and radiator are cool.

- **2.** Turn the radiator cap 1/8th turn anticlockwise and relieve any pressure in the cooling system.
- **3.** Push down and turn the radiator cap anticlockwise to remove it.
- **4.** The coolant level should be up to the base of the filler neck. Add coolant if it is low.
- **5.** Put the radiator cap back on, and tighten it fully.

■ Radiator Cap



- Never open when hot.
- Hot coolant will scald you.
- Relief pressure valve begins to open at 108 kPa.

NOTICE

Pour the fluid slowly and carefully so you do not spill any. Clean up any spills immediately; they can damage components in the engine compartment.

Transmission Fluid

■ Continuously Variable Transmission (CVT) Fluid

Specified fluid: Honda HCF-2

Have a dealer check the fluid level and replace if necessary.

Follow your vehicle's maintenance service timing of when to change continuously variable transmission (CVT) fluid.

Maintenance Schedule P. 742

Do not attempt to check or change the continuously variable transmission (CVT) fluid by yourself.

>> Transmission Fluid

NOTICE

Do not mix Honda HCF-2 with other transmission fluids.


Using a transmission fluid other than Honda HCF-2 may adversely affect the operation and durability of your vehicle's transmission, and damage the transmission.

Any damage caused by using a transmission fluid that is not equivalent to Honda HCF-2 is not covered by Honda's new vehicle limited warranty.

Brake Fluid


Specified fluid: Brake Fluid with DOT 3 or DOT 4

Checking the Brake Fluid

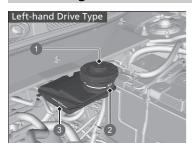

The fluid level should be between the **MIN** and **MAX** marks on the side of the reserve tank.

- Reserve Tank
- 2 MAX
- **6** MIN

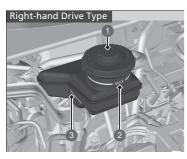

- Reserve Tank
- 2 MAX
- MIN

Brake Fluid

NOTICE

Brake fluid marked DOT 5 is not compatible with your vehicle's braking system and can cause extensive damage.

We recommend using a genuine product.

If the brake fluid level is at or below the **MIN** mark, have a dealer inspect the vehicle for leaks or worn brake pads as soon as possible.

Refilling Window Washer Fluid



Check the amount of window washer fluid.

If the level is low, fill the washer reservoir.

Pour the washer fluid carefully. Do not overflow the reservoir.

Fuel Filter

Replace fuel filter according to the time and distance recommendations in the maintenance schedule.

Have a qualified technician change the fuel filter. Fuel in the system can spray out and create a hazard if all fuel line connections are not handled correctly.

≥ Refilling Window Washer Fluid

NOTICE

Do not use engine antifreeze or a vinegar/water solution in the windscreen washer reservoir.

Antifreeze can damage your vehicle's paint. A vinegar/water solution can damage the windscreen washer pump.

Use only commercially available windscreen washer fluid.

Avoid prolonged use of hard water to prevent lime scale buildup.

Replacing Light Bulbs

Headlights

Headlights are LED type. Have an authorised Honda dealer inspect and replace the light assembly.

Front Turn Signal Lights, Position/Daytime Running Lights

Front turn signal lights, position/daytime running lights are LED type. Have an authorised Honda dealer inspect and replace the light assembly.

Front Fog Lights*

Front fog lights are LED type. Have an authorised Honda dealer inspect and replace the light assembly.

Side Turn Signal/Emergency Indicator Lights

Door mirror side turn lights are LED type. Have an authorised Honda dealer inspect and replace the light assembly.

Brake Lights, Taillights, Rear Side Marker Lights, and Rear Turn Signal Lights

Brake lights, taillights, rear side marker lights, and rear turn signal lights are LED type. Have an authorised Honda dealer inspect and replace the light assembly.

The headlight aim is set by the factory, and does not need to be adjusted. However, if you regularly carry heavy items in the luggage area or tow a trailer*, have the aiming readjusted at a dealer or by a qualified technician.

Taillights, Rear Fog Light*, and Back-Up Lights

Taillights, rear fog light*, and back-up lights are LED type. Have an authorised Honda dealer inspect and replace the light assembly.

Rear Licence Plate Light

Rear licence plate light is LED type. Have an authorised Honda dealer inspect and replace the light assembly.

High-Mount Brake Light

High-mount brake light is LED type. Have an authorised Honda dealer inspect and replace the light assembly.


* Not available on all models 761

Other Light Bulbs


■ Vanity Mirror Light Bulbs*

When replacing, use the following bulbs.

Vanity Mirror Light: 1.4 W

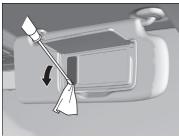

- **1.** Pry on the edge of the cover using a flattip screwdriver to remove the cover.
 - ➤ Wrap the flat-tip screwdriver with a cloth to prevent scratches.

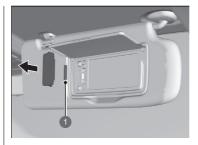

- 1 Bulb
- **2.** Remove the old bulb and insert a new bulb.

Checking and Maintaining Wiper Blades

Checking Wiper Blades

If the wiper blade rubber has deteriorated, it will leave streaks and become noisy, and the hard surfaces of the blade may scratch the window glass.

Lifting the Front Wiper Arms





- **1.** Set the power mode to ON, then to VEHICLE OFF.
- **2.** Within 10 seconds of setting the power mode to VEHICLE OFF, hold the wiper switch in the **MIST** position for more than two seconds.
 - ▶ Both wiper arms are set to the maintenance position as shown in the image.
- 3. Lift both wiper arms.


∑Lifting the Front Wiper Arms

NOTICE

When lifting the wiper arms, always follow the instructions to move them into the maintenance position.

The wiper arms may be damaged if they are moved manually.

Changing the Front Wiper Blade

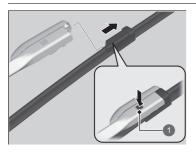

1 Tab

1. Lift both wiper arms.

➡ Lifting the Front Wiper Arms P. 763

- **2.** Depress the lock tab, then slide the wiper blade off the wiper arm.
- **3.** Slide the new wiper blade onto the wiper arm until it clicks into place.
- 4. Lower both wiper arms.
- **5.** Set the power mode to ON, then set the wiper switch to the **MIST** position once.
 - ► The wiper arms return to the standard position.

∑Changing the Front Wiper Blade

NOTICE

Avoid dropping the wiper arm onto the windscreen, as it may damage the wiper arm and/or the windscreen.

Changing the Rear Wiper Blade Rubber



- 1. Raise the wiper arm off.
- **2.** Pivot the bottom end of the wiper blade up until it comes off from the wiper arm.

∑Changing the Rear Wiper Blade Rubber


NOTICE

Do not try to forcefully lift up the wiper arm. The wiper arm may be damaged if it is lifted too high.

NOTICE

Avoid dropping the wiper arm, as it may damage the rear window.


Wiper Arm

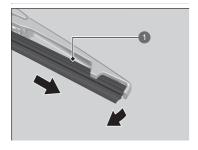

Blade


3. Slide the blade out of the wiper.

Continued 765

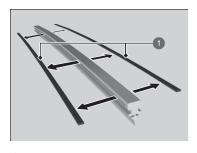

4. Remove the retainers from wiper blade and mount to a new rubber blade.

Retainer

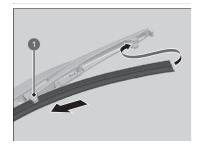

Holder

- **5.** Slide the new wiper blade onto the holder.
 - ► Make sure it is engaged correctly, then install the wiper blade assembly onto the wiper arm.

Checking and Maintaining Tyres

Checking Tyres

To safely operate your vehicle, your tyres must be of the proper type and size, in good condition with adequate tread, and properly inflated.

■ Inflation guidelines

Properly inflated tyres provide the best combination of handling, tread life, and comfort. Refer to the driver's doorjamb label for the specified pressure.

Underinflated tyres wear unevenly, adversely affect handling and fuel economy, and are more likely to fail from overheating.

Overinflated tyres make your vehicle ride harshly, are more prone to road hazards, and wear unevenly.

Every day before you drive, look at each of the tyres. If one looks lower than the others, check the pressure with a tyre gauge.

At least once a month or before long trips, use a gauge to measure the pressure in all tyres, including the spare * . Even tyres in good condition can lose 10–20 kPa (0.1–0.2 bar, 1–2 psi) per month.

■ Inspection guidelines

Every time you check inflation, also examine the tyres and valve stems. Look for:

- Bumps or bulges on the side or in the tread. Replace the tyre if you find any cuts, splits, or cracks in the side of the tyre. Replace it if you see fabric or cord.
- Remove any foreign objects and inspect for air leaks.
- Uneven tread wear. Have a dealer check the wheel alignment.
- Excessive tread wear.

■ Wear Indicators P 768

- Cracks or other damage around valve stem.
- * Not available on all models

○ Checking Tyres

AWARNING

Using tyres that are excessively worn or improperly inflated can cause a crash in which you can be seriously hurt or killed.

Follow all instructions in this owner's manual regarding tyre inflation and maintenance.

Measure the air pressure when tyres are cold. This means the vehicle has been parked for at least three hours, or driven less than 1.6 km. If necessary, add or release air until the specified pressure is reached.

If checked when hot, tyre pressure can be as much as 30–40 kPa (0.3–0.4 bar, 4–6 psi) higher than if checked when cold.

Taiwanese models

Whenever tyre pressure is adjusted, you must calibrate the TPMS.


TPMS Calibration P. 574

Except Taiwanese models

Whenever tyre pressure is adjusted, you must calibrate the deflation warning system*.

Deflation Warning System Calibration P. 579

Wear Indicators

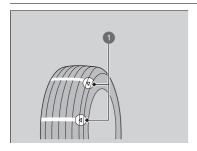

Example of a Wear Indicator mark

The groove where the wear indicator is located is about 1.6 mm shallower than elsewhere on the tyre. If the tread has worn so that the indicator is exposed, replace the tyre. Worn out tyres have poor traction on wet roads.

○ Checking Tyres

Have a dealer check the tyres if you feel a consistent vibration while driving. New tyres and any that have been removed and reinstalled should be properly balanced.

Tyre Service Life

The life of your tyres is dependent on many factors, including driving habits, road conditions, vehicle loading, inflation pressure, maintenance history, speed, and environmental conditions (even when the tyres are not in use).

In addition to regular inspections and inflation pressure maintenance, it is recommended that you have annual inspections performed once the tyres reach five years old. All tyres, including the spare*, should be removed from service after 10 years from the date of manufacture, regardless of their condition or state of wear.

Tyre and Wheel Replacement

Replace your tyres with radials of the same size, load range, speed rating, and maximum cold tyre pressure rating (as shown on the tyre's sidewall). Using tyres of a different size or construction can cause certain vehicle systems such as the ABS and Vehicle Stability Assist (VSA) system to work incorrectly.

It is best to replace all four tyres at the same time. If that isn't possible, replace the front or rear tyres in pairs.

Make sure that the wheel's specifications match those of the original wheels.

∑Tyre and Wheel Replacement

AWARNING

Installing improper tyres on your vehicle can affect handling and stability. This can cause a crash in which you can be seriously hurt or killed.

Always use the size and type of tyres recommended in the tyre information label on your vehicle.


Tyre Rotation

Rotating tyres according to the maintenance schedule helps to distribute wear more evenly and increase tyre life.

Your Vehicle's Tyre Rotation Pattern

Models with compact spare tyre or tyre repair kit


Rotate the tyres as shown here.

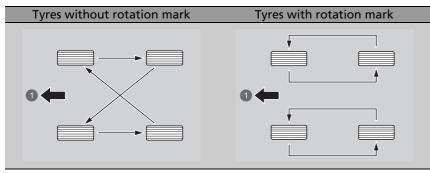

Front

∑Tyre Rotation

Tyres with directional tread patterns should only be rotated front to back (not from one side to the other). Directional tyres should be mounted with the rotation indication mark facing forward, as shown below.

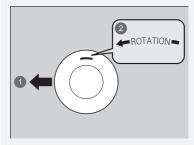

- Front
- Rotation Mark

When the tyres are rotated, make sure the air pressures are checked.

Taiwanese models

Whenever tyres are rotated, you must calibrate the TPMS.

TPMS Calibration P. 574


Except Taiwanese models

Whenever tyres are rotated, you must calibrate the deflation warning system*.

Deflation Warning System Calibration P. 579

Models with full-size spare tyre

Rotate the tyres, including a spare, as shown here.

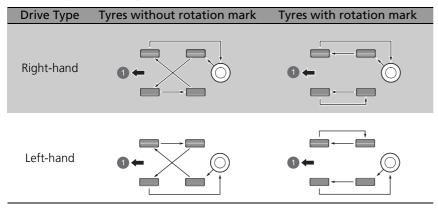

Front

Snow Traction Devices

If driving on snowy or frozen roads, mount winter tyres, or tyre chains; reduce speed; and maintain sufficient distance between vehicles when driving.

Be particularly careful when operating the steering wheel or brakes to prevent skidding.

Use tyre chains, winter tyres, or all season tyres when necessary or according to the law.

When mounting, refer to the following points.

For winter tyres:

- Select the size and load ranges that are the same as the original tyres.
- Mount the tyres to all four wheels.

For tyre chains:

- Consult a dealer before purchasing any type of chains for your vehicle.
- Install them on the front tyres only.
- Because your vehicle has limited tyre clearance, we strongly recommend using the chains listed below:

Latin American, Australian, Bangladeshi, Bruneian, Fijian, Hong Kong, Macau, Nepalese, New Zealand, Pakistani, Singaporean, and Sri Lankan models

| Original Tyre Size*1 | Chain Type |
|----------------------|---------------------------|
| 235/65R17 104H | RUD-matic classic 4716134 |
| 235/60R18 103H | RUD-matic classic 4716134 |
| 235/55R19 101Y | RUD-matic classic V 19642 |

*1:Original tyre size is mentioned on the tyre information label on the driver's doorjamb.

All models

- Follow the chain manufacturer's instruction when installing. Mount them as tightly as you can.
- Check that the chains do not touch the brake lines or suspension.
- Drive slowly.

Snow Traction Devices

AWARNING

Using the wrong chains, or not properly installing chains, can damage the brake lines and cause a crash in which you can be seriously injured or killed.

Follow all instructions in this owner's manual regarding the selection and use of tyre chains.

NOTICE

Traction devices that are the wrong size or improperly installed can damage your vehicle's brake lines, suspension, body, and wheels. Stop driving if they are hitting any part of the vehicle.


When tyre chains are mounted, follow the chain manufacturer's instructions regarding vehicle operational limits.

Use tyre chains only in an emergency or when they are legally required for driving through a certain area.

Use greater caution when driving with tyre chains on snow or ice. They may have less-predictable handling than good winter tyres without chains.

If your vehicle is equipped with summer tyres, be aware that these tyres are not designed for winter driving conditions. For more information, contact a dealer.

Checking the Battery

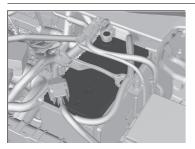

The condition of the battery is monitored by a sensor located on the negative terminal of the battery. If there is a problem with this sensor, the driver information interface will display a warning message. If this happens, have your vehicle inspected by a dealer.

Check the battery terminals for corrosion monthly.

If your vehicle's battery is disconnected or goes dead:

- The audio system is disabled*.
 - Reactivating the audio system P. 340

Battery

AWARNING

The battery gives off explosive hydrogen gas during normal operation.

A spark or open flame can cause the battery to explode with enough force to kill or seriously hurt you.

Keep all sparks, open flames, and smoking materials away from the battery.

Wear protective clothing and a face shield, or have a skilled technician do any battery maintenance.

AWARNING

The battery contains sulfuric acid (electrolyte) which is highly corrosive and poisonous.

Getting electrolyte in your eyes or on your skin can cause serious burns. Wear protective clothing and eye protection when working on or near the battery.

Swallowing electrolyte can cause fatal poisoning if immediate action is not taken.

KEEP OUT OF THE REACH OF CHILDREN

Battery

Emergency Procedures

Eyes: Flush with water from a cup or other container for at least 15 minutes. (Water under pressure can damage the eye.) Call a physician immediately. Skin: Remove contaminated clothing. Flush the skin with large quantities of water. Call a physician immediately.

Swallowing: Drink water or milk. Call a physician immediately.

When you find corrosion, clean the battery terminals by applying a baking powder and water solution. Clean the terminals with a damp towel. Cloth/towel dry the battery. Coat the terminals with grease to help prevent future corrosion.

When replacing the battery, the replacement must be of the same specifications.

Consult a dealer for more information

Models with Auto Idle Stop

The battery installed in this vehicle is specifically designed for a model with Auto Idle Stop.
Using a battery other than this specified type may shorten the battery life, and prevent Auto Idle Stop from activating. If you need to replace the battery, make sure to select the specified type and size. Ask a dealer for more details.

≥ Specifications P. 860

Charging the Battery

Disconnect both battery cables to prevent damaging your vehicle's electrical system. Always disconnect the negative (–) cable first, and reconnect it last.

≫Battery

The Vehicle Stability Assist (VSA) system, brake system (Amber), Adaptive Cruise Control (ACC) with Low Speed Follow, low tyre pressure/TPMS*, low tyre pressure/deflation warning system*, Collision Mitigation Braking System (CMBS), Road Departure Mitigation, and safety support indicators may come on in amber along with a message in the gauge when you set the power mode to ON after reconnecting the battery.

Drive a short distance at more than 20 km/h. Each indicator should go off. If any do not, have your vehicle checked by a dealer.

* Not available on all models

Battery Label



Battery Label

DANGER

- Keep flames and sparks away from the battery. The battery produces explosive gas that can cause an explosion.
- Wear eye protection and rubber gloves when handling the battery to avoid risk of burns or loss of eyesight if exposed to battery electrolyte.
- Do not allow children to handle the battery, under any circumstance. Ensure that anyone handling the battery has a proper understanding of the hazards and correct handling procedures involved.
- Handle battery electrolyte with extreme care, as it contains dilute sulfuric acid. Exposure to eyes or skin can cause burns or loss of eyesight.
- Read this manual carefully, and understand it before handling the battery. Failure to do so can cause personal injury and damage to the vehicle.
- Do not use the battery if the level of electrolyte is at or below the recommended level. Using the battery with low electrolyte can cause it to explode, causing serious injury.

777

Remote Transmitter Care

Replacing the Remote Battery

Keyless remote

If the indicator does not come on when the button is pressed, replace the battery.



Battery type: CR2032

1. Remove the built-in key.



- **2.** With the buttons facing down, remove the upper half of the cover by carefully prying on the slot with the key grip.
 - ➤ Wrap a key grip with a cloth to prevent scratching the keyless remote.

■ Replacing the Remote Battery

A A WARNING

CHEMICAL BURN HAZARD

The battery that powers the remote transmitter can cause severe internal burns and can even lead to death if swallowed. Keep new and used batteries away from children.

If you suspect that a child has swallowed the battery, seek medical attention immediately.

CAUTION: Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.

CAUTION: Do not exposed to excessive heat such as sunshine, fire or the like, that can result in an explosion or the leakage of flammable liquid or gas during use, storage or transportation.


CAUTION: Do not dispose of a battery into fire or a hot oven, or give mechanically crushing or cutting of a battery, that can result in an explosion.

CAUTION: Do not subjected to extremely low air pressure at high altitude that may result in an explosion or the leakage of flammable liquid or gas.

A warning mark is located adjacent to the button battery*.

NOTICE

An improperly disposed of battery can damage the environment. Always confirm local regulations for battery disposal.

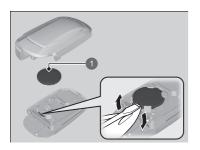

Battery

- **3.** Remove the battery by prying on the edge with flat-tip screwdriver. Make sure to replace the battery with the correct polarity.
 - ► Wrap a flat-tip screwdriver with a cloth to prevent scratching the keyless remote.

■ Replacing the Remote Battery

Replacement batteries are commercially available or at a dealer.


According to Australian Standard;



MARNING

- The battery that powers the remote transmitter is hazardous - new and used batteries should be kept away from children.
- Lithium button/coin batteries can cause severe or fatal injuries in 2 hours or less if it is swallowed or placed inside any part of the body.
- Medical attention should be sought immediately if it is suspected the battery has been swallowed or placed inside any part of the body.


■ Card Key*

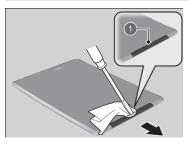

Battery type: CR2412

- **1.** Put the H logo side down of the card key.
- **2.** Push to slide the groove of the battery holder using a flat-tip screwdriver and remove the battery holder.
 - ➤ Wrap a flat-tip screwdriver with a cloth to prevent scratching the battery holder.

Groove

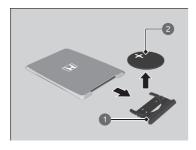

- Battery Holder
- 2 Battery

- **3.** Remove the battery. Make sure to replace the battery with the correct polarity.
- **4.** To reinstall the battery holder, push the battery holder into the card key until it clicks.
 - ► Make sure to install the battery holder in the correct side.

* Not available on all models

Climate Control System Maintenance

Dust and Pollen Filter

When to Replace the Dust and Pollen Filter

Replace the dust and pollen filter according to your vehicle's recommended maintenance schedule. It is recommended to replace the filter even sooner if the vehicle has been driven in a dusty environment.

Maintenance Schedule P. 742

How to Replace the Dust and Pollen Filter



1. Open the glove box.

Handle


2 Pull

Dust and Pollen Filter

If the airflow from the climate control system deteriorates noticeably, and the windows fog up easily, the filter may need to be replaced.

The dust and pollen filter collects pollen, dust, and other debris in the air.


If you are not sure how to replace the dust and pollen filter, have it replaced by a dealer.

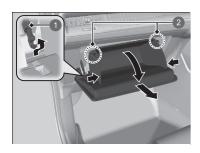

- Stopper
- 2 Tab

- **2.** Push the stopper on the passenger's side of the glove box to detach it from the glove box.
- **3.** Disengage the two tabs by pushing on each side panel.
- **4.** Remove the glove box.

Continued 781

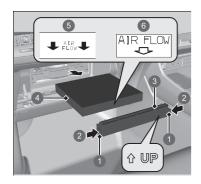

- 1 Tab
- 2 Push
- Cover
- 4 Dust and Pollen Filter
- S Cambodia, Indonesia, Laos, Malaysian, Philippines, Thailand, and Vietnam models
- Except Cambodia, Indonesia, Laos, Malaysian, Philippines, Thailand, and Vietnam models

- **5.** Push in the tabs on the corners of the filter case cover, and remove it.
- **6.** Remove the filter from the case.
- 7. Install a new filter in the case.
 - ▶ Put the **AIR FLOW** arrow directed side down.


Cleaning

Interior Care

Use a vacuum cleaner to remove dust before using a cloth.
Use a damp cloth with a mixture of mild detergent and warm water to remove dirt.
Use a clean cloth to remove detergent residue.

Cleaning Seat Belts

Use a soft brush with a mixture of mild soap and warm water to clean the seat belts. Let the belts air dry. Wipe the loops of the seat belt anchorages using a clean cloth.

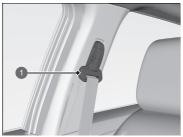

1 Loop

Do not spill liquids inside the vehicle. Electrical devices and systems may malfunction if liquids are splashed on them.

Do not use silicone-based sprays on electrical devices such as audio devices and switches. Doing so may cause the items to malfunction or cause a fire inside the vehicle.

If a silicone-based spray is inadvertently used on electrical devices, consult a dealer.

Depending on their composition, chemicals and liquid aromatics may cause discolouration, wrinkles, and cracking to resin-based parts and textiles. Do not use alkali solvents or organic solvents such as benzene or petrol.

After using chemicals, make sure to gently wipe them away using a dry cloth.

Do not place used cloths on top of resin-based parts or textiles for long periods of time without washing.


Be careful not to spill a liquid type air freshener.

Continued 783

Cleaning the Window

Wipe using a glass cleaner.

■ Floor Mats

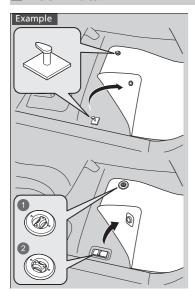

The driver's floor mat hooks over floor anchorages, which keep the mat from sliding forward.

Do not put any additional floor mats on top of the anchored mat.

○ Cleaning the Window

Wires are mounted to the inside of the rear window. Wipe along the same direction as the wires with a soft cloth so as not to damage them.

Be careful not to spill fluids, such as water or glass cleaner, on or around the cover of the electrical components around the rearview mirror.

∑Floor Mats

If you use any floor mats that were not originally provided with your vehicle, make sure they are designed for your specific vehicle, fit correctly, and are securely anchored by the floor anchorages. Position any second row seat floor mats properly. If not properly positioned, the floor mats can interfere with the front seat functions

- Unlock
- 2 Lock

■ Maintaining Genuine Leather*

To properly clean leather:

- 1. Use a vacuum or soft dry cloth first to remove any dirt or dust.
- **2.** Clean the leather with a soft cloth dampened with a solution comprised of 90% water and 10% neutral soap.
- **3.** Wipe away any soap residue with a clean damp cloth.
- **4.** Wipe away residual water and allow leather to air dry in the shade.

Maintaining Genuine Leather *

It is important to clean or wipe away dirt or dust as soon as possible. Spills can soak into leather, resulting in stains. Dirt or dust can cause abrasions in the leather. In addition, please note that some dark coloured clothing can rub onto the leather seats, resulting in discolouration or stains.

Exterior Care

Dust off the vehicle body after you drive. Regularly inspect your vehicle for scratches on painted surfaces. A scratch on a painted surface can result in body rust. If you find a scratch, promptly repair it.

■ Washing the Vehicle

Wash the vehicle regularly. Wash more frequently when driving in the following conditions:

- If driving on roads with road salt.
- If driving in coastal areas.
- If tar, soot, bird droppings, insects, or tree sap is stuck to painted surfaces.

Using an Automated Car Wash


- Make sure to follow the instructions indicated on the automated car wash.
- Fold in the door mirrors.
- For models equipped with automatic intermittent wipers, turn the wipers off.

Using High Pressure Cleaners

- Keep sufficient distance between the cleaning nozzle and the vehicle body.
- Take particular care around the windows. Standing too close may cause water to enter the vehicle interior.
- Do not spray high pressure water directly into the engine compartment. Instead, use low pressure water and a mild detergent.
- Do not spray water directly onto the camera or the area around it. Water may enter the lens and cause the camera to malfunction.

>> Washing the Vehicle

Do not spray water into the air intake vents. It can cause a malfunction.

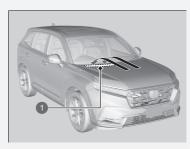

Air Intake Vents

Lock the doors when washing the vehicle. Do not spray water onto the fuel fill door directly. A high-pressure spray may cause it to open.

If you need to lift the wiper arms away from the windscreen, first set the wiper arms to the maintenance position.

Lifting the Front Wiper Arms P. 763

Applying Wax

A good coat of automotive body wax helps to protect your vehicle's paint from the elements. Wax will wear off over time and expose your vehicle's paint to the elements, so reapply as necessary.

Maintaining the Bumpers and Other Resin-Coated Parts

If you get petrol, oil, engine coolant, or battery fluid on resin-coated parts, they may stain or the coating may peel. Promptly wipe it away using a soft cloth and clean water.

Cleaning the Window

Wipe using a glass cleaner.

Maintaining Aluminium Wheels

Aluminium is susceptible to deterioration caused by salt and other road contaminants. When necessary, as early as possible use a sponge and mild detergent to wipe away these contaminants. Do not use a stiff brush or harsh chemicals (including some commercial wheel cleaners). These can damage the protective finish on aluminium alloy wheels, resulting in corrosion. Depending on the type of finish, the wheels also may lose their lustre or appear burnished. To avoid water stains, wipe the wheels dry with a cloth while they are still wet.

■Applying Wax

NOTICE

Chemical solvents and strong cleaners can damage the paint, metal, and plastic on your vehicle. Wipe away spills immediately.

Maintaining the Bumpers and Other Resin-Coated Parts

■ Coated Parts

■

Ask a dealer about the correct coating material when you want to repair the painted surface of the parts made of resin.

Continued 787

■ Fogged Exterior Light Lenses

The inside lenses of exterior lights (headlights, brake lights, etc.) may fog temporarily if you have driven in the rain, or after the vehicle has been run through a car wash. Dew condensation also may build up inside the lenses when there is a significant enough difference between the ambient and inside lens temperatures (similar to vehicle windows fogging up in rainy conditions). These conditions are natural processes, not structural design problems in the exterior lights.

Lens design characteristics may result in moisture developing on the light lens frame surfaces. This also is not a malfunction.

However, if you see large amounts of water accumulation, or large water drops building up inside the lenses, have your vehicle inspected by a dealer.

Accessories and Modifications

Accessories

When installing accessories, check the following:

- Do not install accessories on the windscreen. They can obstruct your view and delay your reaction to driving conditions.
- Do not install any items other than Honda Genuine Accessories designated for your vehicle over areas marked **SRS AIRBAG**, on the sides or backs of the front seats, on the sides of the second row seats (for models with rear side airbags), on front or side pillars, or near the side windows. Items other than Honda Genuine Accessories designated for your vehicle installed in these areas may interfere with proper operation of the vehicle's airbags or may be propelled into you or another occupant if the airbags deploy.
- Be sure electronic accessories do not overload electrical circuits or interfere with proper operation of your vehicle.

▶ Fuses P. 838

• Before installing any electronic accessory, have the installer contact a dealer for assistance. If possible, have a dealer inspect the final installation.

Accessories and Modifications

AWARNING

Improper accessories or modifications can affect your vehicle's handling, stability, and performance, and cause a crash in which you can be seriously hurt or killed.

Follow all instructions in this owner's manual regarding accessories and modifications.

Modifications

Do not modify your vehicle in a manner that may affect its handling, stability, or reliability, or install non-genuine Honda parts or accessories that may have a similar effect.

Even minor modifications to vehicle systems can affect overall vehicle performance. Always make sure all equipment is properly installed and maintained, and do not make any modification to your vehicle or its systems that might cause your vehicle to no longer meet your country's and local regulations.

The on-board diagnostic port (OBD-II/SAE J1962 connector) installed on this vehicle is intended to be used with automobile system diagnostic devices or with other devices that Honda has approved. Use of any other type of device may adversely affect the vehicle's electronic systems or allow them to be compromised, possibly resulting in a system malfunction, drained battery, or other unexpected problems.

Do not modify or attempt to repair any of the electrical components.

■ Accessories and Modifications

When properly installed, mobile phones, alarms, twoway radios, radio antennas, and low-powered audio systems should not interfere with your vehicle's computer controlled systems, such as your airbags and anti-lock brakes.

Honda Genuine Accessories are recommended to ensure proper operation on your vehicle.

Some Honda Genuine Accessories are supplied with an exclusive owner's manual for the operation and care detail of the product. If an accessory owner's manual is provided to you, please refer to it for full detail.

If any Honda Genuine Accessories become inoperable, refer to the separate accessory owner's manual (if applicable) or consult a dealer for assistance to troubleshoot the potential faulty condition.

Handling the Unexpected


This chapter explains how to handle unexpected troubles.

| 10015 | 192 |
|--------------------------------------|--------|
| If a Tyre Goes Flat | |
| Models with tyre repair kit | |
| Temporarily Repairing a Flat Tyre | 793 |
| Models with spare tyre | |
| Changing a Flat Tyre | 806 |
| Handling of the Jack | 817 |
| Engine Does Not Start | |
| Checking the Engine | |
| If the Keyless Remote/Card Key* Batt | ery is |
| Weak | |
| Emergency Engine Start | |
| Emergency Engine Stop | 823 |
| If the Battery Is Dead | |
| Jump Starting Procedure | 824 |
| | |

| Shift Lever Does Not Move |
|---|
| |
| If the Engine oil pressure low Warning |
| Appears 831 |
| If the Charging System Indicator Comes On 832 |
| If the Malfunction Indicator Lamp Comes |
| On or Blinks832 |
| If the Brake System Indicator (Red) Comes |
| On or Blinks 833 |
| If the Brake System Indicator (Red) Comes On |
| or Blinks at the Same Time When the Brake |
| System Indicator (Amber) Comes On 834 |
| If the Electric Power Steering (EPS) System |
| Indicator Comes On835 |

* Not available on all models

Types of Tools

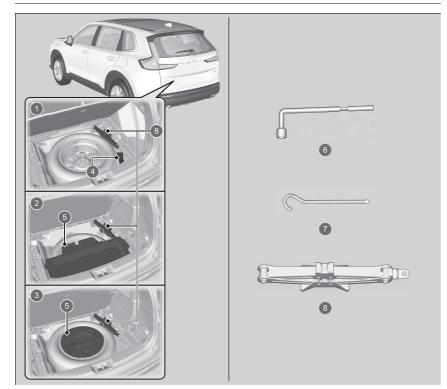

- 1 Five-seater models with full-size spare tyre
- 2 Seven-seater models with compact spare tyre
- 3 Seven-seater models with full-size spare tyre
- Tool Bag

- **6** Tool Case
- 6 Wheel Nut Wrench/Jack Handle
- Jack Handle Bar
- 8 Jack

∑Types of Tools

The tools are stored in the luggage area.

If a Tyre Goes Flat

Models with tyre repair kit

Temporarily Repairing a Flat Tyre

If the tyre has a large cut or is otherwise severely damaged, you will need to have the vehicle towed. If the tyre only has a small puncture, from a nail for instance, you can use the temporary tyre repair kit so that you can drive to the nearest service station for a more permanent repair.


If a tyre goes flat while driving, grasp the steering wheel firmly and brake gradually to reduce speed. Then, stop in a safe place.

- **1.** Park the vehicle on a firm, level, non-slippery surface and apply the parking brake.
- **2.** Put the transmission into **P**.
- 3. Turn on the hazard warning lights and set the power mode to VEHICLE OFF.

∑Temporarily Repairing a Flat Tyre

The kit should not be used in the following situations. Instead, contact a dealer or a roadside assistance to have the vehicle towed.

- The tyre sealant has expired.
- More than one tyre is punctured.
- The puncture or cut is larger than 4 mm.
- The tyre side wall is damaged or the puncture is outside the contact area.

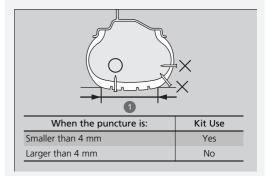


Contact Area

- Damage has been caused by driving with the tyres extremely under inflated.
- The tyre bead is no longer seated.
- The rim is damaged.

Do not remove a nail or screw that punctured the tyre. If you remove it from the tyre, you may not be able to repair the puncture using the kit.


■ Getting Ready to Temporarily Repair the Flat Tyre

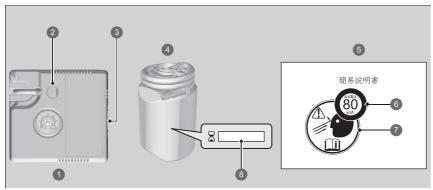

- Air Compressor
- 2 Deflate Button
- Air Compressor Switch
- 4 Sealant Bottle
- Instruction Manual
- **6** Speed Restriction Label
- Wheel Label
- 8 Expiration Date

≥ Getting Ready to Temporarily Repair the Flat Tyre


When making a temporary repair, carefully read the instruction manual provided with the kit.

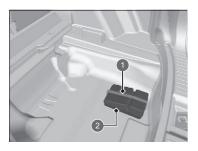

- Strap
- Bag

- **1.** Open the tailgate.
- **2.** Unfasten the strap and take the bag out of the luggage area.
- **3.** Take the kit out of the bag.
- **4.** Place the kit face up on flat ground near the flat tyre, away from traffic. Do not place the kit on its side.

■ Injecting Sealant and Air

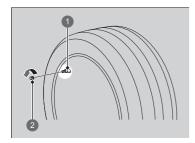

1. Remove the valve cap from the tyre valve stem.

- 1 Tyre Valve Stem
- 2 Valve Cap



- Bottle Tyre Valve
- 2 Air Compressor Hose

- 2. Shake the sealant bottle.
- **3.** Attach the air compressor hose onto the bottle tyre valve. Screw it until it is tight.

■ Injecting Sealant and Air

AWARNING

Tyre sealant contains substances that are harmful and can be fatal if swallowed.

If accidentally swallowed, do not induce vomiting. Drink plenty of water and get medical attention immediately.


For skin or eye contact, flush with cool water and get medical attention if necessary.

Keep the sealant bottle out of the reach of children.

In cold temperatures, the sealant may not flow easily. In this situation, warm it up for five minutes before use.


The sealant is latex based and can permanently stain clothing and other materials. Be careful during handling and wipe up any spills immediately.

Turn the air compressor off when connecting the air compressor hose.

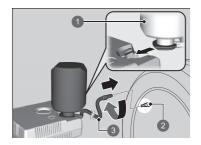

- Sealant Bottle
- 2 Tyre Valve Stem
- Sealant/Air Hose

- **4.** Upside down the sealant bottle, then attach the bottle into the cutout of the air compressor.
- **5.** Attach the sealant/air hose onto the tyre valve stem. Screw it until it is tight.

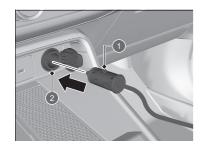

- Plug
- 2 Accessory Power Socket



1 Air Compressor Switch

- **6.** Plug in the compressor to the accessory power socket.
 - Be careful not to pinch the cord in a door or window.
 - **▶ Accessory Power Sockets** P. 321
- **7.** Start the engine.
 - **Carbon Monoxide Gas** P. 137

- **8.** Turn the air compressor on to inflate the tyre.
 - The compressor starts injecting sealant and air into the tyre.
- **9.** After the air pressure reaches the specified pressure, turn off the air compressor.
 - Check the air pressure gauge on the air compressor.
 - ► Refer to the driver's doorjamb label for the specified pressure.

■ Injecting Sealant and Air

AWARNING

Running the engine with the vehicle in an enclosed or even partly enclosed area can cause a rapid buildup of toxic carbon monoxide.

Breathing this colourless, odourless gas can cause unconsciousness and even death.


Only run the engine to power the air compressor with the vehicle outdoors.

NOTICE


Do not operate the temporary tyre repair kit compressor for more than 15 minutes. The compressor can overheat and become permanently damaged.

You hear a motor sound coming from the activated air compressor. This is normal.

Until the sealant injection is complete, the pressure shown on the pressure gauge will appear higher than actual. After the sealant injection is complete the pressure will drop and then begin to rise again as the tyre is inflated with air. This is normal. To accurately measure the air pressure using the gauge, turn the air compressor off only after the sealant injection is complete.

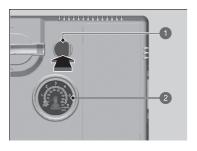

- 1 Deflate Button
- 2 Pressure Gauge

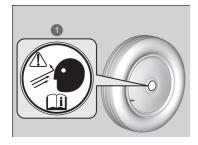

1 Wheel Label

- **10.** Unplug the power plug from the accessory power socket.
- **11.** Unscrew the sealant/air hose from the tyre valve stem. Reinstall the valve cap.
- **12.** Detach the bottle from the air compressor.
- **13.** Press the deflate button until the gauge returns to 0 kPa (0 bar, 0 psi).

- **14.** Apply the wheel label to the flat surface of the wheel.
 - ► The wheel surface must be clean to ensure the label adheres properly.
- **15.** Store the tyre repair kit in the luggage area.

If the required air pressure is not reached within 10 minutes, the tyre may be too severely damaged for the kit to provide the necessary seal and your vehicle will need to be towed.

See a Honda dealer for a replacement sealant bottle and proper disposal of an empty bottle.

Inform the use of tyre sealant when you ask a Honda dealer or the road assistant service for replacing or repairing the flat tyre.

This air compressor is designed for the automotive tyre. Check the following:

- The power supply of the air compressor is limited to your vehicle's 12-volt DC accessory power socket.
- Do not operate the temporary tyre repair kit compressor for more than 15 minutes. The compressor can overheat and become permanently damaged.

Make it cool down when using the compressor continuously.


Distributing the Sealant in the Tyre




Speed Restriction Label

- **1.** Apply the speed restriction label to the location as shown.
- 2. Drive the vehicle for about 10 minutes.

 Do not exceed 80 km/h.
- **3.** Stop the vehicle in a safe place.

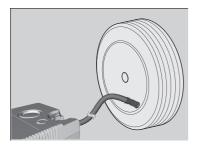

- **4.** Recheck the air pressure using the gauge on the air compressor.
 - ▶ Do not turn the air compressor on to check the pressure.
- **5.** If the air pressure is:
 - Less than 130 kPa (1.3 bar, 19 psi):
 Do not add air or continue driving. The leak is too severe. Call for help and have your vehicle towed.
 - **Emergency Towing** P. 848
 - Front:240 kPa (2.4 bar, 35 psi)/rear:220 kPa (2.2 bar, 32 psi) or more:
 Continue driving for another 10 minutes or until you reach the nearest service station. Do not exceed 80 km/h.
 - ▶ If the air pressure does not go down after the 10 minute driving, you do not need to check the pressure any more.

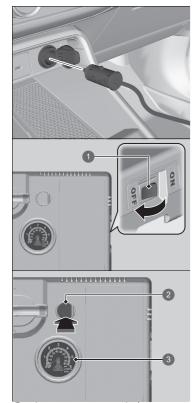

- 1 Air Compressor Switch
- 2 Deflate Button
- Air Pressure Gauge

- Greater than 130 kPa (1.3 bar, 19 psi), but less than front:240 kPa (2.4 bar, 35 psi)/rear:220 kPa (2.2 bar, 32 psi):
 Turn the air compressor on to inflate the tyre until the tyre pressure reaches front:240 kPa (2.4 bar, 35 psi)/rear:220 kPa (2.2 bar, 32 psi).
 - ▶ Injecting Sealant and Air P. 796
 Then, drive carefully for 10 more minutes or until you reach the nearest service station.
 Do not exceed 80 km/h.
- You should repeat this procedure as long as the air pressure is within this range.
- **6.** Unplug the kit from the accessory power socket.
- **7.** Unscrew the air hose from the tyre valve stem. Reinstall the valve cap.
- **8.** Press the deflate button until the gauge returns to 0 kPa (0 bar, 0 psi).
- 9. Repackage and properly stow the kit.

Distributing the Sealant in the Tyre

AWARNING

Running the engine with the vehicle in an enclosed or even partly enclosed area can cause a rapid buildup of toxic carbon monoxide.

Breathing this colourless, odourless gas can cause unconsciousness and even death.
Only run the engine to power the air compressor with the vehicle outdoors.


Inflating an Under-inflated Tyre

You can use the kit to inflate a non-punctured under-inflated tyre.



- 1. Take the kit out of the luggage area.
 - **D** Getting Ready to Temporarily Repair the Flat Tyre P. 794
- **2.** Place the kit face up on flat ground near the tyre to be inflated, away from traffic. Do not place the kit on its side.
- 3. Remove the air hose from the kit.

- Power Plug
- 2 Air Hose

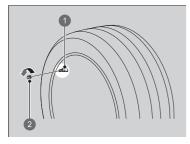

- Tyre Valve Stem
- Valve Cap

4. Remove the valve cap from the tyre valve stem.

■Inflating an Under-inflated Tyre


AWARNING

Running the engine with the vehicle in an enclosed or even partly enclosed area can cause a rapid buildup of toxic carbon monoxide.

Breathing this colourless, odourless gas can cause unconsciousness and even death.
Only run the engine to power the air compressor with the vehicle outdoors.


NOTICE

Do not operate the temporary tyre repair kit compressor for more than 15 minutes. The compressor can overheat and become permanently damaged.

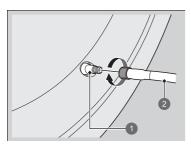

5. Attach the air hose onto the tyre valve stem. Screw it until it is tight.

- 1 Tyre Valve Stem
- 2 Air Hose

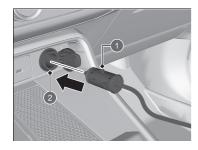

- Plug
- 2 Accessory Power Socket

- **6.** Plug in the compressor to the accessory power socket.
 - ► Be careful not to pinch the cord in a door or window.
 - **▶** Accessory Power Sockets P. 321
- **7.** Start the engine.
 - Carbon Monoxide Gas P. 137



Air Compressor Switch

- **8.** Turn the air compressor switch on to inflate the tyre.
 - ► The compressor starts to inject air into the tyre.
 - ► If you have started the engine, leave it running while injecting air.
- **9.** Inflate the tyre to the specified air pressure.
- **10.** Turn off the air compressor.
 - ► Check the pressure gauge on the air compressor.
 - ▶ If overinflated, press the deflate button.
- **11.** Unplug the power plug from the accessory power socket.
- **12.** Unscrew the air hose from the tyre valve stem. Reinstall the valve cap.
- 13. Repackage and properly stow the kit.

Models with spare tyre

Changing a Flat Tyre

If a tyre goes flat while driving, grasp the steering wheel firmly and brake gradually to reduce speed. Then, stop in a safe place. Replace the flat tyre with a spare tyre. Go to a dealer as soon as possible to have the regular tyre repaired or replaced.

- **1.** Park the vehicle on a firm, level, non-slippery surface and apply the parking brake.
- **2.** Put the transmission into **P**.
- **3.** Turn on the hazard warning lights and set the power mode to VEHICLE OFF.

○ Changing a Flat Tyre

Models with compact spare tyre

Follow compact spare precautions: Periodically check the tyre pressure of the compact spare. It should be set to the specified pressure. Specified Pressure: 420 kPa (4.2 bar, 60 psi)

When driving with the compact spare tyre, keep the vehicle speed under 80 km/h. Replace with a regular tyre as soon as possible.

The compact spare tyre and wheel in your vehicle are specifically for this model. Do not use them with another vehicle. Do not use another type of compact spare tyre or wheel with your vehicle.

Do not mount tyre chains on a compact spare tyre. If a chain-mounted front tyre goes flat, remove one of the regular rear tyres and replace it with the compact spare tyre. Remove the flat front tyre and replace it with the regular tyre that was removed from the rear. Mount the tyre chains on the front tyre.

A compact spare tyre gives a harsher ride and less traction on some road surfaces. Use greater caution while driving.

The compact spare tyre is smaller than the regular tyre. Your vehicle's ground clearance reduces when the compact spare tyre is installed. Driving over road debris or bumps could possibly damage the underside of your vehicle.

Getting Ready to Replace the Flat Tyre



Five-seater models

1. Pull the strap and open the luggage floor lid.

Strap



Tool Bag
 Spare Tyre

2. Take the tool bag out of the luggage area. Take the wheel nut wrench and jack handle bar out of the tool bag. Go to step 5 and 6.

WARNING: The jack can only be used for helping an emergency vehicle breakdown, not for changing the regular seasonal tyre or any other normal maintenance or repair operation.

NOTICE

Do not use the jack if it doesn't work properly. Call your dealer or a professional towing service.

Seven-seater models


The shape of the tool case varies by model.

Models with compact spare tyre

Do not use more than one compact spare tyre at the same time.

Oceanian and African models with Right-hand Drive Type

Do not use the compact spare tyre if you are towing a trailer.

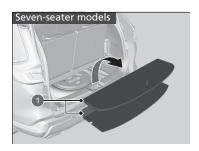

Seven-seater models 1. Remove the lugger

- **1.** Remove the luggage floor lids (upper and lower).
 - **≥ Luggage Storage Area*** P. 317
 - **Luggage Floor Box*** P. 318


1 Luggage Floor Lids



- 2. Folding down the third row seat.
 - ► Folding Down the Third Row Seat
 P. 297
- **3.** Unlock the seat cushion by pulling the strap.


Push the seat cushion forward, then hang the hook to the head restraint.


- Seat Cushion
- 2 Strap
- 3 Hook

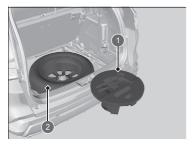

4. Take the tool case out of the luggage area. Take the wheel nut wrench and jack handle bar out of the tool case.

- 1 Tool Case
- Spare Tyre

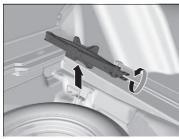

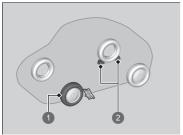

- 1 The tyre to be replaced.
- Wheel Blocks

All models

- **5.** Take the jack out of the spare tyre area.
- **6.** Unscrew the wing bolt, and remove the spacer cone. Then, remove the spare tyre.

7. Place a wheel block or rock in the front and rear of the wheel diagonal to the flat tyre.




8. Place the spare tyre (wheel side up) under the vehicle body, near the tyre that needs to be replaced.




9. Loosen each wheel nut about one turn using the wheel nut wrench.

■ How to Set Up the Jack

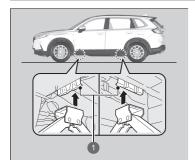

1. Place the jack under the jacking point closest to the tyre to be changed.

Jacking Point

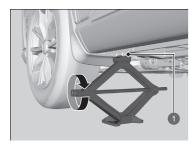

Jacking Point

- **2.** Turn the end bracket clockwise as shown in the image until the top of the jack contacts the jacking point.
 - ► Make sure that the jacking point tab is resting in the jack notch.

■ How to Set Up the Jack

AWARNING


The vehicle can easily roll off the jack, seriously injuring anyone underneath.

Follow the directions for changing a tyre exactly, and no person should place any portion of their body under a vehicle that is supported by a jack.


WARNING: The jack shall be placed on a flat and stable surface on the same level as the vehicle is parked.

Oceanian models

The jack that came with your vehicle has the following label.

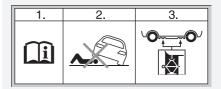

- 1. See Owner's Manual.
- 2. Never get under vehicle when supported by jack.
- 3. Place jack underneath reinforced area.

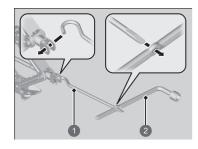

- 1 Jack Handle Bar
- 2 Wheel Nut Wrench as Jack Handle

3. Raise the vehicle, using the jack handle bar and the jack handle, until the tyre is off the ground.

■ How to Set Up the Jack


Do not use the jack with people or luggage in the vehicle.

Use the jack provided in your vehicle. Other jacks may not support the weight ("load") or may not fit the jacking point.


The following instructions must be followed to use the jack safely:

- Do not use while the engine is running.
- Use only where the ground is firm and level.
- Use only at the jacking points.
- Do not get in the vehicle while using the jack.
- Do not put anything on top of or underneath the jack.


■ Replacing the Flat Tyre

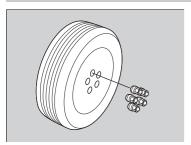

1. Remove the wheel nuts and flat tyre.

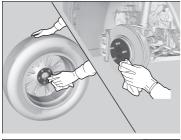

- **2.** Wipe the mounting surfaces of the wheel with a clean cloth.
- 3. Mount the spare tyre.
- **4.** Screw the wheel nuts until they touch the lips around the mounting holes, then stop rotating.

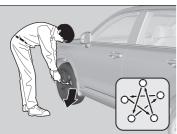

5. Lower the vehicle and remove the jack. Tighten the wheel nuts in the order indicated in the image. Go around tightening the nuts two to three times in this order.


Wheel nut torque:

108 N·m (11 kgf·m, 80 lbf·ft)

■ Replacing the Flat Tyre

Do not over tighten the wheel nuts by applying extra torque using your foot or a pipe.

Storing the Flat Tyre

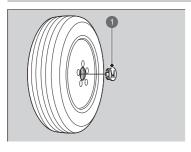

- **1.** Remove the centre cap.
- **2.** Place the flat tyre face down in the spare tyre well.


Storing the Flat Tyre

AWARNING

Loose items can fly around the interior in a crash and can seriously injure the occupants.

Store the wheel, jack, and tools securely before driving.

Centre cap

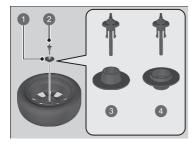

- Spacer Cone
- Wing Bolt
- Sometimes of the state of th
- 4 For regular tyre

Models with a compact spare tyre

3. Remove the spacer cone from the wing bolt, flip it over, and insert it back on the bolt. Secure the flat tyre with the wing bolt.

Models with a full-size spare tyre

3. Secure the flat tyre with the wing bolt.

All models

- **4.** Securely store the wheel nut wrench and jack handle bar back in the tool bag* or the tool case*. Store the tool bag* or the tool case* in the luggage area properly.
- **5.** Store the jack in its holder. Turn the jack's end bracket to lock it in place.

Seven-seater models

- **6.** Return the third row seat to the original position.
 - ► Folding Down the Third Row Seat P. 297

Models with deflation warning system

■ Deflation Warning System and the Spare Tyre

Models with compact spare tyre

If you replace a flat tyre with the spare tyre, the low tyre pressure/deflation warning system indicator comes on while you are driving. After driving for a few kilometres, **Tyre pressure monitor system problem** will appear on the driver information interface and the indicator will start blinking for a short time and then stay on; however, this is normal and is no cause for concern.

All models


Calibrate the deflation warning system when you replace the tyre with a specified regular tyre.

Deflation Warning System Calibration P. 579

Handling of the Jack

Models with tyre repair kit

Your vehicle has jacking points as shown. When replacing your tyres, consult a dealer.

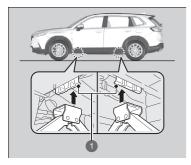

Jacking Points

Engine Does Not Start

Checking the Engine

If the engine does not start, check the starter.

| Starter condition | Checklist |
|--|--|
| Starter doesn't turn or turns | Check for a message on the driver information interface |
| over slowly. | • If the To start, touch start button with emblem side of remote message appears. |
| The battery may be dead. Check | If the Keyless Remote/Card Key* Battery is Weak P. 820 |
| each of the items on the right and respond accordingly. | Check the fuses. |
| | Check all fuses, or have your vehicle checked by a dealer. |
| | ▶ Inspecting and Changing Fuses P. 845 |
| The starter turns over normally, | Review the engine start procedure. |
| but the engine doesn't start. | Follow its instructions, and try to start the engine again. ■ Starting the Engine P. 528 |
| There may be a problem with a | Check the immobilizer system indicator. |
| fuse. Check each of the items on the right and respond accordingly. | When the immobilizer system indicator is blinking, the engine cannot be started. |
| | Immobilizer System P. 249 |
| | Immobilizer System Indicator P. 152 |
| | Check the fuel level. |
| | There should be enough fuel in the tank. ▶ Fuel Gauge P. 165 |
| | Check the fuses. |
| | Check all fuses or have the vehicle checked by a dealer. ■ Inspecting and Changing Fuses P. 845 |
| | If the problem continues: |
| | Emergency Towing P. 848 |

If you cannot start the engine after checking all the items in the list above, have your vehicle checked by a dealer.

If you must start the vehicle immediately, use an assisting vehicle or booster battery to jump start it.

If the Battery Is Dead P. 824

Depending on the situation, it may be possible to temporarily start the engine using the emergency starting procedure.

Emergency Engine Start P. 822

Do not hold the **ENGINE START/STOP** button for more than 15 seconds.

If the Keyless Remote/Card Key* Battery is Weak

If the beeper sounds, the To start, touch start button with emblem side of remote message appears on the driver information interface, the ENGINE START/STOP button flashes, and the engine won't start, start the engine as follows:

- ENGINE START STOP
- 1. Press the **ENGINE START/STOP** button.
 - ➤ The beeper sounds and the **ENGINE START/STOP** button flashes for about 30 seconds.
- 2. Touch the centre of the ENGINE START/ STOP button with the H logo on the keyless remote or card key* while the ENGINE START/STOP button is flashing. The buttons on the keyless remote or card key* should be facing you.
 - ► The beeper sounds, and the ENGINE START/STOP button stays on for about 10 seconds.

- 1 Keyless Remote
- 2 Card Key*



- **3.** Depress the brake pedal and press the **ENGINE START/STOP** button while the **ENGINE START/STOP** button is on.
 - ► The engine starts.
 - ► If you don't depress the pedal, the mode will change to ACCESSORY.

Emergency Engine Start

If the engine does not start using the normal starting procedure, you may be able to start it using the emergency starting procedure below.

Do not use this procedure if it is not an emergency.

- 1. Make sure the parking brake is applied.
- **2.** Check that the transmission is in \boxed{P} , then set the power mode to ACCESSORY.
- **3.** Firmly depress the brake pedal, then press and hold the **ENGINE START/STOP** button for at least 15 seconds.

This should be considered a system malfunction even if you are able to start the engine using the above procedure.

Have your vehicle checked by a dealer immediately.

Refer to the following if you cannot move the shift lever out of the $\boxed{\mathbf{P}}$ position.

Shift Lever Does Not Move P. 827

Emergency Engine Stop

The **ENGINE START/STOP** button may be used to stop the engine due to an emergency situation even while driving. If you must stop the engine, do either of the following operations:

- Press and hold the **ENGINE START/STOP** button for about two seconds.
- Firmly press the **ENGINE START/STOP** button three times.

The steering wheel will not lock. However, because turning off the engine disables the power assist the engine provides to the steering and braking systems, it will require significantly more physical effort and time to steer and slow the vehicle. Use both feet on the brake pedal to slow down the vehicle and stop immediately in a safe place.

The power mode is in ACCESSORY when the engine is stopped. To change the mode to VEHICLE OFF, put the transmission into $\boxed{\textbf{P}}$ after the vehicle comes to a complete stop. Then, press the **ENGINE START/STOP** button twice without depressing the brake pedal.

Emergency Engine Stop

NOTICE


Do not press the **ENGINE START/STOP** button while driving unless it is absolutely necessary for the engine to be turned off.

If you press the **ENGINE START/STOP** button while driving, the beeper sounds.

If the Battery Is Dead

Jump Starting Procedure

Turn off the power to electric devices, such as audio and lights. Turn off the engine, then open the bonnet.

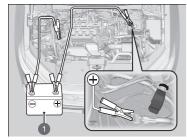

Booster Battery

- **1.** Open the cover on the positive \oplus terminal.
- **2.** Connect the first jumper cable to your vehicle's battery \oplus terminal.
- **3.** Connect the other end of the first jumper cable to the booster battery \oplus terminal.
 - ► Use a 12-volt booster battery only.
- ➤ When using an automotive battery charger to boost your 12-volt battery, select a lower charging voltage than 15-volt. Check the charger manual for the proper setting.
- **4.** Connect the second jumper cable to the booster battery ⊝ terminal.

AWARNING


A battery can explode if you do not follow the correct procedure, seriously injuring anyone nearby.

Keep all sparks, open flames, and smoking materials away from the battery.

NOTICE

If a battery sits in extreme cold, the electrolyte inside can freeze. Attempting to jump start with a frozen battery can cause it to rupture.

Securely attach the jumper cables clips so that they do not come off when the engine vibrates. Be careful not to tangle the jumper cables or allow the cable ends to touch each other while attaching or detaching the jumper cables.

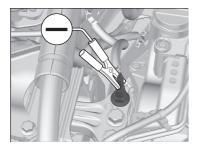

- **5.** Connect the other end of the second jumper cable to the engine mounting bolt as shown. Do not connect this jumper cable to any other part.
- **6.** If your vehicle is connected to another vehicle, start the assisting vehicle's engine and increase its RPM slightly.
- **7.** Attempt to start your vehicle's engine. If it turns over slowly, check that the jumper cables have good metal-to-metal contact.

Battery performance degrades in cold conditions and may prevent the engine from starting.

■ What to Do After the Engine Starts

Once your vehicle's engine has started, remove the jumper cables in the following order.

- **1.** Disconnect the jumper cable from your vehicle's ground.
- **2.** Disconnect the other end of the jumper cable from the booster battery \bigcirc terminal.
- **3.** Disconnect the jumper cable from your vehicle's battery \oplus terminal.
- **4.** Disconnect the other end of the jumper cable from the booster battery \oplus terminal.


Have your vehicle inspected by a nearby service station or a dealer.

The Vehicle Stability Assist (VSA) system, brake system (Amber), Adaptive Cruise Control (ACC) with Low Speed Follow, low tyre pressure/TPMS*, low tyre pressure/deflation warning system*, Collision Mitigation Braking System (CMBS), Road Departure Mitigation, and safety support indicators may come on in amber along with a message in the gauge when you set the power mode to ON after reconnecting the battery.

Drive a short distance at more than 20 km/h. Each indicator should go off. If any do not, have your vehicle checked by a dealer.

Follow the procedure below if you cannot move the shift lever out of the P position.

■ Releasing the Lock

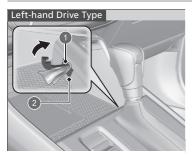

- 1. Set the parking brake.
- 2. Set the power mode to VEHICLE OFF.
- **3.** Remove the built-in key from the keyless remote or card key*.

Left-hand Drive Type

4. Wrap a cloth around the tip of the built-in key. Put it into the shift lock release slot as shown in the image, and remove the cover.

- 1 Shift Lock Release Slot
- 2 Cover



All models

- **5.** Insert the key into the shift lock release slot.
- **6.** While pushing the key in, press the shift lever release button, and place the shift lever into [N].
 - ► The lock is now released. Have the shift lever checked by a dealer as soon as possible.

- 1 Release Button
- 2 Shift Lock Release Slot



- Release Button
- 2 Shift Lock Release Slot

Overheating

How to Handle Overheating

Overheating symptoms are as follows:

Models with B-type meter

• The temperature gauge is at upper level or the engine suddenly loses power.

All models

- The **Engine temperature too hot. Do not drive. Allow engine to cool.** message appears on the driver information interface.
- Steam or spray comes out of the engine compartment.

■ First thing to do

- 1. Immediately park the vehicle in a safe place.
- 2. Turn off all accessories and turn on the hazard warning lights.
 - ▶ No steam or spray present: Keep the engine running and open the bonnet.
 - ► Steam or spray is present: Turn off the engine and wait until it subsides. Then, open the bonnet.

AWARNING

Steam and spray from an overheated engine can seriously scald you.

Do not open the bonnet if steam is coming out.

NOTICE

Models with B-type meter


Continuing to drive with the temperature gauge at upper level may damage the engine.

All models

Continuing to drive with the Empire Empire temperature too hot. Do not drive. Allow engine to cool. message on the driver information interface may damage the engine.

Continued 829

■ Next thing to do

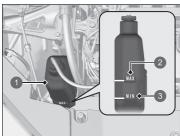

- Reserve Tank
- MAX
- MIN

- Check that the cooling fan is operating and stop the engine once the Engine temperature too hot. Do not drive.
 Allow engine to cool. message on the driver information interface disappears.
 - ► If the cooling fan is not operating, immediately stop the engine.
- **2.** Once the engine has cooled down, inspect the coolant level and check the cooling system components for leaks.
 - If the coolant level in the reserve tank is low, add coolant until it reaches the MAX mark.
 - ▶ If there is no coolant in the reserve tank, check that the radiator is cool. Cover the radiator cap with a heavy cloth and open the cap. If necessary, add coolant up to the base of the filler neck, and put the cap back on.

AWARNING

Removing the radiator cap while the engine is hot can cause the coolant to spray out, seriously scalding you.

Always let the engine and radiator cool down before removing the radiator cap.

If the coolant is leaking, contact a dealer for repairs.

Use water as an emergency/temporary measure only. Have a dealer flush the system with proper antifreeze as soon as possible.

■ Last thing to do

Once the engine has cooled sufficiently, restart it and check the driver information interface.

If the Engine temperature too hot. Do not drive. Allow engine to cool. message does not appear, resume driving. If it appears again, contact a dealer for repairs.

Indicator Coming On/Blinking

If the Engine oil pressure low Warning Appears

Except African models with Right-hand Drive Type



African models with Right-hand Drive Type



■ Reasons for the warning to appear Appears when the engine oil pressure is low.

- What to do as soon as the warning appears
- 1. Immediately park the vehicle on level ground in a safe place.
- 2. If necessary, turn the hazard warning lights on.
- What to do after parking the vehicle
- **1.** Stop the engine and let it sit for approximately three minutes.
- 2. Open the bonnet and check the oil level.
 - Add oil as necessary.
 - Oil Check P 752
- **3.** Start the engine and check the Engine oil pressure low warning.
 - ► The warning disappears: Start driving again.
 - The warning does not disappear within 10 seconds: Immediately stop the engine and contact a dealer for repairs.

If the Engine oil pressure low Warning Appears

NOTICE

Running the engine with low oil pressure can cause serious mechanical damage almost immediately.

If the Charging System Indicator Comes On



■ Reasons for the indicator to come on

Comes on when there is a problem with the charging system.

■ What to do when the indicator comes on

Stop in a safe place and have your vehicle checked by a dealer immediately.

If the Malfunction Indicator Lamp Comes On or Blinks



- Reasons for the indicator lamp to come on or blink
- Comes on when there is a problem with the engine emissions control system.
- Blinks when engine misfiring is detected.
- What to do when the indicator lamp comes on

Avoid high speeds and immediately get your vehicle inspected at a dealer.

■ What to do when the indicator lamp blinks

Park the vehicle in a safe place with no flammable items and wait at least 10 minutes or more with the engine stopped until it cools.

If the Charging System Indicator Comes On

If you need to stop temporarily, do not turn off the engine. Restarting the engine may rapidly discharge the battery.

NOTICE

If you drive with the malfunction indicator lamp on, the emissions control system and the engine could be damaged.

If the malfunction indicator lamp blinks again when restarting the engine, drive to the nearest dealer at 50 km/h or less. Have your vehicle inspected.

If the Brake System Indicator (Red) Comes On or Blinks



■ Reasons for the indicator to come on

- The brake fluid is low.
- There is a malfunction in the brake system.

■ What to do when the indicator comes on while driving

Depress the brake pedal lightly to check pedal pressure.

- If normal, check the brake fluid level the next time you stop.
- If abnormal, take immediate action. If necessary, downshift the transmission to slow the vehicle using engine braking.

■ Reasons for the indicator to blink

There is a problem with the electric parking brake system.

■ What to do when the indicator blinks

Avoid using the parking brake and have your vehicle checked by a dealer immediately.

≥ If the Brake System Indicator (Red) Comes On or Blinks

Have your vehicle repaired immediately. It is dangerous to drive with low brake fluid. If there is no resistance from the brake pedal, stop immediately in a safe place. If necessary downshift the gears.

If the brake system indicator (red) and **ABS** indicator come on simultaneously, the electronic brake distribution system is not working. This can result in vehicle instability under sudden braking. Have your vehicle inspected by a dealer immediately.

If the brake system indicator (red) blinks at the same time when the brake system indicator (amber) comes on, the parking brake may not work.

Avoid using the parking brake and have your vehicle checked by a dealer immediately.

☑ If the Brake System Indicator (Red) Comes On or Blinks at the Same Time When the Brake System Indicator (Amber) Comes On P. 834

If the Brake System Indicator (Red) Comes On or Blinks at the Same Time When the Brake System Indicator (Amber) Comes On



(Red)

■ If the brake system indicator (red) comes on or blinks at the same time when the brake system indicator (amber) comes on, release the parking brake manually or automatically Parking Brake P. 686



- If the brake system indicator (red) continuously comes on or blinks at the same time when the brake system indicator (amber) comes on, stop the vehicle in a safe place and have it inspected by a dealer immediately.
 - \triangleright To prevent the vehicle from moving, put the transmission into \boxed{P} .
- If only the brake system indicator (red) is turned off, avoid using the parking brake and have your vehicle checked by a dealer immediately.

≥ If the Brake System Indicator (Red) Comes On or Blinks at the Same Time When the Brake System Indicator (Amber) Comes On

If you apply the parking brake, you may not be able to release it

If the brake system indicator (red) and the brake system indicator (amber) come on at the same time, the parking brake is working.

If the brake system indicator (red) blinks at the same time when the brake system indicator (amber) comes on, the parking brake may not work because it is checking the system.

If the Electric Power Steering (EPS) System Indicator Comes On



■ Reasons for the indicator to come on

Comes on when there is a problem with the EPS system or Driver Attention Monitor System.

■ What to do when the indicator comes on

- Stop the vehicle in a safe place and restart the engine.
 If the indicator comes on and stays on, immediately have your vehicle inspected by a dealer.
- If **Do not drive** displays on the driver information interface, immediately stop in a safe place and contact a dealer.

Taiwanese models

If the Low Tyre Pressure/TPMS Indicator Comes On or Blinks



■ Reasons for the indicator to come on or blink

A tyre pressure is significantly low, or the TPMS has not been calibrated. If there is a problem with the TPMS, the indicator blinks for about one minute, and then stays on.

■ What to do when the indicator comes on

Drive carefully and avoid abrupt cornering and hard braking. Stop your vehicle in a safe place. Check the tyre pressure and adjust the pressure to the specified level. The specified tyre pressure is on a label on the driver side doorjamb.

- ► Calibrate the TPMS after the tyre pressure is adjusted.
 - Tyre Pressure Monitoring System (TPMS) P. 573
- \blacksquare What to do when the indicator blinks, then remains on

Have the tyre inspected by a dealer as soon as possible.

≥ If the Low Tyre Pressure/TPMS Indicator Comes On or Blinks

NOTICE

Driving on an extremely underinflated tyre can cause it to overheat. An overheated tyre can fail. Always inflate your tyres to the prescribed level.

Except Taiwanese models

If the Low Tyre Pressure/Deflation Warning System Indicator* Comes On or Blinks



Reasons for the indicator to come on or blink

A tyre pressure is significantly low, or the deflation warning system has not been calibrated. If there is a problem with the deflation warning system, the indicator blinks for about one minute, and then stays on. If the compact spare tyre* is installed, the indicator will either come on or it will first blink for about one minute, then stay on.

■ What to do when the indicator comes on

Drive carefully and avoid abrupt cornering and hard braking. Stop your vehicle in a safe place. Check the tyre pressure and adjust the pressure to the specified level. The specified tyre pressure is on a label on the driver side doorjamb.

Calibrate the deflation warning system after the tyre pressure is adjusted.

Deflation Warning System* P. 578

If the compact spare tyre* causes the indicator to come on, change the tyre to a regular tyre. The indicator goes off after calibrating the deflation warning system.

■ What to do when the indicator blinks, then remains on Have the tyre inspected by a dealer as soon as possible. If the compact spare tyre* causes the indicator to first blink, and then stay on, change the tyre to a regular tyre. The indicator goes off after calibrating the deflation warning system.

■If the Low Tyre Pressure/Deflation Warning System Indicator*

Comes On or Blinks

Output

Deflation Warning System Indicator*

Comes On or Blinks

Output

Deflation Warning System Indicator*

Output

Deflation Warning System Indicator

Output

Deflation Warning Syst

NOTICE

Driving on an extremely underinflated tyre can cause it to overheat. An overheated tyre can fail. Always inflate your tyres to the prescribed level.

* Not available on all models

Fuses


Fuse Locations

If any electrical devices are not working, set the power mode to VEHICLE OFF and check to see if any applicable fuse is blown.

■ Engine Compartment Fuse Box

Models without fuse number-stamped on the cover


Located near the battery. Push the tabs to open the box.

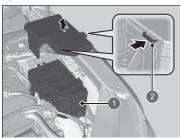

- Fuse Box
- 2 Tab

Fuse locations are shown on the image below.

Locate the fuse in question by the fuse number in the image and chart.

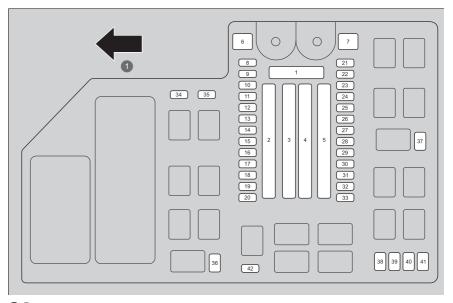

Front

■ Circuit protected and fuse rating


| | Circuit Protected | Amps |
|---|------------------------|-------|
| 1 | Main Fuse | 125 A |
| | _ | 30 A |
| | | 40 A |
| | Fuse Box Option 1 | 60 A |
| 2 | | 40 A |
| | Fuse Box Option 2 | 60 A |
| | | 60 A |
| | Fuse Box Main 1 | 60 A |
| | | 30 A |
| | ST Magnetic Switch | 30 A |
| | | 40 A |
| 3 | Rear Demister | 30 A |
| | | 50 A |
| | Blower Motor | 40 A |
| | Power Tailgate Motor | 40 A |
| | ABS/VSA FSR | 40 A |
| | ABS/VSA Motor | 40 A |
| | <u> </u> | 40 A |
| 4 | Electric Brake Booster | 40 A |
| | IG Main 1 | 30 A |
| | - | 40 A |
| | IG Main 2 | 30 A |

| | Circuit Protected | A 100 10 5 |
|-----|---------------------|------------|
| | Circuit Protected | Amps |
| _ | | 30 A |
| _ | Wiper | 30 A |
| | EPS | 70 A |
| 5 _ | - | 30 A |
| | _ | 40 A |
| | Main Fan | 30 A |
| | Fuse Box Main 2 | 60 A |
| 6 | Sub Fan | 30 A |
| 7 | Relay Module 2 | 20 A |
| 8 | - | _ |
| 9 | Back Up | 10 A |
| 10 | = | _ |
| 11 | = | - |
| 12 | = | - |
| 13 | Audio Sub | 7.5 A |
| 14 | = | _ |
| 15 | Front Fog Lights | 10 A |
| 16 | _ | _ |
| 17 | A/C Magnetic Clutch | 10 A |
| 18 | Horn | 15 A |
| 19 | Front Washer | 15 A |
| 20 | Audio | 15 A |
| 21 | Relay Module 1 | 20 A |
| 22 | DBW | 15 A |
| 23 | Hazard | 10 A |
| 24 | VBU | 10 A |
| 25 | IGP | 15 A |

| | Circuit Protected | Amps |
|----|-------------------|-------|
| 26 | TCU | 10 A |
| 27 | Left Headlight | 20 A |
| 28 | Injector | 20 A |
| 29 | Stop Lights | 10 A |
| 30 | Right Headlight | 20 A |
| 31 | IG Coil | 15 A |
| 32 | - | _ |
| 33 | - | - |
| 34 | - | - |
| 35 | - | - |
| 36 | - | - |
| 37 | - | - |
| 38 | - | - |
| 39 | IGPS VBACT | 7.5 A |
| 40 | IGPS FAN | 7.5 A |
| 41 | IGPS LAF | 7.5 A |
| 42 | IG1 Monitor 2 | 5 A |

Models with fuse number-stamped on the cover

Located near the battery. Push the tabs to open the box. Fuse locations are shown on the fuse box cover. Locate the fuse in question by the fuse number and box cover number.

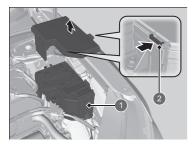

- 1 Fuse Box
- 2 Tab

■ Circuit protected and fuse rating

| | Circuit Protected | | |
|---|-------------------|------------------------|--------|
| 1 | - + | Main Fuse | 125 A |
| | ∏i | Idle Stop 2* | (30 A) |
| | _ | - | 40 A |
| | ∏i | Fuse Box Option 1 | 60 A |
| 2 | li | - | (40 A) |
| | ∏i | Fuse Box Option 2* | 60 A |
| | | _ | 60 A |
| | \prod i | Fuse Box Main 1 | 60 A |
| | li | Audio AMP* | (30 A) |
| | i | ST Magnetic Switch | 30 A |
| | <u>l</u> i | - | (40 A) |
| 3 | FF | Rear Demister | 30 A |
| | | - | 50 A |
| | * | Blower Motor | 40 A |
| | <u>l</u> i | Power Tailgate Motor* | (40 A) |
| | Πi | ABS/VSA FSR | 40 A |
| | (li | ABS/VSA Motor | 40 A |
| | | _ | 40 A |
| 4 | <u>l</u> i | Electric Brake Booster | 40 A |
| | = | IG Main 1 | 30 A |
| | | _ | 40 A |
| | = | IG Main 2 | 30 A |

| | Circuit Protected Amps | | | | |
|----|------------------------|---------------------|--------|--|--|
| | Πi | Idle Stop 1* | (30 A) | | |
| | P | Wiper | 30 A | | |
| | (P) | EPS | 70 A | | |
| 5 | - | - | 30 A | | |
| | - | - | 40 A | | |
| | * | Main Fan | 30 A | | |
| | (li | Fuse Box Main 2 | 60 A | | |
| 6 | * | Sub Fan | 30 A | | |
| 7 | Πi | Relay Module 2 | 20 A | | |
| 8 | _ | - | - | | |
| 9 | Πi | Back Up | 10 A | | |
| 10 | □i | - | (15 A) | | |
| 11 | 和 | Rear Fog Light* | (10 A) | | |
| 12 | _ | - | - | | |
| 13 | Πi | Audio Sub | 7.5 A | | |
| 14 | _ | - | _ | | |
| 15 | 10 | Front Fog Lights* | (10 A) | | |
| 16 | - | _ | - | | |
| 17 | <u> </u> | A/C Magnetic Clutch | 10 A | | |
| 18 | D | Horn | 15 A | | |
| 19 | ∰ | Front Washer | 15 A | | |
| 20 | •==• | Audio* | 15 A | | |
| 21 | Πi | Relay Module 1 | 20 A | | |
| 22 | Πì | DBW | 15 A | | |
| 23 | | Hazard | 10 A | | |

| | | Circuit Protected | Amps |
|----|-----------|-------------------|---------|
| 24 | <u> </u> | VBU | 10 A |
| 25 | Πi | IGP | 15 A |
| 26 | Πi | TCU | 10 A |
| 27 | | Left Headlight | 20 A |
| 28 | Πi | Injector | 20 A |
| 29 | (3) | Stop lights | 10 A |
| 30 | Πi | Right Headlight | 20 A |
| 31 | Πi | IG Coil | 15 A |
| 32 | _ | - | _ |
| 33 | _ | - | - |
| 34 | _ | _ | _ |
| 35 | - | - | - |
| 36 | \prod i | Audio Main VST* | (15 A) |
| 37 | Πi | Audio Sub VST* | (7.5 A) |
| 38 | _ | - | - |
| 39 | Πi | IGPS VBACT | 7.5 A |
| 40 | (li | IGPS FAN | 7.5 A |
| 41 | <u> </u> | IGPS LAF | 7.5 A |
| 42 | Πi | IG1 Monitor 2 | 5 A |


■ Interior Main Fuse Box

Located under the dashboard.


Fuse locations are shown on the label under the steering column.

Locate the fuse in question by the fuse number and label number.

Left-hand Drive Type

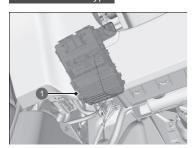


1 Fuse Box

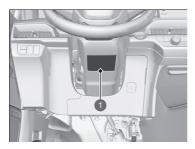


• Fuse Label

Right-hand Drive Type

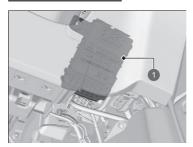

1 Fuse Box

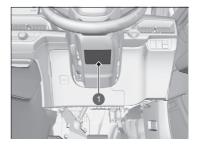

• Fuse Label

■ Circuit protected and fuse rating

| | | Circuit Protected | Amps |
|----|----------------------|-----------------------------------|--------|
| 1 | (| Driver's Power Window | 20 A |
| 2 | ₽ | Front Passenger's Power Window | 20 A |
| 3 | ₹ | Rear Right Side Power Window | 20 A |
| 4 | ② | Rear Left Side Power Window | 20 A |
| 5 | (li | Option | 10 A |
| 6 | * | SRS | 10 A |
| 7 | (li | Tailgate Motor* | (10 A) |
| 8 | Πi | - | 10 A |
| 9 | <u>i</u> | Front Accessory Power Socket | 20 A |
| 10 | | Door Lock | 20 A |
| 11 | (S) | Meter | 10 A |
| 12 | Πi | Option 3 (Starter Cut)* | 10 A |
| 13 | <u> </u> | Option 2 | 10 A |
| 14 | ∏i | Option 6 (VB SOL) | 10 A |
| 15 | | Driver's Door Unlock* | (10 A) |
| 16 | $\prod_{\mathbf{i}}$ | IMG | 10 A |
| 17 | <u>l</u> i | Trailer* | (20 A) |
| 18 | ∏i | - | (20 A) |
| 19 | _ | - | _ |
| 20 | 4 | USB Charger* | 10 A |

| | Circuit Protected Amps | | | |
|----|------------------------|--|--------|--|
| 21 | <u>l</u> i | Accessory Power Socket (Luggage Area) | 20 A | |
| 22 | Πi | SMART | 10 A | |
| 23 | | Driver's Door Lock* | (10 A) | |
| 24 | Πì | E-DPS* | 20 A | |
| 25 | _ | - | - | |
| 26 | * | SRS | 10 A | |
| 27 | (li | ACG | 10 A | |
| 28 | <u> </u> | Option 5 (ABS) | 10 A | |
| 29 | (| Fuel Pump | 20 A | |
| 30 | | Left Side Door Unlock | 10 A | |
| 31 | | Right Side Door Unlock* | 10 A | |
| 32 | ⟨₷ | Panoramic Roof* | 20 A | |
| 33 | - | | | |
| 34 | - | _ | _ | |
| 35 | | Sunshade* | 20 A | |
| 36 | ₩) | _ | (20 A) | |
| 37 | - | - | - | |
| 38 | * | Rear Blower* | 20 A | |
| 39 | | Right Side Door Lock* | 10 A | |
| 40 | 4 | Driver's Power Seat Sliding* | 20 A | |
| 41 | # | Driver's Power Seat Reclining* | 20 A | |
| 42 | Πi | ETHANOL* | 5 A | |
| 43 | Til. | A/C | 10 A | |

| | | Circuit Protected | Amps |
|----|----------|---|--------|
| 44 | <u> </u> | Daytime Running Light | 5 A |
| 45 | (li | ACC | 10 A |
| 46 | - | - | - |
| 47 | | Left Side Door Lock | 10 A |
| 48 | # | Front Seat Heater* | (20 A) |
| 49 | # | Passenger's Power Seat Reclining* | 20 A |
| 50 | ₫ | Driver's Power Seat Lumbar Support* | 10 A |
| 51 | - | - | - |
| 52 | - | Power Tailgate Closer* | (20 A) |
| 53 | 4 | Passenger's Power Seat Sliding* 20 A | |
| 54 | Πi | Option 1 | 10 A |
| 55 | _ | - | - |
| 56 | _ | _ | _ |

* Not available on all models

Taiwanese models

■ Interior Sub Fuse Box

Located under the dashboard.

Fuse locations are shown on the label under the steering column.

Locate the fuse in question by the fuse number and label number.



1 Sub Fuse Box




¶ Fuse Label

■ Circuit protected and fuse rating

| | | Circuit Protected | Amps |
|---|--------------|-------------------|---------|
| Α | <u> </u> | ACC | (5 A) |
| В | Ωi | EOP | (10 A) |
| C | 0 | MVCS VST* | (7.5 A) |
| D | (<u>6</u>) | Meter | (10 A) |
| Е | Ωi | Option | (10 A) |
| F | _ | - | _ |
| G | - | - | - |
| Н | _ | - | _ |

Inspecting and Changing Fuses

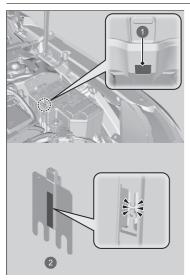

- 1 Hole
- 2 Main Fuse

- **1.** Set the power mode to VEHICLE OFF. Turn headlights and all accessories off.
- 2. Remove the fuse box cover.
- **3.** Check the main fuse in the engine compartment fuse box.
 - ► Look at the fuse through the hole.
 - ► If the fuse is blown, have it replaced by a dealer.


NOTICE

Replacing a fuse with one that has a higher rating greatly increases the chances of damaging the electrical system.

Use the charts to locate the fuse in question and confirm the specified amperage on the fuse label*.

Fuse Locations P. 838


Replace with a fuse of the same specified amperage.

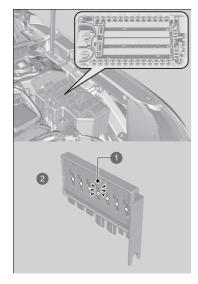

- **4.** Check the combined fuses in the engine compartment fuse box.
 - ► Look into the space between the fuses.
 - ► If the fuse is blown, have it replaced by a dealer.

Blown Fuse

2 Combined Fuse

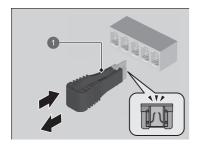

1 Fuse Puller

- **5.** Inspect the small fuses in the engine compartment and the vehicle interior.
 - ► If there is a blown fuse, remove it with the fuse puller and replace it with a new one.

There is a fuse puller on the back of the engine compartment fuse box cover.

Emergency Towing

Call a professional towing service if you need to tow your vehicle.

■ Flatbed equipment

The operator loads your vehicle on the back of a truck.

This is the best way to transport your vehicle.

2WD models

■ Wheel lift equipment

The tow truck uses two pivoting arms that go under the front tyres and lift them off the ground. The rear tyres remain on the ground. **This is an acceptable way to tow your vehicle.**

Emergency Towing

NOTICE

Trying to lift or tow your vehicle by the bumpers will cause serious damage. The bumpers are not designed to support the vehicle's weight.

NOTICE

Improper towing such as towing behind a motorhome or other motor vehicle can damage the transmission.

Never tow your vehicle with just a rope or chain. It is very dangerous since ropes or chains may shift from side to side or break.

2WD models


Make sure the parking brake is released. If you cannot release the parking brake, your vehicle must be transported by the flatbed equipment.

Parking Brake P. 686

If You Cannot Unlock the Fuel Fill Door

■ What to Do If Unable to Unlock the Fuel Fill Door

If you cannot unlock the fuel fill door, use the following procedure.

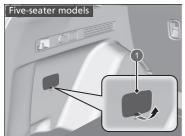

1. Open the tailgate.


Seven-seater models

- 2. Folding down the third row seat.
 - ► Folding Down the Third Row Seat P. 297

All models

3. Remove the cover.

Cover

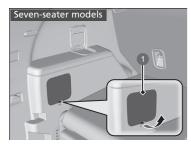


1 Cover

What to Do If Unable to Unlock the Fuel Fill Door

After taking these steps, contact a dealer to have the vehicle checked.

Continued 849

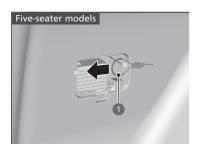

- **4.** Pull the release cord as shown.
- **5.** Open the fuel fill door.
 - **How to Refuel** P. 726

Release Cord




Release Cord

If You Cannot Open the Tailgate


■ What to Do If Unable to Open the Tailgate

If you cannot open the tailgate, use the following procedure.

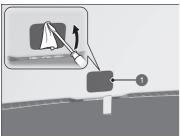

- **1.** Use a flat-tip screwdriver and remove the cover on the back of the tailgate.
 - ➤ Wrap the flat-tip screwdriver with a cloth to prevent scratches.

Cover

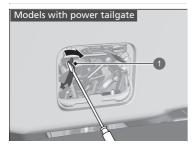

1 Lever

2. To open the tailgate, push the tailgate while pushing the lever to the right using a flat-tip screwdriver.


What to Do If Unable to Open the Tailgate

Following up:

After taking these steps, contact a dealer to have the vehicle checked.

When you open the tailgate from inside, make sure there is enough space around the tailgate, and it does not hit anyone or any object.


Continued 851

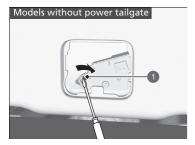

1 Lever

Emergency Call (eCall)*

Automatic emergency call

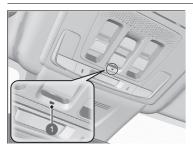

If your vehicle is involved in a collision, the vehicle will attempt to connect to a Public Safety Answering Point (PSAP) operator. Once a connection is established, various information about the vehicle will be sent to a PSAP operator with whom you will be able to speak. This information includes:

eCall Indicator

- Vehicle identification number (VIN)
- Type of vehicle (passenger vehicle or light-weight commercial vehicle)
- Type of energy stored for vehicle propulsion (gasoline/diesel/CNG/LPG/electricity/ hydrogen)
- Last three locations of the vehicle
- Direction of travel
- Triggering mode (automatic or manual)
- Timestamp

When an emergency call is initiated, the vehicle speakers are disabled so that you can hear the operator.

When the power mode is set to ON, the eCall indicator lights up in green for 1 second, then in red for 1 second.

∑Emergency Call (eCall)*

Your vehicle is equipped with the eCall service system.

The eCall service is a public service of general interest and is accessible free of charge.

The eCall in-vehicle system is activated when the power mode is set to ON. In the event of a collision, the system will determine the degree of the impact based on information collected from the on-board sensors and, depending on the severity of the collision, will initiate the emergency call.

The eCall in-vehicle system can also be triggered manually, if needed.

Manual emergency call P. 855

Any processing of personal data through the eCall invehicle system shall comply with the personal data protection rules provided for in Directives 95/46/EC (replaced by Regulation (EU) 2016/679) and 2002/58/EC, and in particular, shall be based on the necessity to protect the vital interests of the individuals in accordance with Article 7(d) of Directive 95/46/EC (replaced by Regulation (EU) 2016/679).

If the eCall system is working properly, the indicator will light up in green.

- Green: eCall system is ready.
- Blinking in green: eCall system is connected and making an eCall to a PSAP operator.
- Repeating a pattern of short flashes of the red light: The eCall system has failed to connect to an operator. The eCall indicator will continue this pattern for 30 seconds, then it will light up in green.

If the eCall system is disabled in the event of a critical system failure, the following warning will be given to the occupants of the vehicle:

- Red or blacked out: A problem with the eCall system has occurred. If the indicator stays red or blacked out even after you have restarted the vehicle, have the system check by a dealer.
- Blinking in red: The level of the backup battery is too low. While the power is in ON, the battery undergoes recharging. Once the battery has been recharged to a certain level, the eCall indicator lights up in green.

Emergency Call (eCall)*

Recipients of data processed by the eCall in-vehicle system are the relevant public safety answering points designated by the respective public authorities of the country in which they are located and are the first to receive.

Your vehicle may NOT be able to connect to a PSAP operator if:


- Both the 12V battery and backup battery are too low.
- Your vehicle is in an area without adequate cellular coverage.
- There is a problem with the eCall system itself or its peripheral equipment such as the microphone or speakers.

The backup battery is designed to operate for at least 3 years, after which it may need to be replaced.

The backup battery is not available for direct purchase. For replacement, visit a dealer.

This function cannot be used in regions where eCall is not available.

Manual emergency call

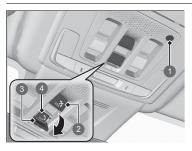

If you need to make an emergency call, you can establish a connection manually: Press the **SOS** button and hold it for more than 0.5 seconds.

To cancel a call, press the **SOS** cancel button for more than 0.5 seconds, before 5 seconds has elapsed since the **SOS** button was pressed.

- Microphone
- 2 SOS Cancel Button
- 3 Cover
- 4 SOS Button

The **SOS** button is protected by a cover. Open the cover to gain access.

When an emergency call is initiated, the vehicle speakers are disabled so that you can hear the operator.

Manual emergency call

Do NOT press the button while you are driving. If you need to contact an operator, park the vehicle in a safe place before you make a call.

If the eCall system at first fails to connect to a PSAP operator, it will try again until a connection is established. However, if 2 minutes have elapsed since the first try was attempted, the system will no longer attempt to establish a connection.

The **SOS** cancel button does not cancel a call once the system is connected to an operator.

Emergency Call (eCall)*

Data privacy

The eCall in-vehicle system is designed to ensure that:

- Data contained in the system memory is not available outside the system before an eCall is triggered.
- It is not traceable or subject to any constant tracking during its normal operation status.
- Data in the internal memory of the system is automatically and continuously removed.

For the system to function normally, the vehicle location data is constantly overwritten in the internal memory of the system so that the last three locations of the vehicle are kept up-to-date.

The log of activity data in the eCall in-vehicle system is kept for no longer than necessary for attaining the purpose of handling the emergency eCall and in any case not beyond 13 hours from the moment an emergency eCall was initiated.

Emergency Call (eCall)[∗]

Owner's rights

The data subject (the vehicle's owner) has a right of access to data and as appropriate to request the rectification, erasure or blocking of data, concerning him or her, the processing of which does not comply with the provisions of Directive 95/46/EC (replaced by Regulation (EU) 2016/679).

Any third parties to whom the data have been disclosed have to be notified of such rectification, erasure or blocking carried out in compliance with this Directive, unless it proves impossible or involves a disproportionate effort.

The data subject has a right to complain to the competent data protection authority if he or she considers that his or her rights have been infringed as a result of the processing of his or her personal data.

Honda eCall Service Information:

If you have any questions about eCall, contact the office relevant to the country in which you reside. See the service book or your local Honda website for a list of offices.

* Not available on all models

Information

This chapter includes your vehicle's specifications, locations of identification numbers, and other information required by regulation.

| Specifications | 860 |
|---------------------------------------|------|
| Identification Numbers | |
| Vehicle Identification Number (VIN), | |
| Engine Number and Transmission | |
| Number | 863 |
| Utility Compliance* | |
| Environmental Protection Regulation | .864 |
| Devices that Emit Radio Waves* | 865 |
| Open Source Licence | 880 |

* Not available on all models 859

Specifications

■ Vehicle Specifications

| Model | CR-V | |
|-------------------------------|--|--|
| Curb Weight | 1,584 - 1,636 kg" 1,594 - 1,664 kg" 1,602 - 1,749 kg" 1,606 - 1,749 kg" 1,613 - 1,719 kg" 1,647 - 1,755 kg" 1,649 - 1,732 kg" 1,653 - 1,747 kg" 1,678 - 1,724 kg"9 1,711 kg"10 1,777 kg"11 | |
| Maximum Permissible Weight | | 3 4 |
| Maximum Permissible | passenger' | rtification label on the s doorjamb*9 |
| Axle Weight | Front Rear | 1,180 kg 1,150 kg* ¹⁶ 1,300 kg* ¹⁷ |

- *1: Taiwanese models
- *2: Malaysian models
- *3: Latin American, Bangladesi, Bruneian, Nepalese, and Sri Lankan models
- *4: Thai models
- *5: Oceanian models
- *6: African models with Left-hand Drive Type and Middle Eastern models
- *7: Cambodia, Laos, and Philippine models
- *8: Vietnamese models
- *9: African, Jordanian, and Lebanese models with full-size spare tyre *10:Indonesian models
- *11:Pakistani models
- *12:Oceanian models with five-seaters
- *13: Five-seaters models except Oceanian models
- *14:Oceanian models with seven-seaters
- *15:Seven-seaters models except Oceanian models

- *16: Five-seaters models
- *17: Seven-seaters models

■ Engine Specifications

| Туре | Water-co | oled in-line 4-cylinder DOHC |
|-------------------|-----------|--------------------------------|
| Bore x Stroke | 73 × 89.5 | 5 mm |
| Displacement | 1,498 cm | 3 |
| Compression Ratio | 10.3 : 1 | |
| Spark Plugs | NGK | DILKAR8P8DY*1 DILKAR8P8SY*2 |
| Max. Power*3 | 142 kW (| 190 HP)/6,000 rpm |
| Max. Torque*3 | 243 N·m | (24.8 kgf·m)/1,700-5,000rpm |
| Max. Speed*3 | 190 km/h | |

- *1: Thai models
- *2: Except Thai models
- *3: GCC country and Iraqi models

■ Fuel

| | Thai models Unleaded petrol/gasohol up to E85 (15% petrol and 85% ethanol), research octane number 91 or higher |
|-------------------|--|
| iuel: ype | Pakistani models EURO V/5 Unleaded petrol, manganese: maximum 2mg/Litre, research octane number 91 or higher Hong Kong, Macao, and Singaporean models |
| | Unleaded premium petrol, research octane number 95 or higher |
| | Taiwanese models Unleaded petrol, research octane number of 92 or higher |
| | Models for other countries Unleaded petrol, research octane number of 91 or higher |
| uel Tank Capacity | 57 L |

■ Battery

| (| Capacity | 48AH(5)/60AH(20)* ¹ 36AH(5)/47AH(20)* ² | |
|---|----------|--|--|
| - | | | |

- *1: Taiwanese models
- *2: Except Taiwanese models

Idle Stop*1:

The battery installed in this vehicle is specifically designed for a model with Auto Idle Stop. If you need to replace the battery, make sure to select the specified type (LN2 EFB). Ask a dealer for more details.

■ Washer Fluid

| Tank Capacity | 1.5 L | |
|---------------|-------|--|

■ Light Bulbs

| = Light b | | |
|------------------------|------------------------------|-------|
| Headlights (Lov | w Beam) | LED |
| Headlights (High Beam) | | LED |
| Front Fog Light | ts* | LED |
| 5 | nal/Position/Daytime | LED |
| Running Lights | | LLD |
| Side Turn Signa | | LED |
| (on Door Mirro | rs) | |
| Brake Lights | | LED |
| Taillights | | LED |
| Rear Turn Sign | J | LED |
| Rear Side Mark | ker Lights | LED |
| Back-Up Lights | 5 | LED |
| Rear Fog Light | • | LED |
| High-Mount Br | ake Light | LED |
| Rear Licence Pl | late Light | LED |
| Interior Lights | | |
| | Front Map Lights | LED |
| | Rear Map Lights | LED |
| | Ambient Lights* | LED |
| | Foot Lights* | LED |
| | Vanity Mirror Lights* | 1.4 W |
| | Centre Console Light | LED |
| | Glove Box Light* | LED |
| | Luggage Area Light(s) | LED |
| | Console Compartment Light | LED |
| | Door Inner Handle Lights* | LED |
| | Beverage Holder Light* | LED |

■ Brake Fluid

| | Specified | Brake Fluid with DOT 3 or DOT 4 |
|--|-----------|---------------------------------|
|--|-----------|---------------------------------|

■ Continuously Variable Transmission Fluid

| Specified | Honda HCF-2 | | |
|-----------|-------------|--------------------|--|
| Capacity | Change | 3.5 L*1 3.9 L*2 | |

^{*1: 2}WD models

■ Engine Oil

| | Models with Gasoli Filter | ne Particulate |
|-------------|--|--------------------|
| Recommended | Honda Genuine Motor Oi ACEA C2/C3/C5 0W-20, | |
| | Thai models Honda Genuine Motor Oi ACEA C2/C3 0W-30, 5W | |
| | Models without G Particulate Filter & Thai models Honda Genuine Motor Oi 5W-30 | except |
| | API service SN or higher gr 0W-20, 0W-30, 5W-30 | rade or ACEA A5/B5 |
| Canacity | Change | 3.2 L |
| Capacity | Change including filter | 3.5 L |

Refer to the following page to determine whether your vehicle is equipped with a gasoline particulate filter.

Recommended Engine Oil P. 750

■ Rear Differential Fluid*

| Specified | Honda DPSF-II |
|-----------|----------------|
| Capacity | Change 1.247 L |

■ Engine Coolant

| Specified | Honda All Season Antifreeze/Coolant Type2 |
|-----------|---|
| Ratio | 50/50 with distilled water |
| | 5.93 L*1 |
| | (change including the remaining 0.61 L in the reserve tank) |
| c : | 5.94 L*2 |
| Capacity | (change including the remaining 0.61 L in the reserve tank) |
| | 6.02 L*3 |
| | (change including the remaining 0.61 L in the |
| | reserve tank) |

^{*1:} Taiwanese models

^{*2:} AWD models

^{*2:} Left-hand Drive Type except Taiwanese models

^{*3:} Right-hand Drive Type

■ Tyre

| _ | Size | 235/65R17 104H*1 235/60R18 103H*2 |
|----------------------------|----------------------------|---|
| Regular | Pressure | 235/55R19 101Y*3 See the label on driver's |
| | | doorjamb |
| Compact | Size | T155/90D17 112M |
| Spare* | Pressure | See the label on driver's doorjamb |
| | | 235/65R17 104H*1 |
| | Size | 235/60R18 103H*2 |
| Spare* (Full-size tyre) | | 235/55R19 101Y*3 |
| | Pressure | Same as the regular tyre. |
| | | See the label on driver's |
| | | doorjamb |
| | | 17X7 1/2J*1 |
| Wheel Size | Regular | 18X7 1/2J*2 |
| | | 19X7 1/2J*3 |
| | Compact Spare* | 17X4T |
| | Cnava* | 17X7 1/2J*1 |
| | Spare* (Full-size tyre) | 18X7 1/2J*2 |
| | | 19X7 1/2J*3 |

- *1: Models with 17 inch wheel
- *2: Models with 18 inch wheel
- *3: Models with 19 inch wheel

■ Brake

| Туре | Power assisted | |
|---------|-------------------------------|--|
| Front | Ventilated disc | |
| Rear | Solid disc | |
| Parking | Electric parking brake system | |

■ Air Conditioning

| Refrigerant Type | HFC-134a (R-134a) | |
|------------------|--------------------------------|--|
| Charge Quantity | 520 - 570 g*¹ 690 - 740 g*² | |

- *1: Models without rear cooler
- *2: Models with rear cooler

■ Vehicle Dimensions

| | 4,690 mm*1 | | | |
|------------|--|--------------------------------------|--|--|
| | 4,691 mm* ^{2, *3, *4, *5, *6} | | | |
| Length | 4,704 mm* ⁷ | | | |
| | 4,705 mm*8 | | | |
| | 4,706 mm*9, *10, *11, *12 | | | |
| VA C alada | 1,865 mm* ^{1,*8} 1,866 mm* ¹³ | | | |
| Width | | | | |
| | 1,675 r | mm*1 | | |
| | 1,680 mm*8 | | | |
| Height | leight 1,681 mm*14 | | | |
| | 1,684 mm*15 | | | |
| | 1,691 mm* ¹⁶ | | | |
| AAA II | 2,700 mm*1, *8, *17 2,701 mm*14, *18 | | | |
| Wheelbase | | | | |
| Track | | 1,608 mm*10, *19 | | |
| | | 1,610 mm*1, *8 | | |
| | Front | 1,611 mm*11, *20 | | |
| | | 1,612 mm*15, *21, *22, *23, *24, *25 | | |
| | | 1,613 mm*3, *4, *26, *27, *28 | | |
| | | 1,623 mm*10, *19 | | |
| | | 1,625 mm*8 | | |
| | Rear | 1,627 mm*11, *20 | | |
| | | 1,638 mm*24, *26, *28 | | |
| | | 1,639 mm*18 | | |
| | | 1,640 mm*1, *15, *21, *22, *27 | | |
| | | 1,641 mm*4, *23, *25, *29 | | |
| | | | | |

- *1: Taiwanese models
- *2: Thai models
- *3: Cambodia, Laos, and Philippine models
- *4: Indonesian models

- *5: Vietnamese models
- *6: Malaysian models
- *7: Oceanian models
- *8: Hong Kong and Macao models
- *9: African and Middle Eastern models
- *10:Pakistani models
- *11:Singaporean models
- *12:Latin American models and Bangladeshi, Bruneian, Nepalese, and Sri Lankan models
- *13:Except Hong Kong, Macao, and Taiwanese models
- *14:2WD models except Hong Kong, Macao, and Taiwan
- *15:African models with Left-hand Drive Type, and Jordan and Lebanon models with full-size spare tyre
- *16:AWD models except African models with Left-hand Drive Type
- *17:AWD models except Philippine models
- *18: Philippine models with AWD
- *19:AWD models for Latin American and Middle Eastern countries, Bangladesh, Brunei, Nepal, Sri Lanka, and Vietnam
- *20:2WD models for Latin American and Middle Eastern countries, Bangladesh, Brunei, Nepal, Sri Lanka, and Vietnam
- *21:Malaysian and Thai models with 2WD
- *22:Thai models with AWD and seven-seaters
- *23:Oceanian models with 2WD and seven-seaters
- *24:Oceanian models with AWD
- *25:African models with Right-hand Drive Type
- *26:Thai models with AWD and five-seaters
- *27:Oceanian models with 2WD and five-seaters
- *28: Malaysian models with AWD
- *29:Cambodia, Laos, and Philippine models with 2WD

Australian and South African models

■ Max. Towing Weight


| Trailer with brakes | 800 kg* ¹ 1,000 kg* ² 1,500 kg* ³ |
|----------------------------------|--|
| Trailer without brakes | 600 kg |
| The maximum permissible vertical | 80 kg*1 |
| load on the coupling device | 100 kg*4 |

- *1: South African models
- *2: Australian models with seven-seaters
- *3: Australian models with five-seaters
- *4: Australian models

Identification Numbers

Vehicle Identification Number (VIN), Engine Number and Transmission Number

Your vehicle has a 17-digit vehicle identification number (VIN) used to register your vehicle for warranty purposes, and for licensing and insuring your vehicle. The locations of your vehicle's VIN, engine number and transmission number are shown as follows.

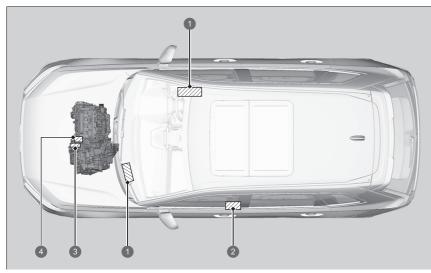

- Vehicle Identification Number*
- 2 Certification Label*/Vehicle Identification Number*/Certification Plate*/Engine Number*
- 3 Continuously Variable Transmission Number
- 4 Engine Number

■Vehicle Identification Number (VIN), Engine Number and Transmission Number

The interior vehicle identification number (VIN) is located under the cover.



Cover

* Not available on all models 863

Utility Compliance*

Environmental Protection Regulation

Taiwanese models

NOTICE

Used batteries to be disposed of shall be collected in conformity with the regulations of Environmental Protection Administration.



Devices that Emit Radio Waves*

The following products and systems on your vehicle emit radio waves when in operation.

Antiguan, Barbudan, Egyptian, Qatari, and Surinamese models

| Keyless Access System | | | |
|--|--|--|--|
| BCM | FOB | | |
| This device complies with Part 15 of the FCC Rules. Operation is | This device complies with Part 15 of the FCC Rules. Operation is | | |
| subject to the following two conditions: (1) this device may not | subject to the following two conditions: (1) this device may not | | |
| cause harmful interference, and (2) this device must accept any | cause harmful interference, and (2) this device must accept any | | |
| interference received, including interference that may cause | interference received, including interference that may cause | | |
| undesired operation. | undesired operation. | | |
| Changes or modifications not expressly approved by the party | Changes or modifications not expressly approved by the party | | |
| responsible for compliance could void the user's authority to | responsible for compliance could void the user's authority to | | |
| operate the equipment. | operate the equipment. | | |

Egyptian and Qatari models

Keyless Access System Card*

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Australian models

Adaptive Cruise Control/ Collision Mitigation Braking System



* Not available on all models Continued

Benin models

Adaptive Cruise Control/ Collision Mitigation Braking System

AGREE PAR L'ARCEP BENIN

Numéro d'agrément : 2022-160 Date d'agrément : 2022_05_24

Botswanan models

| Keyless Access System | | |
|-----------------------|--------------------|--------------------|
| BCM | FOB | Card Key |
| BOCRA | BOCRA | BOCRA |
| REGISTERED NO : | REGISTERED NO : | REGISTERED NO : |
| BOCRA/TA/2020/5766 | BOCRA/TA/2020/5502 | BOCRA/TA/2020/5664 |

Botswanan models

| Adaptive Cruise Control/ Collision Mitigation Braking System | | Hands-Free Telephone System |
|--|--------------------|-----------------------------|
| BTA | BOCRA | BOCRA |
| REGISTERED NO : | REGISTERED No: | BOCRA/TA/2020/5231 |
| BOCRA/TA/2019/4975 | BOCRA/TA/2022/7110 | BOCKA/1A/2020/3231 |

Ghanaian models

Adaptive Cruise Control/ Collision Mitigation Braking System

NCA Approved: 7E6-M1-X9B-SRD

Grand Caymanian models

Keyless Access System BCM

https://continental-homologation.com/honda



Hereby, Continental Automotive GmbH declares that this model [41580430] is in compliance with the essential requirements and other relevant provisions of Directive 2014/53/EU.

The full text of the EU declaration of conformity is available at the following internet address: https://continental-homologation.com/honda

Continental Automotive GmbH Address: Siemensstrasse 12 D-93055 Regensburg Germany

Short range device for remote control

- Frequency band: 125KHz
- Maximum transmitted output: 10mW

Honda Motor Europe Ltd - Aalst Office

Wijngaardveld 1 (Noord V) 9300 Aalst - Belgium



Grand Caymanian models

Keyless Access System FOB

https://continental-homologation.com/honda



Hereby, Continental Automotive GmbH declares that this model [TP_4] is in compliance with the essential requirements and other relevant provisions of Directive 2014/53/EU.

The full text of the EU declaration of conformity is available at the following internet address: https://continental-homologation.com/honda

Continental Automotive GmbH Address: Siemensstrasse 12 D-93055 Regensburg Germany

Short range device for remote control

- Frequency band: 433.92MHz
- Maximum transmitted output: 1mW

Honda Motor Europe Ltd - Aalst Office

Wijngaardveld 1 (Noord V) 9300 Aalst - Belgium



Indonesian models

Keyless Access System

FOB Card Key

The web-address of QR Code is: https://sertifikasi.postel.go.id/valid?section=4f94ec92c3a7c44073065befddad1b22S3r107620S3r07b0b99ff69237359f67408f220423ba

The web-address of QR Code is: :https://sertifikasi.postel.go.id/valid?section=0d153544317d014415cc5335b18ec1d5S3r95668S3rfc385fdbaf8ac136f37b6592461fdf5c





Indonesian models

Adaptive Cruise Control/ Collision Mitigation Braking System

86070/SDPPI/2022



3813

85924/SDPPI/2022




3813

Jamaican models

| Keyless Access System | | |
|----------------------------|----------------------------|--|
| BCM | FOB | |
| This product has been Type | This product has been Type | |
| Approved by Jamaica: SMA - | Approved by Jamaica: SMA - | |
| "41580430" on the product | "TP_4 " on the product | |


Moroccan models

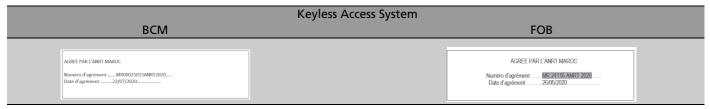

Moroccan models

Adaptive Cruise Control/ Collision Mitigation Braking System AGREE PAR L'ANRT MAROC Numéro d'agrément: MR 20575 ANRT 2019 Date d'agrément: 29/07/2019 AGREE PAR L'ANRT MAROC Numéro d'agrément: MR00032137ANRT2022 Date d'agrément: 03/03/2022 AGRÉÉ PAR L'ANRT MAROC Numéro d'agrément: MR 19569 ANRT 2019 Date d'agrément: 25/04/2019

Nigerian models

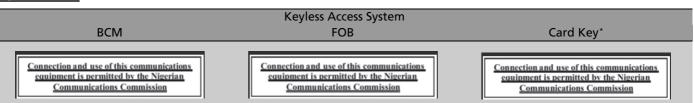

Nigerian models

| Adaptive Cruise Control/ Collision Mitigation Braking System | Hands-Free Telephone System (Models with Display Audio) |
|--|---|
| Connection and use of this communications equipment is | Connection and use of this communications equipment is |
| permitted by the Nigerian Communications Commission | permitted by the Nigerian Communications Commission |

Omani models

Adaptive Cruise Control/ Collision Mitigation Braking System

OMAN TRA R/7983/19 D172338 Oman – TRA D172338 R/13339/22

Pakistani models

Adaptive Cruise Control/ Collision Mitigation Braking System



Philippine models

Keyless Access System

FOB

No.ESD-RCE-2023291

No.ESD-RCE-2022596C

NTC

Type Accepted


NTC

Type Accepted


No.ESD-RCE-202320-

* Not available on all models


Singaporean models

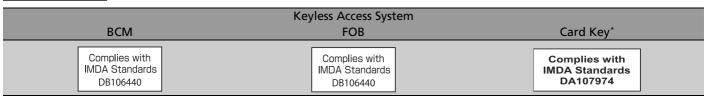

Singaporean models

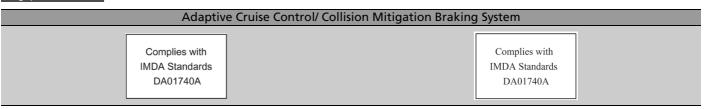

South African models

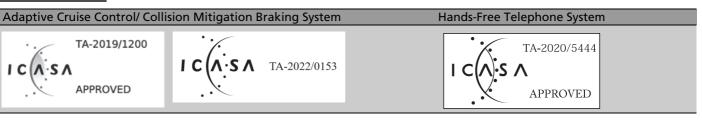

Taiwanese models

USB Charger

http://www.alpine.com/e/RoHS/UCU.pdf



(1 Port USB CHARGER) 最大額定電流 3.0 A

12.0 V 直流電源; 負極接地 12.0 V 3.0 A MAX (2 Port USB CHARGER) 最大額定電流 6.0 A 12.0 V 直流電源; 負極接地

12.0 V 6.0 A MAX

Devices that Emit Radio Waves*

Taiwanese models

取得審驗證明之低功率射頻器材,非經核准,公司、商號或使用者 均不得擅自變更頻率、加大功率或變更原設計之特性及功能。低功 率射頻器材之使用不得影響飛航安全及干擾合法通信;經發現有干 擾現象時,應立即停用,並改善至無干擾時方得繼續使用。前述合 法通信,指依電信管理法規定作業之無線電通信。低功率射頻器材 須忍受合法通信或工業、科學及醫療用電波輻射性電機設備之干擾。

Taiwanese models

TCU*

1.整體系統配置

TCU (Telematics Control Unit) 通過蜂窩網絡與車輛服務器與TSP (Telematics Service provider) 進行通信。 TCU 還應通過服務器與用戶的智能手機進行通信。當 TCU 收到來自服務器、TSP 或車輛事件檢測的某些請求時,TCU 應按照本規範中的規定執行遠程信息處理服務。 TCU 應支持 GNSS 定价。

2.產品概覽

2.1.描述:

TCU 是嵌入式車載系統,用於控制與車輛之間的無線跟踪、診斷和通信;系統還可将遠程信息處理服務用於事故碰撞通知和車輛跟踪等。 2.2. TCU 包括:

- 用於移動通信 (W-CDMA 或 LTE) 的外部接口。
- GPS 單元,用於跟踪車輛的經緯度值。
- 電子處理單元。
- 特殊的微控制器和一定數量的內存。
- 2.3. TCU支持以下服務:
- 遠程信息處理服務。
- 用戶Web 或智能手機向服務器発出請求服務。
- 向服務器發送報告消息服務。

3.產品資訊

| 產品名稱 | Telematics Control Unit |
|------|---|
| 廠牌 | DENSO |
| 型號 | DN0002B |
| 無線規格 | 3G, 4G, GPS |
| 產品特徵 | This product is for data communication via mobile telecommunication network for vehicle driver. |
| 製造商 | DENSO CORPORATION |

4.警告文

減少電磁波影響,請妥適使用

為維護隱私權,請妥適使用

電波功率密度MPE標準值:1.0mW/dd,送測產品實測值:0.0461mW/dd,建議使用時設備天線至少距離人體20公分。

Thai models

Adaptive Cruise Control/ Collision Mitigation Braking System






เครื่องวิทยุคมนาคมนี้ ได้รับยกเว็น ไม่ต้องได้ รับใบอนุญาตให้มี ใช้ซึ่งเครื่องวิทยุคมนาคม หรือตั้งอถานีวิทยุคมนาคมตามประกาศ กลพช. เรื่อง เครื่องวิทยุคมนาคม และสถานีวิทยุ คมนาคมที่ได้รับยกเว็นไม่ต้องได้รับใบอนุญาค วิทยุคมนาคมตามพระราชบัญญัติวิทยุคมนาคม พ.ศ. 2498



nanb. Instruction
Throughousestee
Call Center 1200 (firsws)

Thai models

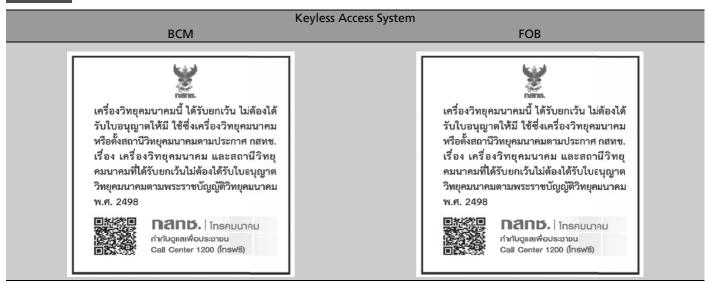

Thai models

TCU*

This telecommunication equipment conforms to Technical Standard or Technical Requirement of National Broadcasting and Telecommunications Commission (NBTC)

Safety Criteria and Measures for the Use of Radiocommunication Equipment on Human Health

This radiocommunication equipment has the electromagnetic field strength in compliance with the Safety Standard for the Use of Radiocommunication Equipment on Human Health announced by the National Telecommunications Commission.

U.A.E. models

| Keyless Access System | | |
|---------------------------|---------------------------|---------------------------|
| BCM | FOB | Card Key* |
| TRA | TRA | TRA |
| REGISTERED No: ER88345/20 | REGISTERED No: ER81325/20 | REGISTERED No: ER02042/21 |
| DEALER ID: DA36975/14 | DEALER ID: DA36975/14 | DEALER ID: DA83384/19 |

U.A.E. models

Adaptive Cruise Control/ Collision Mitigation Braking System



TRA - United Arab Emirates

Dealer ID: DA36758/14 TA RTTE: ER74533/19 Model: FR5CPCCF Type: Radar Sensor



میثة تنظیم الاتصالات والدکومـــة الرقمــــة والدکومــة الرقمــــة ولادمـــة ومسهود ومسهود والدكومـــة والدكومـــة والدكومـــة الدكومـــة الدكومــــة الدكومـــــة الدكومــــة الدكومـــــة الدكومــــة الدكومــــة الدكومـــــة الدكومـــــة الدكومــــة الدكومــــــة الدكومــــة الدكومـــــة الدكومـــــة الدكومـــــة الدكوم

TDRA – United Arab Emirates
Dealer ID: DA36758/14
TA RTTE: ER10080/22
Model: F5CP12

Wireless Charger



U.A.E. models

Hands-Free Telephone System (Models with Display Audio)


TRA
REGISTERED No: ER79635/20
DEALER No: DA0052708/10




ER13750/22 United Arab Emirates




Vietnamese models

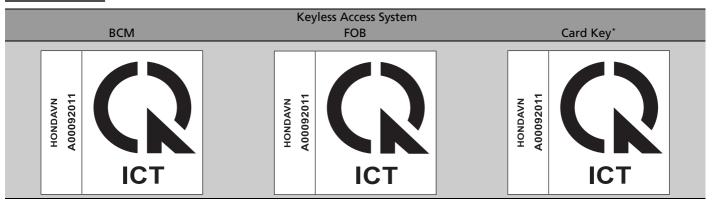

Vietnamese models

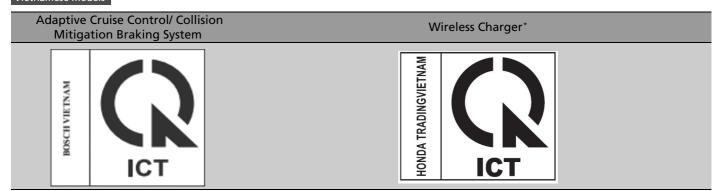

Vietnamese models

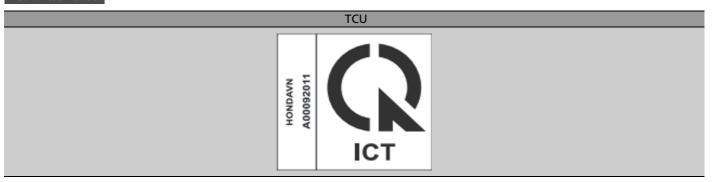

Open Source Licence

■ Meter Open Source Licence

The software embedded in this product includes open source software. Refer to the following website for details regarding the open source software. https://www.nippon-seiki.co.ip/business_ic_meter/

■ TCU Open Source Licence*

Free/Open Source Software Information

This product contains Free/Open Source Software(FOSS).

The licence information and/or the source code of such FOSS can be found at the following URL.

https://www.denso.com/global/en/opensource/tcu/honda/

■ Front Sensor Camera Open Source Licence

"The product includes code under public domain: https://www.jonolick.com/uploads/7/9/2/1/7921194/jo_jpeg.cpp The code is based on https://github.com/jpeg-js/jpeg-js/blob/master/lib/encoder.js Copyright (c) 2008, Adobe Systems Incorporated

All rights reserved.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

- * Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
- * Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
- * Neither the name of Adobe Systems Incorporated nor the names of its contributors may be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE COPYRIGHT HOLDERS AND CONTRIBUTORS "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE COPYRIGHT OWNER OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

*/

/*

| Numbers | | Air Conditioning System | | Audio System | 338 |
|------------------------------------|----------|---------------------------------|----------|-----------------------------|---------------|
| | E 42 | (Climate Control System) | 329 | Adjusting the Sound | 345, 419 |
| 7-Speed Manual Shift Mode | 542 | Changing the Mode | 330 | App Shortcut Function | 409 |
| | | Defrosting the Windscreen and | | Audio System Function | 341, 401 |
| Α | | Windows | 331 | Basic Operation | 341, 401 |
| ABS (Anti-lock Brake System) | 603 | Dust and Pollen Filter | 780 | Clock Setup | 416 |
| Accessories and Modifications | | Recirculation/Fresh Air Mode | 330 | DAB | 434 |
| | | Sensor | 333 | Display Setup | 346, 420 |
| Accessory Power Sockets | | Synchronization Mode | 332 | Error Messages | 500 |
| Adaptive Cruise Control (ACC) with | | Using Automatic Climate Control | 329 | General Information | 502 |
| Speed Follow | 157, 626 | Air Pressure | 767, 862 | How to Update | 421 |
| Adding | 754 | Airbags | 62 | How to Update Wirelessly | 424 |
| Coolant | | After a Collision | 64 | How to Update with a USB De | |
| Engine Oil | | Airbag Care | 79 | iPod | 354, 437 |
| Washer | | Centre Airbag | 71 | Limitations for Manual | |
| Additives, Engine Oil | | Event Data Recorder | 1 | Operation | 382, 415, 482 |
| Adjustable Speed Limiter | | Front Airbags (SRS) | 64 | МРЗ/WMA/AAC | |
| Indicator | 15/ | Indicator | | On-Board Owner's Manual | 407 |
| Adjusting | | Knee Airbags | | Radio Data System (RDS) | 432 |
| Armrest | | Sensors | | Reactivating | |
| Clock | | Side Airbags | | Security Code | |
| Front Seats | | Side Curtain Airbags | | Selecting an Audio Source | |
| Head Restraints | | All-Wheel Drive (AWD) System | | Start Up | |
| Headlights | | AM/FM Radio | | Status Area | |
| Mirrors | | Android Auto | • | System Updates | |
| Second Row Seats | 291 | Anti-lock Brake System (ABS) | | System Updates Settings | |
| Sound | 345, 419 | Indicator | | Theft Protection | |
| Steering Wheel | 281 | Apple CarPlay | | USB Flash Drives | |
| Third Row Seats | 296 | '' | - | USB Ports | • |
| Agile Handling Assist | 571 | Armrest | | | • |
| | | Audio Remote Controls | 344, 404 | Wallpaper Setup | |
| | | | | Wi-Fi Connection | 44/ |

| Audio/Information Screen | Brake System 6 Anti-lock Brake System (ABS) 6 Automatic Brake Hold 6 Brake Assist System 6 Fluid 7 Foot Brake 6 Indicator (Amber) 144, 8 Indicator (Red) 142, 143, 833, 8 Parking Brake 6 Bulb Replacement Brake Lights, Taillights, Rear Side Marker Lights, and Rear Turn Signal Lights 7 Front Fog Lights 7 Front Turn Signal Lights, Position/Daytime Running Lights 7 Headlights 7 Headlights 7 Rear Licence Plate Light 7 Side Turn Signal/Emergency Indicator Lights 7 Taillights, Rear Fog Light, and Back-Up Lights 7 Taillights, Rear Fog Light, and Back-Up Lights 7 Taillights, Mirror Lights 7 | Carbon Monoxide C Carrying Luggage Centre Airbag Certification Label Changing Bulbs Child Restraint Syste Child R |
|--|---|---|
| Charging System Indicator 145, 832 If the Battery Is Dead 824 Maintenance (Checking the Battery) 773 Maintenance (Replacing) 777 Belts (Seat) 47 Beverage Holders 312 Blind Spot Information System 584 Bluetooth® Audio 360, 444 Booster Seats (For Children) 135 | | Cleaning the Exterio |

| arbon Monoxide Gas | . 137 |
|-------------------------------------|-------|
| arrying Luggage515 | , 517 |
| entre Airbag | 71 |
| ertification Label | 863 |
| hanging Bulbs | 760 |
| harging System Indicator 145 | , 832 |
| hild Restraint System | 80 |
| Booster Seats | |
| Child Restraint System for Infants | 83 |
| Child Restraint System for Small | |
| Children | 85 |
| Installing a Child Restraint System | |
| with a Lap/Shoulder Seat Belt | 126 |
| Larger Children | |
| Rear-facing Child Restraint System | 83 |
| Selecting a Child Restraint System | |
| Using Tether | 129 |
| hild Safety | 80 |
| Childproof Door Locks | 236 |
| hildproof Door Locks | 236 |
| leaning the Exterior | 786 |
| leaning the Interior | 783 |
| limate Control System | |
| Changing the Mode | 329 |
| Defrosting the Windscreen and | |
| Windows | |
| Dust and Pollen Filter | |
| Recirculation/Fresh Air Mode | |
| Sensors | |
| Synchronization Mode | 332 |

| Using Automatic Climate Control | 329 |
|---|-----|
| Clock | 220 |
| CMBS (Collision Mitigation Braking | |
| System) | 596 |
| Coat Hook | 314 |
| Collision Mitigation Braking System | |
| (CMBS) | 596 |
| Collision Mitigation Braking System (CM | BS) |
| (Grey) | 158 |
| Colour Audio | 341 |
| Console Compartment | 311 |
| Continuously Variable Transmission | |
| Creeping | 536 |
| Fluid | 757 |
| Kickdown | 536 |
| Operating the Shift Lever 28, 538, | 540 |
| Shift Lever Does Not Move | 827 |
| Shifting 537, | 539 |
| Controls | 219 |
| Coolant (Engine) | |
| Adding the Coolant | 754 |
| Overheating | 829 |
| Cross Traffic Monitor | 704 |
| Cup Holders | 312 |
| Customize Display 184, | |
| Customized Features 185, 374, 458, | |
| | |

D

| DAB | | 434 |
|------------------------------------|------|------|
| DAB (Digital Audio Broadcasting) | | 351 |
| Daytime Running Lights | | 268 |
| Dead Battery | | 824 |
| Defaulting All the Settings | 379, | 478 |
| Deflation Warning System | | 578 |
| Indicator | 836, | 837 |
| Initialisation | | 579 |
| Defrosting the Windscreen and | | |
| Windows | | 331 |
| Demister | | 277 |
| Devices that Emit Radio Waves | | 865 |
| Digital Audio Broadcasting (DAB) | | 351 |
| Dimming | | |
| Headlights | | |
| Rearview Mirror | 282, | 283 |
| Dipstick (Engine Oil) | | 752 |
| Display Audio System | | 400 |
| Display Setup | 346, | 420 |
| Door Mirrors | | 284 |
| Doors | | 221 |
| Auto Door Locking | | 237 |
| Auto Door Unlocking | | |
| Door and/or Tailgate Open Message. | | . 46 |
| Keys | | 221 |
| Locking/Unlocking the Doors | | |
| from the Inside | | 234 |
| Locking/Unlocking the Doors | | |
| from the Outside | | 225 |
| Lockout Prevention System | | 233 |

| Driver Attention Monitor 176, | 203 |
|--|-------|
| Driver Information Interface 169, 193, | 196 |
| Switching the Display 169, | 196 |
| Driving | 513 |
| Braking | 686 |
| Continuously Variable Transmission | 536 |
| Shifting Position 537, | 539 |
| Starting the Engine | 528 |
| Driving Position Memory System | 278 |
| Dust and Pollen Filter | 780 |
| | |
| E | |
| eCall Indicator | 853 |
| CON Button | E 1 1 |

| eCall Indicator | | 853 |
|--------------------------------------|------|-----|
| ECON Button | | 544 |
| ECON Mode Indicator | | 153 |
| Elapsed Time | 174, | 201 |
| Electric Power Steering (EPS) System | 1 | |
| Indicator | 147, | 835 |
| Emergency Call (eCall) | | 853 |
| Automatic Emergency Call | | 853 |
| Manual Emergency Call | | 855 |
| Emergency Engine Start | | 822 |
| Emergency Engine Stop | | 823 |
| Emergency Stop Signal | | 695 |
| Emergency Towing | | 848 |
| Engine | | |
| If the Battery Is Dead | | 824 |
| Number | | 863 |
| Oil | | 750 |
| Starting | | 528 |
| | | |

| Engine Coolant | | Folding Dov |
|--------------------------------------|-----|---------------|
| Adding the Coolant | 754 | Foot Brake. |
| Overheating | 829 | Front Airba |
| Temperature Gauge | 165 | Front Seat H |
| Engine Oil | 750 | Front Seats |
| Adding | 753 | Adjusting. |
| Checking | 752 | Front Senso |
| Low Oil Pressure Warning | 831 | Fuel |
| Recommended Engine Oil | 750 | Average Fu |
| ENGINE START/STOP Button | 259 | Economy a |
| EPS (Electric Power Steering) System | 835 | Gauge |
| Exhaust Gas Hazard | | Instant Fue |
| (Carbon Monoxide) | 137 | Low Fuel I |
| Exterior Care (Cleaning) | | Range |
| Exterior Mirrors | 284 | Recomme |
| | | Refueling. |
| - | | Fuel Econor |
| F | | Fuel Fill Cap |
| Features | 337 | Fuel Fill Doo |
| Filter | | Fuses |
| Dust and Pollen | 780 | Inspecting |
| Flat Tyre | 793 | Locations. |
| Fluids | | |
| Brake | 758 | _ |
| Continuously Variable Transmission | 757 | G |
| Engine Coolant | 754 | Gauges |
| Windscreen Washer | 759 | Glass (care) |
| FM/AM Radio 347, | 429 | Glove Box |
| Fog Lights | 266 | |
| Folding Down the Second Row | | |
| Seat 293, | 294 | |
| • | | |

| Folding Down the Third Row Seat | | 297 |
|--|------|-----|
| Foot Brake | | 689 |
| Front Airbags (SRS) | | 64 |
| Front Seat Heaters | | |
| Front Seats | | 286 |
| Adjusting | | 287 |
| Front Sensor Camera | | |
| Fuel | 30, | 724 |
| Average Fuel Economy | 172, | 199 |
| Economy and CO ₂ Emissions | | 728 |
| Gauge | | 165 |
| Instant Fuel Economy | | |
| Low Fuel Indicator (Amber) | | 146 |
| Range | 172, | 199 |
| Recommendation | | 724 |
| Refueling | | 724 |
| Fuel Economy and CO ₂ Emissions | | 728 |
| Fuel Fill Cap | | 726 |
| Fuel Fill Door | 726, | 849 |
| Fuses | | 838 |
| Inspecting and Changing | | 845 |
| Locations 838, | | |
| | | |

| Gauges | 16 |
|------------------|-------|
| Glass (care) 784 | 1, 78 |
| Glove Box | 31 |

Н

| Hands-Free Telephone System | 380, | 479 |
|-----------------------------------|-------|------|
| Automatic Import of Mobile Phoneb | ook a | nd |
| Recent calls | 392, | 489 |
| Automatic Transferring | 390, | 490 |
| Favorite Contacts | 393, | 491 |
| HFT Buttons | 380, | 479 |
| HFT Menus | 383, | 483 |
| HFT Status Display | 382, | 481 |
| Limitations for Manual Operation | 382, | 482 |
| Making a Call | 395, | 495 |
| Options During a Call | 399, | 498 |
| Phone Settings Screen | | 485 |
| Phone Setup | 385, | 486 |
| Receiving a Call | 398, | 497 |
| Ringtone | 390, | 490 |
| Hazard Warning Button | | 6, 7 |
| Head Restraints | 301, | 303 |
| Headlights | | 262 |
| Adjuster | | 269 |
| Aiming | | 760 |
| Auto High-Beam | | 271 |
| Dimming | | 262 |
| Operating | | 262 |
| Head-Up Display | | 213 |
| Heaters (Front Seat) | | 327 |
| HFT (Hands-Free Telephone) | 380, | 479 |
| High Beam Indicator | | 151 |
| Hill Descent Control System | | 552 |
| Indicator | | 153 |
| Hill Start Assist System | | 533 |

| Honda Sensing 32, 593 | ECON Mode 153, 544 | Seat Belt Reminder 146 |
|--|---|---|
| | Electric Power Steering (EPS) | Security System Alarm |
| I | System 147 | Shift Position |
| • | Front Fog Light 151 | Speed Alarm Indicator 154 |
| Identification Numbers 863 | High Beam 151 | Supplemental Restraint System 147 |
| Engine and Transmission 863 | Hill Descent Control System | System Message 154 |
| Vehicle Identification 863 | (White/Green) | Transmission System 145 |
| If You Cannot Open the Tailgate 851 | Immobilizer System 152 | Turn Signal and Hazard Warning 151 |
| Immobilizer System 249 | Intelligent Speed Limiter (White/Green) 157 | Vehicle Stability Assist (VSA) OFF 148, 570 |
| Indicator 152 | Lane Keeping Assist System (LKAS) | Vehicle Stability Assist (VSA) |
| Indicators | (Amber) | System 148, 569 |
| Adaptive Cruise Control (ACC) with Low | Lane Keeping Assist System (LKAS) | Instant Fuel Economy 172, 199 |
| Speed Follow (Amber) 157 | (White/Green) | Instrument Panel 139 |
| Adaptive Cruise Control (ACC) with Low Speed | Lights On 151 | Intelligent Speed Limiter 561 |
| Follow (White/Green) | Low Fuel (Amber) 146 | Indicator 157 |
| Adaptive Cruise Control (ACC) with Low Speed | Low Temperature 147 | Interior Lights |
| Follow Interval 158, 626 | Low Tire Pressure/TPMS 149, 573 | Interior Rearview Mirror 282, 283 |
| Adjustable Speed Limiter 157 | Low Tyre Pressure/Deflation Warning | iPod 354, 437, 502 |
| Anti-lock Brake System (ABS) 147 | System 150, 578 | |
| Auto High-Beam151 | Malfunction Indicator Lamp 145 | 1 |
| Auto Idle Stop (Green) | Parking Brake and Brake System | , |
| Auto Idle Stop OFF 155 | (Amber) | Jacking Points 812 |
| Auto Idle Stop Suspend 156 | Parking Brake and Brake System | Jump Starting 824 |
| Auto Idle Stop System (Amber) 155 | (Red) 142, 143, 833, 834 | |
| Automatic Brake Hold 144, 691 | Rear Fog Light 151 | |
| Automatic Brake Hold System 144, 690 | Road Departure Mitigation (Amber) 159 | |
| Charging System 145 | Road Departure Mitigation (Grey) 159 | |
| Collision Mitigation Braking System (CMBS) | Road Departure Mitigation System Steering | |
| (Amber)158 | Assist Auto OFF | |
| Collision Mitigation Braking System (CMBS) | Safety Support (Amber) | |
| (Grey) 158 | Safety Support (Green/Grey) | |

| Κ | | Locking/Unlocking221 | Coolant | 754 |
|--|-------|--|---------------------------------|----------|
| Van Nordan Tan | 222 | Auto Door Locking/Unlocking 237 | Oil | 752 |
| Key Number Tag | | Childproof Door Locks | Oil Monitor System | 735 |
| Keyless Access System | | From Inside | Precautions | 732 |
| Keyless Lockout Prevention | | From Outside | Remote Transmitter | 777 |
| Keys | | Keys 221 | Replacing Light Bulbs | 760 |
| Lockout Prevention | | Using a Key 232 | Safety | |
| Number Tag | | Lockout Prevention System 233 | Schedule | 742 |
| Rear Door Won't Open | | Low Battery Charge 832 | Transmission Fluid | 757 |
| Remote Transmitter | | Low Fuel Indicator (Amber) 146 | Tyres | |
| Kickdown | | Low Keyless Remote/Card Key Signal | Under the Bonnet | |
| Knee Airbags | 67 | Strength 224 | Malfunction Indicator Lamp | |
| | | Low Oil Pressure Warning 831 | Map Light Switches | 308 |
| L | | Low Speed Braking Control 610 | Maximum Permissible Weight | 517, 860 |
| - Lana Kanadian Andriat Suntana (LKAS) | C 4 0 | Low Temperature Indicator 147 | Meters, Gauges | |
| Lane Keeping Assist System (LKAS) | | Low Tyre Pressure/Deflation Warning System | Mirrors | |
| LaneWatch | 588 | Indicator 837 | Adjusting | |
| Lead Car Departure Notification | 670 | Low Tyre Pressure/TPMS Indicator 836 | Door | |
| System | 6/0 | Lower Anchorages 119 | Interior Rearview | |
| Legal Information on Apple CarPlay/ | | Lubricant Specifications Chart 861 | Modifications (and Accessories) | 789 |
| Android Auto | | Luggage (Load Limit) 517 | MP3 | |
| Lights 26 | | Luggage Hooks315 | Multi-View Camera | |
| Auto High-Beam | | - | Multi-View Rear Camera | |
| Bulb Replacement | | | Watti View Real Camera | 700 |
| Daytime Running Lights | | M | | |
| Fog Light | 266 | Maintenance731 | N | |
| Front Fog Lights | 266 | Adding the Coolant | Navigation | 174 201 |
| High Beam Indicator | 151 | Battery 773 | No Content | |
| Interior | 307 | Brake Fluid | Numbers (Identification) | |
| Light Switches | 262 | Cleaning | Numbers (lucitum audin) | 603 |
| Lights On Indicator | 151 | Climate Control | | |
| Load Limit | 517 | Cililate Control | | |

| 0 | | Passing Indicators | 262 | Refueling | 724 |
|----------------------------------|----------|---------------------------------------|----------|----------------------------------|------------------|
| Off-road Guidelines | 526 | Petrol | | Fuel Gauge | |
| Oil (Engine) | | Economy and CO ₂ Emissions | 728 | Low Fuel Indicator (Amber) | |
| Adding | | Gauge | 165 | Petrol | 724, 860 |
| Checking | | Information | 724 | Regulations | 865 |
| Low Oil Pressure Warning | | Instant Fuel Economy | 172, 199 | Remote Transmitter | 231 |
| Recommended Engine Oil | | Refueling | 724 | Replacement | |
| Viscosity | | Phone | 174 | Battery | 777 |
| * | | Playing Bluetooth® Audio | 360, 444 | Bulbs | 760 |
| Oil Monitor System | | Power Tailgate | 240 | Fuses | 838, 842, 844 |
| On-Board Owner's Manual | | Power Windows | 251 | Rear Wiper Blade Rubber | 765 |
| Open the Owner's Manual | | Precautions While Driving | 534 | Tyre | 769, 806 |
| Open Source Licences | 506, 880 | Pregnant Women | 58 | Wiper Blade Rubber | 763 |
| Opening/Closing | 7.40 | Puncture (Tyre) | 793 | Resetting a Trip Meter | 172, 199 |
| Bonnet | | | | Road Departure Mitigation | |
| Panoramic Roof | | В | | On and Off | 621 |
| Power Windows | | R | | Road Departure Mitigation (| Grey) 159 |
| Tailgate | | Radiator | 756 | | |
| Outside Temperature Display | | Radio (FM/AM) | 347, 429 | • | |
| Overheating | 829 | Radio Data System (RDS) | 349, 432 | S | |
| | | Range | 172, 199 | Safe Driving | 41 |
| P | | RDS (Radio Data System) | 349, 432 | Safety Check | 46 |
| Parising Chiffenna | | Real Time AWD with Intelligent | Control | Safety Labels | 138 |
| Paddle Shifters | E 42 | System | 572 | Safety Message | 0 |
| (7-Speed Manual Shift Mode) | | Rear Demister Button | 277 | Safety Support | 181, 208 |
| Panoramic Roof | | Rear Seats | | Seat Belts | 47 |
| Parking Brake | | Second Row Seats | 291 | Adjusting the Shoulder Ancho | orage 55 |
| Parking Brake and Brake System I | | Third Row Seats | 296 | Checking | 59 |
| (Amber) | | Rearview Mirror | 282, 283 | Fastening | 53 |
| Parking Brake and Brake System I | | | • | Installing a Child Restraint Sys | stem |
| (Red) 142, 14 | | | | with a Lap/Shoulder Seat Be | |
| Parking Sensor System | 698 | | | | |

| Pregnant Women | 58 |
|---------------------------------------|----|
| Reminder | 50 |
| Warning Indicator 50, 1 | 46 |
| Seat Heaters 3 | 27 |
| Seats | 86 |
| Adjusting 2 | 86 |
| | 86 |
| Seat Heaters 3 | 27 |
| | 91 |
| | 96 |
| Second Row Seat (Folding Down) 25 | 93 |
| Security System 2 | 49 |
| Immobilizer System Indicator 1 | 52 |
| Security System Alarm Indicator 1 | 53 |
| Select Lever | 28 |
| Selecting a Child Restraint System | 86 |
| | 42 |
| Setting the Clock | 20 |
| Settings 18 | 85 |
| | 28 |
| Releasing 8 | 27 |
| Won't Move 8 | 27 |
| Shift Position Indicator 145, 538, 54 | 40 |
| Shifting (Transmission) 537, 5 | 39 |
| Shoulder Anchorage | 55 |
| Side Airbags | 73 |
| Side Curtain Airbag | 76 |
| Siri Eyes Free | 64 |
| SOS Button 8 | 55 |
| SOS Cancel Button 8 | 55 |
| Spark Plugs 8 | 60 |

| Specifications 8 | 60 |
|--|----|
| Specified Fuel 724, 8 | 60 |
| Speed Alarm 175, 2 | 02 |
| Speed Limiter, Adjustable 5 | 54 |
| Speed Limiter, Intelligent 5 | 61 |
| Speedometer 1 | 64 |
| SRS Airbags (Airbags) | 64 |
| Starting Assist Brake Function 5 | 51 |
| Starting the Engine | |
| Does Not Start 8 | 18 |
| If the Battery Is Dead 8 | 24 |
| Steering Wheel 2 | 81 |
| Adjusting 2 | 81 |
| Stopping 6 | 96 |
| Sunglasses Holder 3 | |
| Supplemental Restraint System (SRS) | 64 |
| Switches | |
| (Around the Steering Wheel) 6, 7, 8, 2 | 59 |
| System Message Indicator 1 | 54 |
| System Updates 4 | 21 |
| | |
| Т | |
| Tachometer1 | 64 |
| Tailgate 2 | |
| Unable to Open 8 | |
| TCU Open Source Licence 8 | |
| Temperature | |
| Gauge 1 | 65 |
| Outside Temperature Display 1 | |
| Temperature Sensor 166, 3 | |

| Temporarily Repairing a Flat Tyre | 793 |
|------------------------------------|-----|
| Temporary Repair Kit (TRK) | 793 |
| Third Row Seat (Folding Down) | 297 |
| Third Row Seat Access | |
| Time (Setting) | 220 |
| Tire Pressure Monitoring System | |
| (TPMS) | 573 |
| Indicator | 149 |
| Tools | 792 |
| Towing a Trailer | 518 |
| Equipment and Accessories | 520 |
| Load Limits | 518 |
| Towing Your Vehicle | |
| Emergency | 848 |
| TPMS | |
| (Tyre Pressure Monitoring System) | 573 |
| Indicator | 149 |
| Traffic Jam Assist | 661 |
| Traffic Sign Recognition System | 675 |
| Transmission 536, 537, | 539 |
| 7-Speed Manual Shift Mode | 542 |
| Creeping | 536 |
| Fluid | 757 |
| Kickdown | |
| Number | |
| Shift Lever Does Not Move | |
| Shift Position Indicator 145, 538, | |
| Trip Meter 172, | |
| TRK (Temporary Repair Kit) | 793 |

| Blown Fuse 838, 842, 844 Brake Pedal Vibrates 36 Vehicle Identification Numbers 863 Defeating (Information (Information Information Informat | 7, 331 759 |
|--|---------------|
| Brake Pedal Vibrates | 7, 331 759 |
| Puzzer Counds When Opening Deer 37 Vehicle Identification Numbers | 759 |
| Buzzer Sounds When Opening Door | |
| Emergency Towing | 763 |
| Engine Won't Start | . / 05 |
| Noise When Braking | . 274 |
| Overheating | . 772 |
| Puncture/Flat Tyre | 772 |
| Rear Door Won't Open 37 236 Voice Control Operation | |
| Shift Lever Won't Move 827 Audio Commands | |
| Warning Indicators | . 763 |
| Turbo Engine Vehicle 729 List Commands | |
| Turn Signals Navigation Commands | |
| Indicators (Instrument Panel) | 7, 440 |
| Tyres | . 767 |
| Air Pressure | |
| Checking and Maintaining | |
| Inspection | |
| Puncture (Flat Tyre) | |
| Rotation | |
| Tyre Chains | |
| Wear Indicators | |
| Warning Indicator On/Blinking | |
| Warning Labels | |
| Warnings | |
| Watts | |
| Under-floor Storage Area | |
| Unlocking the Doors | |
| USB Flash Drives | |
| USB Ports | |